

THROWBACK
SOUNDBOX
WIRELESS SPEAKER



INSTRUCTION MANUAL

TB-RETSH2-CRM

PRODUCT SPECIFICATIONS

- Material: Wood, ABS, PU Leather
- Size: 260 x 160 x 150 mm
- Speaker Power: 3Ω, 10W
- Functions: USB Drive, TF Card, FM Radio, Audio
- Bluetooth Version: Bluetooth 5.3
- Bluetooth Range: 10 meters
- Battery Capacity: 2400 mAh
- Play Time: 2-3 hours
- Charging Time: 2-3 hours
- Charging Method: Type-C, DC-5V
- Recommended USB Drive Capacity: ≤ 128GB

FCC ID: 2BBPLTBRETSH2



THROWBACK® COPYRIGHT ALL RIGHTS RESERVED. THROWBACK is an innovative brand of Truststone Group LLC. No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Truststone Group LLC. New York NY 10018.

⚠ WARNING: Cancer risk from Lead Exposure – www.P65Warnings.ca.gov

MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The BLUETOOTH® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc.. All product name, logos, and brands are property of their respective owners.

FUNCTIONS

1. POWER/MODE

- Long Press: Switch power on/off
- Short Press: Switch modes (USB/FM/TF/Audio mode)
- In FM Mode: Short press to mute and unmute

2. VOLUME – / PREVIOUS


- Long Press: Decrease volume
- In Bluetooth mode: Short Press to Previous track
- In FM mode: double-click to automatically search for radio stations, short press the previous radio station

3. PLAY / PAUSE

- Long Press: Automatic station search
- Short Press: Pause playback

4. VOLUME + / NEXT

- Long Press: Increase volume
- In Bluetooth mode: Short Press to Next track
- In FM mode: double-click to automatically search for radio stations, short press the next radio station

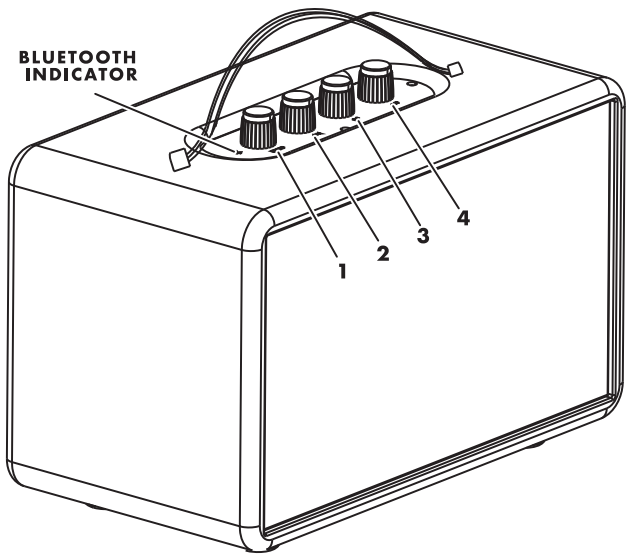

BLUETOOTH MODE


- The default mode is Bluetooth when the device is powered on.
- Open your phone and search for the pairing name: "THROWBACK" and select it to pair.
- Once connected, the device is ready for playback.

USB FLASH DRIVE PLAYBACK

- Insert the USB flash drive; the device will automatically switch to USB mode.
- Playback will begin upon successful insertion.
- Removing the USB flash drive will restore Bluetooth mode.

AUXILIARY MODE INPUT

- Plug the auxiliary cable into the auxiliary port.
- Press the POWER/MODE button to switch to audio mode.

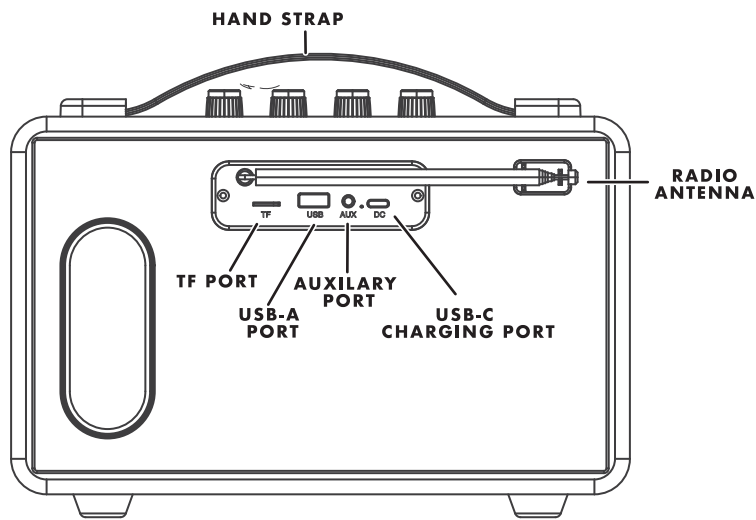

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.