


THROWBACK LASER-TUNE WIRELESS SPEAKER CD PLAYER



SPECIFICATIONS

- Bluetooth version: 5.3V+BR+EDR
- RMS: 2W x 2
- Battery capacity: 2200 mAh
- Rated audio response range: 20Hz-20KHz
- Power supply voltage: DC 5V
- Noise level: <25dB
- Recommended capacity of U disk: ≤128GB
- TF card maximum expansion capacity: 128GB

CONTENTS: 1 WIRELESS SPEAKER, 1 USB-C WIRE, 1 USER MANUAL, 1 ADAPTER

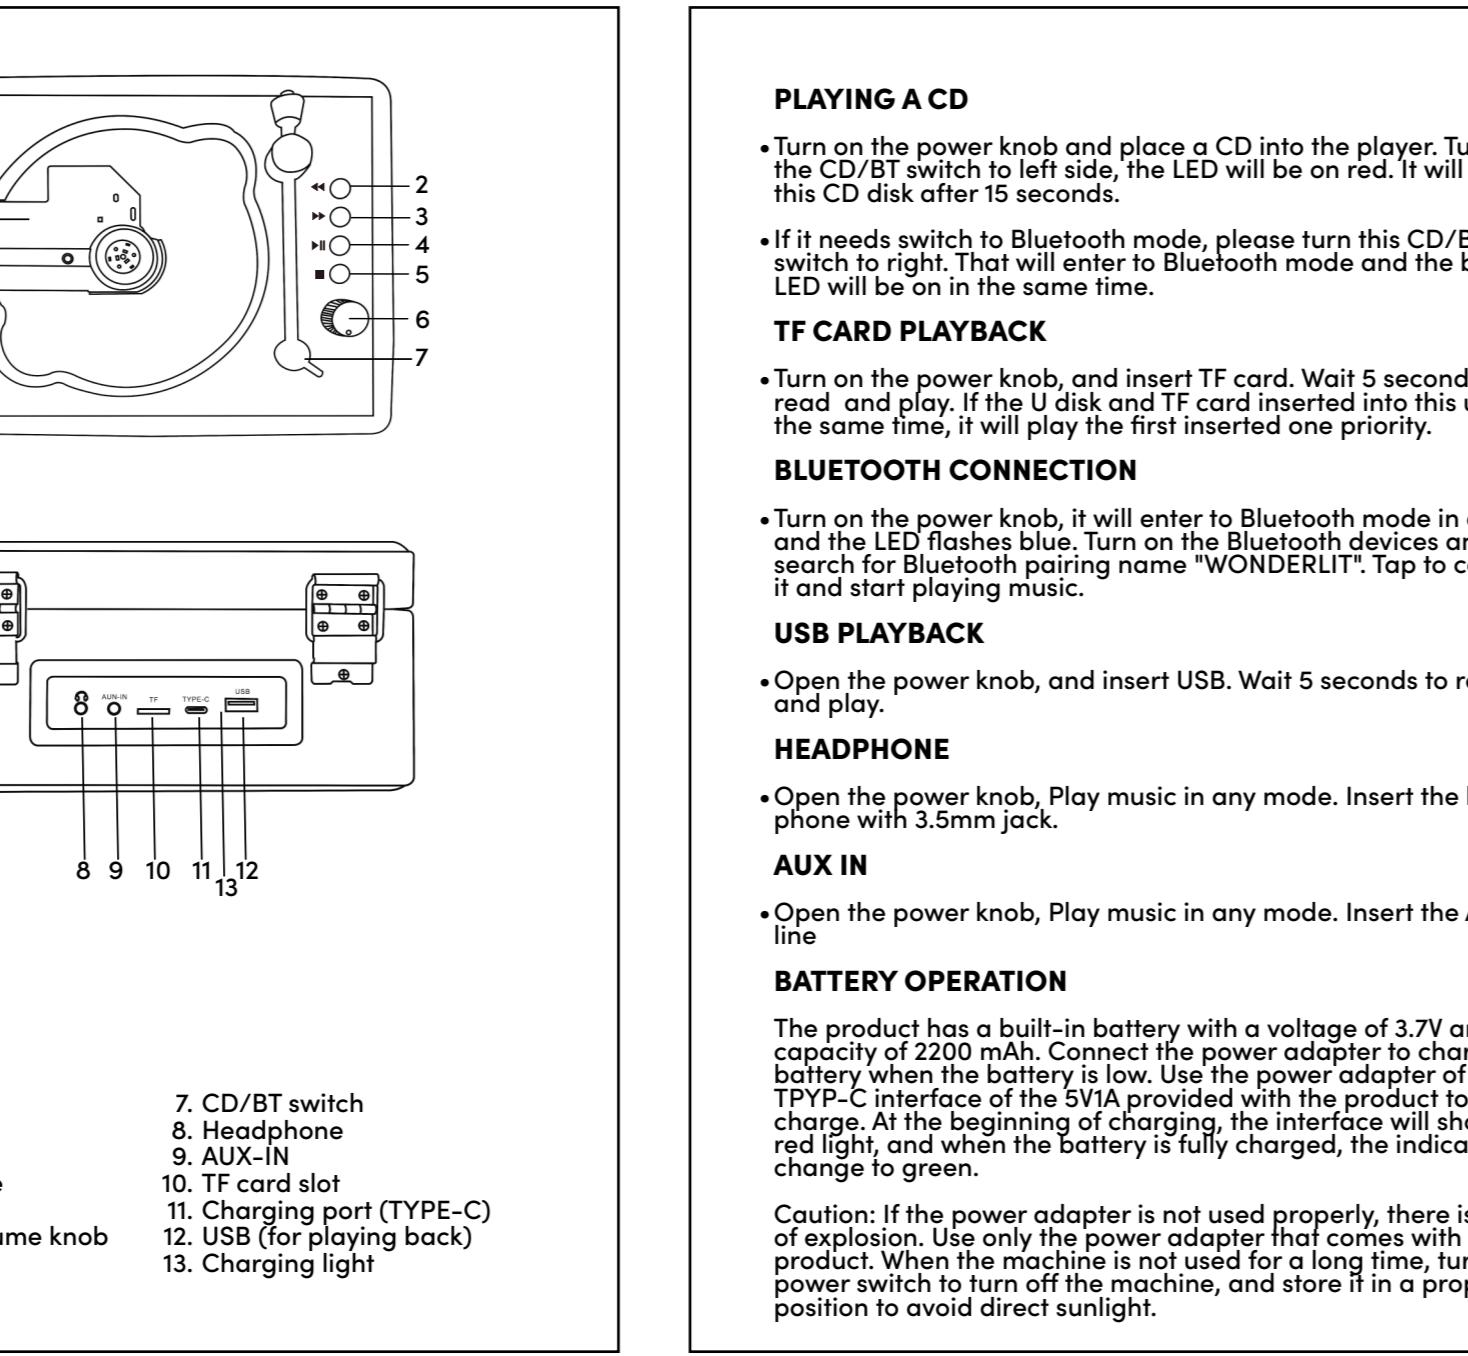

PLAYING A CD

- Turn on the power knob and place a CD into the player. Turn on the CD/BT switch to left side, the LED will be on red. It will play this CD disk after 15 seconds.
- If it needs switch to Bluetooth mode, please turn this CD/BT switch to right. That will enter to Bluetooth mode and the blue LED will be on in the same time.

TF CARD PLAYBACK

- Turn on the power knob, and insert TF card. Wait 5 seconds to read and play. If the U disk and TF card inserted into this unit in the same time, it will play the first inserted one priority.

BLUETOOTH CONNECTION

- Turn on the power knob, it will enter to Bluetooth mode in default and the LED flashes blue. Turn on the Bluetooth devices and search for Bluetooth pairing name "WONDERLIT". Tap to connect it and start playing music.

USB PLAYBACK

- Open the power knob, and insert USB. Wait 5 seconds to read and play.

HEADPHONE

- Open the power knob, Play music in any mode. Insert the headphone with 3.5mm jack.

AUX IN

- Open the power knob, Play music in any mode. Insert the AUX-IN line

BATTERY OPERATION

The product has a built-in battery with a voltage of 3.7V and a capacity of 2200 mAh. Connect the power adapter to charge the battery when the battery is low. Use the power adapter of the TPYP-C interface of the 5V/A provided with the product to charge. At the beginning of charging, the interface will show a red light, and when the battery is fully charged, the indicator will change to green.

Caution: If the power adapter is not used properly, there is a risk of explosion. Use only the power adapter that comes with the product. When the machine is not used for a long time, turn the power switch to turn off the machine, and store it in a proper position to avoid direct sunlight.

CONNECTING DC POWER

Connect the small end of DC cord to the socket at the back of the main unit and insert the plug of DC cord into standard DC wall outlet.

Caution: The unit is designed to operate from mains supply of DC 5V/A. If the plug of DC cord does not fit properly, try to turn it over and try again. Do not force it. When the unit is intended for being unused for a long period of the time. Please turn the switch knob to turn off the unit and unplug the power cord from the DC wall outlet.

CARE AND MAINTENANCE

Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.

TROUBLESHOOTING GUIDE

Symptom	Possible Cause	Solution
CD player will not play	Unit not in CD function mode. CD is installed incorrectly. If the CD is self-connected, the media used may not be compatible with the player.	Select CD function mode. Insert CD with label side up. Use better quality blank media and retest.
CD skips while playing	Disc is dirty or scratched.	Wipe CD with clean cloth or use another disc.
Intermittent sound from CD Player	Dirty or defective disc. Dirty pick up lens. Player is subject to excessive shock or vibration.	Clean or replace the defective disc. Use a CD-lens cleaning disc to clean the lens. Relocate the player away from shock or vibration.

SAFETY INSTRUCTIONS

DANGER:
Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

CLASS II
This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

LASER SAFETY:

This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

SAFETY INSTRUCTIONS

16. Main plug used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus completely, the main plug should be disconnected from the main socket outlet completely.

17. Battery shall not be exposed to excessive heat such as

sunshine, fire or the like.

This device has been evaluated to meet general reasonable exposure requirements. The device can be used in an office environment.

THROWBACK® is a registered trademark of Trustee Group, Inc. No portion of this design may be reproduced without written permission. Other trademarks and trade names are the property of their respective owners. All rights reserved. Distributed by Trustee Group, Inc. New York, NY 10016.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. All other product and service marks and trade names are the property of their respective owners.

FCC ID: 2ABV-CD-SP

IC: 2ABV-CD-SP

Made in China

