

# THROWBACK SPINNER

RECORD PLAYER • WIRELESS SPEAKER




RECORD PLAYER  
WIRELESS SPEAKER  
33/45/78 RPM

User Manual

Bluetooth® MODEL: TB-VCDSPK2


**3.3 Line in Operation**  
1. Use an audio cable with one 3.5mm stereo plug on each end of the cable.  
2. Plug one end into the line-in jack on the main unit and plug the other end of the cable into the line-out of your external audio device.  
3. Turn on the unit and your external audio device.  
4. To select auxiliary audio input turn the function control to the line-in position.  
5. The volume level can now be controlled through the main unit. Operation all other functions on the auxiliary device as normal.

**3.4 Line Out**  
1. You can listen to your new turntable using the built in speakers but you may wish to connect it to your existing Hi Fi system. Connect the audio plugs to the line input on your mixer or amplifier using an RCA cable.

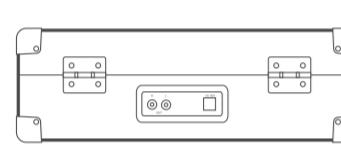


Line out cable  
not included

**3.5 Headphone Out**  
1. Use a wired earphone or headphones (NOT INCLUDED) and insert the 3.5mm stereo plug in phone jack on the turntable.

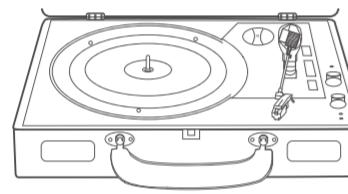

## 3.6 Playing a Record

- Carefully holding the vinyl record by the edges, place the record on the Revive Turntable.
- Turn on the power and select Phone mode.
- Select the correct speed for the record that you want to play.
- Release the tone arm lock.
- Carefully raise the tone arm. The turntable will start to rotate.
- Place the stylus over the first track of the record.
- Put down the stylus slowly on to the record to play.
- When a record reaches the end, the turntable will stop automatically if the auto-stop switch is in the ON position.
- Lift up to the tone arm and put it on the rest when finished and replace the tone arm lock.

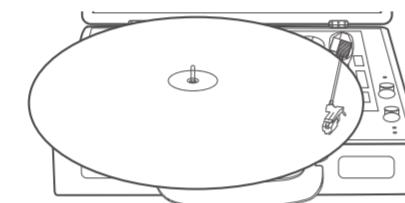

4

## 4 Maintenance

Always unplug the unit from the mains power supply and allow to cool sufficiently before performing any cleaning, or maintenance. Wipe the unit with a soft, damp cloth and allow to dry thoroughly. Do not use harsh or abrasive cleaning solvents, as these may damage the finish of the unit. Do not immerse the unit in water or any other liquid.

## 5 Troubleshooting

| Problem  | What to do  |
|--|---|
| Power does not come on when the unit is switched on. | Plug the AC adapter into a wall outlet.   |
| No sound comes out of the speakers.                  | Adjust the volume.<br>Reselect the desired input source using the mode button.  |
| The unit does not respond.                           | Remove the power cord and all other power supplies from the device, and then plug in the unit again after one minute. |
| The sound is distorted when playing the record.      | Place the stylus in the centre.   |
| Unit gets warm after extended play at high volume.   | Turn the unit off a period of time or lower volume.   |

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

</div