

THROWBACK

PITCH PERFECT



WIRELESS SPEAKER

SPECIFICATIONS

- BLUETOOTH 5.3
- 400MAH BATTERY
- 3 HOUR LIFE
- 4Ω 3W SPEAKER
- TOUCH CONTROLS
- USB-C

WARNING: DO NOT USE AS REAL BASEBALL

CONTENTS: 1 BASEBALL WIRELESS SPEAKER, 1 USB-C WIRE, 1 USER MANUAL

The BLUETOOTH® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. All product name, logos, and brands are property of their respective owners.

THROWBACK® COPYRIGHT ALL RIGHTS RESERVED. THROWBACK is an innovative brand of Truststone Group LLC. No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Truststone Group LLC. New York NY 10003.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

⚠ WARNING: Cancer risk from Lead Exposure
www.P65Warnings.ca.gov

FCCID: 2BBPLWLBSBLDSPK

MADE IN CHINA



THROWBACK

 





PITCH PERFECT

 



 
WIRELESS SPEAKER

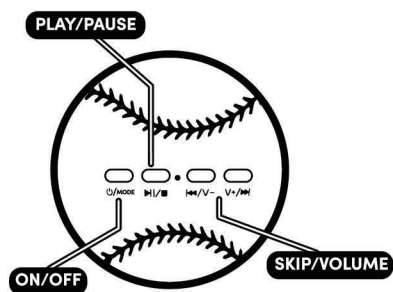WL-BSBLDSPK-ORN



1.  Power On/Off: Long press the MODE button to power the speaker on or off. The default mode is Bluetooth when turned on. Bluetooth pairing name: " ". Click the MODE button to switch between Bluetooth and radio modes.
2.  Pause/Play: Click the button to pause or play music.
 Long press this button to enter FM automatic channel search mode.

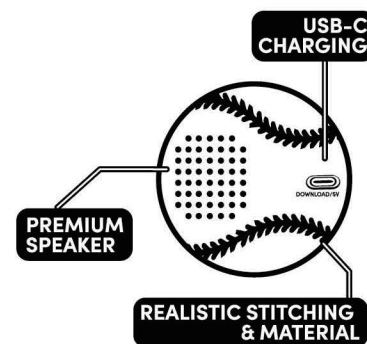

3.  Volume Up/Previous Track: Long press the volume up button to increase the volume. Click the same button to skip to the previous track in Bluetooth mode or the previous station in FM mode.
4.  Volume Down/Next Track: Long press the volume down button to decrease the volume. Click the same button to skip to the next track in Bluetooth mode or the next station in FM mode.
5. Charging: Use the USB-C port to charge the speaker.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.