

100 mm

70 mm

## Product User Manual

Model NO: Glass5 +



 
Basic Specification  
\*BT version:JL5.3  
\*Output power (RMS):5W  
\*Speaker size: 57mm  
\*Battery capacity:400mAh

\*Charging time:2-3 H  
\*Working hour:2-3 H  
\*Working range: 10M  
\*Product Size: 111\*111\*127mm

Product Feature  
\*Bluetooth music playback  
\*Support TF card  
\*FM radio

\*U flash disk  
\*Aux line.  
\*RGB light.

### Instruction of Buttons

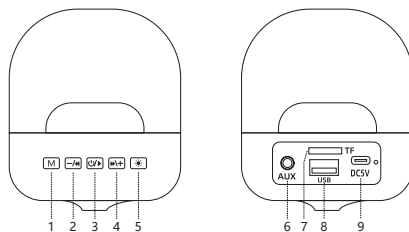

1. Click to switch modes
2. Click on the previous track/long press to decrease volume
3. Power on/off/double-click the power button to open TWS mode
4. Click on the next track/long press to increase volume
5. Light mode conversion
6. AUX socket
7. TF card socket
8. USB port
9. DC5V socket

1

### Operating instructions

1. Bluetooth connection: After turning on the speaker, switch to Bluetooth mode and turn on your phone's Bluetooth or other devices. Search for the Bluetooth name and find "Glass5 +". Click to connect and hear the prompt sound "ding dong". Afterwards, the connection was successful.
2. Light switching: Click \* to switch, there are 5 light modes/long press the switch light.
3. Radio operation: Click on M mode to switch to FM, and then press the power button to automatically search for channels.
4. TWS Couplet: After turning on, double-click the power button and hear a beep sound to successfully pair.
5. Charging prompt: Insert the USB cable into the TYPE-C charging port. If the red light is on, it indicates charging. Turning off indicates that charging is complete.

### Common problems and solutions

1. After playing for a long time, if the battery is low, the device will automatically shut down. Please fully charge it before turning it back on.
2. Does the device not work well beyond the effective range of the Bluetooth connection, or is it located there? Some malfunctions. Can't connect to Bluetooth? Is Bluetooth in searchable mode or can the speaker be restarted. There are too many Bluetooth devices around you, please turn off some of them.

### Attention

1. Use this product under normal temperature environment.
2. Do not play in the wet environment.
3. Avoid the damage of falling.
4. Do not dismantle or repair the speaker by yourself.
5. Built-in battery, do not throw the speakers in the fire.

2

### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

3

## 产品使用说明书

Model NO: Glass5 +



### 基本参数

\*蓝牙版本:5.3  
\*输出功率:5W  
\*扬声器尺寸:57mm  
\*电池容量:400毫安

 
\*充电时长:2-3 H  
\*播放时长:2-3 H  
\*蓝牙传输范围:10米  
\*产品尺寸:111\*111\*127mm

### 产品功能

\*蓝牙音乐播放  
\*支持内存卡播放  
\*支持收音机模式

\*支持U盘播放  
\*支持音频接口播放  
\*RGB灯效

### 按键以及接口说明

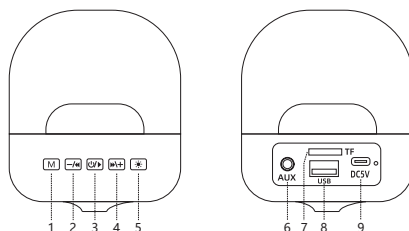

1. 单击切换模式
2. 单击上一曲/长按音量减少
3. 开机/关机 双击TWS
4. 单击下一曲/长按音量增加
5. 灯光模式转换
6. AUX插口
7. TF卡插口
8. USB插口
9. DC5V插口

1

### 操作说明

 
1. 蓝牙连接: 打开音箱后,切换到蓝牙模式, 打开手机蓝牙或其他设备搜索蓝牙名称找到"Glass5 +"点击连接, 听到提示音"叮咚"后即连接成功。
2. 灯光切换: 单击 \* 进行切换, 共有5种灯光模式/长按开关灯。
3. 收音操作: 单击 M 模式切换 F M, 然后单开机键自动搜台。
4. T W S 对联: 开机后双击开机键听到叮咚一声后对联成功。
5. 充电提示: 将USB线插入TYPE-C充电口, 红灯亮表示充电, 红灯熄灭表示充电完成。

### 常见问题及解决方法

1. 长时间播放后, 电池电量不足, 设备会自动关机. 请充满电后再开机。
2. 该设备不工作得很好是否超出了蓝牙连接的有效距离, 或在那里的一些故障。
3. 无法连接蓝牙是否蓝牙处于可搜索模式或重新启动扬声器。你身边的蓝牙设备太多了, 请关掉部分蓝牙设备。

### 注意

1. 常温环境下使用本产品。
2. 不要在潮湿的环境下玩耍。
3. 避免坠落造成的伤害。
4. 请勿自行拆卸或修理扬声器。
5. 内置电池, 请勿将扬声器扔进火中。

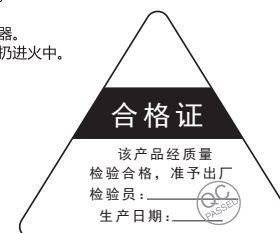

2

3