


Telly

Welcome To Your Telly

Telly is the first ever dual screen smart TV that goes way beyond streaming. It's pretty simple to setup. If you need assistance scan the QR code for step by step videos, support, and more.



Get To Know Your Telly

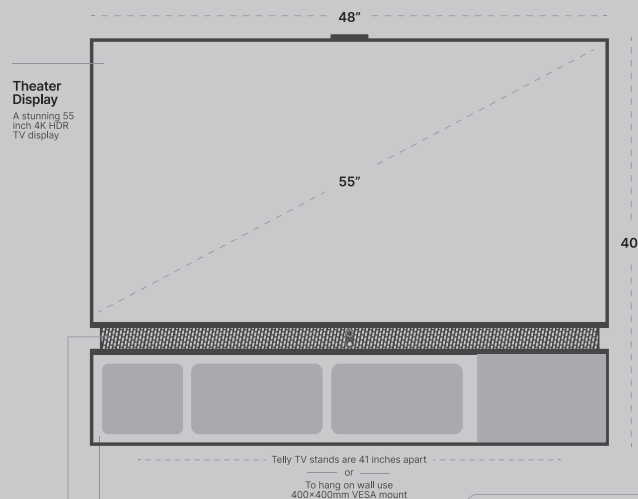

Theater Display
A stunning 55 inch 4K HDR TV display

Smart Screen
Go beyond streaming with this integrated second screen


6-Driver Soundbar
Feel like your in the movies with this built-in immersive soundbar

Telly TV stands are 41 inches apart
or
To hang on wall use 400x400mm VESA mount

Included in the box
55 inch Telly 4K TV
TV Stands (2)
Stand Screws (6)
Telly Remote
AAA Batteries (2)
Power Cord

4K Android Dongle Accessory Kit
4K Android Streaming Dongle
Android Remote
AAA Batteries (2)
USB Power Cable

You're In Control

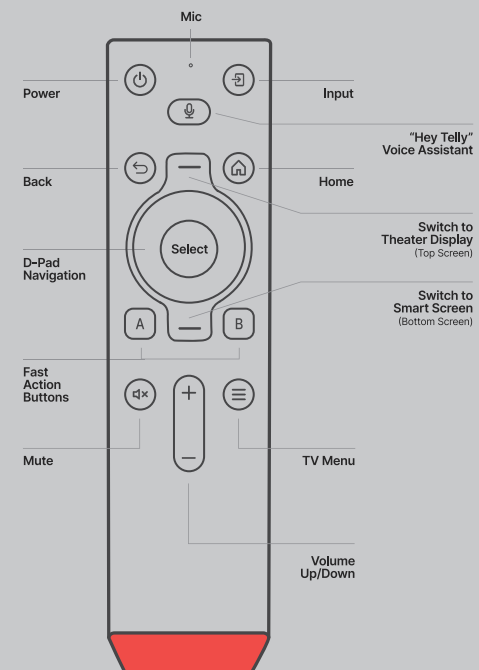


Telly Controls
(on Back Right)



Power
Volume Up/Down

Connectivity (on back left)

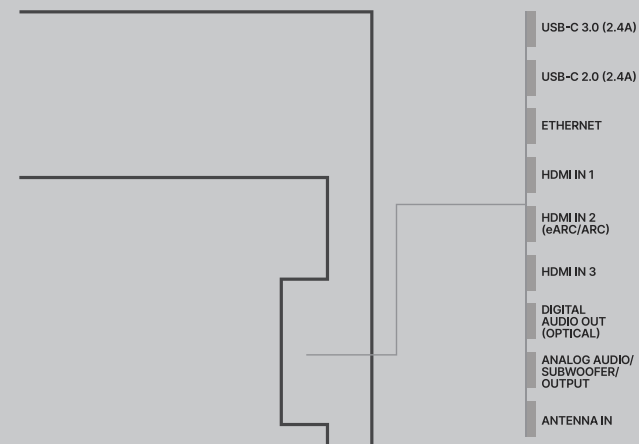

Designed by Telly in the United States

Unboxing and Setup

Let's get started by unboxing and setting up Telly. It's just a few steps. Remember to scan the QR code on the box or on this guide if you need any assistance.


Before You Start

Grab a friend and the following tools:

- 1) Phillips Head Screw Driver
- 2) Scissors


Step 1

Using your scissors, cut open the top of the box to expose the top flap.

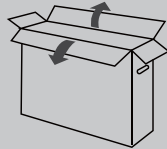

Step 2

Remove both accessory boxes and stands. Then remove the top foam piece.

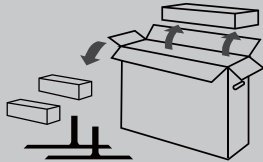


Step 3

Lift and remove outer carton sleeve by pulling the box straight up.



Step 4

Lift TV together, with protective bag and cardboard screen protector, out of bottom carton.

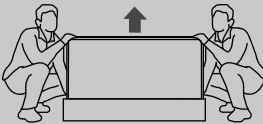

Important


Lift by holding the sides of Telly. Do not touch the screens.



Step 5A

If using TV stands, place the TV on a soft flat surface, screen side down. Cut protective bag to expose bottom for stand installation.


Insert the legs into the slot at the bottom of Telly. Secure using included stand screws.

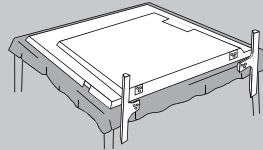

Step 5B


If using a wall mount, place the TV on a soft flat surface, screen side down. Cut protective bag to expose back cover for wall mount bracket installation.

Follow instructions included with the wall mount bracket. Use M6 15mm lengths screws x4 (not included).

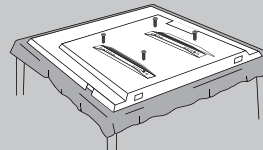

Step 6


While Telly is on the flat surface, plug in external devices* into a HDMI input.

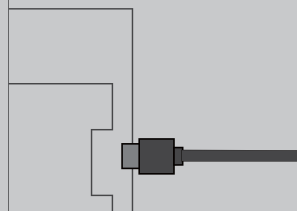

*Telly works with the streaming device of your choosing. Connect the included Android Streaming Dongle or use an existing device like Apple TV, Amazon Fire Stick, Xbox, Playstation, satelite or cable box.


Step 7

Plug the power cord into Telly. Lift Telly together and place on stand or wall mount (follow mounting instructions). Remove screen protector. Plug TV power cord into a wall power outlet.

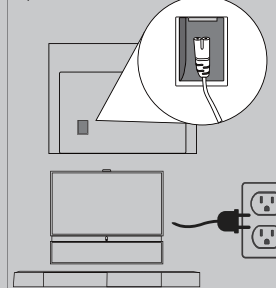


Step 8

 Lift back cover off the Telly remote and install the included AAA batteries. LEDs on the remote will flash to indicate it's in pairing mode. Once paired, use the power button to turn on Telly.



Step 9

Complete Telly onboarding to finish setup. Enjoy Telly!

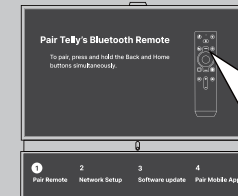

1

Pair Your Remote


Pair your Telly Remote by holding the Back and Home buttons at the same time.



2

Network Setup


Locate and select your Wifi network. Enter your Wifi network password.

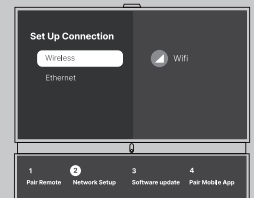

3

Software Update

Your Telly will download the latest software. Your TV may restart during this process.

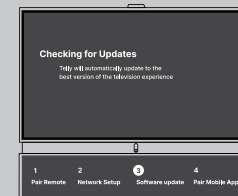

4

Pair Your Mobile App

Download and open the Telly App on your phone to complete the setup process.



Questions? Email support@freetelly.com or go to www.freetelly.com/getstarted

Other Safety Considerations

A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns, such as when watching video or playing games. If you have experienced seizures or blackouts or have a family history of such occurrences, you should consult a doctor before watching videos or playing games. Engaging in repetitive motions such as pressing buttons or playing some games may cause you to experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Discontinue use of your device and consult a physician if you experience headaches, blackouts, seizures, convulsion, eye or muscle twitching, loss of awareness, involuntary movement, disorientation, or other discomfort. To reduce risk of these symptoms, avoid prolonged use, watch your television from a far distance and in a well-lit room, and take frequent breaks.

The American Academy of Pediatrics recommends that television should be avoided for infants and children under age 2. If the adapter or cable appears damaged, discontinue use immediately.

Your TV may get hot during normal use. To reduce the effect of the warming, place your device on a heat resistant surface. If you find the device has become hot to the touch, unplug the power cord and let it cool down for a few minutes before handling.



AVOID PROLONGED LISTENING AT HIGH VOLUME. Prolonged listening of the player at high volume can damage the ear of the user. To prevent possible hearing damage, users should not listen at high volume levels for long periods.

PRODUCT SPECIFICATIONS

Telly 55" TV

TV Model Number: TY55-1
TV Electrical Ratings: 100V-240V~ 50/60Hz 400W
Fire TV Temperature Rating: 0°C to 45°C

Telly TV Remote

Electrical Rating: 3V (2 AAA Batteries)
Remote Temperature Rating: 0 to 35°C

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement of Telly TV

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

RF Warning Statement of Telly TV Remote

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

[47 CFR 15.21] Pursuant to Section 15.21 of the FCC rules, changes or modifications to a Product by the user that are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device meets the FCC Radio Frequency Emission Guidelines. Information on the product is on file with the FCC and can be found by inputting such Product's FCC ID (which can be found on the device) into the FCC ID Search form available at <https://www.fcc.gov/oet/ea/fccid>. The output power of the radio technology used in the Products is below the radio frequency exposure limits set by the FCC. Nevertheless, it is advised to use the Products in such a manner that minimizes the potential for human contact during normal operation.

The party responsible for FCC compliance is Telly, Inc. 14622 VENTURA BLVD #102 PMB 2037 SHERMAN OAKS, CA 91403. If you wish to contact Telly, please visit www.freetelly.com/support.

Using the Telly TV and Remote Control Around Other Electronic Devices

The Telly TV and Telly Remote generate, use, and can radiate radio frequency (RF) energy and, if not used in accordance with their instructions, may cause interference to radio communications and electronic equipment. External RF signals may affect improperly installed or inadequately shielded electronic operating systems, entertainment systems, and personal medical devices. While most modern electronic equipment is shielded from external RF signals, if in doubt, check with the manufacturer. For personal medical devices (such as pacemakers and hearing aids), consult with your physician or the manufacturer to determine if they are adequately shielded from external RF signals.

RECYCLING YOUR DEVICE PROPERLY

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of, or recycle, your device in accordance with your local laws and regulations.

Safety and Compliance Information

Use Responsibly. Read all instructions and safety information before use.

IMPORTANT PRODUCT INFORMATION



FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated hazardous voltage within the device's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons. It is dangerous to make any kind of contact with any internal part of this device.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the device.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT OPEN OR REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.



This device is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a grounding connection.



WARNING: To prevent the spread of fire, keep candles or other open flames away from this device at all times.

Read these instructions.
Keep these instructions.
Heed all warnings.
Follow all instructions.



WATCH FOR SMALL PARTS Your device, its accessories, and batteries may present a choking hazard to small children. Keep them out of reach of small children.

WARNING: Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Only using furniture that can safely support the television set.
- Routing cords and cables connected to the television so they cannot be tripped over, pulled, or grabbed.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls. If you are keeping and relocating an existing television set, the same considerations as above should be applied.
- Not placing items that might tempt children to climb, such as toys and remote controls, on top of the television set and supporting furniture Please refer to the information on the exterior back enclosure for electrical and safety information before installing or operating the device.

Television:

- Do not install this device in a confined or built-in space such as a bookcase or similar unit unless proper ventilation is provided. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains, etc. Keep a minimum distance of 10 cm around all edges of the display for sufficient ventilation.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing and objects filled with liquids, such as vases, should not be placed on the device.
- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Power cord and Plug:

- To disconnect your TV from power, you must unplug the power cord from the electrical outlet. The power cord must remain readily operable.
- Unplug the TV set under the following conditions:
 - If the set will not be used for a long period of time.
 - If the power cord or the power outlet/plug is damaged.
 - If the TV, power cord, or power outlet/plug has been exposed to liquid or moisture.
 - If the set has been subject to impact, dropped, or otherwise damaged.
 - When not in use and during movement, please take care of the power cord, e.g. tie up the power cord with cable tie. It should be free from sharp edges and the like that can cause abrasion of the power cord. When put into use again, make sure the power cord is not damaged.
 - Unplug this product during lightning storms.
- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet beyond their capacity, since this can result in fire or electric shock.
- Do not expose the power cord and the signal cable to moisture.
- Only use the provided plug with an appropriate outlet. If the provided plug does not fit into your outlet, do not force the plug into the outlet.
- Protect the power cord from being walked on or pinched. Particularly near the plug and the point where it exits the product.
- Be sure to plug in the power cord until it is firmly seated. When unplugging the power cord from the outlet, always pull on the power cord's plug. Never unplug it by pulling on the power cord. Do not touch the power cord with wet hands.
- Only use attachments/accessories included with the device.



BATTERY SAFETY

This device contains alkaline batteries. The remote requires batteries for use. Only use new 1.5V alkaline or 1.2 NiMH rechargeable AAA-sized batteries. Never mix old and new batteries. Keep all of the batteries out of the reach of children. Do not open, disassemble, puncture, cut, bend, shred or heat the batteries and do not allow metal objects to touch the battery terminals on the remote as they can become hot and cause burns. Remove all batteries if they are worn out or before storing your remote for an extended period of time. Dispose of all batteries in accordance with applicable laws and regulations and do not dispose of batteries by throwing them into a fire. If any batteries begin to leak, take steps to prevent the fluid from coming into direct contact with skin or clothes as the fluid could be corrosive and may be toxic. Remove the batteries and clean the battery compartment in accordance with the battery manufacturer's recommendations.

The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: There is a danger of an explosion if you replace the batteries used in the remote with the wrong type of battery. Replace only with the same or equivalent type.

This device uses batteries. There may be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information.

Hanging the TV Set on the Wall

This operation requires a minimum of two people.



WARNING: If you mount this TV on a wall, follow the instructions exactly as set out in the instructions provided with the wall mount. If it is not correctly mounted, the TV may slide or fall and cause serious injury to a child or adult and serious damage to the TV.

To ensure a safe installation, observe the following safety notes:

- Do not install while your TV set is turned on. This may result in personal injury from electric shock.
- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount (sold separately).
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.
- Your TV has four VESA mounting holes on the back. If you attach a wall-mount bracket to the back of your TV, **the bracket must be securely attached using all four holes**. If you do not use all four mounting holes, your TV may fall and cause property damage or personal injury. See the documentation that came with your wall mount for complete mounting instructions.

Securing Your TV



WARNING: TV sets that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc. may fall over, resulting in injury.


- Never allow children to climb on or play on the TV set or the furniture on which the TV set is placed.
- Never place the TV set on furniture that can easily be used as steps, such as a chest of drawers.
- Always install the TV set where it cannot be pushed, pulled over, or knocked down.
- Always route power cords and cables connected to the TV set so that they cannot be tripped over, pulled, or grabbed.

For updated or additional information about securing your TV set, visit <https://www.anchorit.gov>.



When a cart is used, use caution when moving the cart/device combination to avoid injury from tip-over.

If an outside antenna or cable system is connected to the device, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-2011 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead in wire to an antenna-discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See following example:

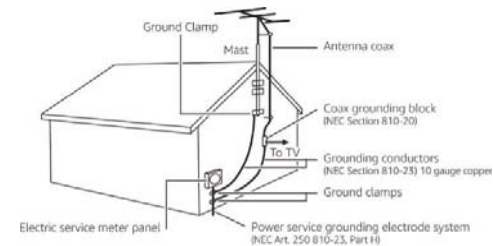

Maintaining Your Telly TV

Do not use your Telly TV or accessories (collectively referred to as "device" or "devices") near sinks or other wet locations. Take care not to spill any food or liquid on your devices and do not put any object filled with a liquid, such as a vase, on or near your devices. If your TV does get wet, carefully unplug all cables without getting your hands wet and wait for the device to dry completely before plugging it in again. If your Telly TV Remote does get wet, use rubber gloves to remove the batteries and wait for the remote to dry completely before re-inserting the batteries. Do not attempt to dry your devices with an external heat source, such as a microwave oven or hair dryer. Do not drop, throw, disassemble, crush, bend, puncture, or paint your Telly TV Remote.

Use of third-party accessories may impact your devices' performance. In limited circumstances, use of third party accessories may void your devices' limited warranty. In addition, use of incompatible third-party accessories may lead to damage to device or the accessory. Read all safety instructions for any accessories before using with your Telly TV.

Use Environment:

- Keep the set away from direct sunlight.
- Do not use the device in a location with heavy dust. Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat or by causing insulation to deteriorate.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not use or install the device in a location where exposure to liquids or moisture may results, such as in a bathroom or near a kitchen sink or other sources of running water.

Cleaning:

- To clean the device, unplug the power cord and dust the device by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.
- Do not spray water or any liquid directly onto the TV. Any liquid that goes into the TV may cause a failure, fire, or electric shock.