


Specification

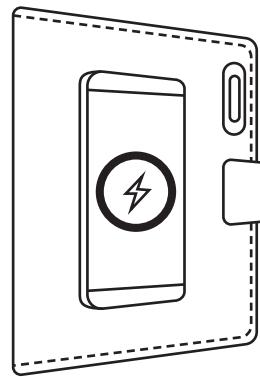

- Size: 22.5*18*3.5cm
- With 4000mah power bank
- With MagSafe function
- With 15W wireless charger
- With 32G USB
- With video player

Video Format: 720P:AVI,MP4,MKV,RMVB,MPG,MPEG,DAT,VOB,MOV,3GP,FLV

Picture Format: JPEG,JPEG,BMP,PNG

Audio Format: MP3,MP2,MP1,MPA,OGG,AAC,AC3,WAV,FLAC


★ About The Video Player

- Turn on / off: Press the button for 3 seconds
- Touch the screen to use the video player just like using a phone.
- Connect Computer: use the Type-C cable connect with computer, so you can upload or delete videos and pictures
- For the video memory card: 4G
- Charging the video player: The video player use the same power with the notebook, so only need to charge the main product, no need to charge the video player

★ About The Power Bank

- Charge the power bank by using the Type-C cable
- Power Bank Changing The Phones: Use the Type-C cable connect to the phones, so the phone will start charging
- Double-click the button to turn off the power bank or it will turn off itself if people not using for 30 seconds
- Battery Status: One light on means 25% battery power left. Two lights on means 50% battery power left. Three lights on means 75% battery power left. Four lights on means 100% battery power left. The fourth light also shows fast charging. When this light turn to GREEN, means the fast charging function turn on
- For Wireless Charging: Double-click the metal plate to turn on the wireless charging function, put the phone on the wireless charging place in 15 seconds, and make sure the phones are in the middle of the wireless charging place. When phones start charging, the first light will turn to BLUE and flickering. If didn't put phones on the wireless charging place in 15 seconds, the wireless charging function will be turn off itself

Specification

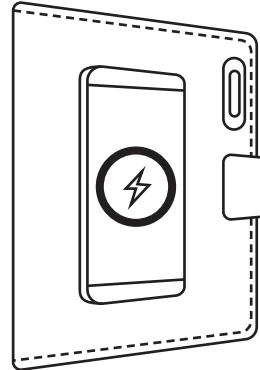

- Size: 22.5*18*3.5cm
- With 4000mah power bank
- With MagSafe function
- With 15W wireless charger
- With 32G USB
- With video player

Video Format: 720P:AVI,MP4,MKV,RMVB,MPG,MPEG,DAT,VOB,MOV,3GP,FLV

Picture Format: JPEG,JPEG,BMP,PNG

Audio Format: MP3,MP2,MP1,MPA,OGG,AAC,AC3,WAV,FLAC


★ About The Video Player

- Turn on / off: Press the button for 3 seconds
- Touch the screen to use the video player just like using a phone.
- Connect Computer: use the Type-C cable connect with computer, so you can upload or delete videos and pictures
- For the video memory card: 4G
- Charging the video player: The video player use the same power with the notebook, so only need to charge the main product, no need to charge the video player

★ About The Power Bank

- Charge the power bank by using the Type-C cable
- Power Bank Changing The Phones: Use the Type-C cable connect to the phones, so the phone will start charging
- Double-click the button to turn off the power bank or it will turn off itself if people not using for 30 seconds
- Battery Status: One light on means 25% battery power left. Two lights on means 50% battery power left. Three lights on means 75% battery power left. Four lights on means 100% battery power left. The fourth light also shows fast charging. When this light turn to GREEN, means the fast charging function turn on
- For Wireless Charging: Double-click the metal plate to turn on the wireless charging function, put the phone on the wireless charging place in 15 seconds, and make sure the phones are in the middle of the wireless charging place. When phones start charging, the first light will turn to BLUE and flickering. If didn't put phones on the wireless charging place in 15 seconds, the wireless charging function will be turn off itself

Specification

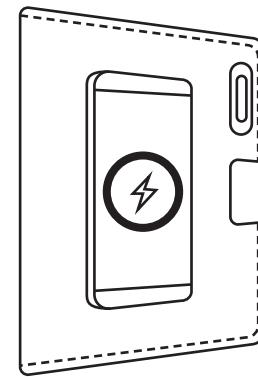

- Size: 22.5*18*3.5cm
- With 4000mah power bank
- With MagSafe function
- With 15W wireless charger
- With 32G USB
- With video player

Video Format: 720P:AVI,MP4,MKV,RMVB,MPG,MPEG,DAT,VOB,MOV,3GP,FLV

Picture Format: JPEG,JPEG,BMP,PNG

Audio Format: MP3,MP2,MP1,MPA,OGG,AAC,AC3,WAV,FLAC


★ About The Video Player

- Turn on / off: Press the button for 3 seconds
- Touch the screen to use the video player just like using a phone.
- Connect Computer: use the Type-C cable connect with computer, so you can upload or delete videos and pictures
- For the video memory card: 4G
- Charging the video player: The video player use the same power with the notebook, so only need to charge the main product, no need to charge the video player

★ About The Power Bank

- Charge the power bank by using the Type-C cable
- Power Bank Changing The Phones: Use the Type-C cable connect to the phones, so the phone will start charging
- Double-click the button to turn off the power bank or it will turn off itself if people not using for 30 seconds
- Battery Status: One light on means 25% battery power left. Two lights on means 50% battery power left. Three lights on means 75% battery power left. Four lights on means 100% battery power left. The fourth light also shows fast charging. When this light turn to GREEN, means the fast charging function turn on
- For Wireless Charging: Double-click the metal plate to turn on the wireless charging function, put the phone on the wireless charging place in 15 seconds, and make sure the phones are in the middle of the wireless charging place. When phones start charging, the first light will turn to BLUE and flickering. If didn't put phones on the wireless charging place in 15 seconds, the wireless charging function will be turn off itself

Specification

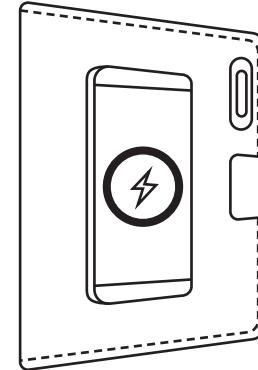

- Size: 22.5*18*3.5cm
- With 4000mah power bank
- With MagSafe function
- With 15W wireless charger
- With 32G USB
- With video player

Video Format: 720P:AVI,MP4,MKV,RMVB,MPG,MPEG,DAT,VOB,MOV,3GP,FLV

Picture Format: JPEG,JPEG,BMP,PNG

Audio Format: MP3,MP2,MP1,MPA,OGG,AAC,AC3,WAV,FLAC

★ About The Video Player

- Turn on / off: Press the button for 3 seconds
- Touch the screen to use the video player just like using a phone.
- Connect Computer: use the Type-C cable connect with computer, so you can upload or delete videos and pictures
- For the video memory card: 4G
- Charging the video player: The video player use the same power with the notebook, so only need to charge the main product, no need to charge the video player

★ About The Power Bank

- Charge the power bank by using the Type-C cable
- Power Bank Changing The Phones: Use the Type-C cable connect to the phones, so the phone will start charging
- Double-click the button to turn off the power bank or it will turn off itself if people not using for 30 seconds
- Battery Status: One light on means 25% battery power left. Two lights on means 50% battery power left. Three lights on means 75% battery power left. Four lights on means 100% battery power left. The fourth light also shows fast charging. When this light turn to GREEN, means the fast charging function turn on
- For Wireless Charging: Double-click the metal plate to turn on the wireless charging function, put the phone on the wireless charging place in 15 seconds, and make sure the phones are in the middle of the wireless charging place. When phones start charging, the first light will turn to BLUE and flickering. If didn't put phones on the wireless charging place in 15 seconds, the wireless charging function will be turn off itself

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.