



MACHENIKE

M-GAME

MACHENIKE
GAMEPAD



G3V2系列

USER MANUAL 使用说明书

WARRANTY CARD 保修卡

Read manual before use. Keep for reference

使用本产品前请仔细阅读说明书，妥善保存以备参考

PACKING CONTENTS

Please check and confirm the accessories



1 x Controller



1 x Controller Stand (Optional)



1 x USB Charging Cable

 


 
 
1 x User Manual, Certificate
Of Compliance



1 x 2.4G Receiver

BUTTON LAYOUT

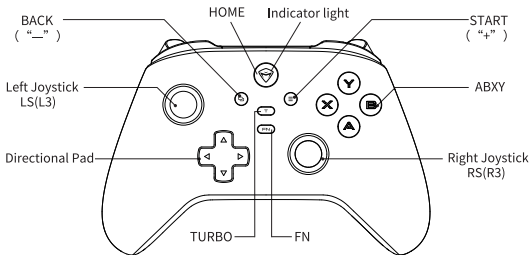

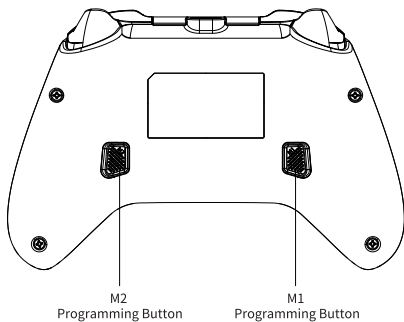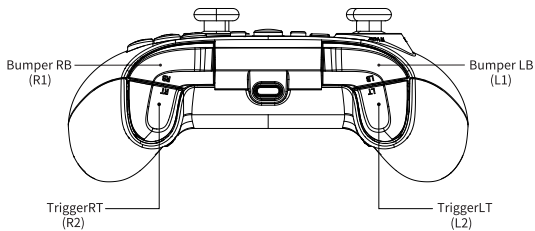

CONNECTION

Before establishing a wireless connection, please ensure to switch to wireless mode using the combination keys.

Modes		Combination Keys		Device Names
• 2.4G Mode	—	• [B]+[HOME]	—	• Connect to the dongle-connected device
• PC/Mobile Mode	—	• [X]+[HOME]	—	• Xbox Wireless Controller
• Switch Mode	—	• [Y]+[HOME]	—	• Pro Controller
• Android Mode	—	• [A]+[HOME]	—	• MACHENIKE G3 V2

Wireless Connection: Hold down the combination keys until the indicator light flashes rapidly. The controller will enter pairing mode, allowing you to connect to the corresponding device.

Wired Connection: With the controller powered off, directly connect the device and the controller using the data cable to use.

Controller Sleep/Reconnect: In wireless mode (Bluetooth/2.4G), if there's no activity for 10 minutes, the controller will automatically power off. Press the HOME button to wake up the controller, and it will automatically reconnect to the previous device.

Turn off the controller: When using wireless connection (Bluetooth/2.4G), press and hold the HOME button for more than 5 seconds to shut down the controller.

COMBINATION BUTTONS

Function	Combination	Key-Note
Vibration Intensity Adjustment	[FN] + D-pad [↑]/[↓]	/
Quick Trigger Function	Left Trigger: FN + LT Right Trigger: FN + RT	Successful switch indicated by vibration
ABXY Layout Switch	Hold FN + A for 3 seconds	Successful switch indicated by vibration
Controller Mode Switch (Xinput/Dinput/Switch)	Holding the [⌫] + [≡] buttons for 3 seconds.	Only for 2.4G/Wired Connection
Light Mode Adjustment	[FN] + D-pad [→]	/
Light Brightness Adjustment	[FN] + D-pad [←]	/
Battery Check	[FN] + TURBO	/

*When using combination keys, it is essential to follow the specified button sequence mentioned above; otherwise, switching may not work correctly.

BATTERY INFORMATION

- **Check Current Battery Level:** Press [FN] + [TURBO] simultaneously to display the current battery level.
- **Battery indicator: Battery level:**
 - $\geq 75\%$: LOGO light flashes red 4 times
 - 50%-75%: LOGO light flashes red 3 times
 - 25%-50%: LOGO light flashes red 2 times
 - $\leq 25\%$: LOGO light flashes red 1 time
- **Low Power indicator:** LOGO light stay red

- **Charging indicator:** When charging, the indicator light breathes; after fully charged, the indicator light is always blue.

Attention! Do not use a power source exceeding 5V = 1A to charge the controller to avoid damage to the device.

TURBO FUNCTION

TURBO Function:

Supported TURBO buttons: A/B/X/Y/LB/LT/RB/RT

Manual TURBO Function: When the manual TURBO function is enabled for the A button, you need to manually hold down the A button to activate it.

To enable the TURBO function:

- 1, Press and hold TURBO+A and then release it. At this point, the A button activates the manual continuous fire function.
- 2, Press TURBO+A again. Now, the A button activates the automatic continuous fire function.
- 3, Press TURBO+A once more to disable the continuous fire function.

Note: TURBO+A/B/X/Y/LB/LT/RB/RT can be used to enable the TURBO function for the corresponding buttons. When buttons are in continuous fire mode, the Home button indicator light will flash in synchronization.

For more customized functions, settings can be adjusted in the Keylinker app.

APP Download for Android/HarmonyOS/iOS:

- 1, Download the app and related firmware updates from the Machenike official website: <https://global.machenike.com/>
- 2, Or scan the QR code on the right using your browser to access the download page.
- 3, For HarmonyOS, please download the Android version of the app

Note: Harmony 5.0 and above do not support Keylinker

Connection Steps:

- 1, After correctly installing the Keylinker software on your phone, confirm the relevant permissions prompts that appear when you first start the app.
- 2, Start the controller in any mode, and you can find "G3 V2" on the Keylinker app's main page.
- 3, Click "G3 V2" to connect and enter the customization interface.



Note: *This function does not require the controller to connect to the mobile phone via Bluetooth. Follow the above operations to open Keylinker to change the controller settings.

RESET

If the controller is unresponsive or unable to recognize, please unplug the USB cable and plug it back on, or move the connection toggle switch to use another mode. If it doesn't make a difference, please use a pin to poke the reset hole to reset the controller, or check the compatibility of the OS and the device. If it still can't be resolved, please contact the customer service.

Copyright Information

PlayStation is a registered trademark of Sony Interactive Entertainment (SIE).

XBOX/Windows is a registered trademark of Microsoft Corporation.

Android is a trademark of Google Inc.

Nintendo Switch is a registered trademark of Nintendo Co.

MacOS is a registered trademark of Apple Inc. in the United States or other countries.

Other system and product names that appear in this document are generally registered trademarks or trademarks of the respective developer companies. Please note that the ™ logo and ® logos do not appear in this document.

Please consult customer service or the brand's website for updates to the product firmware without notice.

Machenike Official Website: <https://global.machenike.com/>

SPECIFICATIONS

ITEM	DATA
Input Power	5.0V ===500mA
Battery Capacity	3.7V / 1000mAh
Use Distance Range	≤ 10M

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure.

FCC ID: 2BBT5-NANORECEIVER

产品清单

请检查并确认附件



1 x 手柄



1 x 底座 (选配)



1 x USB充电线

 


 
 
1 x 使用说明书、保修卡、合格证



1 x 接收器

按键布局

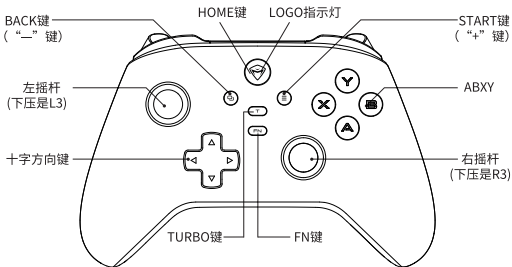

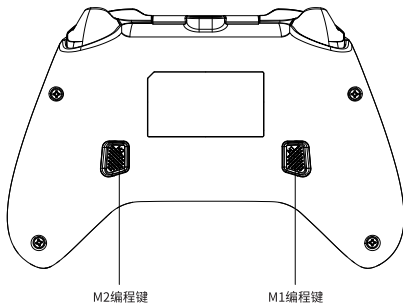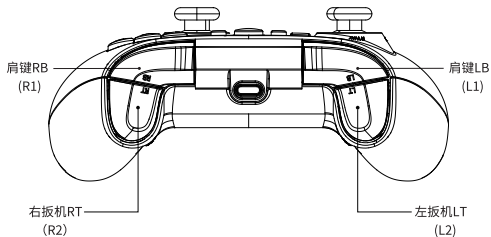

基本连接说明

在无线连接之前请先通过组合键切换到对应的设备模式

连接模式	组合键	设备名称
• 2.4G模式	— • [B]键+[HOME]键	— • 根据连接的设备自动匹配
• PC/手机模式	— • [X]键+[HOME]键	— • Xbox Wireless Controller
• Switch模式	— • [Y]键+[HOME]键	— • Pro Controller
• Android模式	— • [A]键+[HOME]键	— • MACHENIKE G3 V2

无线连接:长按对应组合键直到指示灯快闪,则手柄进入配对状态,连接以上对应的设备名称即可。

有线连接:在手柄关机情况下,通过数据线直接连接设备和手柄,即可使用。

手柄休眠/回连:无线连接使用(蓝牙/2.4G),10分钟不操作手柄会自动关机休眠;下次连接设备,通过短按HOME键可唤醒手柄,并自动回连设备。

手柄关机:无线连接使用(蓝牙/2.4G),长按HOME键5s以上手柄关机。

功能组合键操作指南

功能	组合键	备注
震动强度调整	[FN]+十字键[↑]/[↓]	/
灯光模式调节	[FN]+十字键[→]	/
灯光亮度调节	[FN]+十字键[←]	/
ABXY按键布局切换	FN+A长按3s	切换成功震动提示
手柄模式切换 (循环切换Xinput/Dinput /Switch模式)	[⌫]键+[≡]键长按3s	仅2.4G/有线连接支持

功能	组合键	备注
快速扳机功能	左扳机[FN]+[LT]/右扳机[FN]+[RT]	切换成功震动提示
电量查看	FN+TURBO	详细见电量说明

*使用组合键时，请务必按照上述的按键顺序进行操作，否则会出现无法切换的问题

电量说明

- 查看剩余电量：组合键[FN]+[TURBO]同时按可指示当前剩余电量；
- 剩余电量指示灯指示：
 - $\geq 75\%$ ：LOGO灯红色闪烁4次
 - $50\%—75\%$ ：LOGO灯红色闪烁3次
 - $25\%—50\%$ ：LOGO灯红色闪烁2次
 - $\leq 25\%$ ：LOGO灯红色闪烁1次
- 低电量指示：手柄连接状态下，LOGO指示灯红色常亮
- 充电指示：充电时，指示灯呼吸；充满电之后，指示灯蓝色常亮。

注意！请勿用超过5V=1A的电源给手柄充电，以免造成机器损坏。

连发功能

TURBO功能

支持TURBO的按键：A/B/X/Y/LB/LT/RB/RT

手动TURBO功能：按下TURBO+A键可开启A键的手动TURBO功能，需要手动按住A键才会触发；

自动TURBO功能：开启手动TURBO功能之后，再次按下TURBO+A键，此时A键开启自动TURBO功能，再次按下TURBO+A，则为关闭连发功能。

*已开启TURBO功能的按键，按下该键，指示灯会持续闪烁

更多自定义功能可在Keylinker中进行设置

APP下载——安卓/鸿蒙/iOS

- 在机械师官网中下载APP，以及相关更新的固件。
地址：<https://machenike.com/shoubing/download>
- 使用浏览器扫描右侧二维码进入下载界面；
- 鸿蒙系统请下载安卓版本即可。



注：鸿蒙5.0及以上不支持Keylinker

连接步骤

- 1、在手机正确安装Keylinker软件后，首次启动时，弹出的相关权限申请需按提示确认；
- 2、任意模式启动手柄，可在Keylinker软件主页中搜到“G3 V2”
- 3、单击“G3 V2”连接并进入自定义界面；

注：*此功能无需手柄蓝牙连接手机，按上述操作打开Keylinker即可更改手柄设置。

重置手柄

当手柄在操作过程中或接入时，出现无响应或无法识别工作模式时，可以将手柄的USB连接线拔出并重新连接，亦可使用手动模式选择进入相应的工作模式。如果问题仍不能解决，可使用卡针戳手柄背后复位孔开关即可复位手柄或检查操作系统和设备与本手柄的兼容性问题，若仍然无法解决，请联系经销商客服。

版权等信息

XBOX/Windows 是美国微软公司 (Microsoft Corporation) 的注册商标。

Android 是 Google Inc. 的商标。

Nintendo Switch 是任天堂株式会社便携式游戏机的注册商标。

出现在本文档中的其他系统名和产品名通常是各开发商公司的注册商标或商标。
请注意，本文档中没有出现™标志和®标志。

当产品固件有更新时，请自行咨询客服或前往品牌官网查看，恕不另行通知。

机械师官网：<https://www.machenike.com>

规格

综合

项目	参考值
执行标准	Q/0212LSKJ0910-2019
输入电源	5.0V $\Rightarrow$ 500mA
电池容量	3.7V /1000mAh
使用距离范围	$\leq 10M$

《废弃电器电子产品回收处理管理条例》

MACHENIKE倡导环保和低碳的消费体验,建议拥有该产品的用户在不需要此产品时,应遵守国家废弃电器电子产品回收处理相关法律法规,将其交给当地具有国家认可的回收处理资质的厂商进行回收处理,降低资源浪费,保护地球自然环境。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板组件	×	○	○	○	○	○
外壳及附件	○	○	○	○	○	○
五金件	○	○	○	○	○	○
马达组件	×	○	○	○	○	○
电池组件	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制

○:表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。

×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定限量要求。

由于目前国际、国内行业的配套技术水平达不到等因素,该产品的少数部件中还存在限用物质。产品在环保使用期限内,在消费者使用过程中并不会出现限用物质的泄露、析出等影响消费者健康的问题,可以放心使用。

印刷电路板组件:包括印刷电路板及其零部件,电子元器件等根据产品型号不同,您所购买的产品可能不会含有以上所有部件



在中华人民共和国境内销售的电子电气产品必须标识此标志,标志内的数字代表在正常的使用状态下的产品的环保使用期限。

MACHENIKE产品保修承诺

- 1、在用户按本技术使用说明书正确使用该产品的前提下，本产品自购买之日起一年内免费保修。保修服务方式为返厂维修，报修方式请扫产品包装盒上售后二维码进行报修。
- 2、我方因下列使用者个人的原因而造成的故障将不提供免费保修服务。
如：
 - (1) 擅自拆装、改装该产品而造成的故障；
 - (2) 在使用、搬运的过程中不慎摔打、跌落、进液、供电规格不符而造成的故障；
 - (3) 因缺乏合理的保养而造成的故障；
 - (4) 没有按使用说明书正确指示进行操作；
 - (5) 第三方厂品、服务或行为导致的故障或损坏等等。
- 3、在要求提供免费保修服务时，您必须提供清晰、完整和准确的销售发票和保修卡，购买产品时，可要求销售商提供上述销售发票和保修卡。
- 4、保修范围外的维修服务，将按规定收费。

保修卡

尊敬的用户：

感谢您选购本公司产品,我公司将按照《中华人民共和国消费者权益保护法》和国家技术监督局、国家工商行政管理局、财政部关于《部分商品修理更换退货责任规定》的有关规定，为您提供保修服务，请认真填写此卡并妥善保管，以便日后凭此卡维修。

客户姓名：_____ 电子邮件：_____
联系电话：_____ 邮政编码：_____
通信地址：_____
产品名称：_____ 产品型号：_____
购机日期：_____
购机渠道：_____
机身编号：_____

产品性能故障表

送修日期	性能故障描述	工程师签字	完成日期

备注：

- 1、请妥善保管此卡，保修时需出示此卡及购买凭证。
- 2、产品自购买之日起，凭购买凭证整机免费保修1年。
- 3、下列情况不属于免费服务范围，但可实行收费维修、终身服务；
 - 1) 不能出示保修说明及发票；
 - 2) 发票涂改；
 - 3) 意外因素或使用不当造成损坏；
 - 4) 未经我司许可，自行修理造成的损坏；
 - 5) 超过三包有效期，经修复仍可继续使用；

合格证 QUALIFIED CERTIFICATE	检验 MACHENIKE CERTIFIED
---	--------------------------------------

