



MACHENIKE

M-GAME

MACHENIKE GAMEPAD S3



USER MANUAL 使用说明书

WARRANTY CARD 保修卡

Read manual before use. Keep for reference

使用本产品前请仔细阅读说明书，妥善保存以备参考

PACKING CONTENTS

Please check and confirm the accessories



1 x Controller



1 x User Manual, Certificate Of Compliance

 


 
 
 
1 x USB Data Cable



1 x Controller Stand

BUTTON LAYOUT

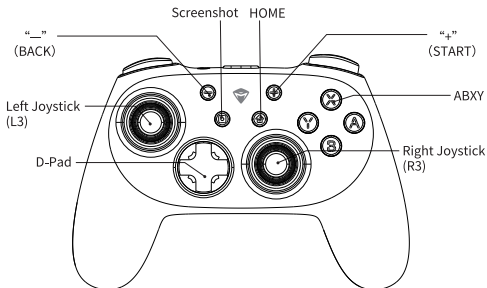

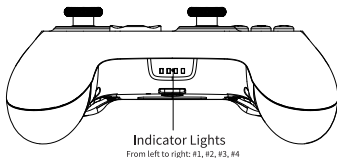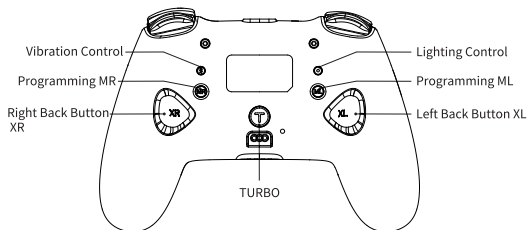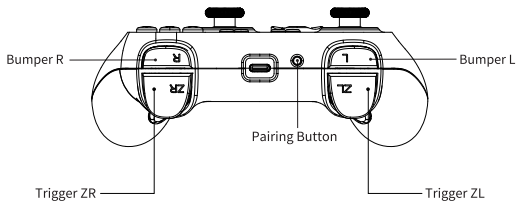

CONNECTION

One-Touch Wakeup Function: please select the corresponding device mode before connecting

Connection Mode		Key Combination		Device Name
• NS Mode	—	• [Y]+[HOME]	—	• Pro Controller
• PC/Mobile Mode	—	• [X]+[HOME]	—	• Xbox Wireless Controller

Wireless connection: Press and hold the corresponding combination key until the indicator light flashes quickly, then the controller will enter pairing mode. Connect to the corresponding device name listed above.

Wired connection: When the controller is turned off, directly connect the device and controller using the provided data cable, and it will be ready for use.

Sleep/reconnect: Wireless connection use, if the controller is not sleep; Wake up operated for 10 minutes, it will automatically go to the controller by pressing the HOME key, and it will automatically reconnect.

Turn off the controller: When using wireless connection, press and hold the HOME button for more than 5 seconds to shut down the controller.

COMPATIBILITY

NS Mode

- Supports wake-up via the Home button and remote console wake-up functionality.
- Supports NFC sensing functionality.
- Supports gyroscope functionality, which must be enabled in the game's settings that support this feature.

Connection Steps - Bluetooth Connection:

1. While the controller is powered off, press and hold the Pairing Button or the combination [Y] + [HOME] buttons until the indicator light starts flashing rapidly, putting the controller into pairing mode.
2. On the Switch home screen, navigate to "Controllers" - "Change Grip/Order" and wait for the controller to appear.
3. Once connected, the controller indicator lights will stay.

Connection Steps - Wired Connection:

1. In the Switch settings, enable the wired controller option, and insert the Switch console into the official multifunctional dock.
2. While the controller is powered off, connect the controller and the device directly using the included data cable, and it will be ready for use.

PC/Mobile Mode

- In PC mode, you can switch to the Xbox button layout by holding the combination of  + A for three seconds, according to your usage habits. The controller will vibrate once to notify you.
- iOS devices only support Bluetooth connection.

Connection Steps - Bluetooth Connection:

1. While the controller is off, press and hold the combination of [X] + [HOME] buttons until the indicator light flashes rapidly, indicating that the controller has entered pairing mode.
2. Open the Bluetooth settings on your device and add a Bluetooth device.
3. From the list of discovered Bluetooth devices, select the "Xbox Wireless Controller." Once paired, the indicator light will remain solid, and the controller indicator lights will stay.

Connection Steps - Wired Connection:

1. While the controller is off, simply connect the device to the controller using the included cable to start using it.

BATTERY DISPLAY

Controller Battery Status Display:

Controller Power Status	Indicator
-------------------------	-----------

- More than 75% battery -----#1/#2/#3/#4 channel indicator lights stay on;
- 50%-74% battery -----#1/#2/#3 channel indicator lights stay on;
- 25%-49% battery -----#1/#2 channel indicator lights stay on;
- 10%-25% battery -----#1 channel indicator light stays on;
- Less than 10% battery -----#1 channel indicator light flashes;
- Charging—— the corresponding channel indicator light flashes;
- Charging is complete——LOGO light stays on.

Attention! Don't use a power source exceeding 5V 1A to charge the controller, to avoid causing damage to the device.

COMBINATION BUTTONS

FUNCTION	FUNCTION KEY	INDICATOR LIGHTS /NOTES
Light Brightness Adjustment	Press and hold the light control button  for seamless adjustment	/
Switch light mode	Single press the light control button  for cyclic adjustment	Vibration prompt
Switch light color	Double press the light control button  for cyclic adjustment	Vibration prompt
Adjust vibration intensity	Single press the vibration control button  for cyclic adjustment	Successful adjustment is indicated by corresponding vibration intensity
Joystick Circular Area Adjustment Switch	Screenshot button  + [L3]/[R3]	Supports independent switching of left and right sticks
Cycle controller modes (Xinput/Switch/Dinput modes)	Press the [-] button + [+] button simultaneously for 3 seconds	Supported only in wired mode

*When using combination keys, it is essential to follow the specified button sequence mentioned above; otherwise, switching may not work correctly.

ADVANCED FUNCTIONALITY

Programming Buttons Macros:

• Controller Operation:

1. While the controller is connected, press and hold the ML/MR buttons + XL/XR buttons simultaneously. The decorative light strip will flash continuously, indicating that the controller has entered recording mode. If it does not flash, please repeat this operation.
2. Enter the desired function keys one by one.
3. Once the settings are complete, briefly press the corresponding macro key (XL/XR). The decorative light strip will stop flashing and return to its previous mode, indicating that the settings are saved.

Clear Current Macro Definition : While the controller is in working mode, press and hold the ML/MR button for 3 seconds. The controller will vibrate once as a prompt, clearing the current custom function for the XL/XR button.

TURBO Function:

Supported TURBO Buttons: A/B/X/Y/L/ZL/R/ZR

Manual TURBO Function: Press **T** + A to activate manual TURBO function for the A button. You need to manually hold down the A button to trigger TURBO.

Auto TURBO Function: After activating manual TURBO function, press **T** + A again to switch to auto TURBO function for the A button. Press TURBO + A again to deactivate continuous firing.

Note: **T** + A/B/X/Y/L/ZL/R/ZR can activate the corresponding button's TURBO function. When the corresponding button is in rapid-fire mode, the indicator light will flash accordingly.

Press and hold the **T** button for 3 seconds to clear the TURBO function for all buttons. Once cleared, the controller will vibrate once as a prompt.

For more customized functions, settings can be adjusted in the Keylinker app.

APP Download for Android/HarmonyOS/iOS:

- 1, Download the app and related firmware updates from the Machenike official website: <https://global.machenike.com/>
- 2, Or scan the QR code on the right using your browser to access the download page.
- 3, For HarmonyOS, please download the Android version of the app.

Note: Harmony 5.0 and above do not support Keylinker

Connection Steps:

- 1, After correctly installing the Keylinker software on your phone, confirm the relevant permissions prompts that appear when you first start the app.
- 2, Start the controller in any mode, and you can find "S3_APP" on the Keylinker app's main page.
- 3, Click "S3_APP" to connect and enter the customization interface.



Note: *This function does not require the controller to connect to the mobile phone via Bluetooth. Follow the above operations to open Keylinker to change the controller settings.

RESET

If the controller is unresponsive or unable to recognize, please unplug the USB cable and plug it back on, or move the connection toggle switch to use another mode. If it doesn't make a difference, please use a pin to poke the reset hole to reset the controller, or check the compatibility of the OS and the device. If it still can't be resolved, please contact the customer service.

Copyright Information

PlayStation is a registered trademark of Sony Interactive Entertainment (SIE).

XBOX/Windows is a registered trademark of Microsoft Corporation.

Android is a trademark of Google Inc.

Nintendo Switch is a registered trademark of Nintendo Co.

MacOS is a registered trademark of Apple Inc. in the United States or other countries.

Other system and product names that appear in this document are generally registered trademarks or trademarks of the respective developer companies. Please note that the ™ logo and ® logos do not appear in this document.

Please consult customer service or the brand's website for updates to the product firmware without notice.

Machenike Official Website: <https://global.machenike.com/>

SPECIFICATIONS

ITEM	DATA
Input Power	5.0V $\pm$ 500mA
Battery Capacity	3.7V / 600mAh
Use Distance Range	$\leq$ 10M

产品清单

请检查并确认附件



1 x 手柄



1 x 使用说明书、保修卡、合格证

 


 
 
 
1 x USB充电数据线



1 x 底座

按键布局

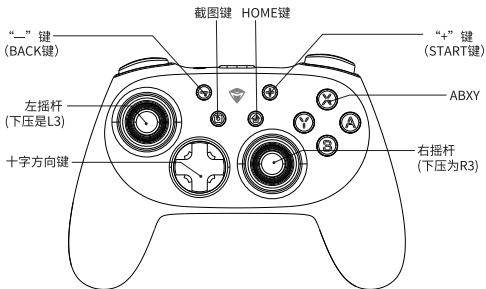

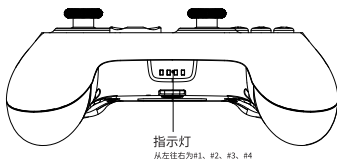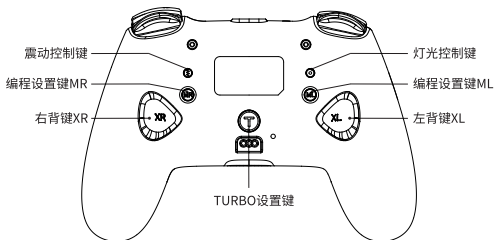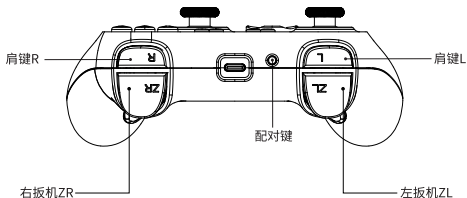

基本连接说明

产品拥有一键唤醒功能,在连接之前请先选择对应的设备模式

连接模式		组合键		设备名称
• NS模式	——	• [Y]键+[HOME]键	——	• Pro Controller
• PC/手机模式	——	• [X]键+[HOME]键	——	• Xbox Wireless Controller

无线连接:长按对应组合键直到指示灯快闪,则手柄进入配对状态,连接以上对应的设备名称即可。

有线连接:在手柄关机情况下,通过附赠的数据线直接连接设备和手柄,即可使用。

手柄休眠/回连:无线连接使用,10分钟不操作手柄会自动关机休眠;下次连接设备,通过短按HOME键可唤醒手柄,并自动回连设备。

手柄关机:无线连接使用,长按HOME键5s以上手柄关机。

关于兼容性

NS模式

- 支持Home键唤醒手柄及远程主机唤醒功能;
- 支持NFC感应功能;
- 支持陀螺仪功能,需在支持此功能的游戏设置中开启;

连接步骤——蓝牙连接

- 1、在关机状态下,长按配对键或组合键[Y]+[HOME]键直至指示灯快速跑马,手柄进入配对状态;
- 2、在Switch主页面中打开手柄--更改握法--顺序,等待出现即可。
- 3、连接成功手柄指示灯常亮。

连接步骤——有线连接

- 1、在Switch设置中开启有线手柄的功能,并将Switch主机插入官方标配的多功能底座中;
- 2、在手柄关机的情况下通过附赠的数据线直接连接设备和手柄即可使用。

PC/手机模式

- 在PC模式时,根据您的使用习惯,可以使用组合键 +A 长按三秒切换为Xbox按键布局,手柄震动一次提示;
- iOS端仅支持蓝牙连接;

连接步骤——蓝牙连接

- 1、在关机状态下,长按组合键[X]+[HOME]键直至指示灯快闪,手柄进入配对状态;
- 2、打开设备中的蓝牙设置,添加蓝牙;
- 3、在搜索到的蓝牙设备中选中“Xbox Wireless Controller”手柄,配对成功后指示灯常亮。

连接步骤——有线连接

- 1、在手柄关机的情况下通过附赠的数据线直接连接设备和手柄即可使用。

电量说明

手柄电量显示

手柄电源状态

状态指示灯

- 75%以上电量——— • 1#/2#/3#/4#通道指示灯常亮;
- 50%-74%电量——— • 1#/2#/3#通道指示灯常亮;
- 25%-49%电量——— • 1#/2#通道指示灯常亮;
- 10%-25%电量——— • 1#通道指示灯常亮;
- 低于10%电量——— • 1#通道指示灯闪烁;

- 正在充电——— • 对应通道指示灯闪烁；
- 充电完成——— • 4颗通道指示灯常亮。

注意！请勿用超过5V=1A的电源给手柄充电，以免造成机器损坏。

功能组合键操作指南

功能	功能键	指示灯/备注
灯光亮度调节	长按灯光控制键⊙无极调节	/
灯光模式切换	单击灯光控制键⊙循环调节	震动提示
灯光颜色切换	双击灯光控制键⊙循环调节	震动提示
震动强度调节	单击震动控制键Ⓢ循环调节	调节成功对应震动强度提示
摇杆方圆调教切换	截图键Ⓚ+[L3]/[R3]	支持独立切换左右摇杆的方圆
手柄模式切换 循环切换Xinput/Switch /Diput模式)	[-]键+[+]键同时按3s	仅有线模式支持

*使用组合键时，请务必按照上述的按键顺序进行操作，否则会出现无法切换的问题

编程键宏定义

- 手柄操作：

- 1、在手柄已连接状态下，同时按下ML+XL/MR+XR键装饰灯条持续闪烁，表示已进入录制状态,若未闪烁请重复此操作；
- 2、依次录入需要设置的功能键；
- 3、设置完成后短按对应宏键（XL/XR），手柄的装饰灯条背光停止闪烁，并恢复至之前的模式，表示完成设置。

清除当前宏定义操作：手柄工作状态下，长按ML/MR键3s，手柄震动一次提示，则清除XL/XR键当前自定义功能。

TURBO功能

支持TURBO的按键：A/B/X/Y/L/ZL/R/ZR；

手动TURBO功能：按下 **T** +A键可开启A键的手动TURBO功能，需要手动按住A,才会触发；

自动TURBO功能：开启手动TURBO功能之后，再次按下 **T** +A键，此时A键开启自动TURBO功能，再次按下 **T** +A,则为关闭连发功能。

注：**T**+A/B/X/Y/L/ZL/R/ZR可以开启对应按键的TURBO功能，对应按键连发时，指示灯跟随闪烁。

长按 **T** 键3s可清除所有按键的TURBO功能，清空成功手柄震动一次提示。

更多自定义功能可在Keylinker中进行设置

APP下载——安卓/鸿蒙/iOS

- 在机械师官网中下载APP，以及相关更新的固件。
地址：<https://machenike.com/shoubing/download>
- 使用浏览器扫描右侧二维码进入下载界面；
- 鸿蒙系统请下载安卓版本即可。



注：鸿蒙5.0及以上不支持Keylinker

连接步骤

- 1、在手机正确安装Keylinker软件后, 首次启动时, 弹出的相关权限申请需按提示确认;
- 2、任意模式启动手柄, 可在Keylinker软件主页中搜到“S3_APP”
- 3、单击“S3_APP”连接并进入自定义界面;

注: *此功能无需手柄蓝牙连接手机, 按上述操作打开Keylinker即可更改手柄设置。

重置手柄

当手柄在操作过程中或接入时, 出现无响应或无法识别工作模式时, 可以将手柄的USB连接线拔出并重新连接, 亦可使用手动模式选择进入相应的工作模式。如果问题仍不能解决, 可用卡针戳手柄背部复位孔开关或检查操作系统和设备与本手柄的兼容性问题, 若仍然无法解决, 请联系经销商客服。

版权等信息

XBOX/Windows 是美国微软公司 (Microsoft Corporation) 的注册商标。

Android 是 Google Inc. 的商标。

Nintendo Switch 是任天堂株式会社便携式游戏机的注册商标。

出现在本文档中的其他系统名和产品名通常是各开发商公司的注册商标或商标。

请注意, 本文档中没有出现™标志和®标志。

当产品固件有更新时, 请自行咨询客服或前往品牌官网查看, 诉不另行通知。

机械师官网: <https://www.machenike.com>

规格

综合

项目	参考值
执行标准	Q/0212LSKJ0910-2019
输入电源	5.0V $\equiv$ 500mA
电池容量	3.7V /600mAh
使用距离范围	$\leq 10\text{M}$

FCC Caution:



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

《废弃电器电子产品回收处理管理条例》

MACHENIKE倡导环保和低碳的消费体验,建议拥有该产品的用户在不需要此产品时,应遵守国家废弃电器电子产品回收处理相关法律法规,将其交给当地具有国家认可的回收处理资质的厂商进行回收处理,降低资源浪费,保护地球自然环境。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板组件	×	○	○	○	○	○
外壳及附件	○	○	○	○	○	○
五金件	○	○	○	○	○	○
马达组件	×	○	○	○	○	○
电池组件	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制

○:表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。

×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定限量要求。

由于目前国际、国内行业的配套技术水平达不到等因素,该产品的少数部件中还存在限用物质。产品在环保使用期限内,在消费者使用过程中并不会出现限用物质的泄露、析出等影响消费者健康的问题,可以放心使用。

印刷电路板组件:包括印刷电路板及其零部件,电子元器件等根据产品型号不同,您所购买的产品可能不会含有以上所有部件



在中华人民共和国境内销售的电子电气产品必须标识此标志,标志内的数字代表在正常的使用状态下的产品的环保使用期限。

MACHENIKE产品保修承诺

- 1、在用户按本技术使用说明书正确使用该产品的前提下，本产品自购买之日起一年内免费保修。保修服务方式为返厂维修，报修方式请扫产品包装盒上售后二维码进行报修。
- 2、我方因下列使用者个人的原因而造成的故障将不提供免费保修服务。
如：
 - (1) 擅自拆装、改装该产品而造成的故障；
 - (2) 在使用、搬运的过程中不慎摔打、跌落、进液、供电规格不符而造成的故障；
 - (3) 因缺乏合理的保养而造成的故障；
 - (4) 没有按使用说明书正确指示进行操作；
 - (5) 第三方厂品、服务或行为导致的故障或损坏等等。
- 3、在要求提供免费保修服务时，您必须提供清晰、完整和准确的销售发票和保修卡，购买产品时，可要求销售商提供上述销售发票和保修卡。
- 4、保修范围外的维修服务，将按规定收费。

保修卡

尊敬的用户：

感谢您选购本公司产品,我公司将按照《中华人民共和国消费者权益保护法》和国家技术监督局、国家工商行政管理局、财政部关于《部分商品修理更换退货责任规定》的有关规定，为您提供保修服务，请认真填写此卡并妥善保管，以便日后凭此卡维修。

客户姓名：_____ 电子邮件：_____
联系电话：_____ 邮政编码：_____
通信地址：_____
产品名称：_____ 产品型号：_____
购机日期：_____
购机渠道：_____
机身编号：_____

产品性能故障表

送修日期	性能故障描述	工程师签字	完成日期

备注：

- 1、请妥善保管此卡，保修时需出示此卡及购买凭证。
- 2、产品自购买之日起，凭购买凭证整机免费保修1年。
- 3、下列情况不属于免费服务范围，但可实行收费维修、终身服务；
 - 1) 不能出示保修说明及发票；
 - 2) 发票涂改；
 - 3) 意外因素或使用不当造成损坏；
 - 4) 未经我司许可，自行修理造成的损坏；
 - 5) 超过三包有效期，经修复仍可继续使用；

合格证
QUALIFIED CERTIFICATE

检验
MACHENIKE CERTIFIED

