

POWERXCEL™

715209

5,000mAh PD POWER BANK WITH MAGNETIC WIRELESS CHARGER



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

1

2

3

4

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.


WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized companies or other causes not arising out of defects in materials or workmanship. This warranty does not apply if the product has been damaged in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

IMPORTANT SAFETY INSTRUCTIONS AND WARNINGS

- **Never charge batteries unattended.** When charging batteries, you should always remain in constant observation to monitor the charging process and react to potential problems that may occur.
- If a battery overheats, catches fire, or smells or hot, **discontinue charging process immediately, disconnect the battery and observe it in a safe place for approximately 15 minutes.** This may cause the battery to leak, and the reaction with air may cause the chemicals to ignite, resulting in fire.
- Do not let the device fall down the floor. The internal circuit might get damaged.
- We suggest you put the battery in an enclosure to protect it from damages by liquid or dropping from height accidentally.
- Never expose a rechargeable battery pack in extreme temperatures, since extreme temperature could ignite fire.
- Store battery at room temperature between 40°F & 80°F for best results.
- Do not expose battery pack to direct sunlight (heat) for extended periods.
- **Storing battery at temperatures greater than 170 degrees F for extended periods of time (more than 2 hours) may cause damage to battery and possible fire.**
- Must keep battery pack away from children.
- Do not attempt to disassemble the device as it may cause damage.

Description of Parts

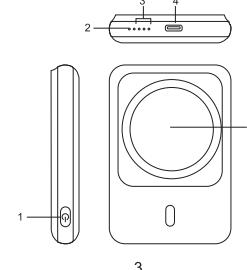

No	Function	Operation
1	ON/OFF Button (Multifunctional)	<ul style="list-style-type: none"> • Short press once to see the remaining capacity • Short press once to start Wireless Charging • Short press twice to turn off the Power Bank
2	Fast Charging/Discharging/Wireless Charging Indicator	<ul style="list-style-type: none"> • LED Light Rashes blue & green when you turn ON the power bank • Green LED Light stays on while charging your device through Type-C port • Blue LED Light stays on while charging your device through wireless charge
3	Charging Indicator Lights	Shows Power Bank charge level: 25%, 50%, 75% and 100%.
4	Type C Input/Output Port	
5	Wireless Charge	

INSTRUCTIONS FOR USE

Charging your Power Bank

- Please use the Type-C to Type-C cable that is included in your pack. Connect one end of the cable to the Type-C Input as shown in the figure. The other end should be connected to USB-C adapter source with 20W output or more.
- While the Power Bank is charging, the capacity value will flash and increase accordingly.
- Note: Before using the product for the first time, please charge the Power Bank for at least 4 hours or until all 4 LED lights stay on.

Charging your iPhone, Smart Phones or any other USB Rechargeable Devices – Type-C Output Charging

- Please ensure that the Power Bank is fully charged.
- Please use the applicable USB charging cable to charge your device (not included). Connect one end to Type-C output of the power bank and the other end to your device.
- It would start charging your device.

Wireless Charging

- Please ensure that the Power Bank is fully charged.
- Short press the ON/OFF button to start Wireless Charging function of the Power Bank.
- Place your Mag-Safe compatible iPhone onto the Wireless Charging Pad, it would start charging your phone.
- If you are using Android phone which has wireless charging function, you can affix the bonus magnetic ring on your phone and use Magnetic wireless charging.

REMARK:

- a. If your iPhone model is compatible with wireless charging and you are unable to charge it wirelessly, please remove your phone case and retry.
- b. Placement of some smart phones on the magnetic surface for wireless charging might need to be adjusted, in order for their internal components to make contact appropriately and begin wireless charging.

Care and maintenance

Read the following recommendations before using the Power Bank.

- Do not expose the battery to liquid, moisture or humidity. This may affect product's internal circuit.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as it may cause to destroy the battery or distort certain plastic parts.
- Do not dispose of the device to fire as it may result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall down the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may cause damage.

Product Specifications:

PD Power Bank With Magnetic Wireless Charger
Battery Capacity: 5,000mAh
Type-C Input: DC 5V/3A, 9V/2A
Type-C Output: DC 5V/3A, 9V/2.2A, 12V/1.67A
Wireless Output: 5W, 7.5W, 10W, 15W
Dimensions: L3.68" x W2.51" x H0.58"
Weight: 4.3 Oz
Built-in Overcharge protection
Max. ambient temperature: 25°C

TROUBLESHOOTING

Problem	Solution
Charging indicator does not light up when charging the Power Bank	Please ensure that the Type-C Charging Cable and Power Source is connected properly. Please ensure that USB Source is Turned On.
Power Bank does not charge device once connected	Please ensure that the Charging Cable is well connected.

5

6

7