


65.5*102.5MM 128克铜板纸 风琴折

HIWE

User Manual

Works with Apple Find My

HIWE MF168 Card Holder

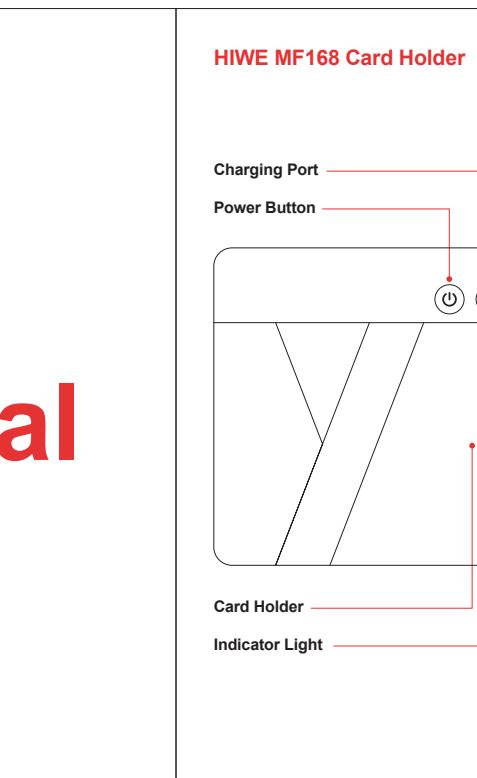

Charging Port

Power Button

Card Holder

Indicator Light

Setting Up Your iPhone

Compatibility

The card holder is only compatible with iPhone 8 series or later phones running iOS 14.5 or later with Two-Factor Authentication turned on.

1. Turn on Two-Factor Authentication for your Apple ID

On your iPhone: Go to **Settings** > your name > **Password & Security**. Tap **Turn On Two-Factor Authentication**. Then tap **Continue** and follow the onscreen instructions.

On your Mac: choose Apple menu > **System Settings** (or **System Preferences**), then click on your name (or Apple ID). Click **Password & Security**. Next to **Two-factor Authentication**, click **Turn On** and follow the onscreen instructions.

On the Web: Go to appleid.apple.com and sign in using your Apple ID. Answer your security questions, then tap **Continue**. Tap **Continue** when you see a prompt to update account security. Then tap **Update Account Security** and follow the onscreen instructions.

2. Turn on Find My


A. Go to **Settings**.
B. Tap your name, then tap **Find My**.
C. Tap **Find My iPhone** and turn on **Find My iPhone**.

3. Turn on Bluetooth

4. Connect to a stable Wi-Fi or cellular network

5. Turn on Location Services

Go to **Settings** > **Privacy & Security** > **Location Services** > turn on **Location Services**.

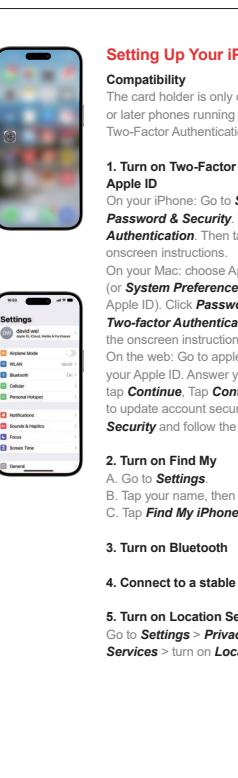

Getting Started

Power on

Short press the key's power button **once**, and a beep will sound to indicate that it is turned on.

Power off

 
To turn off the power, press the power button **3 times** in a row (**2 short presses** and the **last long press**); after hearing two "beeps", the "key" is turned off. If the Key has not been paired within 10 minutes, a beep will be heard and the power will automatically turn off. Turn on the power to continue pairing.

Factory reset

To reset, press the power button **5 times** in a row (**4 short presses** and the **last long press**); after hearing a beep, the "key" returns to factory setting.

Pairing Your Card Holder


1. Ensure your iPhone is set up (see "Setting Up Your iPhone" above) and your card holder is powered on.
2. Open the Find My app.
3. In the **Items** tab, tap **Add New Item**.
4. Tap **Other Supported Item** (your iPhone will search for your card holder).
5. Once your card holder is detected, tap **Connect**.
6. Follow the onscreen steps to name it and register it to your Apple ID.
7. Ensure your card holder appears in **Items**. If not, forget the device, perform a factory reset on the card holder (see "Getting Started > Factory reset" above), then reconnect.
8. Do not leave Find My app while pairing card holder.



Locating Your Card Holder

Locate your card holder via the map


1. Open the Find My app.
2. Select your card holder in the **Items** list.
3. Scroll down and tap **Rename Item**.
4. Select your card holder in the **Items** list.
5. For **Custom Name**, input a name and select an emoji.
6. Tap **Done**.

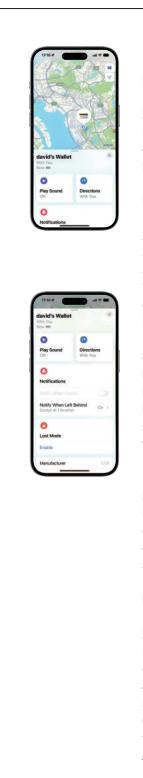

Changing the Name of Your Card Holder

Locate your card holder via the map

1. Open the Find My app and tap the **Items** tab.
2. Select your card holder in the **Items** list.
3. Select your card holder in the **Items** list.
4. Select a name from the list or select **Custom Name**.
5. For **Custom Name**, input a name and select an emoji.
6. Tap **Done**.

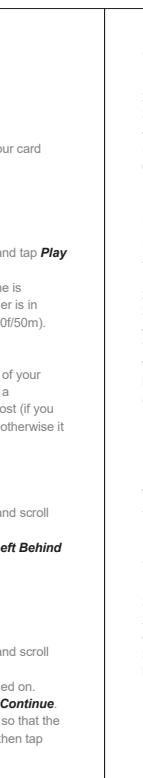

More Specific Info

4. Do not attempt to disassemble, modify, or use sharp objects to damage the device in any way, as it may cause serious damage and void the warranty

5. Do not expose the device to corrosive liquids, or high humidity as they will seriously damage the device and void the warranty.

Charging Your Card Holder

How long will it take to charge?

After activating the device, it needs to be fully charged immediately and can be used normally for 5 months. It is recommended to charge every 4 months.

Play sound alert

1. Open the Find My app.
2. Tap the **Items** tab.
3. Select your card holder in the **Items** list and tap **Play Sound**.



Removing Your Card Holder

Use the included cable to charge.

During charging, the status light will be orange. When fully charged, the status light will turn green. It is recommended to fully charge your card holder once every 4 months.

Changing Your Card Holder

How do you know when it is charging?


iPhone 8 or later will display the remaining battery level of the device.

How long does it take to fully charge the battery?

1h:30m

Charging Indicators

- Charging: Orange light
- Full Charging: Green light

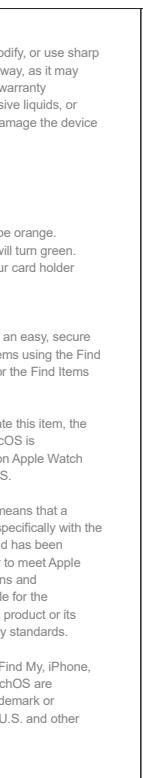

More Specific Info

1. How long will it take to charge?

After activating the device, it needs to be fully charged immediately and can be used normally for 5 months. It is recommended to charge every 4 months.

2. How do you know when it is charging?

iPhone 8 or later will display the remaining battery level of the device.

3. How long does it take to fully charge the battery?

1h:30m

4. Charging Indicators

- Charging: Orange light
- Full Charging: Green light



CC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general exposure requirements. The device can be used in portable exposure condition without restriction.

