 
 


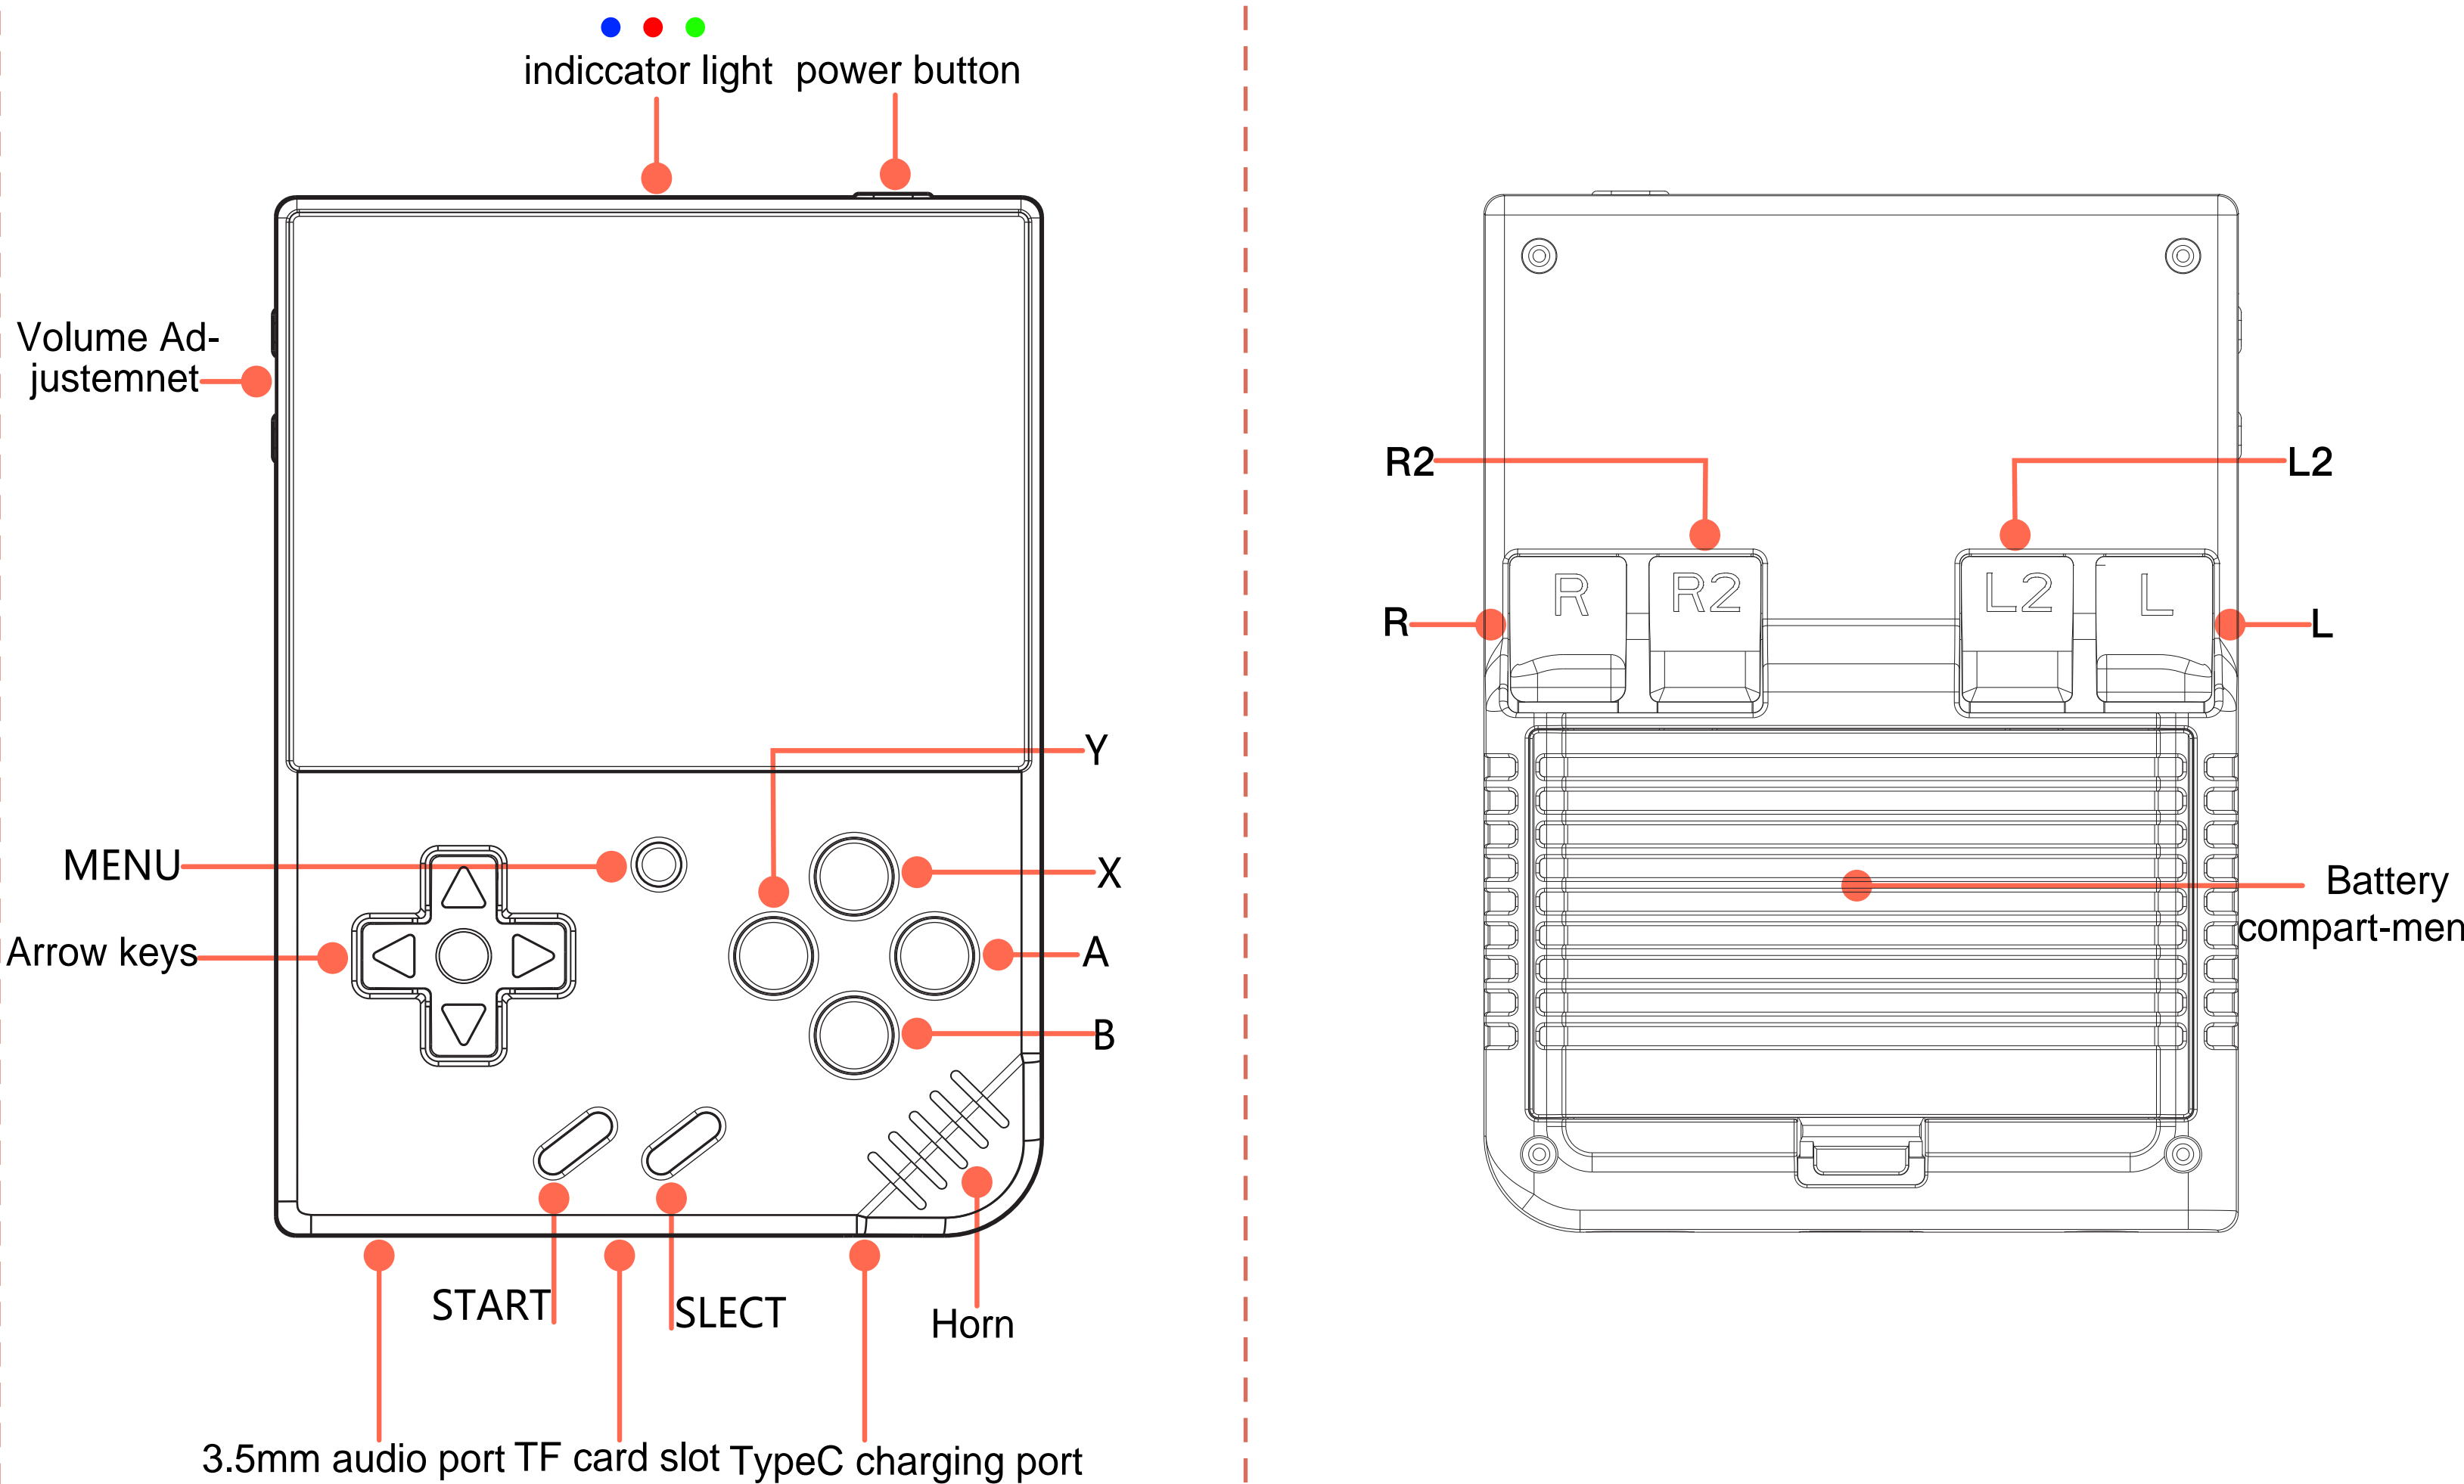

## Instructions

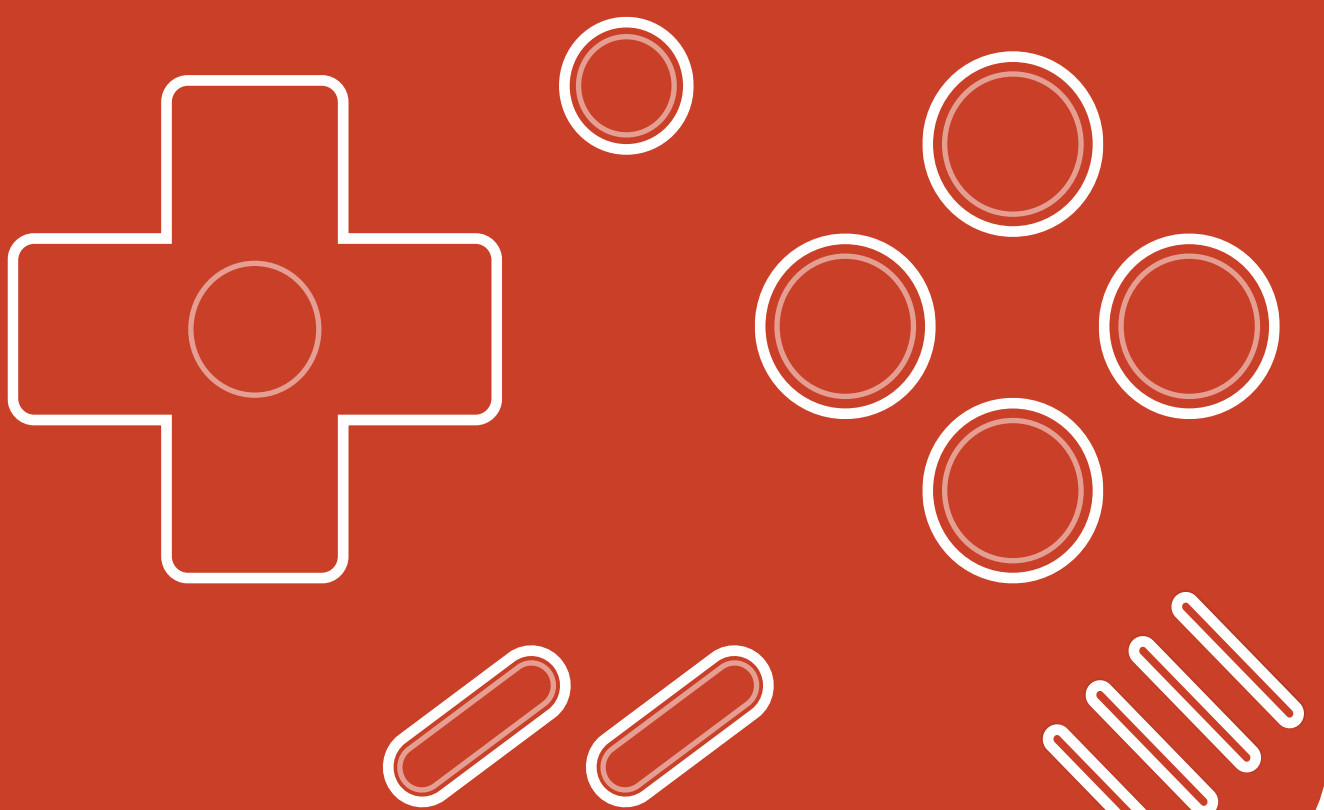

### Start using

1. Insert the TF card that has been installed with the game into the TF card slot;
2. Charge the equipment to ensure normal startup;
3. Start Up: press the power key for 1 seconds.

### How to install games

1. Take the TF card out of the machine, insert the card reader to connect to the computer, and copy the "Game ROM" to the folder of the corresponding game type in the TF card;
2. Insert the TF card into the TF card slot, Press [MENU] to open the MENU, and select "Refresh ROM".

### On-off

- Boot: long press the power supply for 1 seconds
- Shutdown: press the power supply for 3 seconds to open the shutdown menu, and press [A] to shut down.

 
### Idle mode, sleep mode, and wake-up

- 60 seconds no operation enters the idle mode, and the screen becomes dark;
- In idle mode, press any button to wake up;
- No operation for 5 minutes or short press the power key to enter the sleep mode, close the screen and sound, and automatically shut down after 10 minutes without operation after entering the sleep mode, You can set the sleep time or disable sleep in the settings options;
- In sleep mode, press the power key to wake up.

### Firmware Upgrade


- Shutdown status
- Place the Mirror file in the root directory of the TF card,
- Insert the TF card slot and connect the charging line to enter the charging mode, and the nautomatically start up and upgrade.

### Start using

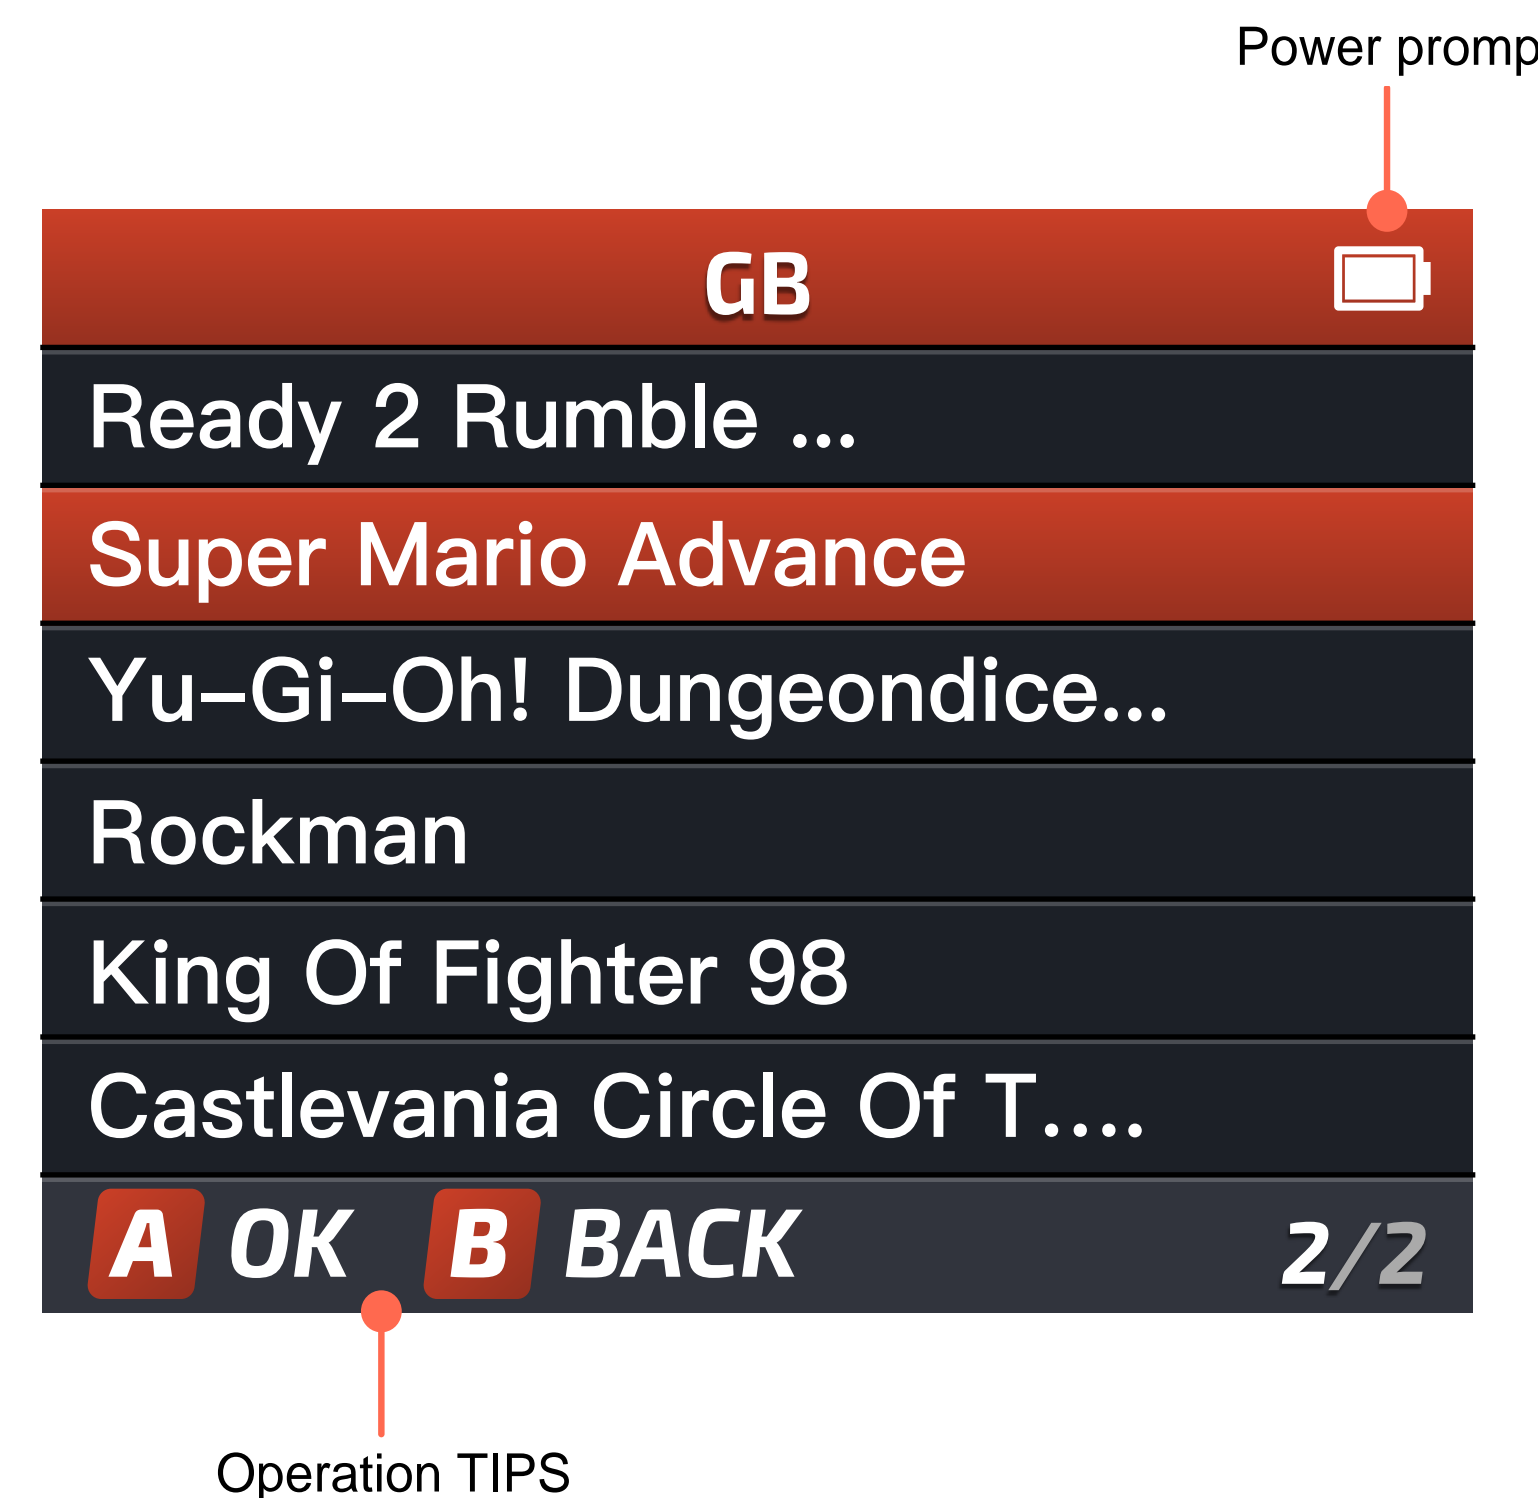


In the game catalog, select a game and press[A]]Start the game.

### Exit the game

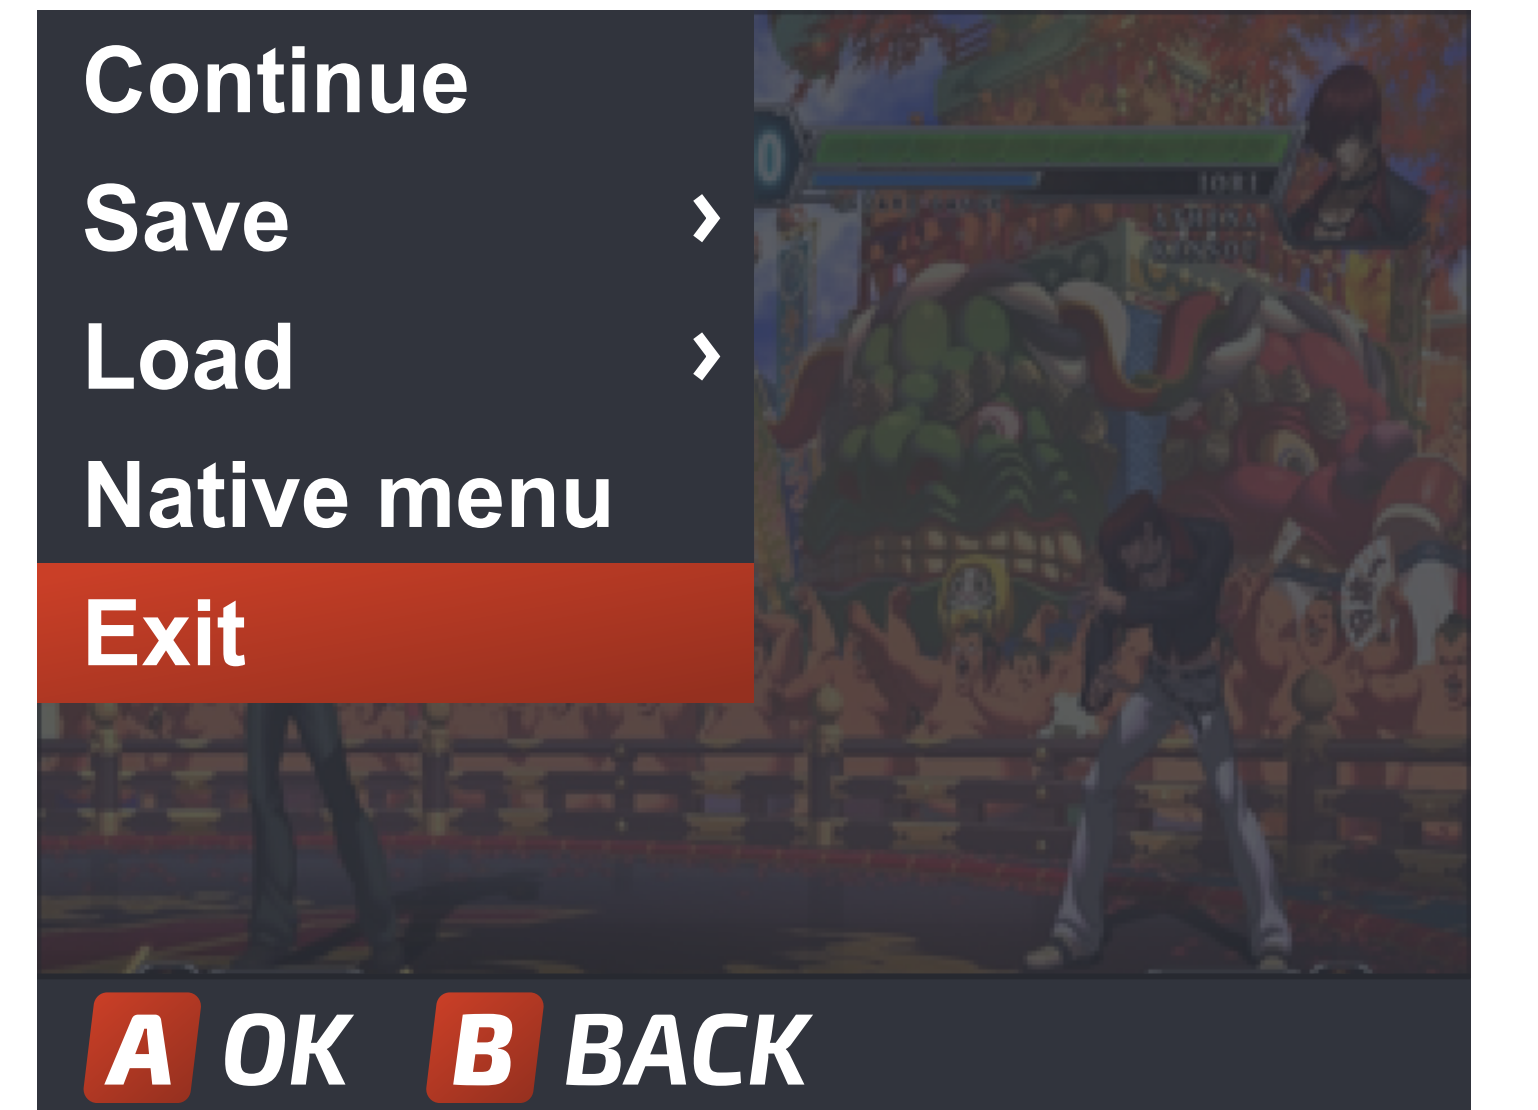 


In the game, Press [MENU] to open the MENU, select the "Exit" option, and press [A] to Exit the game.

### Save or read game progress

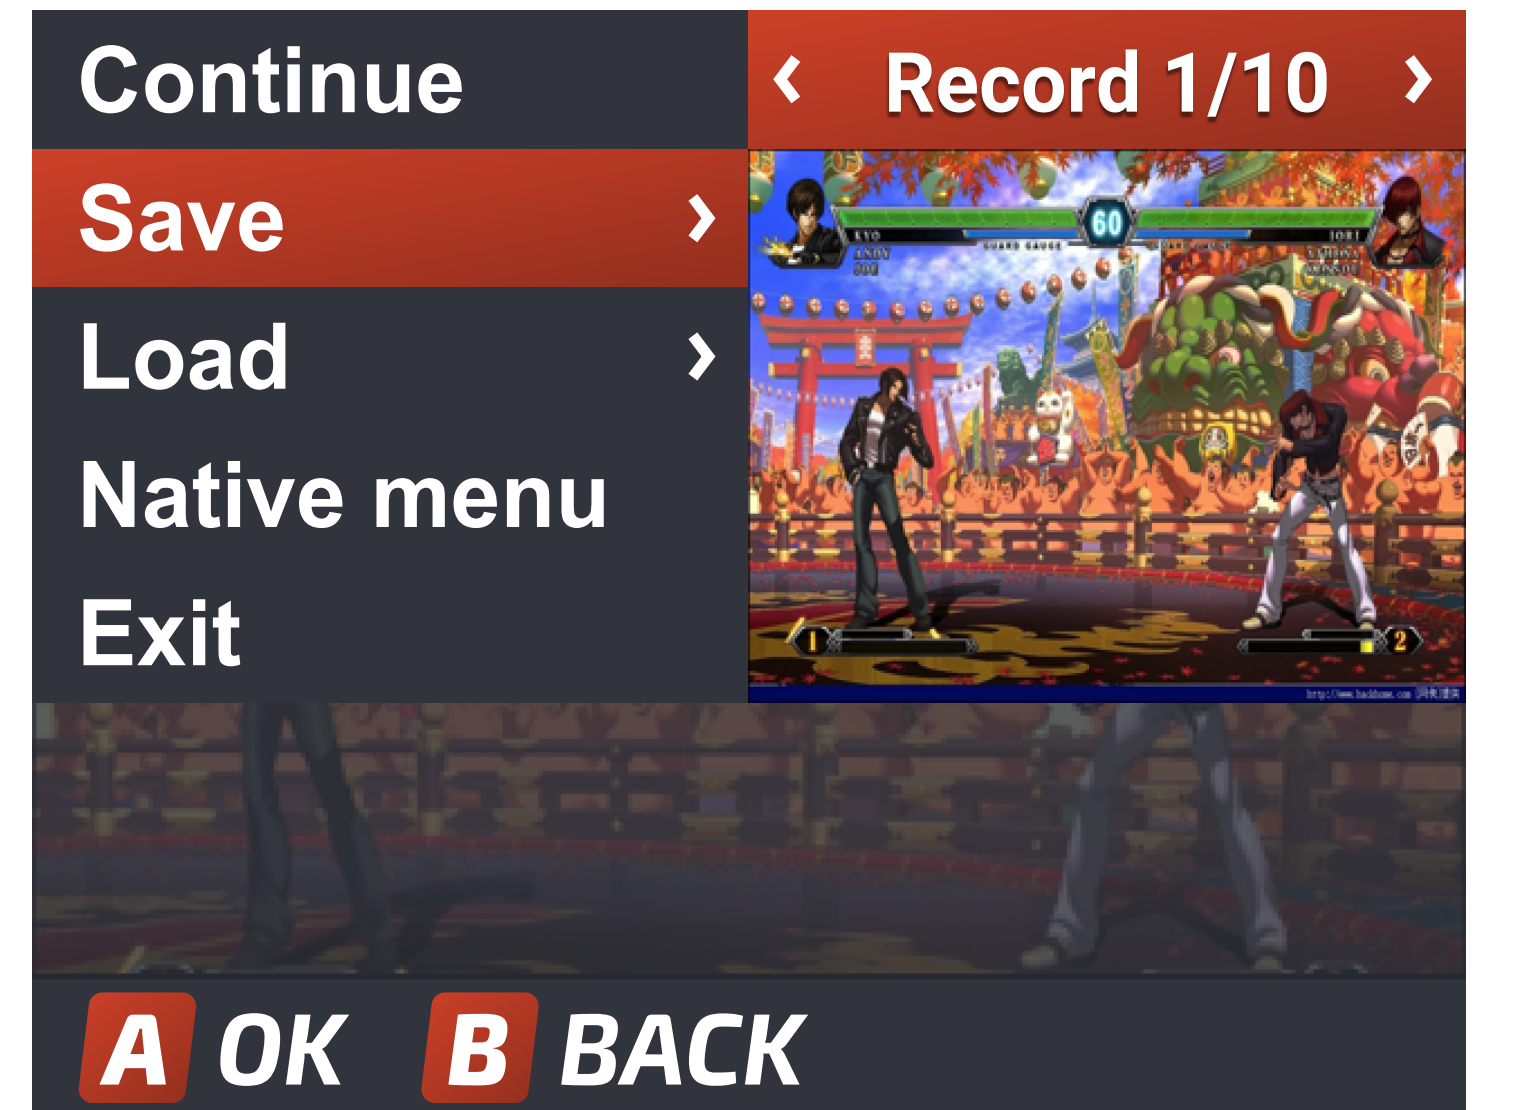 

In the game, Press [MENU] to open the MENU, select the "Save" or "Load" option, press the direction key [LEFT, RIGHT] to select the recording position, press [A] to save or read the current progress. A maximum of 10 records can be saved.

### Set

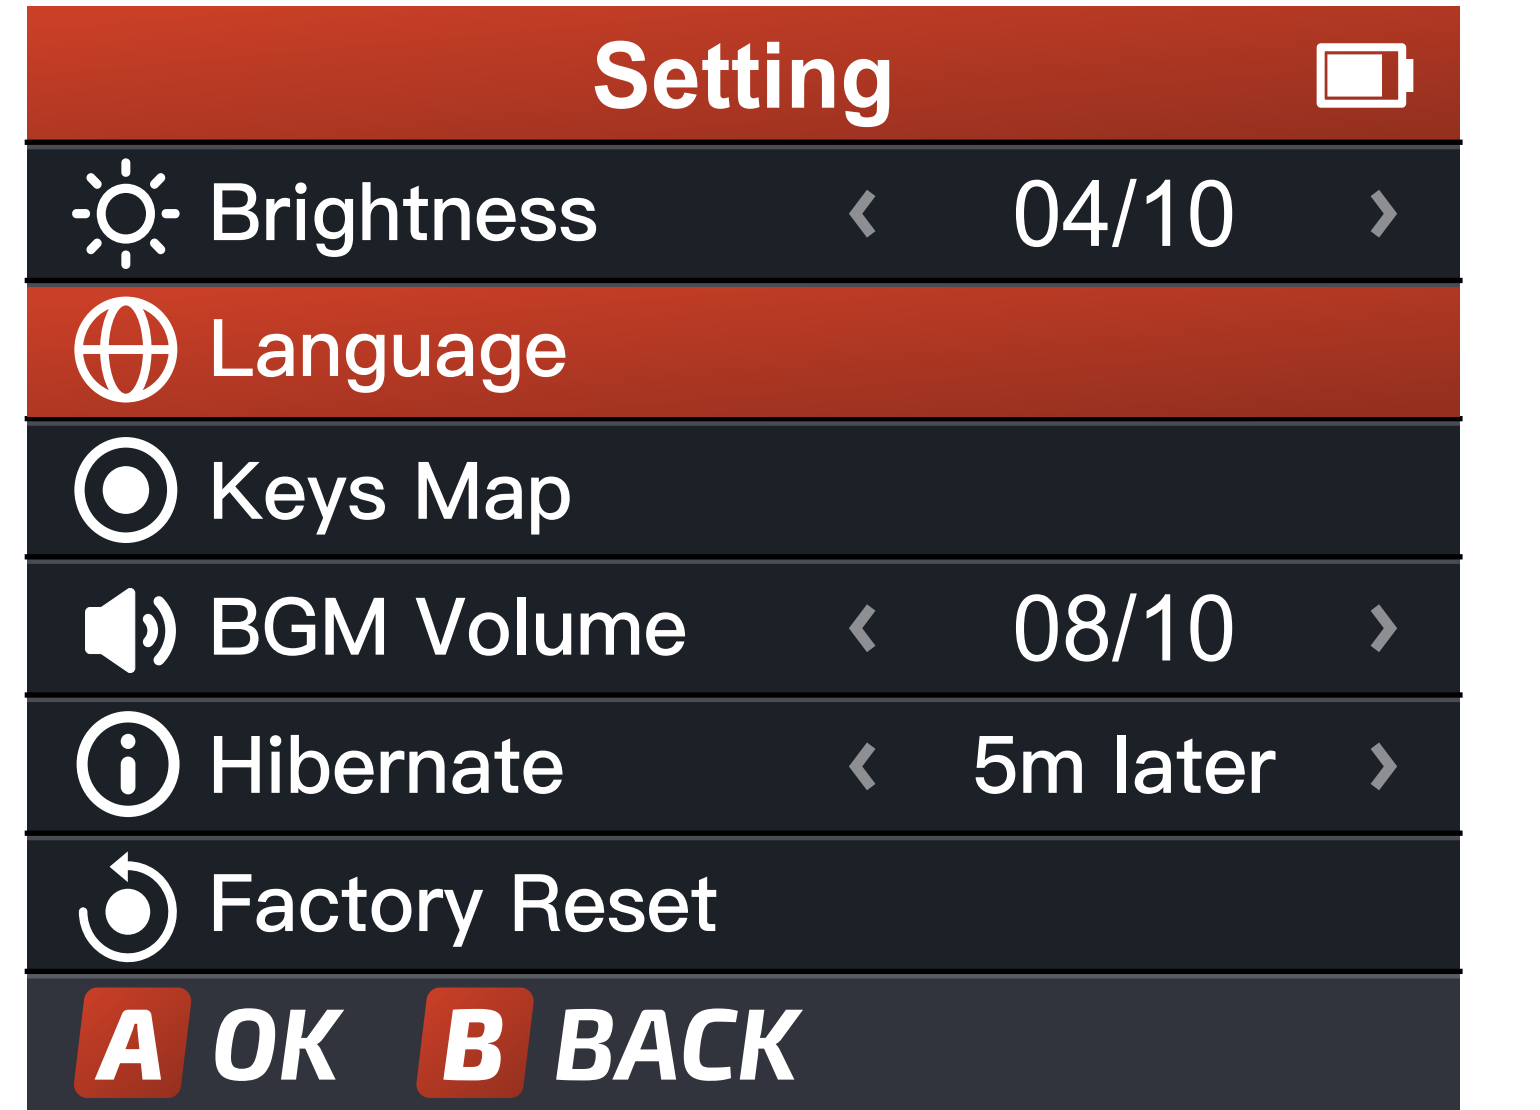 

Press the arrow key [UP,DOWN] to select the setting items: screen brightness, volume, sleep time, which can be modified by the direction key [LEFT, RIGHT]; Select setting items: Language, key mapping, System Restore, etc., and press [A] to enter the corresponding setting page.

### Indicator light

- Green light Always On: enabled
- Red light Always On: charging
- Blue light Always On: charging completed

### Headset

You can connect the earphone through a 3.5mm audio port.

 
 
 
### Pay attention to the following security precautions when using it

- to avoid damage caused by liquid entering the machine;
- Do not modify, repair or disassemble the product;
- Do not use any diluent or volatile liquid to clean this product;
- Avoid exposure to high temperature or direct contact with flame.





## 使用说明书

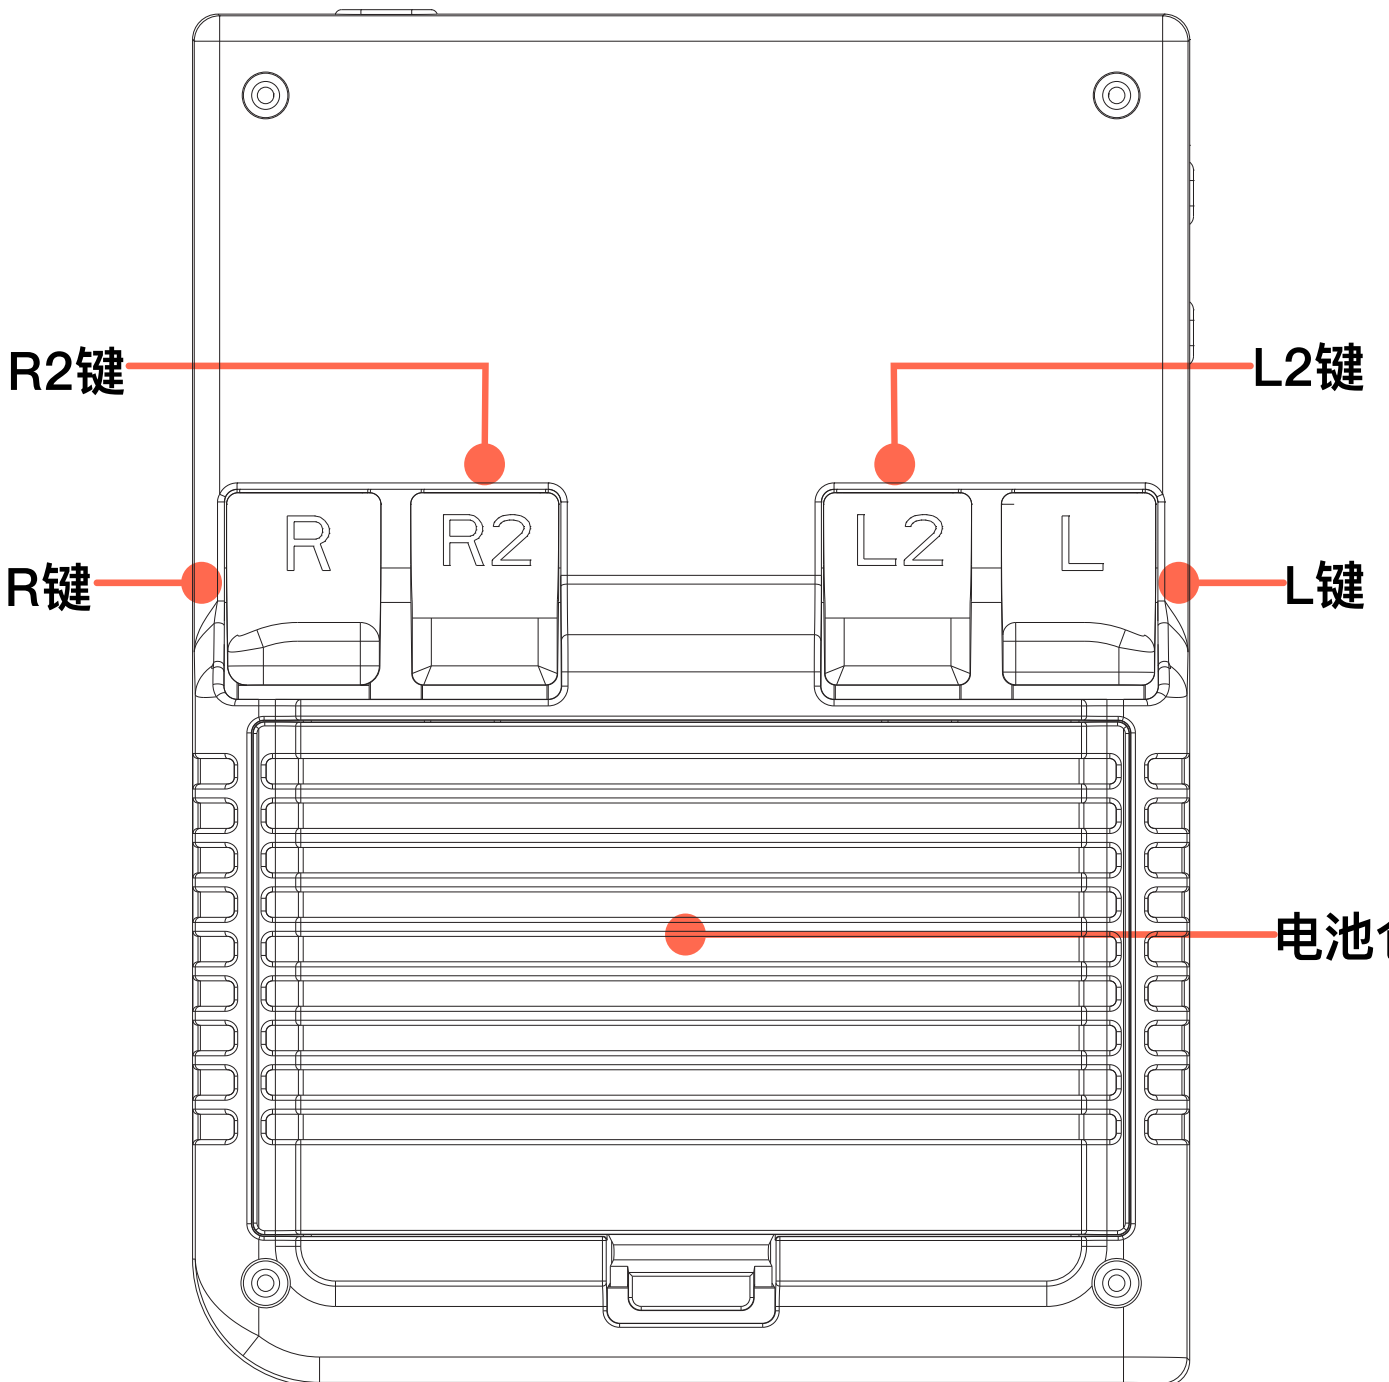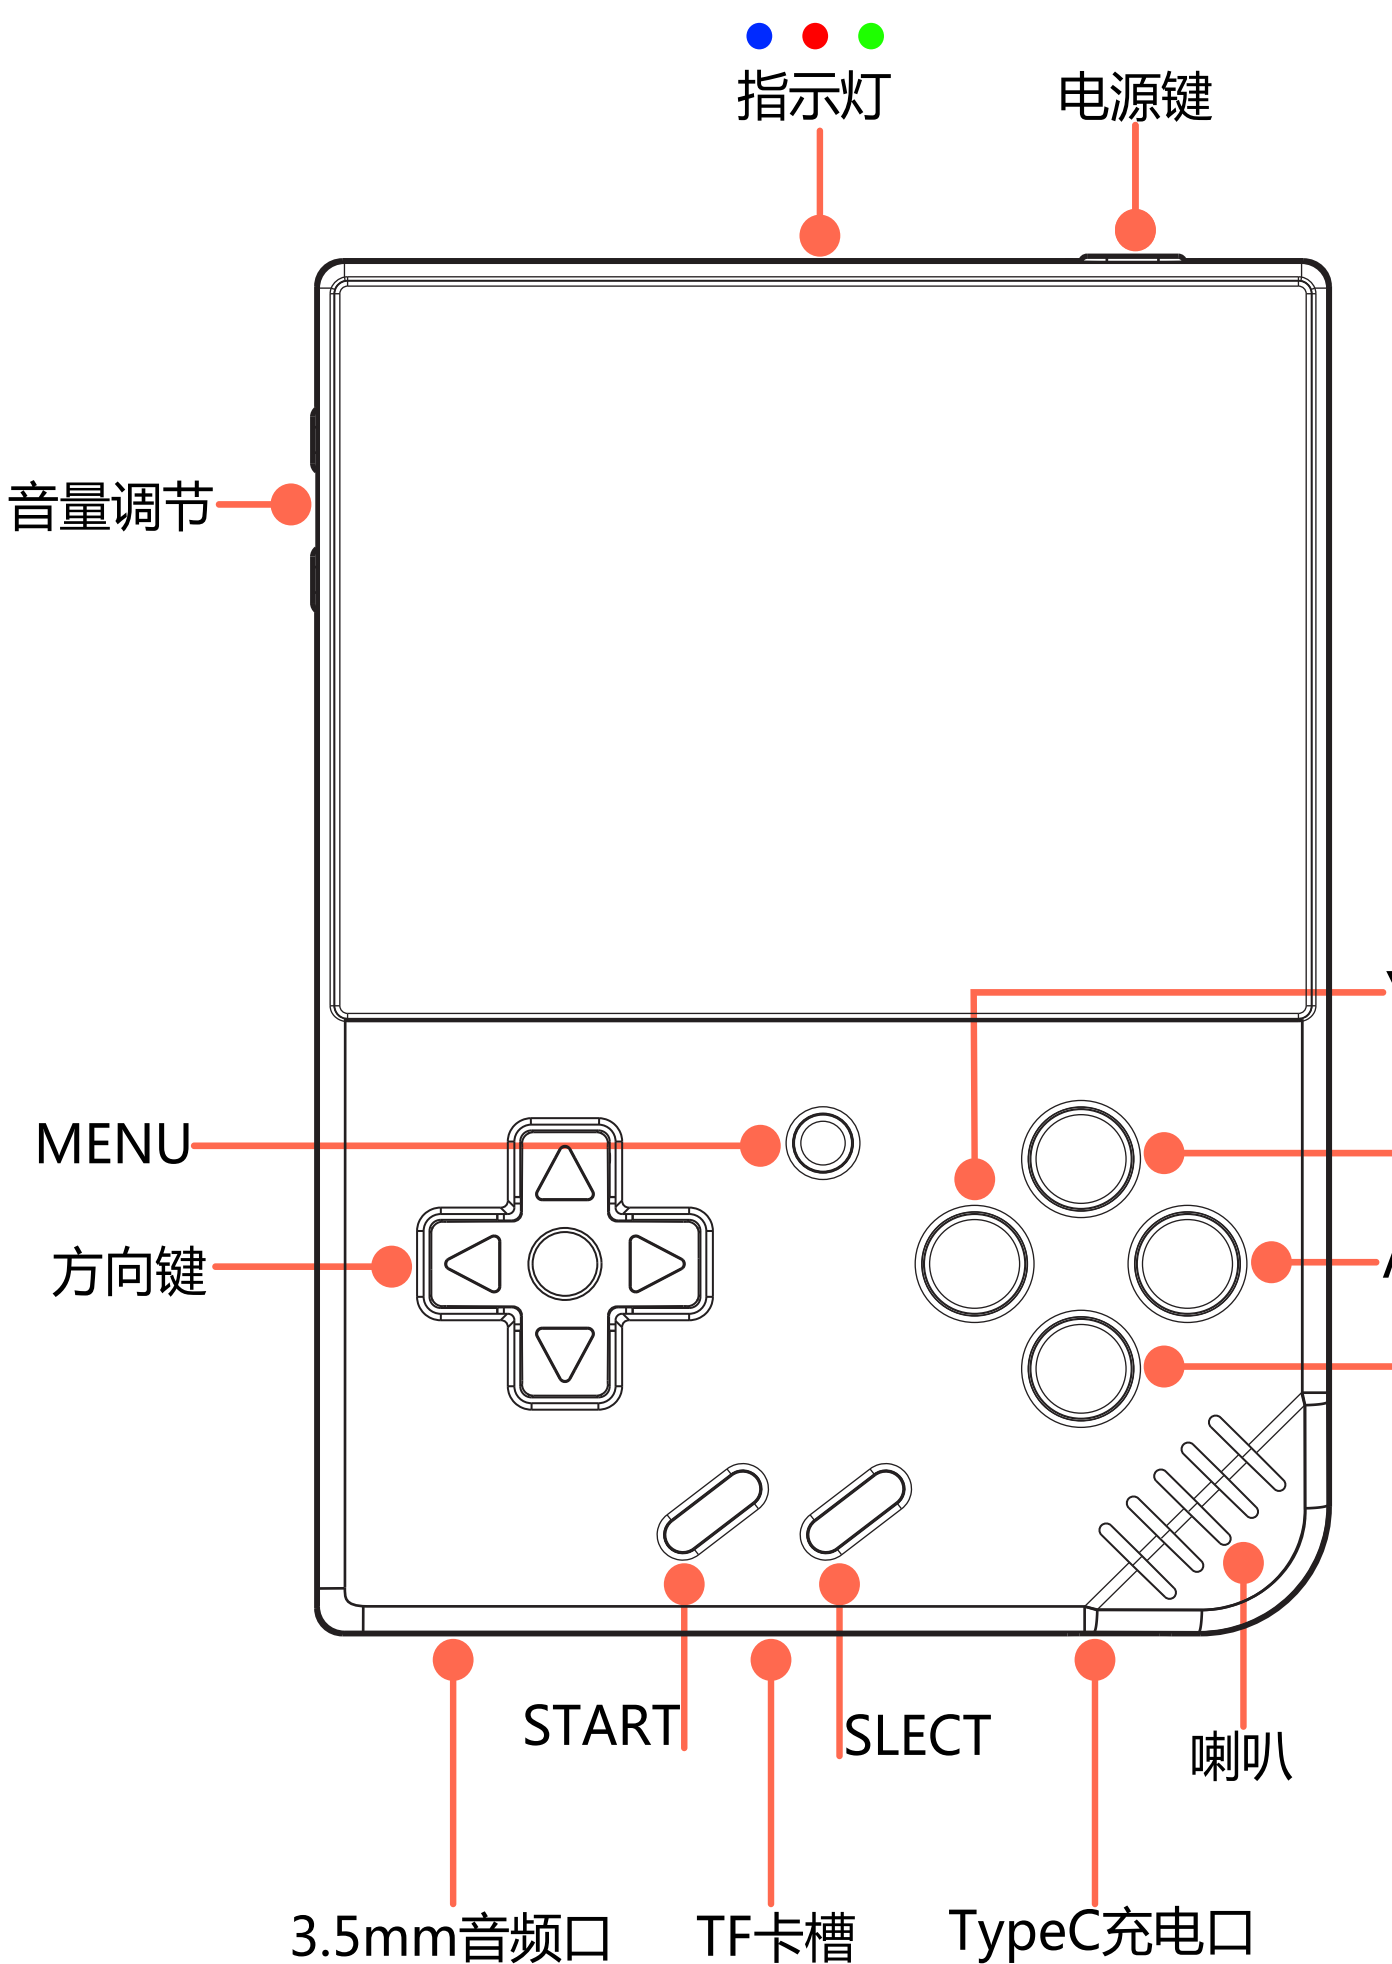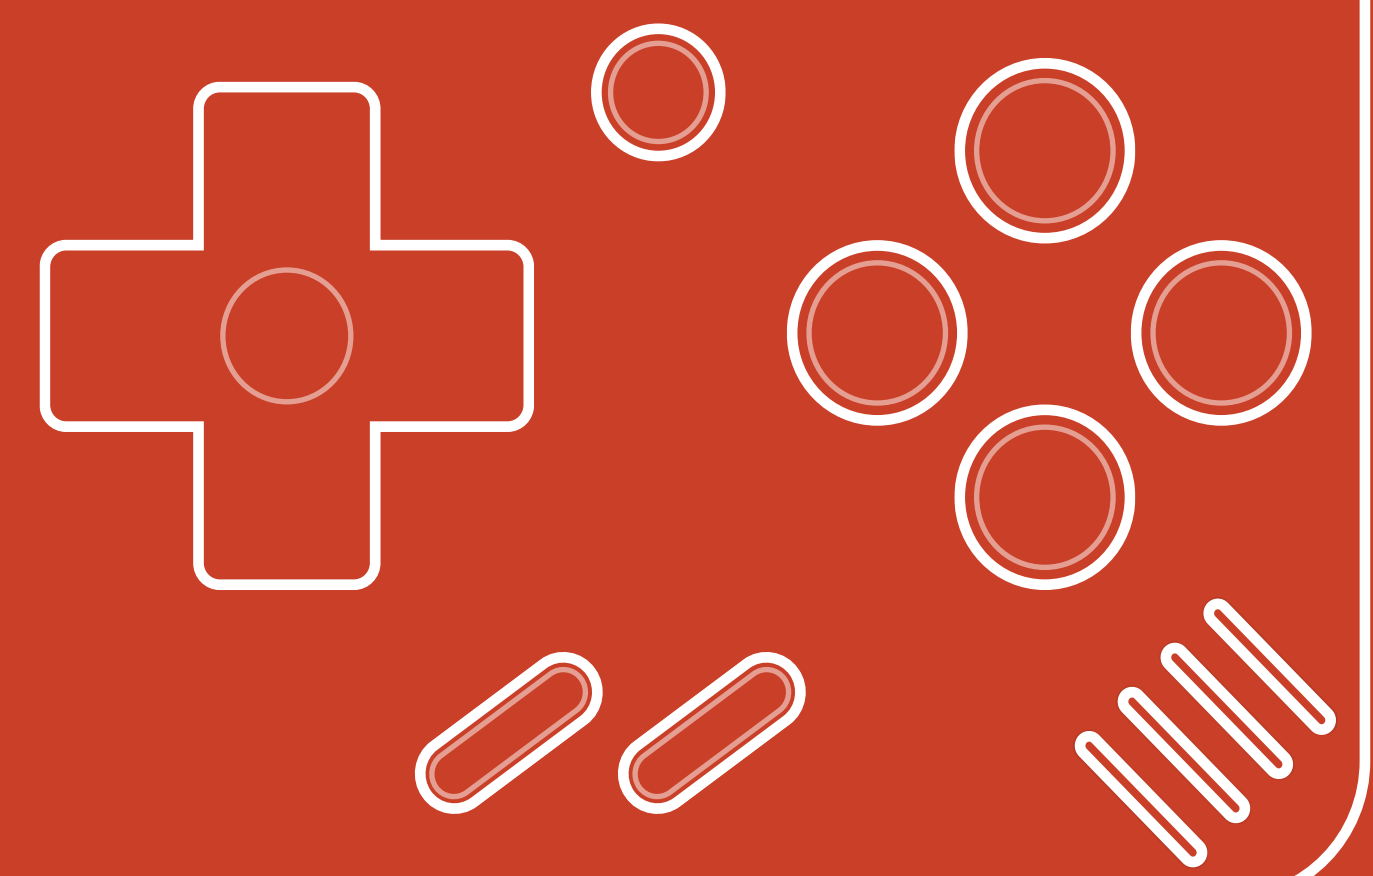

### 开始使用

1. 把已经安装游戏的TF卡插入TF卡槽
2. 给设备充电，保证可以正常开机
3. 长按电源键1秒开机

### 如何安装游戏

1. 把TF卡从本机取出，插入已经连接电脑的读卡器。把“游戏ROM”拷贝至TF卡中对应的游戏类型目录。
2. 把TF卡插入TF卡槽，按MENU打开菜单，选择“刷新ROM”

### 开关机

- 开机：长按电源键1秒开机
- 关机：长按电源键3秒打开关机菜单，按【A】关机

 
### 空闲模式、休眠模式与唤醒

- 60秒无操作进入空闲模式，屏幕变暗
- 空闲模式下，按任意键唤醒
- 5分钟无操作或短按电源键进入休眠模式，关闭屏幕与声音，进入休眠模式后10分钟无操作自动关机；可在设置选项中设定休眠时间或关闭休眠；
- 休眠模式下，短按电源键唤醒

### 固件升级


1. 关机
2. 把镜像文件放到TF卡根目录下，
3. 插入TF卡槽连接充电线进入充电模式后自动开机升级。

### 开始游戏

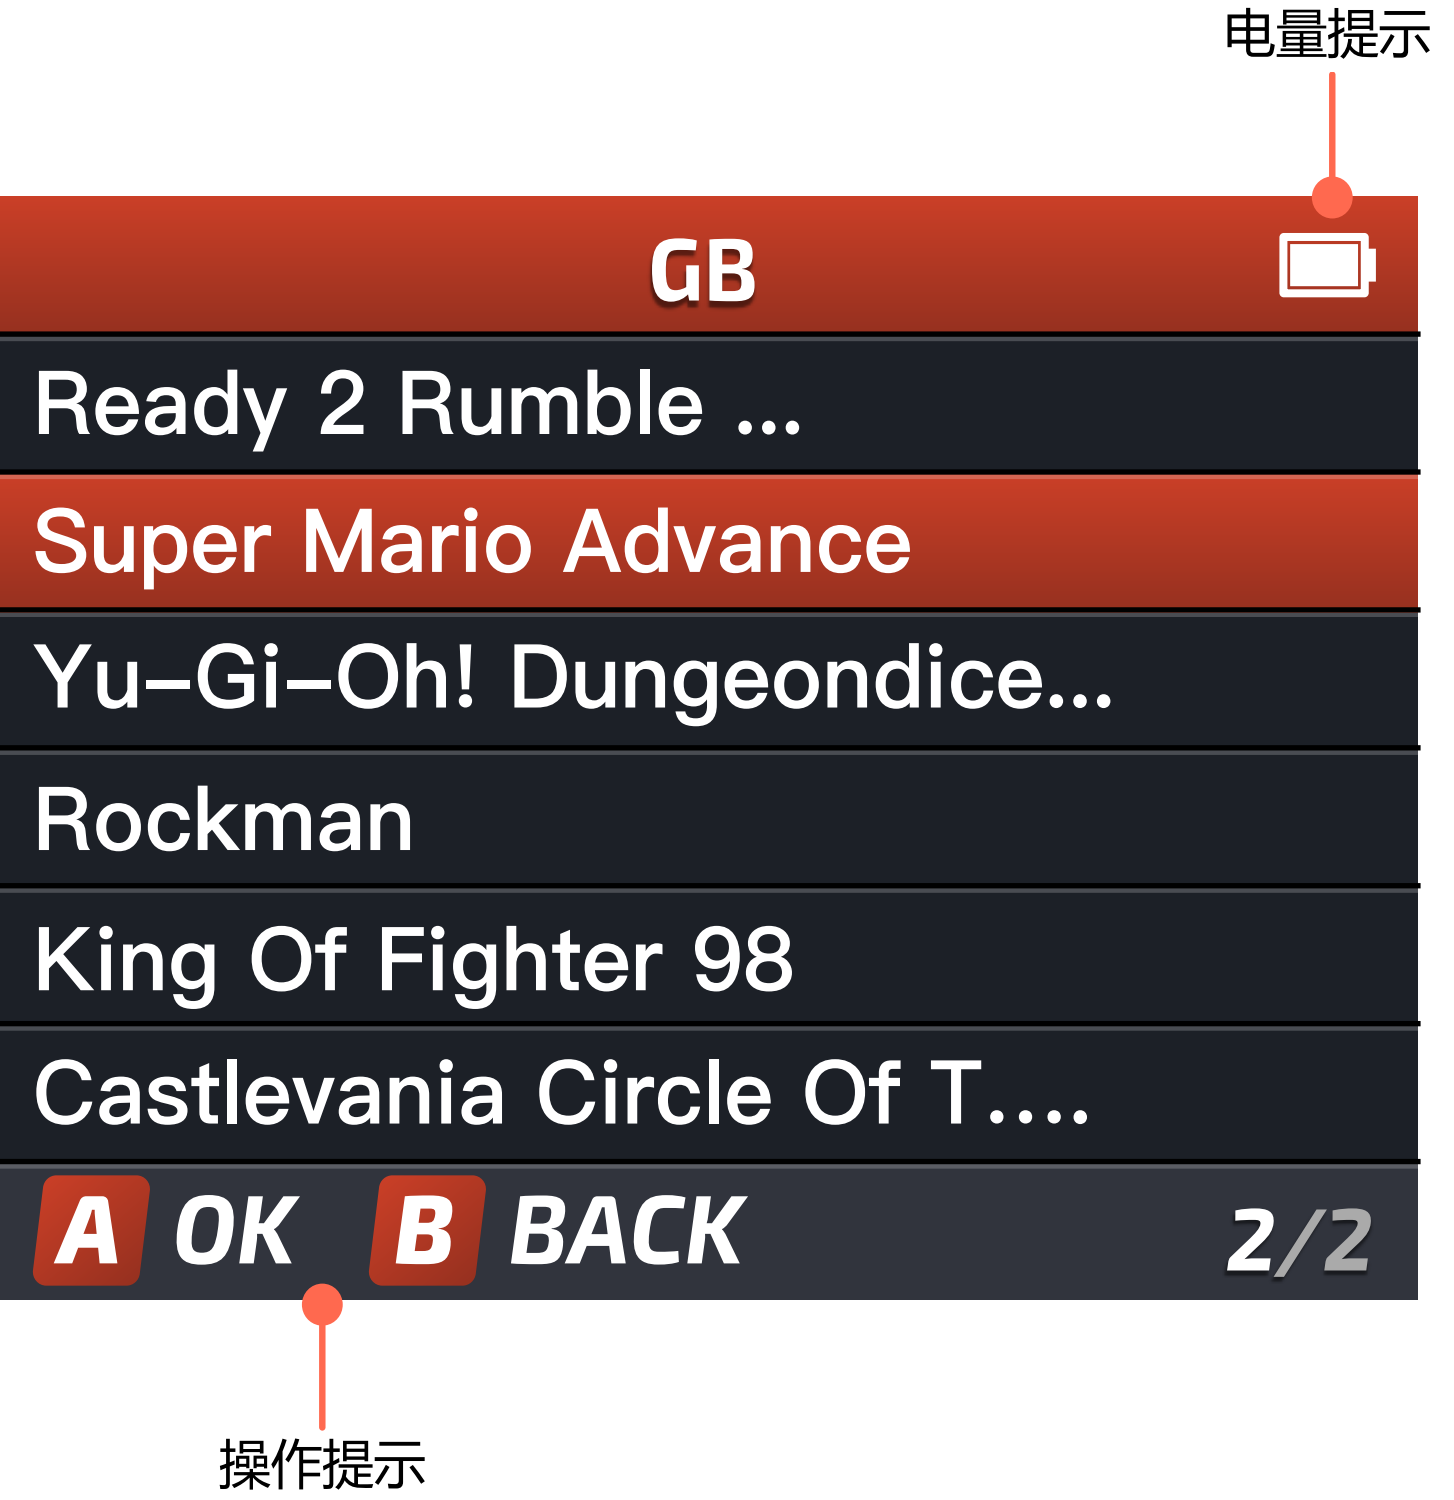

在游戏目录内，选中游戏，按【A】开始游戏

### 退出游戏

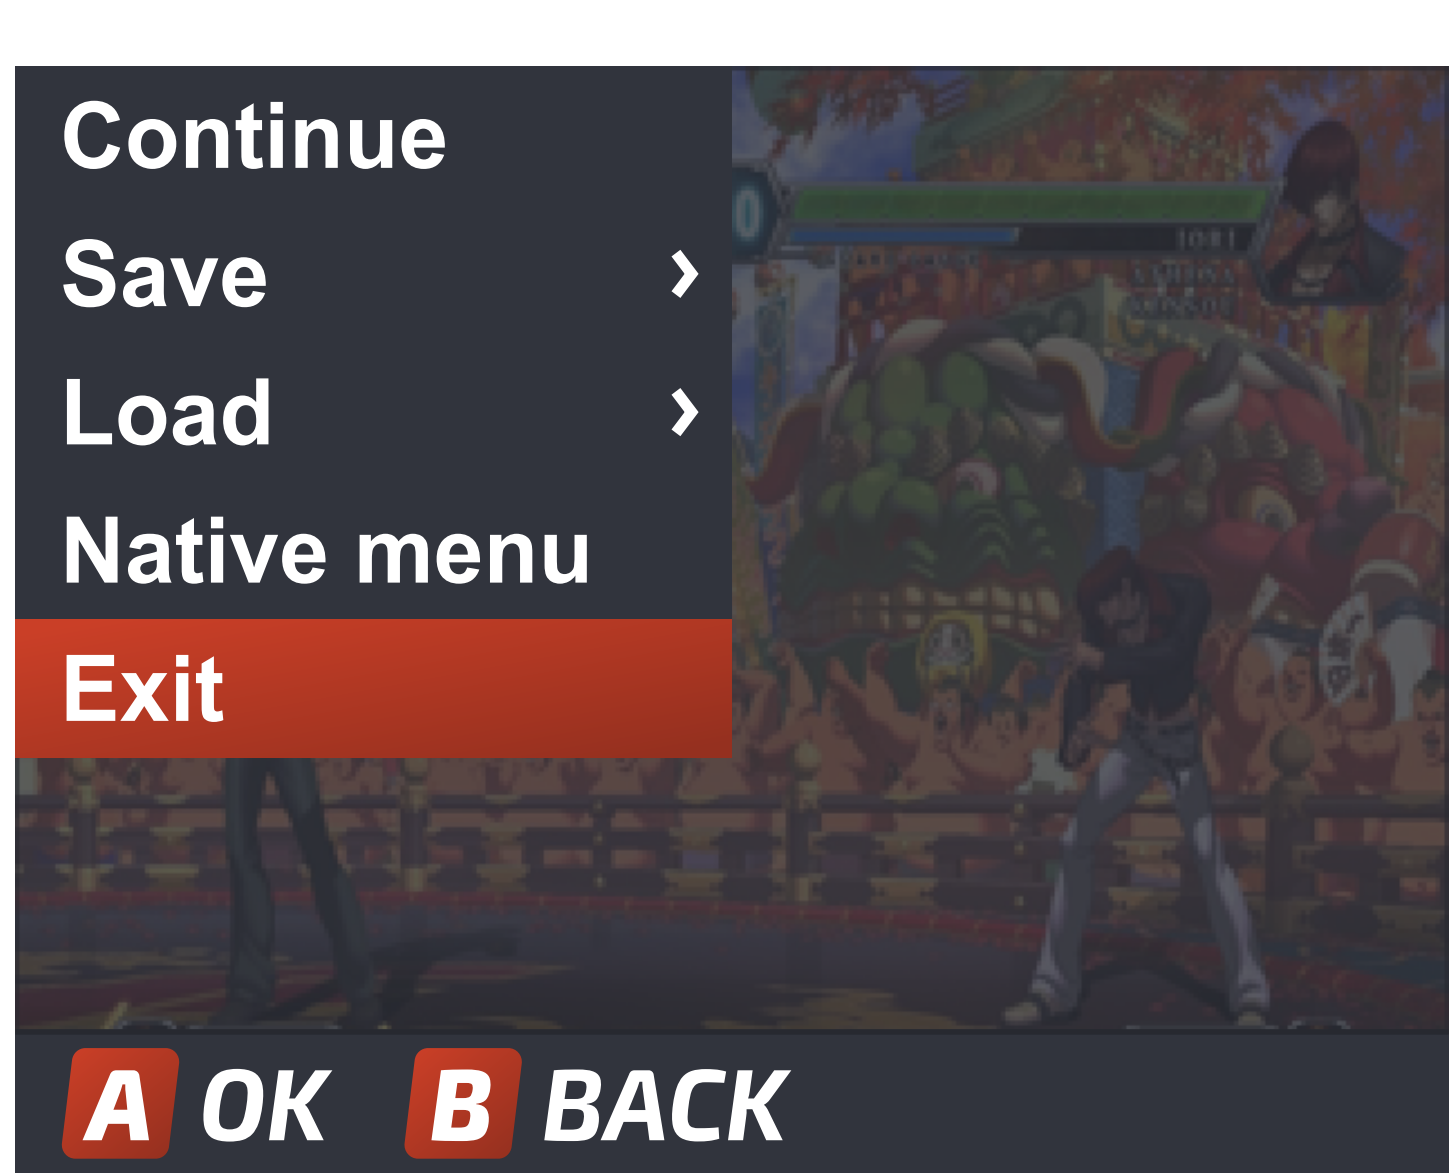 


在游戏中，按【MENU】打开菜单，选中“Exit Game”选项，按【A】退出游戏

### 保存或读取游戏进度



 在游戏中，按【MENU】打开菜单，选中“Save”或“Load”选项，按方向键【LEFT、RIGHT】选择记录位置，按【A】保存或读取当前进度。最多支持保存10条记录。

### 设置

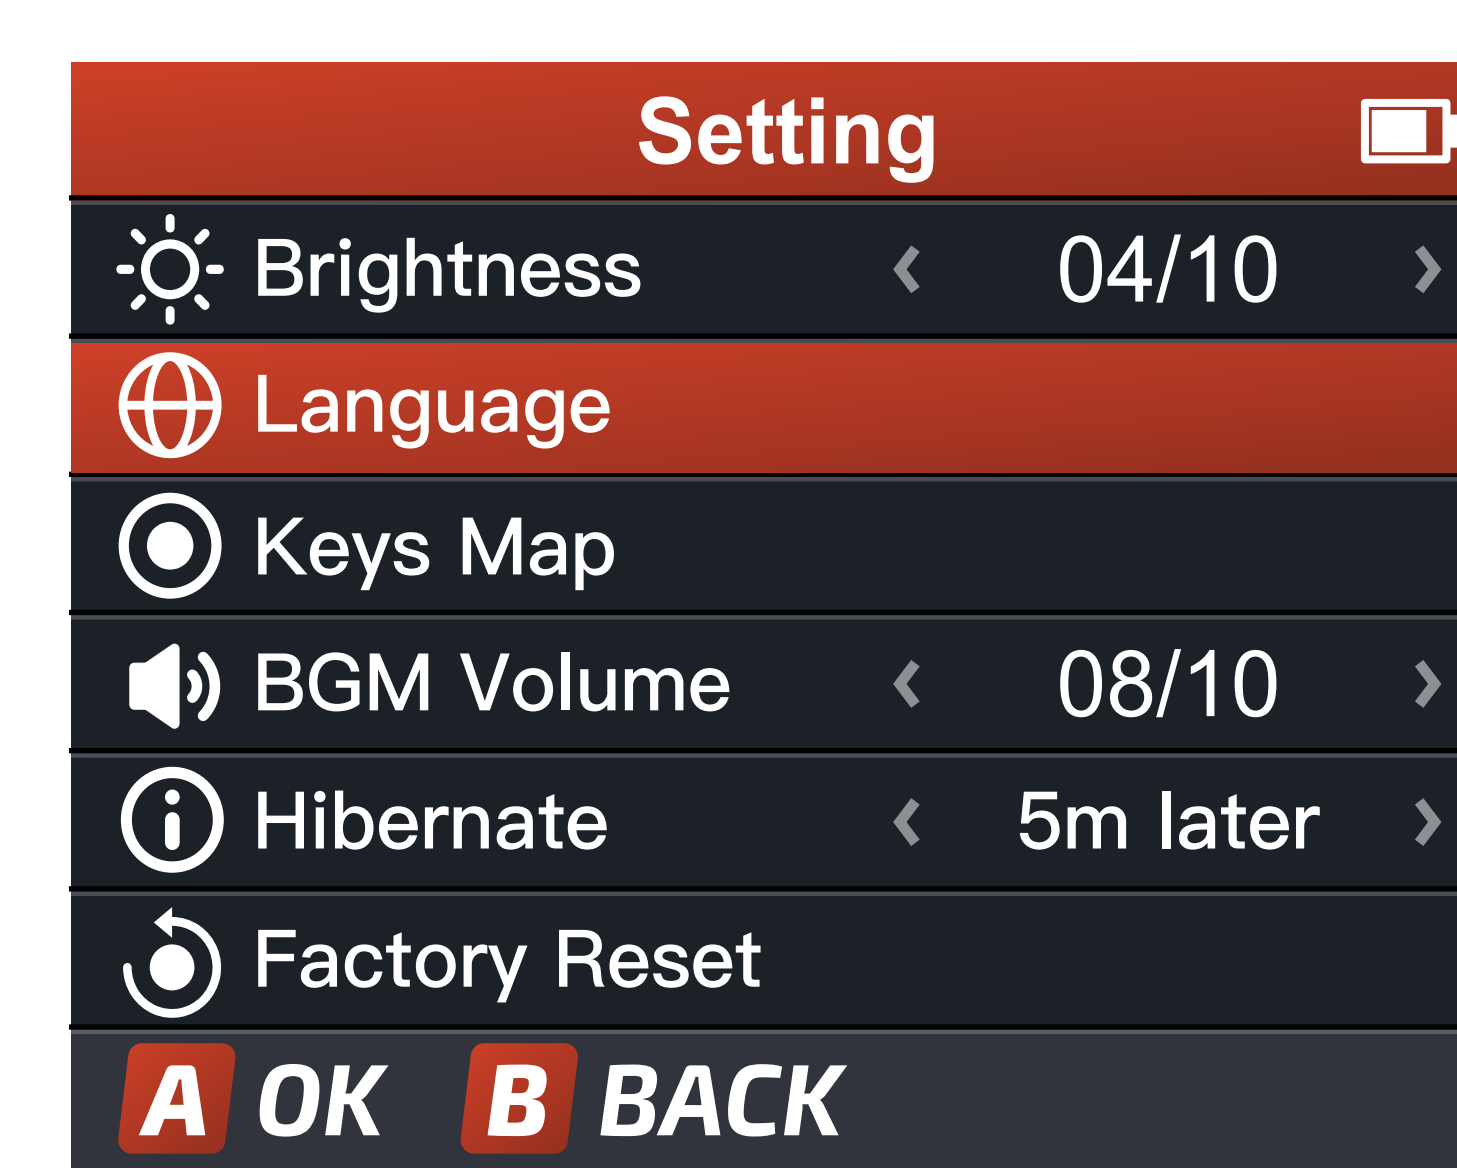

按方向键【UP、DOWN】选择设置项：屏幕亮度、音量、休眠时间，可以通过方向键【LEFT、RIGHT】修改；选择设置项目：语言、按键映射、系统还原等，按【A】进入对应的设置页面。

### 指示灯

- 绿灯常亮：已开机
- 红灯常亮：正在充电
- 蓝灯常亮：充电完成

### 耳机

您可以通过3.5mm音频口连接耳机

### 安全事项

使用时请注意以下安全事项 ⚠

- 请勿把任何液体喷洒到机身，以免液体进入机器内部造成损坏。
- 请勿对产品进行改装、修理或拆卸。
- 不要使用任何稀释剂或挥发性液体来清洁本产品。
- 避免暴露在高温环境，或直接接触火焰。

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.