

RM-K666PIUS 美国说明书

尺寸：100*130 MM

封面157G铜板纸，彩色印刷，封2封3留白

内页：80G书纸，黑白印刷

BIGASUO

Portable Karaoke Machine

User Manual



Model:RM-K666PIUS

CONTENT

OPERATING INSTRUCTIONS.....	1
PRODUCT CONTENTS.....	2
SPEAKER DESCRIPTION.....	3
MICROPHONE DESCRIPTION.....	7
DETAILED USAGE GUIDE.....	9
PRODUCT ATTRIBUTES.....	11
TROUBLESHOOTING.....	12
FCC WARNING STATEMENT.....	14

Thank you for purchasing our products! This manual provides important information that will help you safely operate this karaoke machine. Please read this user manual carefully before using this product. Thank you! If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-216@eitack.com

We will reply to you within 24 hours and give you the best solution.

OPERATING INSTRUCTIONS

All the instructions should be read carefully before operation and follow the instructions.

- * The karaoke speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- * Place the machine in a stable place to prevent it from falling down.
- * Do not use the machine with attachments not approved by the manufacturer.
- * Check the machine for damage before each use. Please don't attempt to repair the machine if you are not professional.
- * Do not open the back cover at will to prevent electric shock or other accidents.
- * Disconnect the power cable from the outlet and switch it off before cleaning the machine. Please only use a soft cloth, with no harsh abrasives or chemicals to clean, as they will damage the appearance.
- * The power cable of the karaoke speaker should be unplugged from the socket, and the power switch should be turned off when not in use for a long time.
- * Please don't leave the karaoke speaker and the microphones in a state of exhaustion for a long time, otherwise, the battery will be seriously depleted.
- * When the microphone is turned on, Do not point the microphone to the machine straightly to avoid howling.


PRODUCT CONTENTS



1 x Karaoke Speaker



2 x Wireless Microphone

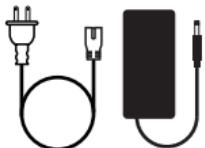

1 x Power Adapter



1 x 3.5 mm AUX Cable



1 x USB Cable



4 x AA Battery




4 x Foam Microphone Cover



1 x User Manual

Note: Please check the product packaging carefully, if any accessories are missing, please contact the after-sales service personnel by email at us-karaoke-216@eitack.com

SPEAKER DESCRIPTION

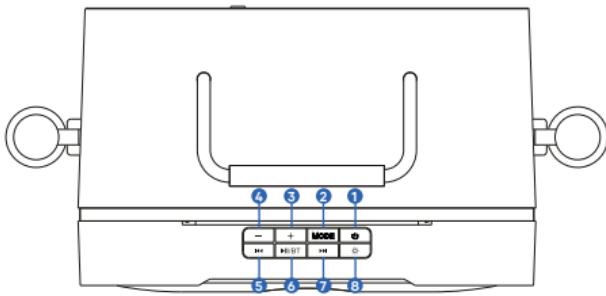


- ① Power on/off
- ② MODE
- ③ Volume +
- ④ Volume -
- ⑤ Previous Song
- ⑥ Pause/Play / Forcibly Disconnect Bluetooth
- ⑦ Next Song
- ⑧ Lighting

① Power On/Off: Long press to turn on/off.

MODE:

① Short press to switch playback mode: Bluetooth/USB/LINE IN/PC. When there are no external USB and PC devices, the MODE button can only switch between Bluetooth and LINE IN modes. However, when there are external USB and PC devices, the MODE button can switch between 4 different modes.

② Long press to switch the music/outdoor usage scenario.

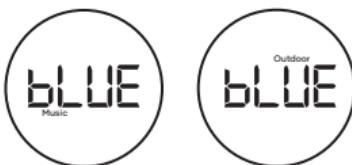

+ : Press to increase the volume of music.

— : Press to lower the volume of music.

◀◀ : Short press to switch to the previous song. (Not available in LINE IN mode.)

▶II/BT : Pause/Play / Forcibly Disconnect Bluetooth

- ① Short press to pause/play.
- ② Long press to forcibly disconnect the connected Bluetooth.

▶▶I : Short press to switch to the next song. (Not available in LINE IN mode.)



- ① Short press: Switch the light effects: light effect 1 -- light effect 2 -- Light effect 3 -- turn off the light effect.
- ② Long press to turn on/off explosive flashing light.

Note:

The volume of the karaoke speaker can be adjusted by the "+" and "-" button. At the same time, the sound key of the connected playback device (mobile phone/ iPad/ TV) can also control the volume of the karaoke speaker.

When you adjust the volume of the karaoke machine to the maximum, if the sound is still low, please increase the volume via the sound key of your playback device (mobile phone/iPad/TV).

LED Display Screen



Bluetooth playback mode

- ① Unconnected Bluetooth device - Bluetooth state indicator light blinking
- ② Connected Bluetooth device - Bluetooth status indicator light on



USB playback mode

When inserting a USB flash drive, short press the MODE button to switch to the USB mode, it will automatically decode and to playing music.




LINE IN mode

When connected with the equipped 3.5mm AUX cable, short press the MODE button to switch to the LINE IN mode.



PC playback mode

When the computer is connected to the karaoke speaker via the equipped USB cable, short press the MODE button to switch to the PC mode.

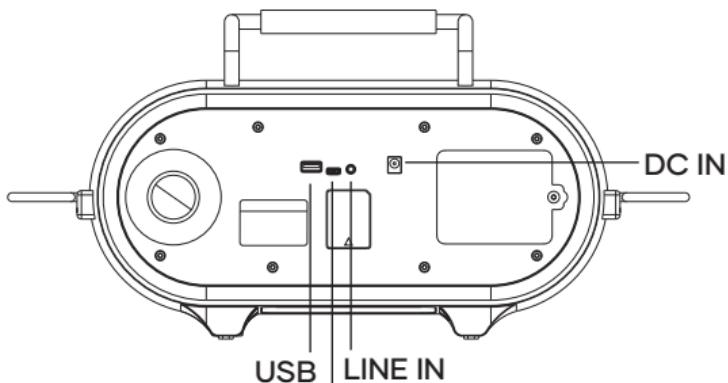

DC IN: DC 19V charging port.

PC

LINE IN: 3.5mm AUX audio input.

PC: PC audio input.

USB: Insert the USB flash drive to automatically decode and switch to playing music.

Instructions for Use

As you power on, Bluetooth mode is the default. You could search for the Bluetooth device named "KA216" on your phone/iPad for connection. Please short press the MODE button to switch to USB mode when you insert the USB flash drive. Please short press the MODE button to switch to LINE IN mode when you insert the AUX cable. Please short press the MODE button to switch to PC mode when you insert the Type-C cable to connect a PC.

Singing Instruction

1. When the karaoke speaker is turned on, the wireless microphone is connected to the karaoke speaker by default after it is turned on. Just turn on the wireless microphone power switch "ON / OFF", you can sing in any mode of the karaoke speaker.
2. When singing, you can adjust the reverb effect and the EQ modes through the "ECHO" and "EQ" buttons on the microphone.
3. Adjust the volume of the karaoke speaker and microphone, and select the appropriate sound effect.
4. When using the mobile phone/ tablet to play music, the volume of the karaoke speaker can also be adjusted through the mobile phone/tablet.

MICROPHONE DESCRIPTION



Power Button:

① Long press to turn on/off

② Short press to display the battery level.

MIC VOL-/VOL+: Press the buttons to adjust the volume of the microphone.

Music VOL-/VOL+: Press the buttons to adjust the volume of the karaoke speaker.

ECHO: Short press (☞) to adjust the reverb effect (E0~E5) on your singing.

Beautify Sound: Short press (❖) to adjust the sound effect (P0~P5) on your singing.

MIC Volume Reverberation Function


Music Volume Beautify Sound Function

MIC Connection

Status

*Connection Successful:
Steady on

*Disconnected: Blinking

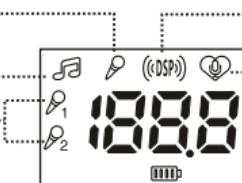

Note: The wireless microphone is powered by 2 AA batteries, please check and make sure the batteries are installed correctly before use.

How to pair new microphones?

If you have replaced the microphone with a new one, you need to pair the microphone with the karaoke speaker again to use it.

Microphone pairing steps:

1. Make sure both the karaoke speaker and microphones are turned off;
2. Press and hold  and  on the top of the karaoke speaker at the same time, until the karaoke speaker turns on and two flashing microphone logos appear on the LED display screen;
3. Turn on a microphone, quickly press  of the microphone 3 times, and the microphone logo on the display screen on the karaoke speaker and microphone are always on, which means the pairing is successful. (Repeat this step to pair the second microphone.)

Note:

1. When performing the re-pairing operation, both microphones need to be paired again.
2. The karaoke speaker can only pair with the equipped microphone model. If you need a new microphone, please contact us-karaoke-216@eitack.com

DETAILED USAGE GUIDE

How to charge the karaoke speaker?

Use the included power adapter to plug into the DC IN charging port on the back panel of the karaoke speaker to charge. Please plug into the DC IN charging port on the karaoke speaker first, and then plug the other end of the adapter into the power supply.

How to install the batteries to the microphones?

- ① Hold the microphone and rotate the lower part of the microphone counterclockwise;
- ② Put in the included 2 AA batteries, with the positive pole facing the bottom of the microphone;
- ③ Twist the bottom of the microphone clockwise to tighten.

How to connect to Bluetooth?

Open the Bluetooth connection settings of the playback device (such as phone/iPad), just search for the Bluetooth named "KA216" and click connect. When the karaoke speaker is not in Bluetooth mode, short press the "MODE" button to switch the playback option to Bluetooth.

How to start AUX mode? (Playing music from an AUX-compatible device like MP3 Player, Phone, or TV)

Plug the AUX cable into the LINE IN port on the back of the karaoke and short press the MODE button to switch to AUX mode. Then, plug the other end of the AUX cable into the designated inputs on your device and play music.

How to use USB mode? (Playing music from a USB drive)

Plug a USB stick into the USB port on the back of the karaoke speaker, short press the MODE button to switch to USB mode, and your music will begin playing automatically.

How to clean?

Turn the karaoke speaker and microphones off and unplug the karaoke speaker from the charging adapter. Gently wipe the outside of the karaoke speaker and microphones using a clean dry cloth.

Keep all vents, buttons, and openings free of lint and dirt. Do not immerse the karaoke speaker and microphones in water and do not use any harsh cleaners.

How to store?

Charge the karaoke speaker so that they are ready for the next use.

Make sure that the karaoke speaker and microphones are clean and dry.

Store the karaoke speaker and microphones in a cool dry place away from damaging machine parts.

PRODUCT ATTRIBUTES

Power Input	DC 19V 3.42A
Bluetooth Transmission Distance	10 meters
Support Interface	DC 19V charging port, USB multimedia interface, Type-C multimedia interface, AUX audio interface
Materials	Plastic and Stainless Steel

TROUBLESHOOTING

Questions	Solution
How to judge whether the karaoke speaker is fully charged?	The battery icon on the LED display screen shows  when charging, and the battery icon on the LED display screen shows  when it is fully charged.
The karaoke speaker will not turn on.	Check if the battery power is exhausted. Please use it after charging, and be sure to charge the karaoke speaker after each use.
The karaoke speaker volume is too low.	You can increase the volume of your music with the karaoke speaker's volume button. In addition, the volume of the device connected to the karaoke speaker will also affect the volume of the music. You can increase the volume of the playback device to achieve the effect of improving the sound. If the situation can not be resolved after trying, please contact us in time.
The microphone will not turn on.	The microphone is powered by 2 AA batteries, please install the batteries before use and check if the battery is installed correctly. Or check if the AA batteries' power are exhausted.

Questions	Solution
How do I know when to replace the batteries in my microphone?	Long press the power button to turn on the microphone, and then short press the power button, and you can see the battery level.

* If any of these issues persist or if any part of the machine becomes damaged, discontinue use and consult a licensed electrician for repair.

* Do not attempt to modify or repair the machine yourself. If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-216@eitack.com

We will reply to you within 24 hours and give you the best solution.

FCC WARNING STATEMENT

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- (3) The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction

FCC ID: 2BBI-RM-K666PIUS

BIGASUO

**Portable Karaoke Machine
User Manual**

MODEL:RM-K666PIUS