


# MASSAGE CHAIR USER MANUAL

HL-6610



- 01 Safety Precautions
- 02 How to Assemble
- 03 Components
- 04 Remote Control Button and Usage Method
- 05 Cleaning and Storage Method
- 06 Troubleshooting
- 07 Specification
- 08 FCC Warning
- 09 GROUNDING INSTRUCTION

MASSAGE CHAIR  
HL-6610

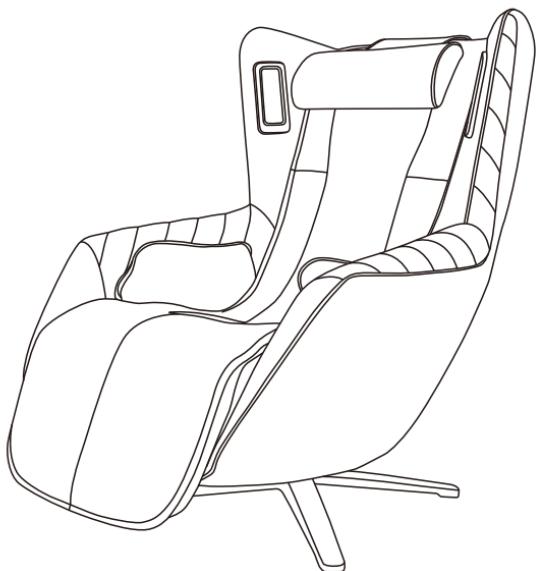

## 01 Safety Precautions

---

Please adhere closely to the following safety precautions to ensure that your product is used properly and safely.

### During installation

Do not modify, disassemble or repair other than service provider.  
→ It may cause fire/electric shock.

Use on a flat surface.  
→ It may cause failure or accident.

### Power-related

If it does not turn on or cause an error, immediately unplug the power connected to the outlet and request for after-service care.  
→ It may cause an electric shock, short circuit, or fire.

Make sure the upholstery is not torn or stripped in appearance. The material may get caught in the massage mechanism which may result in a serious accident. If there is any damage, please contact the support center.  
→ It may cause electric shock or injury.

Do not allow children to touch the power plug.  
→ There is a risk of electric shock or injury.

Do not bend the power plug too hard or break it by pressing it against any heavy object.  
→ Risk of fire and electric shock.

Do not use multiple devices simultaneously when using a multi outlet adapter.  
→ Risk of fire due to overheating of the outlet.

When disconnecting the power plug, hold the plug and Do not pull from the wire.  
→ If the power cord becomes torn or damaged, there is a risk of fire and electric shock.

Remove any contaminant, moisture, etc from the pins of the power plug.  
→ It may cause electric shock / fire.

Do not touch the power plug with wet hands. Always disconnect the power plug when cleaning.

→ There is a risk of electric shock.

This product is intended to be used exclusively with 120V.

→ Risk of fire due to the high heating of the outlet.

Be sure to use a ground-type outlet when using the multi-tap.

→ Use of non-grounded multitap-outlets can cause electric shock and injury.

In the event of power failure, immediately turn off the power switch and unplug the power from the outlet.

→ It may cause accidents when the power is turned on again.

### When in Usage

For safety reasons, persons with the following conditions or ailments should not use this product.

- People with thrombosis, embolism, severe venous, acute venous, etc.
- A person suspected of having whiplash.
- A person with symptoms of a sudden contraction of a spasm or muscle.
- A pregnant woman in the early stages of pregnancy or right after childbirth.
- A person with an abnormality in the spine or misaligned to the left or right due to accidents or diseases.
- People with acute appendicitis and severe heart failure.
- People who are using human implanted electronic medical devices such as implanted heartbeats.
- A person with seizures or a psychogenic disease.
- A person who has lost a sense of temperature due to a high degree of peripheral circulation from diabetes, etc.
- A person with an osteomyelitis.

- A Person who is not free of expression and movement of their body.
- Someone with spine symptoms or under spine treatment.
- A person who is being treated at a medical institution because of a special physical defect.

Persons with any of the following conditions should consult a physician before using this product.

- People who are concerned about side effects from the use of this product such as pregnant women.
- A person whose body temperature is higher than normal due to acute inflammation.
- People with skin disease, malignant tumors, and other symptoms of skin disease.
- Someone who needs stability because they are being treated by a doctor.
- Other people who feel an abnormality in their bodies.
- A person whose doctor forbade massage.
- A person or a person with weak muscles due to older age.
- A person with back pain.

Do not use or store in humid areas such as bathrooms.

→ It may cause electric shock, fire, failure, and mold.

Do not allow children to play or climb on the massage chair.

→ There is a risk of falling or injury.

Do not wear anything hard on your head, such as headgear.

→ It may cause injury.

Use time is 30 minutes per day, 15 minutes per usage, and only 5 minutes for continuous use in the same area.

→ Long-term use can strain muscles or nerves.

If you experience any of the following side effects while using the product, please stop using it :

- Posture damage, bruises, stab wounds, cuts from the product.
- Excessive usage of this product can cause damage to muscles and tendons, nerves, vertebrae, etc.
- Skin disease, burns, etc.
- Fractures, bone dislocation, abrasion, etc.
- Respiratory system failure and suffocation, etc.

When massaging your hips and thighs, take out all objects out of your pants pocket.

- There may be an accident or injury.

During the massage operation, do not disconnect power from the outlet or turn the power switch on/off.

- It may cause an accident.

Do not use it near fireplaces, or while smoking. Also, do not use it with heating appliances such as an electric pad.

- It may cause a fire.

Do not use it after drinking alcohol.

- There may be an accident or injury.

Do not allow more than one person to get on the product or use it at the same time.

- Cause of falling or injury.

The maximum load of this product is 120kg.

- Do not use for anyone over 120kg as this may damage the product or cause injury.

Do not use on bare skin.

- When using the massage chair on bare skin, it can cause skin damage due to the heated seat and massage ball movements.

Be careful not to trip over the remote control cable.

- There is a risk of injury.


When cleaning the product, disconnect the power plug from the outlet.

- Causes electric shock or injury.

## 02 How to Assemble

---


1. Safely remove all the parts enclosed in the box (Please make sure that there are no parts left behind).
2. Place it on a flat surface to avoid scratching
3. Lay the product forward, and then insert the center connecting support into the groove on the bottom of the product.  
Note: Fit the first side of the 'center connecting support' to the fixing device.
4. Slide the 'four-foot support' into the fixing device as far as it will go.

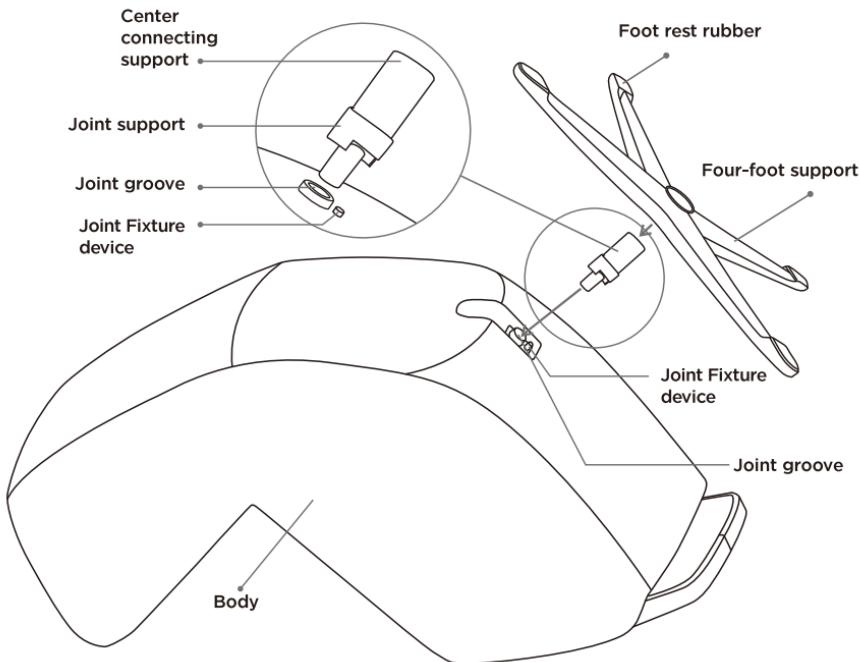

\*When assembling and installing, put down the product slowly.  
If you put it down roughly, there is a risk of damage to the product or personal injury.


## 03 Components

---

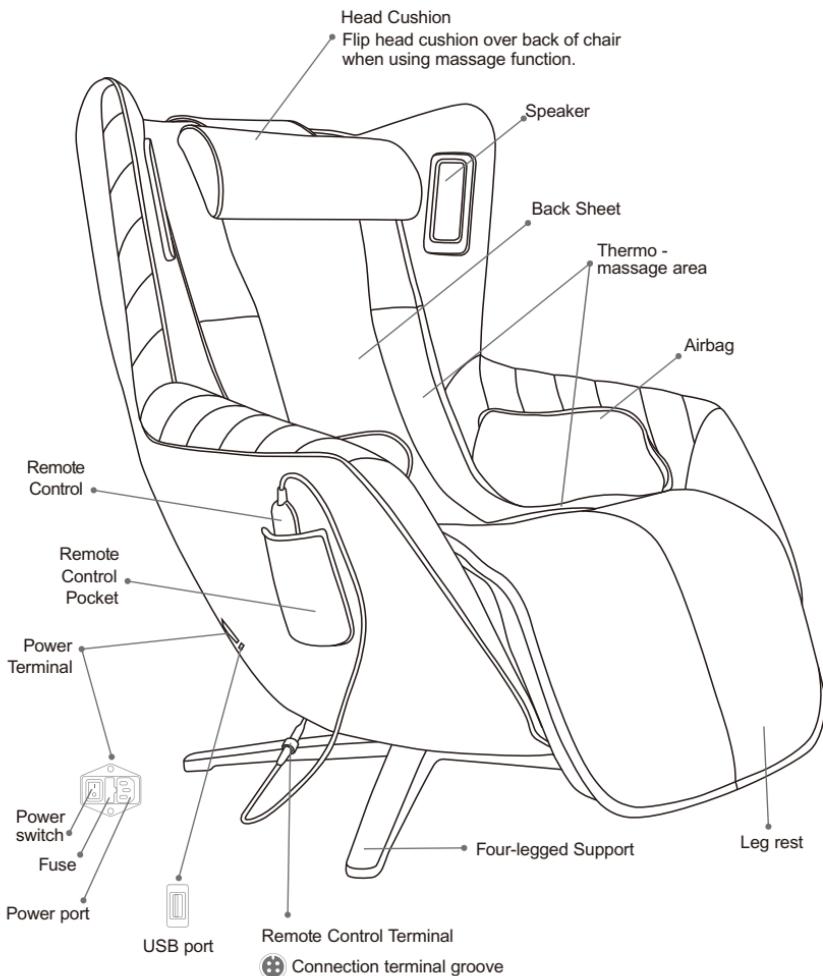

## 04 Remote Control Button and Usage Method

---

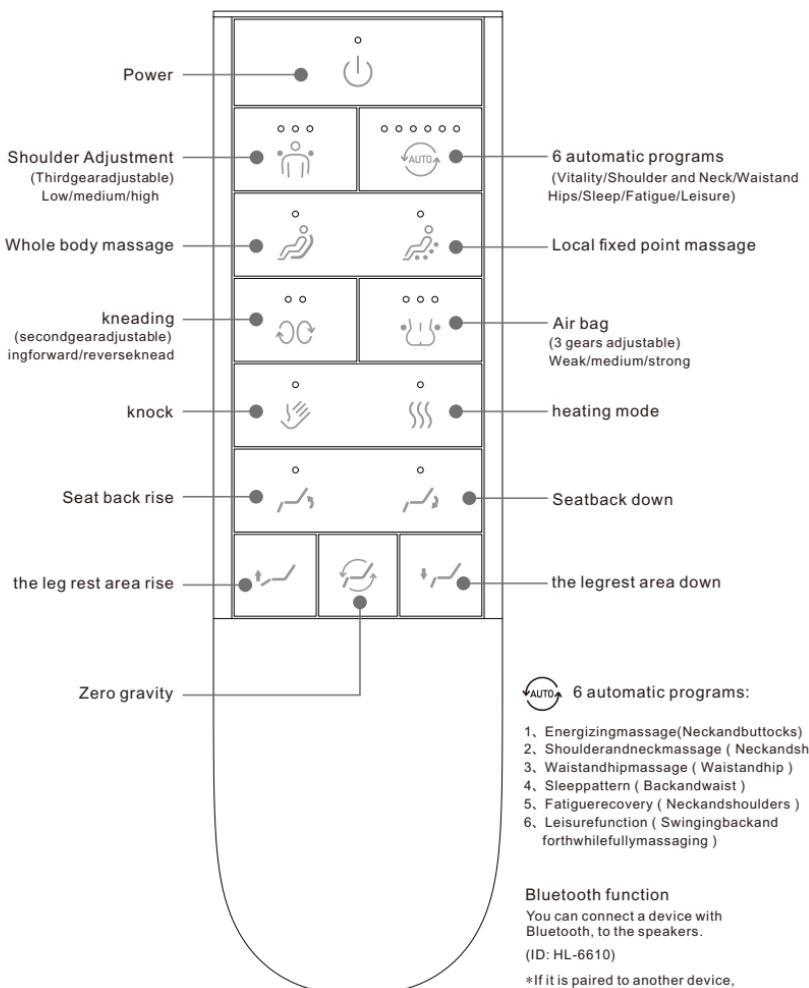

## 05 Cleaning and Storage Method

---

Be sure to disconnect the power plug from the outlet when cleaning.  
Also, do not touch with wet hands.

→ There is a risk of electric shock or injury.

Do not wipe with benzene, paint thinner, alcohol or spray insecticide.  
→ Causes discoloration, deterioration, or fire.

Wipe gently using a leather cleaner used in natural leather products.

Never iron the skin.

Wearing leather clothing may cause inflammation, as leather coverings can easily be disfigured.

Persistent sunlight, UV exposure can discolor the color of the product, so avoid placing it near the window and sunlight since it can change the color of the product.

## 06 Troubleshooting

---

If you encounter problems while using the product, refer to the following solutions:

If the problem persists, turn off the power supply, disconnect the power plug from the outlet, and then ask the service center.

Never under any circumstance should you attempt to disassemble or repair this product yourself or through an unauthorized repair service: doing so will invalidate your warranty.

The Service Center shall not be responsible for any consequences.

| Problem   | Solution  |
|---|---|
| The product is not powering on.   | Make sure that the power switches are turned on.<br>Check the power plug connection.<br>Make sure the voltage used is correct<br>Make sure the remote control is assembled correctly<br>(Step 3 on Page JK).  |
| I hear friction in the massage chair.<br>I can hear the motor clearly.<br>Using a massage feature makes the noise louder. | Noise is generated by mechanical construction, it is not a failure.<br>Noise may be present during normal operation.  |
| The remote control works but the massage chair doesn't work.  | When using the product for long periods of time, the temperature increases. The massage chair automatically switches to the over-temperature protection mode. In this case, turn off the power and allow the heat to cool.<br>Please wait for 30 to 50 minutes. |
| Both the remote control and the massage chair do not work.  | If Auto Mode has been set, it means the time has expired and the chair has powered off. Press the Auto Mode button again to reset. Power the chair off and on again.  |

---

\*If this does not work, please refer to the product warranty and contact customer support.

## 07 Specification

---

|                   |   |
|-------------------|---|
| Product Name      | Massage Chair   |
| Model Name        | HL-6610   |
| Product size      | 115.5cm×72.5cm×105.5cm  |
| Package size      | 142cm×75cm×65cm   |
| Net weight        | 51kg  |
| Gross weight      | 64.6kg  |
| Working voltage   | AC100V-240V,50-60Hz   |
| Thermomassage     | 24 V 20W / internal temperature max. 59 °C,<br>sensory temperature max. 50 °C |
| Power consumption | 110W  |

## 08 FCC Warning

---

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## 09 GROUNDING INSTRUCTION


---

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER** - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in sketch A in following figure. A temporary adapter that looks like the adapter illustrated in sketch B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

### Grounding methods

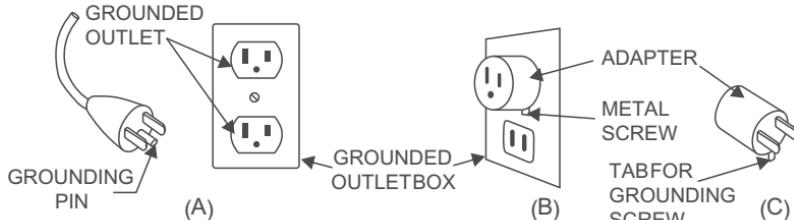

No adapter should be used with this product in Canada