

## 修改区域

## 描述

## 日期

## 担当

1\

xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

xxxxxx

xxxxxx

A

A

B

B

C

C

D

D



无线扬声器说明书



WIRELESS SPEAKER INSTRUCTIONS

## HOPESTAR P58mini 说明书


成品尺寸: 122.5x70mm

材质工艺: 128g双铜, 单张双面四色印刷, 风琴折

技术规格:

无线标准: 5.3  
传输距离: 10米  
输出功率: 10W  
续航时间: 4-6小时  
频率响应: 80Hz-15KHz  
扬声器: 66mm 4Ω, 10W  
输入电压: 5V ± 1A  
电池类型: 18650 锂离子电池 1800mAh  
音频信号输入接口: 标准Φ3.5mm耳机孔(立体声)

特点:  
1. 无线连接  
2. 记忆功能, 断点续播  
3. 支持U盘 / FM / TF卡 / AUX播放模式  
4. 内置锂电池  
5. 支持MP3音乐格式解码  
6. 使用高保真的扬声器, 发出声音更自然和细腻  
7. 6级防水  
8. 1+1设备串连接功能

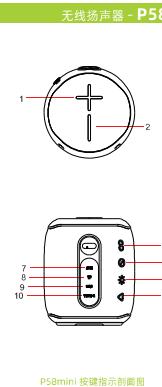

P58mini 按键指示剖面图

## 按键说明:

1. 音量+“+”  
2. 音量-“-”  
3. 电源键  
4. 开关机/模式键  
5. 长按开关机/关机 3秒/1次  
6. 电源灯指示  
7. 重置键  
8. 播放/暂停键  
9. 音量调节键  
10. TF插孔  
11. USB插孔  
12. AUX插孔  
13. Type-C插孔

## 使用说明:

1. 无线配对:  
1.1. 电源键长按, 首先打开设备电源, 它已经是默认的无线模式。  
1.2. 打开无线设备, 按照HOPESTAR-P58mini, 连接配对, 连接成功, 并开始播放音乐。  
2. 连接其他设备:  
2.1. 其他设备必须支持无线技术, 无线连接, 无线播放。  
2.2. 连接成功后, 重新启动设备。  
3. 电源指示:  
3.1. 开机时有声音三声;  
3.2. 重新启动时有声音三声;  
3.3. 按电源键3-4秒后再次关机。  
4. 模式切换:  
4.1. 开机默认进入AUX模式。  
模式切换顺序: 无线模式 - FM模式 - TF卡模式 - AUX模式 - 4.2. 模式优先。  
5. TWS操作说明:  
任意两个设备同时打开, 选择其中一个TWS主从键, 选择“+”的声音进入TWS连接, 当TWS连接成功, 重新启动设备, 重新指示灯闪烁。割线长, 重新启动设备, 重新指示灯闪烁。割线长。  
6. 屏幕显示:  
无显示状态: 电源键长按 0.5秒/次;  
光显示状态: 电源键长按 1秒/次;  
7. 电源指示灯:  
开机时红灯亮 未通电 红灯灭  
关机时绿灯亮 绿灯灭  
8. 音量:  
开机默认音量70%音量。

9. 充电说明:  
本机内置过去保护电池, 可长时间连接电源或充电器, 约8小时即可充满电。每个电池的容量不同, 请根据不同的容量而有所选择。  
10. 无工作状态: 15分钟后自动关机。

## 故障排除:

1. 自动关机: 电池电量不足时会自动启动电池保护, 充电4小时后使用。  
2. 无法播放音乐: 音乐文件存根导致不能被播放器识别, 音乐文件存根石可以移除设备的根目录下。

用户名: \_\_\_\_\_

联系电话: \_\_\_\_\_

购买日期: \_\_\_\_\_

产品编号: \_\_\_\_\_

维修故障: \_\_\_\_\_

注意: 产品保修期为6个月

## 产品保修

正面

## Wireless speaker - P58mini

## Product warranty

Username: \_\_\_\_\_


Contact number: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

Product number: \_\_\_\_\_

Maintenance failure: \_\_\_\_\_

反面

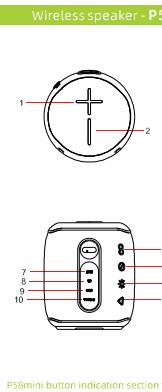

P58mini 按键指示剖面图

## Wireless speaker - P58mini

## Technical Specifications:

Wireless standard: 5.3  
Transmission distance: 10 meters  
Output power: 10W  
Playing time: 4-6 hours  
Frequency: 80Hz-15KHz  
Speaker: 66mm 4Ω 10W  
Input power: 5V ± 1A  
Battery type: 18650 lithium ion battery 1800mAh  
Audio signal input interface: standard Φ3.5mm headphone jack (stereo)

## Button instruction:

1. Press “+”  
Click: Volume Plus  
Long press: Next track  
2. Press “-”  
Click: Volume Down  
Long press: Previous song  
3. Series keys  
Click: Continuous fast concentrate  
Press and hold to switch modes  
4. Switch on and off  
Press and hold for about 3 seconds  
5. Light button  
Click: Convert light mode  
Long press: Turn off the light  
6. Pause/Play key  
Click: Play/Pause  
Press and hold to exit or connect back to the Bluetooth connection  
Double click in Bluetooth mode to call back;  
Click and hold to turn off  
Press and hold for 2 seconds to reject an incoming call  
In radio mode, click: Mute and hold down. Stop the channel  
7. AUX jack  
Standard Φ3.5mm headphone jack, when inserted, default to AUX playback mode  
8. TF jack  
When a TF card is inserted, the TF card playing mode is used by default  
9. USB jack  
When inserting a USB flash drive, the default mode is USB playback mode  
10. Type-C jack  
1. Charging cable interface. When the Type-C charging cable is inserted, the device is charged by default.  
2. When using the radio function, you need to insert the charging cable as the radio antenna. The radio function can be used normally

9. Charging and using:  
9.1. Before using, please turn on the power protection circuit, which can be connected to a computer or charger for a long time, about four hours. Charging is complete.  
The play time of each battery will vary depending on the volume used, different.  
10. If there is no working state, it will automatically shut down after 15 minutes.

## Troubleshooting:

1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge.  
2. Cannot play music: The music file is not recognized by the player. Please store the music file in the root directory of the removable device.  
3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port.  
4. There is no response to the keys or the function is disordered: try again after shutting down.  
5. When the machine is abnormal, press the reset key in the hole behind the AUX jack to reset it.

Note: The product warranty is 6 months

HOPESTAR

订单编号:

料号:

设计: Zep 2023-11-17 文件编号:

业务: 名称: P58mini 中性 说明书

电子: 审核:

结构: 核准:

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.