

Airsync Wireless Transceiver

Instruction manual

Main technical parameters

This product adopts high integrated chip design, ID code matching authentication

Frequency range: 657.000-663.000MHz

Adjustable channel: 13 frequency adjustable points

Channel interval: 0.5MHz

Modulation mode: Digital modulation

Frequency stability: ± 3 PPM

Frequency response: 40Hz-20KHz


Working range: 50M

Operating voltage: Built-in 3.7V, 1000mAh lithium battery


This product uses converters and can be used on equipment such as speakers, power amplifiers, mixer or guitars.

Quick start

1. Plug the Transmitter into the XLR dynamic microphone and battery-powered condenser microphones.
2. Plug the Receiver into the Mixer.

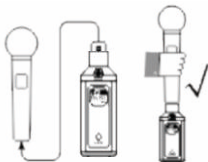

Transmitter

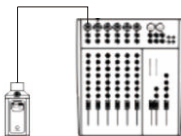

Receiver

Transmitter Instructions

- (1)Three-core cannon interface
- (2)power display
- (3)Transmitting signal
- (4)Frequency
- (5)Audio gain switch key
- (6)Phantom Power switch
- (7) power switch
- (8)Charging Interface



A. Tum on key, long press 1 second to tum on, long press 1 second to turn off

B. Double dick the switch key to enter frequency modulation, continue to double click andthen switch to the next frequency point, and save automatically after 3 seconds of rest.

Press it 3 times in a row to mute the phone, and press it 3 times in a row again to unmute the phone.

This machine has been paired with the authentication codebefore leaving the factory.

If the frequency is confused inthe process of sale or use, as long as the transmitterrecetverls re-matched, it can continue to use.

Receiver Instructions

- (1)Three-pin XLR interface
- (2)Battery indicator: when the three batterypower lights are on, the battery is fullycharged; When the battery power is blinking. Itindicates that the battery is low and the batterypower is only 10%. It needs to be charged.
- (3)Charging interface
- (4)On the key, long press 1 second to start,long press 1 second to shut down



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.