
Antenna specification


1、Antenna introduction

The TX antenna is directly used on the Loop Antenna.

Manufacturer: Shenzhen xlw technolog9y

Address: A436, Huafeng Internet Creative Park, No.107 Gong He Industrial Road, Xixiang, Bao'An, Shenzhen, 518102, China

2、Antenna shape

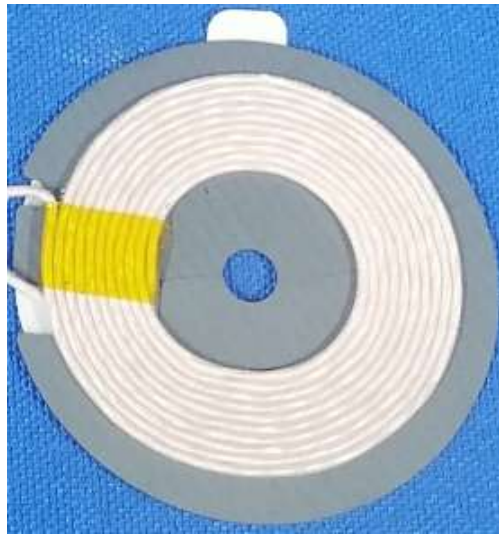

3、Antenna parameter

The TX antenna operates at 115kHz ~ 205kHz and generates resonance in this band. The table below shows the main parameters of the antenna.

Frequency (MHz)	115kHz ~ 205kHz
VSWR	≤ 2.0
Impedance	50 Ohm Nominal
Gain (Peak)	0dBi