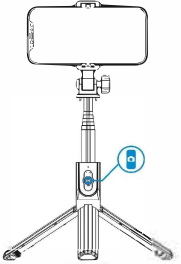 
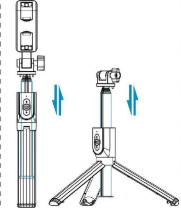 
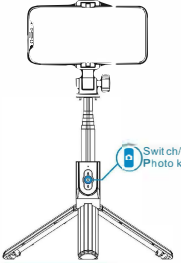 
 
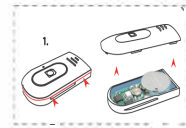 
 
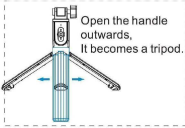 
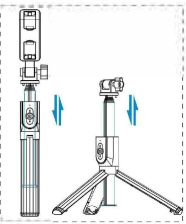 


自拍杆说明书  G2	 Compatible ☒ ios ☒ Android	使用说明 1.开机：长按拍照键3秒开机。 2.蓝牙配对：指示灯闪烁4秒进入配对状态，配对状态蓝色指示灯闪烁，用手机搜索 Bluetooth 设备，蓝色指示灯熄灭 配对成功。 3.拍照：蓝牙与手机连接后，短按拍照键，蓝灯闪烁。 4.不配对：开机后，在未配对连接状态下，5分钟无操作自动关机。 5.配对：手机开机后，自拍与手机连接后，10分钟无操作进入休眠状态，再过10分钟自动关机。 6.关机：开机休眠状态下，长按拍照键3秒关机，指示灯熄灭。	自拍杆 G5 使用步骤说明   扫码查看使用视频 1. 取出两端卡扣，向外拉伸可调节手机夹紧固固定度。 2. 用活动旋钮调节前后角度，旋转手机夹座可以任意角度调节。 3. 向上拉伸调节杆子高度。 4. 打开底部支架，用手托着向上推。  5. 按下与前置镜头永年垂直即可。 6. 图示位置蓝牙遥控按钮上便可拍照。 7. 打开手机蓝牙界面，找到“AB Selfie-stick”设备进行配对，显示连接成功后即可进行拍摄。	三脚架模式 当自拍杆切换到三脚架模式时，注意拉出杆的最后一段，调整到三脚架稳定。 	产品规格 材质：不锈钢+ABS 总长度：1100mm 折叠长度：200mm 产品重量：145g 电池：CR1630（可更换） 电池不得暴露在阳光、火或类似过热环境中 温馨提示 自拍杆兼容安卓4.2.2和iphone ios5.0及以上 (Android 设备：如果您的相机连接后只能控制音量键，请在相机系统中将音量键设置更改为控制拍照，让遥控器正常工作) 感谢您的支持!! RE CE G RoHS
Instruction of selfie stick Specifications Main Material: Stainless steel Retracted Length: 20cm Extended Length: 110cm Gift carton size: 48x 41x 200mm Battery: CR1632(replaceable) G2	 Compatible ☒ ios ☒ Android	How to use 1. Turn on: Long pressthe camera button for 3 seconds to turn on. 2. Bluetooth pairing: the indicator lightflashes for 4 seconds toenter the pairingstate, the blueindicator lightof the pairing stateflashes, use the mobile phone tosearch for a device to match, and the blueindicator light will goout after the pairing issuccessful. 3. Take a photo: Whenthe Selfie is disconnected to the mobile phone, short pressthe camera button and the blueight flashes. 4. No pairing: After booting, in thestateof no pairing conn ection, itwill automatically shut down after 5 minutes of no operation. 5. Pairing: After turning on the phone, when the Selfie is disconnected to the phone, it will enter the dormant state if there is no operation for 10 minutes, and itwill automatically shut down after another 10 min utes. 6. Power off: In power on and sleep mode, press andhold the camera button for 3seconds to power off, theindicator light flashesand goes out.	Take out the SELFIE  The self timer can be removed by pushing up Change the battery 	360° Rotation  The clip rotates 360°, Take pictures more freely. Open the tripod  Open the handle outwards, It becomes a tripod.	Tripod mode When the selfie stick changes to tripod mode, pay attention Pull out the last section of the pole and adjust it to The tripod is stable  Specification Material: Stainless steel+ABS Total length: 1100mm Folded length: 200mm Product weight: 145g Battery: CR1632 (replaceable) (The battery must not be exposed to such as sunlight, fire or similar overheating environment) Remind The selfie stick is compatible with Android 4.2.2 andiphone ios5.0 and above (Android device: if you are on the camera Change your "volume key Function", be sure to change it to the default. Or "take a picture" and let the selfie stick normal work) thank you for your support! RE CE G RoHS

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.