


中文

# INSTRUCTION MANUAL

M108

TWS 蓝牙耳机

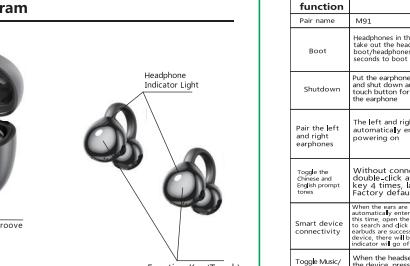

## Packing list

Headphones x2pcs  
Charging case x1pcs  
Type-C charging cable x1pcs  
Instruction manual x1pcs

## Introduction to product operation

function	operate	Light	Tone
Pair name: M108			
Boot	Headphones in the case of charging bin, take out the headphones automatically, the headphones are in the boot state, long Touch Key 3 seconds to boot	Red and blue lights flash alternately	Power on/开机
Shutdown	Put the earphone into the charging bin and shut down automatically, Press the power button 3 seconds to shut down the earphone	The red light flashes three times	Power off/关机
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	After the left and right earphones are paired, the red light and the secondary ear light go out extinguish	Connected/配对成功
Toggle the smart device and game mode	Without connecting the smart device, double-tap any left/right ear touch key 4 times, language switch, factory default English	The lights in the left and right ears are turned off	Connected/配对成功
Smart device connection	When the headphones are successfully paired, the headphones will be connected to the last connected smart device, there will be a prompt tone, and the headphones will turn on and off	The lights in the left and right ears are turned off	Connected/配对成功
Toggle music mode	When the headset is connected to the device, press the left/right ear touch key 4 times, language switch		音乐/游戏模式 MUSIC/GAME MODE
Play/Pause	After the music player starts, double-click the left/right earphone touch button		
Previous song	When the music player starts, double-click the left/right earphone touch button three times		
Next song	When the music player starts, double-click the left/right earphone touch button three times		
Increase the volume	After the music player starts, click the touch button on the right earhead		Maximum volume (knock)
Reduce the volume	After the music player starts, click the touch button on the left earhead		
Answer an incoming call	When the headphones are connected to the phone, double-click the left/right earphone touch button for 2 seconds to wake up the assistant		Ringtone of your phone
Clear the pairing history	In the incoming call state, double-click the left/right earphone touch button		power off/ shutdown

## Simple troubleshooting

fault	cause	resolution
Reject an incoming call	Press the left/right earphone touch button for 2 seconds	/
Hang up	While on the phone, double-click the left/right earphone touch button	/
Low battery alarm	When the ambient temperature of the earphone is lower than 3.3V, there will be a prompt to charge the earphone	The red light flashes every 5 seconds Ding Dong
Disconnect	The left and right earphones will automatically disconnect from the smart device	The blue and red lights of the man ear are flashing alternately, and the secondary ear light goes out extinguish
Automatic power off	After power on or disconnecting, the headphones will automatically turn off after 15 minutes to the last connected smart device	Connected/断开连接
Charge the headphones	The headphones have an echo	The lights go out
Charging bin	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment
Charging bin	The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume
Charging bin	The signal is intermittent	Choose a distraction-free environment or be close to your phone

## Safety guidelines

1. Before using this product for the first time, please fully charge it before using it.  
2. The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.

3. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer to avoid damage to the product caused by a fast charging charger that supports high voltage.

4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable as soon as possible after the power is fully charged to avoid damage to the battery caused by long-term heat.

5. This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the battery will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.

6. This product comes with a healthy battery, if it has not been used for a long time, please charge it once a month.

7. If you feel uncomfortable when wearing it due to individual differences, please stop wearing it and consult a doctor.

8. When the headphones are connected to the phone, please adjust the sound of the earphones to an appropriate volume to avoid hearing damage caused by long-term loud volume.

9. If you use this product while engaging in activities that require concentration, you should pay attention to your own safety and the safety of others, such as when driving or cycling, on roads, construction sites, railways, or walking. You should remove your headphones on adjust the volume to ensure that you can hear the sounds around you, including alarms and warning signals.

# 使用说明书

## M108

### TWS 蓝牙耳机

包装清单

耳机x2pcs  
充电仓x1pcs  
Type-C充电线 x1pcs  
说明书x1pcs

**产品结构图**

**产品操作介绍**

功能	操作	指示灯	提示音
配对名	M108		
开机	耳机在充电仓内情况下,取出耳机自动开机/耳机红蓝交替闪	Power on/开机	power off/关机
关机	耳机放入充电仓内自动关机/耳机开机状态下,长按触控键3秒关机	Power off/关机	
左右耳机配对	左右耳机配对成功后,主耳蓝红交替闪烁,副耳光灭	Connected/配对成功	
切换中文输入法	/	English/中文	
智能设备连接	左右耳灯光闪烁	Connected/连接成功	
切换音乐/游戏模式	/	音乐/游戏模式 MUSIC/GAME MODE	
耳机与设备连接的状态下,连击左/右耳触控键4次,进入游戏模式	/		
上一曲	音乐播放控制,连击左耳触控键三次	/	
下一曲	音乐播放控制,连击右耳触控键三次	/	
增加音量	单击右耳触控键	最大音量提示音	
减少音量	单击左耳触控键	/	
语音助手	耳机进入充电仓,充电仓的耳机键通电,仓白灯长亮提示,耳机充满电后15秒熄灭		
接电话	来电状态下,双击左/右耳触控键	手机铃声提示音	
拒接电话	挂断电话状态下,双击左/右耳触控键	/	
挂断电话	通话状态下,双击左/右耳触控键	/	

**产品操作介绍**

功能	操作	指示灯	提示音
配对名	M108		
开机	耳机在充电仓内情况下,取出耳机自动开机/耳机红蓝交替闪	Power on/开机	power off/关机
关机	耳机放入充电仓内自动关机/耳机开机状态下,长按触控键3秒关机	Power off/关机	
左右耳机配对	左右耳机配对成功后,主耳蓝红交替闪烁,副耳光灭	Connected/配对成功	
切换中文输入法	/	English/中文	
智能设备连接	左右耳灯光闪烁	Connected/连接成功	
切换音乐/游戏模式	/	音乐/游戏模式 MUSIC/GAME MODE	
耳机与设备连接的状态下,连击左/右耳触控键4次,进入游戏模式	/		
上一曲	音乐播放控制,连击左耳触控键三次	/	
下一曲	音乐播放控制,连击右耳触控键三次	/	
增加音量	单击右耳触控键	最大音量提示音	
减少音量	单击左耳触控键	/	
语音助手	耳机进入充电仓,充电仓的耳机键通电,仓白灯长亮提示,耳机充满电后15秒熄灭		
接电话	来电状态下,双击左/右耳触控键	手机铃声提示音	
拒接电话	挂断电话状态下,双击左/右耳触控键	/	
挂断电话	通话状态下,双击左/右耳触控键	/	

**简单故障排查**

故障	原因	解决方法
不开机	耳机电量不足	对耳机进行充电
耳机闪灯	耳机电量不足	对耳机进行充电
充电未显示	耳机没有放好	调整耳机放置的位置
自动关机	耳机电量不足	对耳机进行充电
耳机杂音	音量太大或者环境太吵杂	调节音量或更换环境
耳机杂音	外界干扰严重或距离手机太远	更换地点或靠近手机
对方声音小	耳机佩戴不正确或音量太小	调节耳机带音量大小
信号断续	外界干扰严重或距离手机太远	选择无干扰的环境或靠近手机

**简单故障排查**

故障	原因	解决方法
不开机	耳机电量不足	对耳机进行充电
耳机闪灯	耳机电量不足	对耳机进行充电
充电未显示	耳机没有放好	调整耳机放置的位置
自动关机	耳机电量不足	对耳机进行充电
耳机杂音	音量太大或者环境太吵杂	调节音量或更换环境
耳机杂音	外界干扰严重或距离手机太远	更换地点或靠近手机
对方声音小	耳机佩戴不正确或音量太小	调节耳机带音量大小
信号断续	外界干扰严重或距离手机太远	选择无干扰的环境或靠近手机

**安全指引**

1. 初次使用本产品前,请先充满电再使用。
2. 本产品是玩具,12岁以下儿童须在成年人监护下使用。
3. 请勿用产品附件浸入任何液体或用热水冲洗产品,否则导致火灾或触电危险。
4. 请勿将产品放置在太阳直射或者温度高的地方,高温会缩短电子部件的使用寿命,损坏电池,使某些塑料部件变形。
5. 请勿在完全的环境下方充电,在给充电仓充电时,电量充满后请尽快将充电线拔出,避免长时间充电对电池造成损坏。充电仓的充电方式为Type-C接口。
6. 本产品内置不可拆卸的可充电锂电池,重复对耳机进行充电和放电会随时时间推移而导致电池性能下降,这对于所有可以重复充电电池来说是正常现象。
7. 本产品带有锂电池,如佩戴时感到皮肤不适,请停止佩戴并咨询医生。
8. 在蓝牙连接本产品使用时,请将耳机声音调至合适音量大小,以免长期在大音量状态下对听力造成损伤。
9. 如果您在从事需要集中注意力的活动时使用本产品,应注意您自身和他人的安全,例如驾车或骑自行车时,在道路、施工现场、铁路上或徒步行走时,您应取下耳机或调整音量以确保可以听到周围的环境,包括警报和警告信号。
10. 请遵守所在地区或国家的相关规定,驾车时按照要求使用本产品。
11. 本产品含有磁性材料,使用或存放产品时,请远离具有磁场或强电场的电器,如微波炉、电冰箱等。
12. 请勿在温度-0°C~45°C的环境中使用本产品。当环境温度低于-5°C时,电池性能会受到限制。
13. 有明文规定禁止使用无线设备的场所,请勿使用本产品,否则会干扰其它设备或导致其它危险。
14. 靠近医疗及工业设备或靠近飞机之前,请咨询当地工作人员能否使用。
15. 对本产品清洁和维护前,请停止使用本产品,关闭所有应用,并断开与其它设备的所有连接或线缆。
16. 请根据本地法令,正确处置废弃电子产品,不可将电子电气设备、部件、电池与其它生活垃圾一起丢弃。

**警告**

1. 请遵守本说明书的内容进行使用,避免产品因错误操作损坏。  
2. 本产品是玩具,12岁以下儿童须在成年人监护下使用。  
3. 请勿用产品附件浸入任何液体或用热水冲洗产品,否则导致火灾或触电危险。  
4. 请勿将产品放置在太阳直射或者温度高的地方,高温会缩短电子部件的使用寿命,损坏电池,使某些塑料部件变形。  
5. 请勿在完全的环境下方充电,在给充电仓充电时,电量充满后请尽快将充电线拔出,避免长时间充电对电池造成损坏。充电仓的充电方式为Type-C接口。  
6. 本产品内置不可拆卸的可充电锂电池,重复对耳机进行充电和放电会随时时间推移而导致电池性能下降,这对于所有可以重复充电电池来说是正常现象。  
7. 本产品含有锂电池,如佩戴时感到皮肤不适,请停止佩戴并咨询医生。  
8. 在蓝牙连接本产品使用时,请将耳机声音调至合适音量大小,以免长期在大音量状态下对听力造成损伤。  
9. 如果您在从事需要集中注意力的活动时使用本产品,应注意您自身和他人的安全,例如驾车或骑自行车时,在道路、施工现场、铁路上或徒步行走时,您应取下耳机或调整音量以确保可以听到周围的环境,包括警报和警告信号。  
10. 请遵守所在地区或国家的相关规定,驾车时按照要求使用本产品。  
11. 本产品含有磁性材料,使用或存放产品时,请远离具有磁场或强电场的电器,如微波炉、电冰箱等。  
12. 请勿在温度-0°C~45°C的环境中使用本产品。当环境温度低于-5°C时,电池性能会受到限制。  
13. 有明文规定禁止使用无线设备的场所,请勿使用本产品,否则会干扰其它设备或导致其它危险。  
14. 靠近医疗及工业设备或靠近飞机之前,请咨询当地工作人员能否使用。  
15. 对本产品清洁和维护前,请停止使用本产品,关闭所有应用,并断开与其它设备的所有连接或线缆。  
16. 请根据本地法令,正确处置废弃电子产品,不可将电子电气设备、部件、电池与其它生活垃圾一起丢弃。

**警告**

1. 请遵守本说明书的内容进行使用,避免产品因错误操作损坏。  
2. 本产品是玩具,12岁以下儿童须在成年人监护下使用。  
3. 请勿用产品附件浸入任何液体或用热水冲洗产品,否则导致火灾或触电危险。  
4. 请勿将产品放置在太阳直射或者温度高的地方,高温会缩短电子部件的使用寿命,损坏电池,使某些塑料部件变形。  
5. 请勿在完全的环境下方充电,在给充电仓充电时,电量充满后请尽快将充电线拔出,避免长时间充电对电池造成损坏。充电仓的充电方式为Type-C接口。  
6. 本产品内置不可拆卸的可充电锂电池,重复对耳机进行充电和放电会随时时间推移而导致电池性能下降,这对于所有可以重复充电电池来说是正常现象。  
7. 本产品含有锂电池,如佩戴时感到皮肤不适,请停止佩戴并咨询医生。  
8. 在蓝牙连接本产品使用时,请将耳机声音调至合适音量大小,以免长期在大音量状态下对听力造成损伤。  
9. 如果您在从事需要集中注意力的活动时使用本产品,应注意您自身和他人的安全,例如驾车或骑自行车时,在道路、施工现场、铁路上或徒步行走时,您应取下耳机或调整音量以确保可以听到周围的环境,包括警报和警告信号。  
10. 请遵守所在地区或国家的相关规定,驾车时按照要求使用本产品。  
11. 本产品含有磁性材料,使用或存放产品时,请远离具有磁场或强电场的电器,如微波炉、电冰箱等。  
12. 请勿在温度-0°C~45°C的环境中使用本产品。当环境温度低于-5°C时,电池性能会受到限制。  
13. 有明文规定禁止使用无线设备的场所,请勿使用本产品,否则会干扰其它设备或导致其它危险。  
14. 靠近医疗及工业设备或靠近飞机之前,请咨询当地工作人员能否使用。  
15. 对本产品清洁和维护前,请停止使用本产品,关闭所有应用,并断开与其它设备的所有连接或线缆。  
16. 请根据本地法令,正确处置废弃电子产品,不可将电子电气设备、部件、电池与其它生活垃圾一起丢弃。

产地:中国·广东

**合格证**

QUALIFIED CERTIFICATE

型号 (MODEL): M108  
检验员 (INSPECTOR): QC  
生产日期 (MANUFACTURE DATE): 2023-01-01  
有效期 (VALIDITY): 2024-01-01

**合格证**

QUALIFIED CERTIFICATE

型号 (MODEL): M108  
检验员 (INSPECTOR): QC  
生产日期 (MANUFACTURE DATE): 2023-01-01  
有效期 (VALIDITY): 2024-01-01

产地:中国·广东

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.