

中文

使用说明书

M111

TWS 蓝牙耳机

产品结构图



包装清单

耳机x2pcs
充电仓1pcs
Type-C充电线 x1pcs
说明书x1pcs

产品操作介绍

功能	操作	指示灯	提示音	提示音
配对名	M111			
开机	按住左耳仓内侧约2秒, 或按住耳机底部触控键约2秒	红蓝灯交替闪烁	Power on/开机	
关机	耳机放入充电仓后自动关机/耳机开机状态下, 长按触键约3秒关机	红灯亮1秒	Power off/关机	
左右耳机配对	左右耳机开机后自动进入配对模式	左右耳配对成功后, 主耳机显示灯交替闪烁, 蓝灯灭	Connected/连接成功 Connected/Pairing	
切换中英文	按住触键约2秒, 进行长按触键, 出厂默认英文			English/中文
智能设备连接	当双耳同时开机后, 自动进入待连接状态, 此时双耳会显示连接的蓝牙设备名称, 此时长按触键约2秒, 蓝灯灭, 蓝灯亮1秒, M111进行连接, 耳机与智能设备连接成功后, 有提示音, 耳机指示灯熄灭	左右耳灯交替闪烁	Connected/连接成功	
切换音乐/游戏模式	连接设备状态下, 长按右耳触键约4秒, 进行模式切换, 出厂默认音乐模式			音乐/游戏模式 MUSIC/GAME MODE
播放/暂停	音乐播放状态下, 双击右耳/右耳触键			
上一曲	音乐播放状态下, 长按左耳触键三次			
下一曲	音乐播放状态下, 长按右耳触键三次			
增加音量	音乐播放状态下, 双击右耳触键			最大音量限制(0)
减小音量	音乐播放状态下, 双击左耳触键			
语音助手	连接状态下, 长按左耳触键约2秒, 放开			叮咚
接听来电	来电状态下, 双击左耳触键			手机铃声提示音
拒接来电	来电状态下, 长按左耳触键约2秒			
挂断电话	通话状态下, 双击左耳触键			

简单故障排查

故障	原因	解决方法
不开机	耳机电量不足	对耳机进行充电
耳机闪红灯	耳机电量不足	对耳机进行充电
充电屏显示	耳机没有放好	调整耳机放置的位置
自动关机	自动电量不足	对耳机进行充电
耳机杂音	音量太大或者环境太嘈杂	调节音量或更换环境
耳机有杂音	外界干扰严重或距离手机太远	更换地点或靠近手机
对方声量小	耳机佩戴不正确或音量太小	调节耳机音量或音量大小
信号断续	外界干扰严重或距离手机太远	选择无干扰的环境或靠近手机

安全指引

1. 初次使用本产品前, 请先充满电再使用。
2. 本产品请远离儿童、火源、热源、冷冻源、水源及化学品。
3. 请勿长时间使用大音量收听, 以免对听力造成不良影响。
4. 本产品不是玩具, 12岁以下儿童须在成年人监护下使用。
5. 请勿将产品放入水下冲洗或用湿巾擦拭产品, 否则导致火灾或触电危险。
6. 请勿将产品放置在太阳直射或者温度高的地方, 高温会缩短电子元件的使用寿命, 损坏电池, 使某些塑料部件变形。
7. 请勿将产品放在尘土多、温度和湿度过高或过低的地方保存。
8. 请勿将磁条卡(例如银行卡、公交卡等)长期接触本产品, 否则可能导致磁条卡被磁场损坏。
9. 请勿在产品上施加极大的压力, 或摇晃、摔打、震动产品, 以防产品损坏。
10. 请勿在靠近热源处使用本产品, 如散热器、热风调节扇、炉灶或其他产生热量的仪器。
11. 请勿在暴雨天气下使用设备, 雷暴可能导致设备出现故障, 增大雷击的风险。
12. 请勿将本产品及其配件清洗或受潮, 直接运动或出汗较多时使用本产品, 防止液体渗透到产品内部损坏本产品。
13. 产品属于易碎物理电池, 不可更换, 请勿丢弃或置于火中, 以免爆炸, 起火等危险发生。
14. 请遵守所在地区或国家的相关规定, 驾车时按照要求使用本产品。
15. 本产品含有磁性材料, 使用或安放产品时, 请远离具有强磁场或强电场的电器, 如微波炉、电冰箱等。



产地: 中国·广东


英语

INSTRUCTION MANUAL

M111

TWS Bluetooth headphones

Product structure diagram

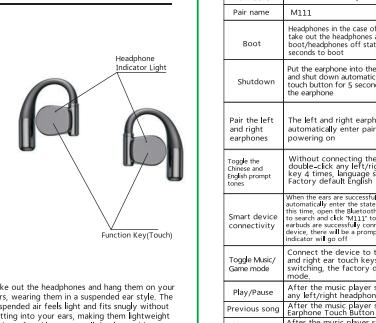

Packing list

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Introduction to product operation

function	operate	Light	Tone
Pair name	M111		
Boot	Headphones in the case of charging bin, put out the headphones automatically, headphones in the state, long touch Key 3 seconds to boot	Red and blue lights flash alternately	Power on/开机
Shutdown	Put the earphone into the charging bin, and touch the touch key, long touch for 3 seconds to shut down the earphone	The red light stays on for 1 second	Power off/关机
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	After successful pairing, the lights on the earphones will turn on, the indicator light of the earphone will turn on, the indicator light of the earphone will turn on	Connected/Pairing successfully
Toggle Chinese/English prompt voice	Without connecting the smart device, double-click any left/right earphone touch key, then touch the factory prompt voice		English/中文
When the ears are successfully paired, it will automatically enter the state of the smart device to search and connect M111 to connect, after the connection is successful, there will be a prompt tone, and the headset will be connected to the smart device			
Connect the device to the state of the left and right ear touch key in a single mode			
Play/Pause	At the music player starts, double-click any left/right earphone touch button		
Previous song	After the music player starts, click the left earphone touch key three times		
Next song	After the music player starts, double-click the right earphone touch button three times		
Increase the volume	After the music player starts, click the touch button on the right earhead		Maximum volume indicator (knock)
Reduce the volume	After the music player starts, click the touch button on the left earhead		
Correct the state, long press the left earphone touch key, then release, release, release to wear the voice assistant			Ding Dong
Answer an incoming call	When the call is incoming, double-click any left or right earphone function key		Ringtone of your phone

Simple troubleshooting

fault	cause	resolution
Don't turn on	The headphones are low on battery	Charge the headphones
Headphones flash red light	The headphones are low on battery	Charge the headphones
Charging is slow	The headphones were not put away	Adjust the position where the headphones are placed
Automatic power off	Automatic low battery	Charge the headphones
The headphones have an echo	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment
The other party's voice is quiet	The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume
The signal is intermittent	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone



产地: 中国·广东

Headset parameters

1. Product name: M111	10. Headphone battery capacity: 3.7V/40mAh (polymer battery)
2. Bluetooth version: Bluetooth 5.49	11. Charging bin battery capacity: 3.7V/500mAh (polymer battery)
3. Support mode: AAC/SC	12. Charging bin battery capacity: 3.7V/500mAh (polymer battery)
4. Bluetooth transmission distance: 10m	13. Charging interface: Type-C
5. Carrier frequency: 2.402GHz-2.480GHz	14. Headset use time: 5-8 hours
6. Frequency range: 20Hz-20kHz	15. Headset use time: 1.5-2 hours
7. Headset size: 0.16mm	16. Charging bin standby time: >3000 hours
8. Headset weight: 12.5g ± 3g	17. Charging bin use time: 10-12 hours
9. Headset impedance: 32Ω ± 15%	18. Shutdown standby time: >3000 hours

Safety guidelines

1. Please follow the content of this manual to avoid damage to the product due to incorrect operation.
2. The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
3. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer.
4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable as soon as possible after the power is fully charged to avoid damage to the device caused by long-term charging.
5. This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the battery will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.
6. This product comes with a healthy battery, if it has not been used for a long time, please charge it.
7. If you feel skin discomfort when wearing it due to individual differences, please stop wearing it and consult a doctor.
8. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
9. Do not apply greater pressure to this product by a fast charging charger that supports high voltage.
10. Do not contact the magnetic stripe card with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
11. Do not use the device in rainy weather, thunderstorms may cause the device to malfunction and increase the risk of electric shock.
12. When the ambient temperature is below -5°C, battery performance is limited.
13. Do not use this product in places where it is expressly prohibited to use wireless equipment, otherwise it will interfere with other electronic equipment or cause other dangers.
14. Do not clean and maintain this product with water.
15. Before cleaning and maintaining this product, stop using this product, turn off all applications, disconnect all connections or cables to other equipment.
16. Please dispose of waste electronic products properly in accordance with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries and other electronic waste.
17. Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
18. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
19. Do not immerse the product or accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock hazard.
20. Do not use this product in places with high temperature, high humidity, high temperature, high pressure or strong magnetic fields, such as radiators, hot air regulators, stoves, or other instruments that generate heat.
21. Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
22. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
23. Do not immerse the product or accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock hazard.
24. Do not use this product while engaging in activities that require concentration, such as driving or cycling, on roads, construction sites, railways, or walking. You should remove your headphones when adjusting the volume to ensure that you can hear the sounds around you, including alarms and warning signals.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.