

中文

INSTRUCTION MANUAL

M115


OWS 蓝牙耳机

使用说明书

M115

OWS 蓝牙耳机

Product structure diagram

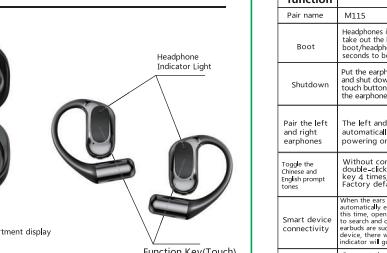

Packing list

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Introduction to product operation

function	operate	Light	Tone
Pair name			
M115			
Boot	Headphones in the case of charging bin, the earbuds automatically boot headphones in state, Long Touch Key 3 seconds to boot	Red and blue lights flash alternately	Power on/开机
Shutdown	Put the earbuds into the charging bin and close the lid automatically, press the power button for 3 seconds to shut down the earbuds	The red light stays on for 1 second before turning off	Power off/关机
Pair the left and right earphones	After successful pairing, the lights on the main headphones and the earbuds will light up, the red light of the earbuds will be on	Connected/配对成功	
Toggle the Chinese and English prompt voice	Without connecting the smart device, double-click any left/right earphone touch button, Factory factory key		English/中文
Toggle Music/ Game mode	Connect the device to the state of the left and right ear touch key 3 times in a row, the music mode		音乐/游戏模式 MUSIC/GAME MODE
Play/Pause	After the music player starts, double-click any left/right earphone touch button		
Previous song	After the music player starts, click the left earphone touch button three times		
Next song	After the music player starts, double-click the right earphone touch button three times		
Increase the volume	When the music player starts, click the touch button on the right earhead		Maximum volume indicator (knock)
Reduce the volume	After the music player starts, click the touch button on the left headphones		
Voice assistant	Correct the state, long press the left earphone touch button for 3 seconds, release, then you will wake up the voice assistant		Ding Dong
Answer an incoming call	When the call is incoming, double-click any left or right earphone function key		Ringtone of your phone

产品结构图



包装清单

耳机x2pcs
充电仓x1pcs
Type-C充电线 x1pcs
说明书x1pcs

产品操作介绍

功能	操作	指示灯	提示音	power off/关机
配对名	M115			
开机	耳机在充电仓内自动启动, 耳机自动开机/关机状态下, 长按触键3秒开机	红蓝灯交替闪烁	Power on/开机	
关机	耳机放入充电仓自动关闭耳机/开机状态下, 长按触键3秒关机	红灯亮1秒后熄灭	Power off/关机	
左右耳机配对	左右耳机成功后, 主耳机显示交响闪烁, 副耳机显示熄灭	Connected/配对成功		
切换中英文提示音	双击任意左/右耳机触键操作, 出现默认英文	/	English/中文	
智能设备连接	当双机同时成功后, 双机自动连接状态, 此时双机设备连接指示灯显示为常亮状态, M115进行连接, 耳机与智能设备连接成功后, 有提示音, 耳机指示灯熄灭	左右耳灯常亮	Connected/连接成功	
切换音乐/游戏模式	连接设备状态下, 双击右耳机触键4次, 进行模式切换, 出现默认音乐模式	/	音乐/游戏模式 MUSIC/GAME MODE	
播放/暂停	音乐播放状态下, 双击右耳机触键	/	/	
上一曲	音乐播放状态下, 连击左耳机触键三次	/	/	
下一曲	音乐播放状态下, 连击右耳机触键三次	/	/	
增加音量	音乐播放状态下, 双击右耳机触键	/	最大音量指示	
减小音量	音乐播放状态下, 单击左耳机触键	/	/	
语音助手	连接状态下, 长按左耳机触键2秒放开, 可启动语音助手	/	叮咚	
接听来电	来电状态下, 双击任意左/右耳机触键	/	手机铃声提示音	
拒接来电	来电状态下, 长按任意左/右耳机触键2秒	/	/	
挂断电话	通话状态下, 双击任意左/右耳机触键	/	/	

功能	操作	指示灯	提示音	power off/关机
清除历史记录	当真的电量低于3.3V, 有报警提示, 直到耳灯常亮	红灯亮5秒后一次	叮咚	
断开连接	超出有效连接范围, 或手动操作断开操作, 主耳机显示交响闪烁, 副耳机显示熄灭	Disconnected/断开连接		
自动回连	开机或断连后, 在有效范围内, 耳机会自动回连, 一次连接过后的智能设备	红灯常亮	connected/连接成功	
耳机充电	耳机回连状态在开机或关机开始充电, 耳机灯常亮, 充电后灯熄灭			
旁路充电	耳机放入充电仓中, 充电给耳机旁路充电并激活屏幕显示当前电量和耳机的充电状态, 此时双机设备连接指示灯显示为常亮状态, M115进行连接, 耳机与智能设备连接成功后, 有提示音, 耳机指示灯熄灭			
充电仓充电	当耳机仓连接到电源时, 耳机仓连接线标准输出5V电压的快充适配器进行充电, 充电仓屏幕亮起并闪烁电量			
充电仓充电	充电仓充满后屏幕显示常亮数字 100			
备注:	当蓝牙耳机连接智能设备, 切换游戏模式时, 耳机的使用时长和连接距离会有缩短			

耳机参数

1.产品名称: M115	10.续航锁定功率: 5mW
2.蓝牙版本: Bluetooth 5.49	11.耳机电池容量: 3.7V/40mAh (聚合物电池)
3.支持模式: AAC/SC	12.充电仓电池容量: 3.7V/300mAh (聚合物电池)
4.蓝牙传输距离: 10m	13.充电接口: USB Type-C
5.载波频率: 2.402GHz-2.480GHz	14.工作温度: -4~+50°C
6.待机时间: 20H~200H	15.待机时间: <1.5小时
7.充电尺寸: 6.1*3.3*1.3mm	16.充电仓充满时间: <1.5小时
8.耳机灵敏度: 100dB ± 3dB	17.充电仓给耳机充电次数: 约3-4次
9.耳机阻抗: 32Ω ± 15%	18.关机待机时间: ≈3000小时

简单故障排查

故障	原因	解决方法
不开机	耳机电量不足	对耳机进行充电
耳机闪灯	耳机电量不足	对耳机进行充电
充电仓闪灯	耳机没有放好	调整耳机放置的位置
自动关机	自动电量不足	对耳机进行充电
耳机杂音	音量太大或者环境太嘈杂	调节音量或更换环境
耳机杂音	外界干扰严重或距离手机太远	更换地点或靠近手机
对方声音小	耳机佩戴不正确或音量太小	调节耳机佩戴音量大小
对方声音小	外界干扰严重或距离手机太远	选择无干扰的环境或靠近手机

安全指引

- 1.初次使用本产品前, 请先充满电再使用。
- 2.本产品请远离儿童、火源、热源、冷冻源、水源及化学品。
- 3.请勿长时间使用大音量收听, 以免对听力造成不良影响。
- 4.本产品不是玩具, 12岁以下儿童须在成年人监护下使用。
- 5.请勿将产品放入水或液体中冲洗产品, 否则导致火灾或触电危险。
- 6.请勿将产品放置在太阳直射或者温度高的地方, 高温会缩短电子元件的使用寿命, 损坏电池, 使某些塑料部件变形。
- 7.请勿将产品放在尘土、温度过高或过低的地方保存。
- 8.请勿将磁条卡(例如银行卡、公交卡等)长期接触本产品, 否则可能导致磁条卡被磁场损坏。
- 9.请勿在产品上施加极大的压力, 或摇晃、摔打、震动产品, 以防产品损坏。
- 10.请勿在靠近水源处使用本产品, 如散热器、热风调节扇、炉灶或其他产生热量的仪器。
- 11.请勿在暴雨天气下使用设备, 雷暴可能导致设备出现故障, 增大雷击的风险。
- 12.请勿将本产品放在太阳直射或过热的地方。
- 13.请勿将本产品放在尘土中使用, 如充电器、插座灯、麦克风等。
- 14.如果在从事需要集中注意力的活动时使用本产品, 应注意您自身和他人的安全, 例如驾车或骑自行车时, 在道路、施工现场、铁路上或徒步行走时, 您应取下耳机或调整音量以确保可以听到周围的声音, 包括警报和警告信号。
- 15.请遵守当地关于电子产品的规定, 驾车时按照要求使用本产品。
- 16.请遵守所在地区或国家的相关规定, 驾车时按照要求使用本产品。
- 17.本产品含有磁性材料, 使用或存放产品时, 请远离具有磁场或强电的电器, 如微波炉、电冰箱等。



产地: 中国·广东


英语

INSTRUCTION MANUAL

M115

OWS Bluetooth headphones

Product structure diagram

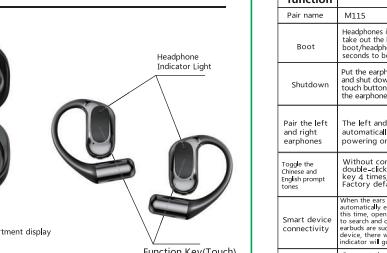

Packing list

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Introduction to product operation

function	operate	Light	Tone	power off/关机
Hang up	While on the phone, double-click the touch button on any headset	/	/	
Clear the pairing history	While on the phone, double-click the touch button on any headset	/	/	power off/关机
Shutdown	Put the earbuds into the charging bin and close the lid automatically, press the power button for 3 seconds to shut down the earbuds	The red light stays on for 1 second before turning off		
Pair the left and right earphones	After successful pairing, the lights on the main headphones and the earbuds will light up, the red light of the earbuds will be on	Connected/配对成功		
Toggle the Chinese and English prompt voice	Without connecting the smart device, double-click any left/right earphone touch button, Factory factory key	/	English/中文	
Toggle Music/ Game mode	Connect the device to the state of the left and right ear touch key 3 times in a row, the music mode		音乐/游戏模式 MUSIC/GAME MODE	
Play/Pause	After the music player starts, double-click any left/right earphone touch button	/	/	
Previous song	After the music player starts, click the left earphone touch button three times	/	/	
Next song	After the music player starts, double-click the right earphone touch button three times	/	/	
Increase the volume	When the music player starts, click the touch button on the right earhead		Maximum volume indicator (knock)	
Reduce the volume	After the music player starts, click the touch button on the left headphones	/	/	
Voice assistant	Correct the state, long press the left earphone touch button		Ding Dong	
Answer an incoming call	When the call is incoming, double-click any left or right earphone function key	/	Ringtone of your phone	

功能	操作	指示灯	提示音	power off/关机
Reject an incoming call	When the call is incoming, press and hold the function button of any left or right earphone for 2 seconds	/	/	
Hang up	While on the phone, double-click the touch button on any headset	/	/	
Clear the pairing history	While on the phone, double-click the touch button on any headset	/	/	power off/关机
Shutdown	Put the earbuds into the charging bin and close the lid automatically, press the power button for 3 seconds to shut down the earbuds	The red light stays on for 1 second before turning off		
Pair the left and right earphones	After successful pairing, the lights on the main headphones and the earbuds will light up, the red light of the earbuds will be on	Connected/配对成功		
Toggle the Chinese and English prompt voice	Without connecting the smart device, double-click any left/right earphone touch button, Factory factory key	/	English/中文	
Toggle Music/ Game mode	Connect the device to the state of the left and right ear touch key 3 times in a row, the music mode		音乐/游戏模式 MUSIC/GAME MODE	
Play/Pause	After the music player starts, double-click any left/right earphone touch button	/	/	
Previous song	After the music player starts, click the left earphone touch button three times	/	/	
Next song	After the music player starts, double-click the right earphone touch button three times	/	/	
Increase the volume	When the music player starts, click the touch button on the right earhead		Maximum volume indicator (knock)	
Reduce the volume	After the music player starts, click the touch button on the left headphones	/	/	
Voice assistant	Correct the state, long press the left earphone touch button		Ding Dong	
Answer an incoming call	When the call is incoming, double-click any left or right earphone function key	/	Ringtone of your phone	

耳机参数

1.产品名称: M115	10.续航锁定功率: 5mW
2.蓝牙版本: Bluetooth 5.49	11.耳机电池容量: 3.7V/40mAh (聚合物电池)
3.支持模式: AAC/SC	12.充电仓电池容量: 3.7V/300mAh (聚合物电池)
4.蓝牙传输距离: 10	

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.