

AI 使用说明书

OWS 蓝牙耳机

耳机x2pcs
充电仓x1pcs
Type-C充电线 x1pcs
说明书x1pcs

将耳机取出悬挂在耳朵上，悬浮挂耳式佩带，悬浮空气感轻盈贴合不入耳，全天候轻盈舒适久戴不累耳。

打开“Wearfit Pro”APP，点击右上角选择进入耳机设备页面，点击主页“白噪音”卡片，进入功能页面，点击音频卡进入播放页面，点击播放按钮可播放/暂停音频，点击“单次播放”按钮可切换播放模式。

成功/失败	有提示音,且耳机电灯熄灭		
切换音乐/游戏模式	连续按设备上方,连续左右耳机电按钮4次,进行模式切换,出现音乐/游戏模式。	/	音乐/游戏模式 MUSIC/GAME MODE
播放/暂停	音乐播放按钮启动,双击任意左/右耳机电按钮	/	
上一曲	音乐播放按钮启动,单击左耳机电按钮三次	/	
下一曲	音乐播放按钮启动,单击右耳机电按钮三次	/	
增加音量	音乐播放按钮启动,单击右耳机电按钮	/	最大音量提示(蜂)
减小音量	音乐播放按钮启动,单击左耳机电按钮	/	
蓝牙接听	连接状态下,长按右耳机电按钮2秒,即可取消蓝牙接听	/	叮铃
接听来电	来电状态下,双击任意左/右耳机电按钮	/	手机铃声提示音
拒接来电	来电状态下,长按任意左/右耳机电按钮2秒	/	
接听电话	来电状态下,双击任意左/右耳机电按钮	/	

1. 产品名称: M122
2. 蓝牙版本: Bluetooth 5.49
3. 支持模式: AAC/SBC
4. 蓝牙传输距离: 10m
5. 载波频率: 2.402GHz~2.480GHz
6. 频响范围: 20Hz~20KHz
7. 喇叭尺寸: ϕ 10mm
8. 喇叭灵敏度: 129dB \pm 3dB
9. 喇叭阻抗: 16 Ω \pm 15%
10. 额定功率: 5W
11. 耳机电池容量: 3.7V/40mAh (聚合物电池)
12. 充电电池容量: 3.7V/500mAh (聚合物电池)
13. 充电接口: USB Type-C
14. 耳机使用时间: \approx 6-8小时
15. 耳机单次充电时间: \approx 1.5小时
16. 充满电充电时间: \approx 1.5小时
17. 充电仓给耳机充电次数: \approx 5-6次
18. 关机待机电时: \approx 3000h+

故障	原因	解决方法
不开机	耳机电量不足	对耳机进行充电
耳机内灯打	耳机电量不足	对耳机进行充电
充电无提示	耳机没有放好	调整耳机放置的位置
自动关机	自动电量不足	对耳机进行充电
耳机有回音	音量太大或者环境太嘈杂	调低音量或更换环境
耳机有杂音	外界干扰严重或距离手机太远	更换地点或靠近手机
对方声音小	耳机佩戴不正确或音量太小	对耳机佩戴或音量大小
信号断续	外界干扰严重或距离手机太远	选择干扰少的环境或靠近手机

1.初次使用本产品前,请先充满电再使用。

1. 初次使用本产品前, 请先充电再使用。
2. 产品不是玩具, 12岁以下儿童应在成年人监护下使用。
3. 请勿通过过压(经国家认证的5V/1A充电器)、避免交叉高压的快充充电器对产品进行充电。
4. 请在安全的环境下充电, 在给充电器充电时, 避免充电器靠近易燃物, 避免充电器在易燃物上充电, 避免充电器在易燃物附近充电, 避免充电器在易燃物附近使用。
5. 本产品为锂离子电池, 锂离子电池具有记忆效应, 避免长时间满电存放和放电会随时间造成产品容量下降。
6. 锂电池长期存放, 对于没有可以可靠充放电电压记录与记录设备, 长期存放产品会降低电压, 长时间未使用, 至少一个月充一次电。
7. 因个体差异原因, 如佩戴时感到不适, 请停止佩戴并咨询医生。
8. 在恶劣条件下使用产品时, 请避免大声音避免造成听力损伤, 以长期保持良好状态下听力造成损伤。
9. 如果需要在非常嘈杂环境中注意力的活动时使用本产品, 应注意自身和他人的安全, 例如在骑行自行车时, 在商场、施工场所、铁路上进行步行时, 您应下车或佩戴耳机或佩戴以听响应的设备。
10. 请遵守所在地或国家或地区的有关法规, 并严格按照要求使用本产品。
11. 本产品含有磁性材料, 使用或存放产品时, 请远离具有强磁场或强电磁场的电器, 如微波炉、电磁炉等。

警告

- 请遵循本说明书的内容进行使用，避免产品因错误操作而损坏。
2. 产品请远离儿童、老人、热源、冷源、冷冻源及化学品。
3. 请勿长时间使用大功率附件，以免对灯罩造成不良损害。
4. 请勿将本产品放置于任何液体或可能用水冲洗之处，否则会导致火灾或触电危险。
5. 请勿将本产品放置在高太阳辐射或温度高的地方。高温会缩短电子部件的使用寿命、损坏电池、使某些部件变形。
6. 请勿将本产品放在过高、过湿和/或过高的地方使用。
7. 请勿将本产品存放在潮湿、干燥或/或长期接触水的地方，否则可能导致产品被腐蚀。
8. 请勿在本产品上施加过大的压力、拉扯、挤压、弯曲、灼伤等，以防产品损坏。
9. 请勿靠近热源使用本产品，如壁炉、电暖气、暖气片等，以免产生火灾的危险。
10. 请勿将本产品与灯罩、灯罩附件、遥控器、充电器等一起存放。
11. 请勿在暴雨天气下使用该产品。雷电天气可能导致设备出现损坏、增大火灾的危险。
12. 请勿避免本产品及其附件用淋或受潮，且避免运动或进行长时间使用本产品，防止液体渗透到内部损坏产品。
13. 本产品属于内置合理埋地产品，不可更改，请勿将其造成火灾中，以免爆炸、起火等危险发生。
14. 如因消费者违反上述警告而因不当使用所造成的个人及财产损失概由自行承担一切，需本公司不承担任何法律责任。



AI

INSTRUCTION MANUAL

OWS Bluetooth earphones

Figure 1 illustrates the components of the earbuds. The left image shows the earbuds in their charging case, with labels for the 'Charging interface' and the 'Pilot lamp'. The right image shows two earbuds, with labels for the 'Headphone Indicator Light' and the 'Function Key (Touch)'.

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Open the "Wearfit Pro" app, click the top-right corner to enter the headphone device page, tap the "White Noise" card on the homepage to access the feature page, tap the audio card to enter the playback page, click the play button to play/pause the audio, and tap the "Single Play" button to switch the playback mode.

function	operate	Light	Tone
Pair name	M122		
Boot	headphones in the case of charging but shut the headphones automatically boot headphones off state, Long key 3 seconds to boot	White light flashing	Power on/开机
Shutdown	Put the earphone into the charging box and shut down automatically the touch button for 5 seconds to shut down the earphone	The white light stays on for 3 seconds before turning off	Power off/关机
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	After successful pairing of the left and right ear, the white light of the main earphone flashes and the light of the auxiliary ear goes out	Connect successfully/配对成功
Toggle the Chinese and English prompt tones	Without connecting the smart device, double-click any left/right ear touch key 4 times to toggle language Factory default English	/	English/中文
Smart device connectivity	When the ear is successfully paired, you will enter the state to be connected at the same time. When the earphone is in search and click "H22" to connect, after the earphone is connected to the smart device, there will be a prompt tone, and the headset indicator will go on	The lights in the left and right ear are turned off	Connected successfully/连接成功
Toggle Mode/ Game Mode	Connect the device to the state of the left right touch button to enter a game mode switching, the factory default music mode	/	音乐/游戏模式 Music/ Game Mode
Play/Pause	After the music player starts, double-click any left/right headphone touch button	/	/
Previous song	After the music player starts, click the left earphone touch button three times	/	/
Next song	After the music player starts, double-click the right earphone touch button three times	/	/
Increase the volume	After the music player starts, click the touch button on the right headset	/	Maximum volume indicated (knock)
Reduce the volume	After the music player starts, click the touch button on the left headset	/	/
Voice assistant	After the music player starts, double-click the left earphone touch button 2 seconds, to return to the voice assistant state, voice assistant	/	Ding Dong
Answer an incoming call	When the call is incoming, double-click any left or right earphone function key	/	Ringtone of your phone

Product name: M122	10. Horn rated power: 5mW
Bluetooth version: Bluetooth 5.49	11. Headphone battery capacity: 3.7V/40mAh (polymer battery)
Support mode: AAC/SBC	12. Charging bin battery capacity: 3.7V/500mAh (polymer battery)
Bluetooth transmission distance: 10m	13. Charging interface: USB Type-C
Carrier frequency: 2.402GHz-2.480GHz	14. Headset use time: >6-8 hours
Frequency response range: 20Hz-20KHz	15. Charging single time: >1.5 hours
Horn size: Φ10mm	16. Charging time: >1.5 hours
Horn sensitivity: 129dB±3dB	17. Charge the headset: About 5-6 times
Horn impedance: 16Ω±15%	18. Shutdown standby time: >3000 hours

fault	cause	resolution
Doesn't turn on	The headphones are low on battery	Charge the headphones
Headphones flash white light	The headphones are low on battery	Charge the headphones
Charging is silent	The headphones were not put away	Adjust the position where the headphones are placed
Automatic power off	Automatic low battery	Charge the headphones
The headphones have an echo	The volume is too loud or the environment is too noisy	Adjust the volume or change environment
The headphones have a mumble from the headphones	Serious or lateral interference or too far away from the phone	Change the location or be close to your phone
The other party's voice is unclear	The headphones are worn incorrectly or the sound quality is poor	Adjust the headset wear or volume
The signal is intermittent	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone

Before using this product for the first time, please fully charge it before using it.

Please do not let the toy and children under the age of 12 must be used under the supervision of an adult.

Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer.

Please do not use the toy in the following situations:

- 1. Please use in a safe environment, when charging the charging case, please pull out the charging cable and connect it to the power source.
- 2. Please do not charge by long-term charging. The charging method of the charging case is the Type-C interface.

The product has a built-in non-removable rechargeable battery, and it is noted that charging and discharging of the earbuds will lead to a decrease in battery performance over time, which is a normal phenomenon.

6. This product comes with a healthy battery, if it has not been used for a long time, please charge it at least once a month.

7. When the battery is low, when wearing it due to individual differences in the ear, it may wear it and consult a doctor.

8. When the product is connected to the Bluetooth connection, please adjust the sound of the product to an appropriate volume to avoid hearing damage caused by long-term loud volume.

9. If you use this product while engaging in activities that require concentration, you should pay attention to the surrounding environment, such as driving, riding a bicycle, crossing roads, construction sites, railways, or walking. You should remove your headphones or adjust the volume to ensure that you can hear the sounds around you, including alarms and warning signals.

10. Please follow the relevant regulations of your region or country and use this product as required when driving.

11. This product contains magnetic materials, please keep away from electrical appliances with magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.

12. It is recommended to use this product in an environment with a temperature of -10°C ~ 45°C . When the ambient temperature is below -5°C , battery performance is limited.

13. Please do not use this product in the vicinity of high-voltage power lines or other electric equipment, it will interfere with other electronic equipment or cause other dangers.

14. Before approaching medical or industrial equipment or boarding a plane, please ask the local airport or airline for more information.

15. Before cleaning and maintaining this product, stop using this product, turn off all applications, and disconnect all connections or cables to other equipment.

16. Please dispose of waste electronic products properly in accordance with local laws and regulations, do not dispose of electrical and electronic equipment, parts, batteries and other household waste.

warn

- Please follow the content of this manual to avoid damage to the product due to incorrect operation.
1. Do not take the product away from children, fire, heat, refrigeration, water and chemicals.
2. Do not listen at a loud volume for a long time to avoid adverse effects on hearing.
3. Do not use the product in the rain or in any liquid, such as rain, snow, or sea water. Otherwise it will cause fire or electric shock hazard.
4. Do not place the product in the sun or in a place with high temperature. High temperature will cause the product to overheat, damage batteries, and deform certain plastic parts.
5. Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
6. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
7. Do not exert greater pressure to this product, or disassemble, bend, or shake this product to prevent damage to the product.
8. Do not touch the product with your hands or other tools, such as air conditioners, hair driers, other instruments that generate heat.
9. Do not block the openings of this product, such as charging ports, indicator lights, etc.
10. Do not use the device in rainytime weather, thunderstorms may cause the device to be damaged.
11. Do not use the device in the vicinity of fire, heat, or other high temperature objects.
12. Do not avoid using this product when this product and its accessories are exposed to rain or moisture, and when you exercise vigorously or sweat a lot, to prevent liquid from entering the product.
13. The product belongs to the built-in polymer battery, which cannot be replaced, please do not disassemble or replace the battery.
14. If the consumer violates the above warning and inappropriate use, the personal and property damage will be borne by the company, and the company will not incur any legal liability.



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.