

中文

使用说明书

M96

TWS 蓝牙耳机



产品结构图

产品操作介绍

| 功能 | 操作 | 指示灯 | 提示音 |
|-----------|--|-------------------------|-------------------------|
| 配对名 | M96 | | |
| 开机 | 目前在充电仓内佩戴时，取出耳机后开机/关机状态下自动进入自动开机/关机模式 | 白呼吸灯闪烁 | Power on/开机 |
| 关机 | 耳机放入充电仓后自动开机/关机模式下，长按触控键3秒关机 | 白灯快闪三次 | Power off/关机 |
| 左右耳机配对 | 左右耳机开机后自动进入配对模式 | 左右耳配对成功后，主耳机呼吸灯闪烁，副耳机快闪 | Connected/连接成功 |
| 切换中英文播报音 | 未设置播报语时，长按左/右耳触控键2次，进行切换 | / | English/中文 |
| 智能设备连接 | 当双耳同时开机时，自动进入待连接状态，此时双耳会自动连接到最近的蓝牙设备，此功能在未设置播报语时，长按左/右耳触控键2次，进行“M96”进行连接，耳机与智能设备连接成功后，会有提示音，且耳机指示灯快闪 | 左右耳灯光快闪 | Connected/连接成功 |
| 切换音乐/游戏模式 | 连接设备状态下，长按左/右耳触控键4次，进行模式切换，出现默认音乐模式 | / | 音乐/游戏模式 MUSIC/GAME MODE |
| 播放/暂停 | 音乐播放状态下，双击左/右耳触控键 | / | / |
| 上一曲 | 音乐播放状态下，连击左耳触控键三次 | / | / |
| 下一曲 | 音乐播放状态下，连击右耳触控键三次 | / | / |
| 增加音量 | 音乐播放状态下，单击左耳触控键 | / | 最大音量提示音 |
| 减小音量 | 音乐播放状态下，单击右耳触控键 | / | / |
| 语音助手 | 连接状态下，长按左/右耳触控键2秒放开，即可启动语音助手 | / | 叮咚 |
| 接听来电 | 来电状态下，双击左/右耳触控键 | / | 手机铃声提示音 |
| 拒接来电 | 来电状态下，长按左/右耳触控键2秒 | / | / |
| 挂断电话 | 通话状态下，双击左/右耳触控键 | / | / |

包装清单

耳机x2pcs
充电仓1pcs
Type-C充电线 x1pcs
说明书x1pcs

| | | |
|--------|--|-------------------|
| 清除配对记录 | 耳机与蓝牙设备自动连接时长达到以下情况： A. 双耳同时开机时，B. 耳机就自己蓝牙设备的连接时长不匹配时 特指提示：当单边耳机出现故障，或者无法配对时，请以以下步骤操作， 1. 需要清除历史记录 2. 当单边耳机出现故障时， 3. 重新配对 | power off/关机 |
| 电量报警 | 当单边耳机低于3.3V，会有提示，直至耳机关机 | 叮咚 |
| 断开连接 | 超出有效连接范围，或手动操作断开前断开设备 | Disconnected/断开连接 |
| 自动回连 | 开机或断开后，在有效范围内，耳机会自动回连上一次连接过的智能设备 | connected/连接成功 |
| 耳机充电 | 耳机回连到充电仓时自动开机并开始充电，耳机灯常亮，充满电后灯熄灭 | |
| 充电仓充电 | 耳机放入充电仓后自动开机并开始充电，当充电仓显示充电状态时，耳机进入待连接状态，当充电仓显示充满电状态时，最后耳机屏幕显示充满电状态 | |
| 充电仓连接 | 当耳机放入充电仓后，耳机连接到充电仓上标准输出5V电压的快充充电器进行充电，充电仓屏幕亮起并闪动表示当充电中 | |
| 备注 | 当蓝牙耳机连接智能设备，切换游戏模式时，耳机的使用时长和连接距离会有缩短 | |

简单故障排查

| 故障 | 原因 | 解决方法 |
|-------|---------------|---------------|
| 不开机 | 耳机电量不足 | 对耳机进行充电 |
| 耳机闪红灯 | 耳机电量不足 | 对耳机进行充电 |
| 充电显示 | 耳机没有放好 | 调整耳机放置的位置 |
| 自动关机 | 自动电量不足 | 对耳机进行充电 |
| 耳机杂音 | 音量太大或者环境太嘈杂 | 调节音量或更换环境 |
| 耳机杂音 | 外界干扰严重或距离手机太远 | 更换地点或靠近手机 |
| 对方声音小 | 耳机佩戴不正确或音量太小 | 调节耳机音量或音量大小 |
| 信号断续 | 外界干扰严重或距离手机太远 | 选择无干扰的环境或靠近手机 |

安全指引

1. 请遵守本说明书的内容进行使用，避免产品因错误操作损坏。
2. 本产品请远离儿童、火源、热源、冷冻源、水源及化学品。
3. 请勿长时间使用大音量收听，以免对听力造成不良影响。
4. 本产品不是玩具，12岁以下儿童须在成年人监护下使用。
5. 请勿将产品放入微波炉、洗碗机、洗衣机等电器中，否则导致火灾或触电危险。
6. 请勿将产品放置在太阳直射或者温度高的地方，高温会缩短电子元件的使用寿命、损坏电池。使某些塑料部件变形。
7. 请勿将产品放入尘土多、温度和湿度过低或过高的地方保存。
8. 请勿将磁条卡（例如银行卡、公交卡等）长期接触本产品，否则可能导致磁条卡被磁场损坏。
9. 请勿在产品上施加极大的压力、摔打、碰撞、震动产品，以防产品损坏。
10. 请勿在靠近热源处使用本产品，如散热器、热风调节扇、炉灶或其他产生热量的仪器。
11. 请勿在暴雨天气下使用设备，雷暴可能导致设备出现故障，增大雷击的风险。
12. 请勿将本产品及其配件清洗或泡水，且激烈运动或出汗较多时使用本产品，防止液体渗透到产品内部损坏本产品。
13. 请勿将产品置于易燃、易爆、易腐蚀的环境中，以免爆炸、起火等危险发生。
14. 请遵守所在地区或国家的相关规定，驾车时按照要求使用本产品。
15. 本产品含有磁性材料，使用或安放产品时，请远离具有强磁场或强电场的电器，如微波炉、电冰箱等。




产地：中国·广东

英语

INSTRUCTION MANUAL

M96

TWS Bluetooth headphones

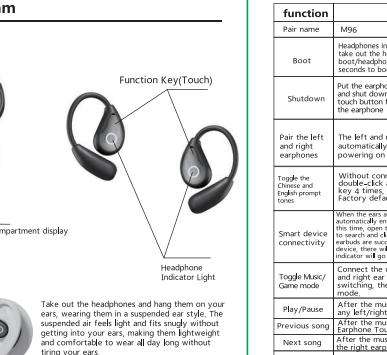

Product structure diagram

Introduction to product operation

| function | operate | Light | Tone |
|---|--|---|----------------------------------|
| Pair name | | | |
| Boot | Headphones in the case of charging bin, put out the headphones automatically, boot headphones in state, long touch Key 3 seconds to boot | The white breathing light flashes | Power on/开机 |
| Shutdown | Put the earphone into the charging bin and turn off automatically, press the power button for 3 seconds to shut down the earphone | The white light flashes three times | Power off/关机 |
| Pair the left and right earphones | The left and right earphones will automatically enter pairing mode after powering on | After the left earphone is on, the white light above the second earphone will also light up, and the second earphone will also light up | Connected/连接成功 |
| Toggle the Chinese and English prompt voice | / | / | English/中文 |
| When the ears are successfully paired, it will automatically enter the state of the smart device to search and connect, after the connection is successful, there will be a prompt tone, and the headset will automatically turn off when it is fully charged | / | / | |
| Connect the device to the state of the left and right ear touch key 3 times mode | / | / | 音乐/游戏模式 MUSIC/GAME MODE |
| At the music player starts, double-click any left/right headphones touch button | / | / | |
| Play/Pause | After the music player starts, click the left/right headphones touch button | / | |
| Previous song | After the music player starts, click the left/right headphones touch button | / | |
| Next song | After the music player starts, double-click the right earphone touch button three times | / | |
| Increase the volume | For the music player starts, click the touch button on the right earhead | / | Maximum volume indicator (knock) |
| Reduce the volume | After the music player starts, click the touch button on the left headphones | / | |
| Voice assistant | Correct the state, press the left/right headphones touch button, release, then wake up the voice assistant | / | Ding Dong |
| Answer an incoming call | When the call is incoming, double-click any left or right earphone function key | / | Ringtone of your phone |

Packing list

Headphones x2pcs
Charging case 1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

| | | | |
|-------------------------------|---|---|-------------------|
| Reject an incoming call | When the call is incoming, press and hold the function button of any left or right earphone for 2 seconds | / | / |
| Hang up | While on the phone, double-click the touch button on any headphones | / | / |
| Clear the pairing history | The white breathing light flashes | power off/关机 | |
| Low battery alarm | When the voltage of the earbuds is lower than 3.3V, there will be a prompt up to 3.3V, there will be a prompt up to 3.3V | The white light (flashes every 2 seconds) | Ding Dong |
| Disconnect | Outside the effective connection range, or manually disconnect the Bluetooth connection of the smart device | The white light of the main earphone flashes, and the secondary earphone light is off | Disconnected/断开连接 |
| Automatic reconnection | After powering on or disconnecting, the earphones will automatically reconnect to the last connected smart device within the effective distance | The lights go out | connected/连接成功 |
| Charge the headphones | The earbuds will automatically turn off and start charging when the voltage of the earbuds is always on, and the light will turn off when they are fully charged | / | |
| Charging bin charging | When the battery is too low, charge the battery with a power adapter with a standard output of 5V. The battery screen lights up and flashes to show the current battery | / | |
| Charging bin is fully charged | Charging bin charged screen display always bright number 100 | | |
| Note: | When the Bluetooth headset is connected to a smart device and the game mode is switched, the usage time and connection distance of the headset will be shortened | | |

Simple troubleshooting

| fault | cause | resolution |
|---|--|--|
| Don't turn on | The headphones are low on battery | Charge the headphones |
| The headphones flash white | The headphones are low on battery | Charge the headphones |
| Charging is silent | The headphones were not put away | Adjust the position where the headphones are placed |
| Automatic power off | Automatic low battery | Charge the headphones |
| The headphones have an echo | The environment is too noisy | Adjust the volume or change the environment |
| The signal is too far away from the phone | The signal is too far away from the phone | Choose a distraction-free environment or move closer to your phone |
| The other party's voice is quiet | The headphones are worn incorrectly or the volume is too low | Adjust the headset wear or volume |
| The signal is intermittent | Serious external interference or too far away from the phone | Choose a distraction-free environment or be close to your phone |

Safe guidelines

1. Please follow the content of this manual to avoid damage to the product due to incorrect operation.
2. The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
3. The product contains magnetic materials, please keep away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.
4. If the ambient temperature is below -5°C, battery performance is limited.
5. Do not use this product in places where it is expressly prohibited to use wireless equipment, otherwise it will interfere with other electronic equipment or cause other dangers.
6. Do not clean or maintain this product, stop using this product, turn off all applications, disconnect all connections or cables to other equipment.
7. Please dispose of waste electronic products properly in accordance with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries and other electronic waste.
8. Please use this product in a safe environment, away from children, fire, heat, refrigeration, water and chemicals.
9. Do not immerse the product or accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock hazard.
10. Do not use this product in places with high temperature, high humidity, high magnetic fields, or strong electric fields, such as radiators, hot air regulators, stoves, or other instruments that generate heat.
11. Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
12. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
13. Do not apply greater pressure to this product, or disassemble, beat, or shake this product to prevent damage to the product.
14. Do not clean or maintain this product by long-term liquid immersion.
15. This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the battery will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.
16. This product comes with a healthy battery, if it has not been used for a long time, please charge it.
17. If you feel skin discomfort when wearing it due to individual differences, please stop wearing it and consult a doctor.
18. Do not use this product in rainy weather, thunderstorms may cause the device to malfunction and increase the risk of electric shock.
19. When using the product in rainy weather, please use an appropriate volume to avoid hearing damage caused by long-term loud volume.
20. If you use this product while engaging in activities that require concentration, such as driving or cycling, you should pay attention to your own safety and the safety of others, such as when driving or cycling, on roads, construction sites, railways, or walking. You should remove your headphones when driving or cycling to ensure that you can hear the sounds around you, including alarms and warning signals.



产地：中国·广东

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

ISED Statement

- English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French:Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux CNR exempts de licence d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) Cet appareil ne doit pas causer d'interférences.
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 0cm between the radiator & your body.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.

Cet équipement doit être installé et utilisé avec une distance minimale de 0 cm entre le radiateur et votre corps.