


中文

INSTRUCTION MANUAL

M97

TWS 蓝牙耳机

Product structure diagram

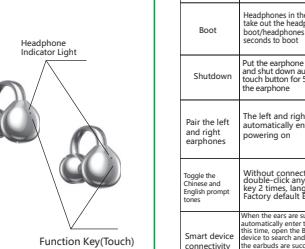

Packing list

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Introduction to product operation

function	operate	Light	Tone
Pair name			
Boot			
Shutdown			
Pair the left and right earphones			
Toggle Music/ Game mode			
Play/Pause			
Previous song			
Next song			
Increase the volume			
Reduce the volume			
Voice assisted			
Answer an incoming call			
Reject an incoming call			
Hang up			
Low battery alarm			
Disconnect			
Automatic reconnection			
Charge the headphones			
Charging bin charging the headphones			
Charging bin charging			
The charging bin is fully charged			
When the headphones are connected to the smart device and the game mode is switched			
Note: When the Bluetooth headset is connected to a smart device and the game mode is switched, the usage time and connection distance of the headset will be shortened			

Headset parameters

1. Product name: M97	10. Horn rated power: 8mW
2. Bluetooth version: Bluetooth 5.49	11. Headphone battery capacity: 3.7V/30mAh (polymer battery)
3. Support mode: AAC/SC	12. Charging bin battery capacity: 3.7V/200mAh (polymer battery)
4. Bluetooth transmission distance: 10m	13. Charging interface: USB Type-C
5. Carrier frequency: 2.402GHz~2.480GHz	14. Headset use time: ≈6~8 hours
6. Frequency response range: 20Hz~20KHz	15. Earphone use time: ≈1.5~2 hours
7. Headphone size: Ø10mm	16. Charging bin use time: ≈1.5 hours
8. Horn sensitivity: 104dB ±3dB	17. Charging bin use time: ≈2~3 hours
9. Horn impedance: 16Ω±5%	18. Shutdown standby time: ≈3000 hours


Safety guidelines

1. Before using this product for the first time, please fully charge it before using it.
2. The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
3. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer to avoid damage to the product caused by fast charging that supports high voltage.
4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable when the battery is fully charged to prevent damage to the battery caused by long-term charging. The charging method of the charging case is the Type-C interface.
5. This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the battery will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.
6. This product contains magnetic materials, please keep away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.
7. 13. Do not use this product in an environment with a temperature of -0°C~45°C. When the ambient temperature is below +5°C, battery performance is limited.
8. Do not use this product in places where it is expressly prohibited to use wireless equipment, otherwise, it will interfere with other electronic equipment or cause other dangers.
9. Do not use this product in places where it is expressly prohibited to use wireless equipment, otherwise, it will interfere with other electronic equipment or cause other dangers.
10. Please do not use this product in places with high temperature, high temperature can shorten the life of electronic components, damage batteries, and deform certain plastic parts.
11. Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
12. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
13. Do not apply greater pressure to this product, or disassemble, beat, or shake this product to prevent damage to the product.
14. The product belongs to the B class in polymer battery, which cannot be replaced, please do not disassemble the product to prevent damage and other dangers.
15. If the consumer violates the above warning and inappropriate use, the personal and property damage will be borne by the company, and the company will not incur any legal responsibility.

Warn

1. Please follow the content of this manual to avoid damage to the product due to incorrect operation.
2. Keep the product away from children, fire, heat, water, dust, and chemicals.
3. Do not listen at a loud volume for a long time to avoid adverse effects on hearing.
4. Do not immerse the product and accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock hazard.
5. Do not place the product in direct sun or in a place with high temperature. High temperature can shorten the life of electronic components, damage batteries, and deform certain plastic parts.
6. Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
7. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
8. Do not apply greater pressure to this product, or disassemble, beat, or shake this product to prevent damage to the product.
9. Do not use this product near heat sources, such as radiators, hot air regulators, stoves, or other instruments that generate heat.
10. Do not block the openings of this product, such as charging ports, indicator lights, and ventilation holes.
11. Do not use the device in rainy/stormy weather, thunderstorms may cause the device to malfunction and increase the risk of electric shock.
12. Please avoid using this product when it is exposed to rain or moisture, or when you exercise vigorously or sweat a lot, to prevent liquid from penetrating into the product and damaging this product.
13. The product belongs to the B class in polymer battery, which cannot be replaced, please do not disassemble the product to prevent damage and other dangers.
14. If the consumer violates the above warning and inappropriate use, the personal and property damage will be borne by the company, and the company will not incur any legal responsibility.

Warn

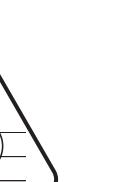

产地：中国·广东


英语

INSTRUCTION MANUAL

M97

TWS Bluetooth earphones

Product structure diagram

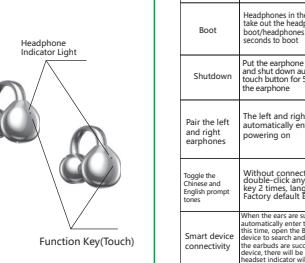

Packing list

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Introduction to product operation

function	operate	Light	Tone
Pair name			
Boot			
Shutdown			
Pair the left and right earphones			
Toggle Music/ Game mode			
Play/Pause			
Previous song			
Next song			
Increase the volume			
Reduce the volume			
Voice assisted			
Answer an incoming call			
Reject an incoming call			
Hang up			
Low battery alarm			
Disconnect			
Automatic reconnection			
Charge the headphones			
Charging bin charging the headphones			
Charging bin charging			
The charging bin is fully charged			
When the headphones are connected to the smart device and the game mode is switched			
Note: When the Bluetooth headset is connected to a smart device and the game mode is switched, the usage time and connection distance of the headset will be shortened			

Headset parameters

1. Product name: M97	10. Horn rated power: 8mW
2. Bluetooth version: Bluetooth 5.49	11. Headphone battery capacity: 3.7V/30mAh (polymer battery)
3. Support mode: AAC/SC	12. Charging bin battery capacity: 3.7V/200mAh (polymer battery)
4. Bluetooth transmission distance: 10m	13. Charging interface: USB Type-C
5. Carrier frequency: 2.402GHz~2.480GHz	14. Headset use time: ≈6~8 hours
6. Frequency response range: 20Hz~20KHz	15. Earphone use time: ≈1.5~2 hours
7. Headphone size: Ø10mm	16. Charging bin use time: ≈1.5 hours
8. Horn sensitivity: 104dB ±3dB	17. Charging bin use time: ≈2~3 hours
9. Horn impedance: 16Ω±5%	18. Shutdown standby time: ≈3000 hours

Simple troubleshooting

fault	cause	resolution
1. Doesn't turn on	The headphones are low on battery	Charge the headphones
2. The headphones flash red	The headphones are low on battery	Charge the headphones
3. Charging is slow	The headphones were not put away	Adjust the position where the headphones are placed
4. Automatic power off	The headphones are low on battery	Charge the headphones
5. The headphones have an echo	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment
6. The other party's voice is quiet	The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume
7. The signal is intermittent	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone

Simple troubleshooting

10. Please follow the relevant regulations of your region or country and use this product as required.
11. This product contains magnetic materials, please keep away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.
12. 13. Do not use this product in an environment with a temperature of -0°C~45°C. When the ambient temperature is below +5°C, battery performance is limited.
14. Do not use this product in places where it is expressly prohibited to use wireless equipment, otherwise, it will interfere with other electronic equipment or cause other dangers.
15. Before cleaning and maintaining this product, stop using this product, turn off all applications, and disconnect all connections of cables or other equipment.
16. Please dispose of waste electronic products properly in accordance with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries and other household waste.

Warn



产地：中国·广东

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.