 
 


表情时钟使用说明书

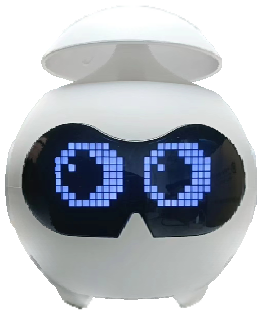

产品介绍

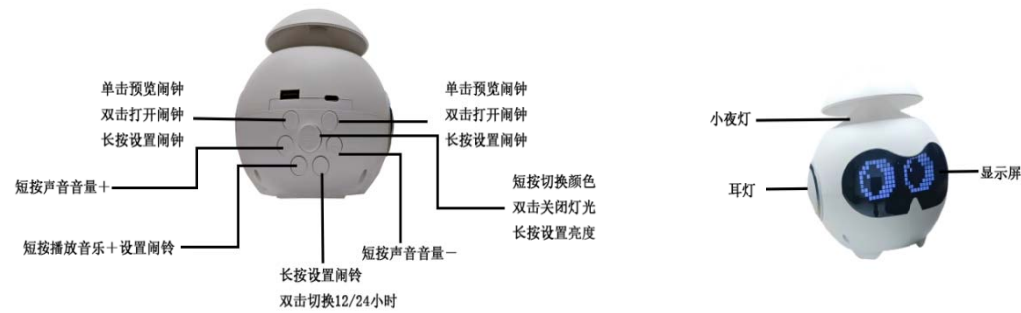

表情说明

 插入5V电源打开闹钟时 屏幕跳出转眼珠眨眼睛表情	 音量调节图标	 闹铃图标显示	 时间显示
 在显示时间时, 拍一拍它或者震动触发产品可随机切换跳出各种不同的表情后自动转到时钟显示, 间隔五秒后, 再拍一拍或震动可重复上述显示。			

产品参数

产品名称: 表情时钟
产品型号: TS-002
产品尺寸: 130mm×133mm×146mm
产品材质: ABS 塑料外观、弧形面罩
产品重量: 330g
电池容量: 1800MAH
输入电压: DC5V-2A
输出功率: 5W

使用说明

1、供电模式

产品可通过 5V-2A USB 线连接适配器或者电脑供电, 插上电源时产品进入正常工作状态, 显示屏显示眨眼表情。

2、时间设置

设置顺序: 时 -> 分 -> 退出;

长按 “” 按键, 等待显示屏幕 时 位显示闪烁, 按 “” 或 “” 对 时 位进行调节设置, 再次单击 “” 按键切换到 分 位显示闪烁, 按 “” 或 “” 对 分 位进行调节设置, 设置, 再次单击 “” 按键, 退出时钟调节设置功能, 时 位和 分 位不闪烁, 且观察屏幕上显示的时间为新设置的时间, 即设置成功。
(如若设置途中错误操作导致设置失败, 需重新按照上述方式重新进行一次调节)

3、12/24 小时制显示切换

双击 “” 按键对时间进行切换，AM 表示上午时间，PM 表示下午。

4、闹钟设置

设置顺序：时 -> 分 -> 退出；

长按 “” 按键，等待显示屏幕 时 位显示闪烁，按 “” 或 “” 对 时 位进行调节设置，再次单击 “” 按键切换到 分 位显示闪烁，按 “” 或 “” 对 分 位进行调节设置，设置，再次单击 “” 按键，退出时钟调节设置功能，时 位和 分 位不闪烁，且观察屏幕上显示的时间为新设置的时间，即设置成功。 注：闹钟 2 的设置方法同闹钟 1。
(如若设置途中错误操作导致设置失败，需重新按照上述方式重新进行一次调节)

5、查看闹钟，开启/关闭闹钟

单击 “” 按键，查看所设置的闹钟 1 时间信息，双击打开/关闭闹钟 1。
(显示屏幕闹钟 1 图标亮起即闹钟 1 定时已开启，熄灭则为闹钟 1 定时已关闭，闹钟 2 同理)

6、铃声设置

单击 “” 按键，循环切换播放 4 首闹钟铃声，期间单击 “” 或 “” 按键可对音量调节。

7、LED 调节

单击 “” 按键，调节切换灯光的颜色，双击打开/关闭 LED 灯光；当 LED 灯光处于关闭状态时，双击 “” 按键，可直接进入声控模式，此时灯光会根据音乐的频率进行律动闪烁。

8、蓝牙音乐

本产品作蓝牙小音响使用，打开手机蓝牙功能搜索蓝牙名称“TS-002”的设备进行配对即可播放手机里的音乐，播放音乐时，灯光会随着音乐节奏律动同时七彩灯光挑变。

.....
注意事项

.....
感谢您购买本产品，为了避免受到伤害，请认真阅读使用说明书的所有操作知道及安全信息。

- 1) 切勿碰撞、挤压、自行拆解或者刺穿本产品；
- 2) 切勿自行拆解进行修理、改装本产品；
- 3) 切勿将本产品放置于高温、高湿环境；
- 4) 切勿将本产品投入火中、水中或含有腐蚀性的液体里；
- 5) 切勿手湿或者弄湿产品的情况下操作本产品；
- 6) 切勿将产品放置于倾斜或不稳定的桌面，以免滑落损坏；
- 7) 产品内部含充电线等小配件，不适合 3 岁及以下的孩童使用；

- 8) 产品不包含电源适配器，请购买正规厂家生产且符合国家 CCC 标准的适配器；
- 9) 产品使用过程中发现异常，请停止使用。

.....

保修卡

.....

购买日期：_____ 客户姓名：_____

联系电话：_____ 联系地址：_____

.....

.....

保修期有效期为自购买本产品始一年，保修期限内可凭有效购买凭证至购买点或经销商处获得保修服务；超出保修期限亦可以凭有效购买凭证到购买点或经销商处有偿获取维修服务。

.....

.....

非保修条款

-
-
- 1) 因误用、疏忽、滥用、进液、磨损、摔损、摔毁、挤压变形、不正确使用配件或撕毁、涂改标贴及其他不可见的人为损坏；
- 2) 超出保修期限；
- 3) 因不可抗力的因素损坏，如：地震、水灾、火灾等。
-

 
.....

本保修条款的最终解释权归厂商所有。

Emoticon clock User Manual



Product Introduction

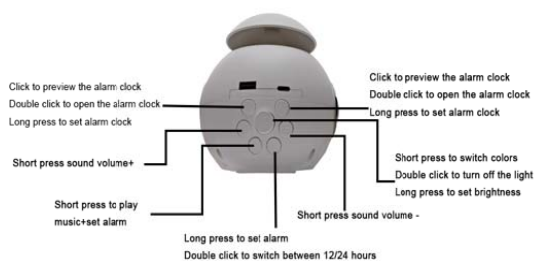

Emoticon

 When inserting a 5V power supply and turning on the alarm clock Jumping out of the screen, turning the eyeballs, blinking the expression	 Volume adjustment icon	 Alarm icon display	 time display
 When displaying the time, simply tap it or shake the trigger product to switch randomly Automatically turn to the clock display after jumping out of various expressions, After an interval of five seconds, another shot or vibration can repeat the above display.			

Product parameters

.....

.Product Name: Emoticon clock
Product model: TS-002
Product size: 130mm × 133mm × 146mm
Product material: ABS plastic appearance, curved mask
Product weight: 330g
Battery capacity: 1800MAH
INPUT VOLTAGE: DC5V-2A
output power: 5W

.....

Instructions for use

1.Power supply mode

The product can be connected to an adapter or powered by a 5V-2A USB cable. When the power is plugged in, the product enters a normal working state and the display screen displays a blinking expression.

2.time setting

Setting sequence: hour ->minute ->exit;

Long press and hold the "" button, wait for the time display on the display screen to flash, press"

 "or " "Adjust and set the time slot, click the " " button again to switch to the flashing display

of the split position,Press " " or " " to adjust and set the quantile,Click the " " button again to exit the clock adjustment setting function. The time and minute positions do not flash, and observe that the time displayed on the screen is the newly set time, indicating successful setting.

(If the setting fails due to incorrect operation during the process, it needs to be adjusted again according to the above method)

3.12/24 hour display switching

Double click the " " button to switch time, where AM represents morning time and PM represents afternoon.

4.Alarm settings

Setting sequence: hour ->minute ->exit;

Long press and hold the " " button, wait for the display screen to display flashing time, press " " or " " to adjust and set the time, click the " " button again to switch to flashing quantile display, press " " or " " to adjust and set the quantile, and click the " " button again to exit the clock adjustment setting function. The time and quantile do not flash, And observe that the time displayed on the screen is the newly set time, indicating successful setting. Note: **The setting method for Alarm 2 is the same as Alarm 1.**

(If the setting fails due to incorrect operation during the process, it needs to be adjusted again according to the above method)

5.View alarm clock, turn it on/off

Click the " " button to view the set alarm 1 time information, and double-click to turn alarm 1 on/off.

6.Ringing tone settings

Click the " " button to cycle through the playback of 4 alarm tones. During this time, click the " " or " " buttons to adjust the volume.

7.LED adjustment

Click the " " button, adjust the color of the switching light, and double-click to turn on/off the LED light; When the LED light is turned off, double-click the " " button to directly enter voice control mode. At this time, the light will flicker rhythmically according to the frequency of the music.

8.Bluetooth Music

This product is used as a Bluetooth mini speaker. By turning on the Bluetooth function of the phone, search for devices with the Bluetooth name "TS-002" and pair them to play music on the phone. When playing music, the lights will move according to the rhythm of the music and the colorful lights will change.

Note

Thank you for purchasing this product. To avoid injury, please carefully read all operating instructions and safety information in the user manual.

- 1) Do not collide, squeeze, disassemble or puncture this product;
- 2) Do not disassemble, repair, or modify this product on your own;
- 3) Do not place this product in a high temperature or humidity environment;
- 4) Do not put this product into fire, water, or corrosive liquids;
- 5) Do not operate this product with hands wet or wet;
- 6) Do not place the product on a tilted or unstable desktop to avoid slipping and damage;
- 7) The product contains small accessories such as charging cables, which are not suitable for children aged 3 and below;
- 8) The product does not include a power adapter. Please purchase an adapter produced by a reputable manufacturer that meets the national CCC standard;
- 9) Abnormalities found during product use, please stop using.

warranty card

.....
Purchase date:_____ Customer Name:_____
Contact number:_____ Contact address:_____
.....

The warranty period is valid for one year from the purchase of this product. During the warranty period, you can obtain warranty services at the purchase point or dealer with a valid purchase voucher; Beyond the warranty period, you can also obtain paid repair services at the purchase point or dealer with a valid purchase voucher.

.....
Non warranty terms
.....

- 1) Due to misuse, negligence, abuse, liquid ingress, wear and tear, damage, crushing, deformation, incorrect use of accessories or tearing, alteration of labels, and other invisible human damage;
 - 2) Exceeding the warranty period;
 - 3) Damage caused by force majeure factors, such as earthquakes, floods, fires, etc.
-

The final interpretation of this warranty clause belongs to the manufacturer.

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed

and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

