


Appendix II -- External Photograph

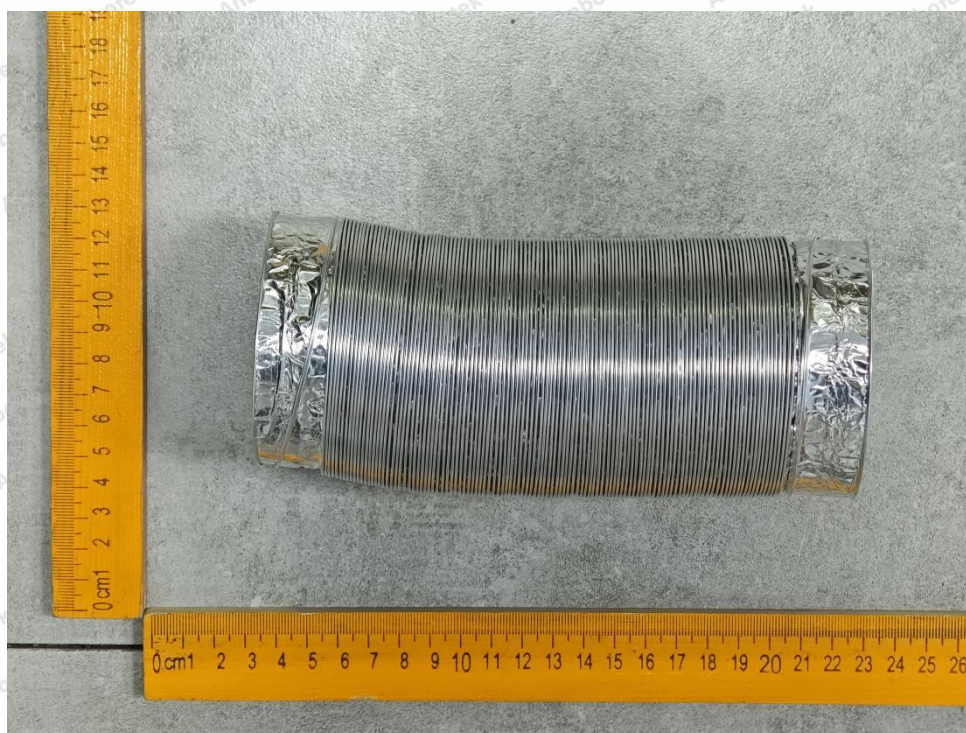



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn





Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn









ATOMSTACK HURRICANE

Signal		Machine state		Signal		Machine state	
 STATUS LIGHT	 Steady blue	Finished		 WATER TEMP	 Steady blue	Normal	
	 Flashing blue	Processing			 Steady yellow	Warning	
					 Flashing red	Abnormal	
	 Steady yellow	Paused		 LASER INDICATOR	 Steady blue	Normal	
					 Flashing red	Abnormal	
	 Flashing red	Abnormal operation		 FLAME DETECTION	 Steady blue	Normal	
					 Flashing red	Flame detected	



REGULATING STEP

① Screw above

③ Adjusting belt screw

1. Loosen this screw * by turning left.

2.Tighten this screw to * the right

3. Tighten this screw * to the right

 Please get familiar with all safety precaution and measures before using the machine.

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



Signal		Machine state	Signal		Machine state
STATUS LIGHT	Steady blue	Finished	WATER TEMP	Steady blue	Normal
	Flashing blue	Processing		Steady yellow	Warning
	Steady yellow	Paused		Flashing red	Abnormal
	Flashing red	Abnormal operation	LASER INDICATOR	Steady blue	Normal
				Flashing red	Abnormal
			FLAME DETECTION	Steady blue	Normal
				Flashing red	Flame detected

REGULATING STEP

① Screw above ② Adjusting belt screw

1. Loosen this screw * by turning left. 2. Tighten this screw to * the right

3. Tighten this screw * to the right

Please get familiar with all safety precaution and measures before using the machine.



