



产品合格证

产品名称：三一工程车
产品型号：SY485H
适用年龄：8岁及以上
材质组成：塑胶及电子元件
执行标准：GB6675.1-2014 GB6675.2-2014
GB6675.3-2014
GB6675.4-2014 GB19865-2005

制造商：湖南三一文化产业有限公司
地址：湖南长沙经济技术开发区三一一路1号
三一工业城研发楼魔豆仓二楼219号
生产厂：广东汇纳模型有限公司
生产地址：汕头市澄海区信宁信兴五路9号
维护保养：本品含电子元件，不得入水或在潮湿环境使用，用干抹布擦拭表面污渍。

该说明书含有重要信息，必须给予保留！

product quality certificate
Product Name: SANY Engineering Truck
Product Model: SY485H
Suitable Age: 8 years old and above
Material Composition: Plastic and electronic components
Standard: GB6675.1-2014 GB6675.2-2014 GB6675.3-2014
GB6675.4-2014 GB19865-2005

Manufacturer: Hunan SANY Cultural Industry Co., Ltd.
Address: No. 219, R&D Building, Sany Industrial City, Changsha Eco-Tech Development Zone, Changsha City, China.

Producer: Shantou Huina Toys Co., Ltd.
Address: No. 9, Xinxing Road-V, Xinning, Chenghai District, Shantou
Maintenance: The product contains electronic components, do not put it in water or use it in a damp environment, and wipe the surface with a dry cloth.
This Manual contains important information and must be retained!



警告

- 本产品必须在成人直接监护下使用。
- 本产品内含有小零件，请勿吞食以免发生窒息危险；不适合三岁以下儿童使用。



Warning

- This product must be used in the direct custody of adults.
- This product contains small parts, please do not swallow to avoid choking. Danger: Not suitable for children under 3 years old.

Quality Changes the World 品质改变世界



三一 SY485H 遥控挖掘机

SANY SY485H Remote Control Excavator

使用说明书 Operation Manual



1:14
Simulation Scale
适玩年龄 8+
Suitable Age: 8 years old and above



三一 SY485H 遥控挖掘机

SANY SY485H Remote Control Excavator

使用说明书 Operation Manual




1:14
Simulation Scale
适玩年龄 8+
Suitable Age: 8 years old and above

为了您能高效便捷的操控遥控挖掘机，请在使用前完整的阅读说明书。包装和说明书含有重要信息，请予以保留。产品图片与实物可能存在差异，请以实物为准。

To ensure that you can control the remote control excavator efficiently and conveniently, please read the manual thoroughly before use. Important information is contained in the product package and manual, please retain them. The product picture is only for reference, please refer to the real object.

挖掘机介绍 | Excavator Introduction

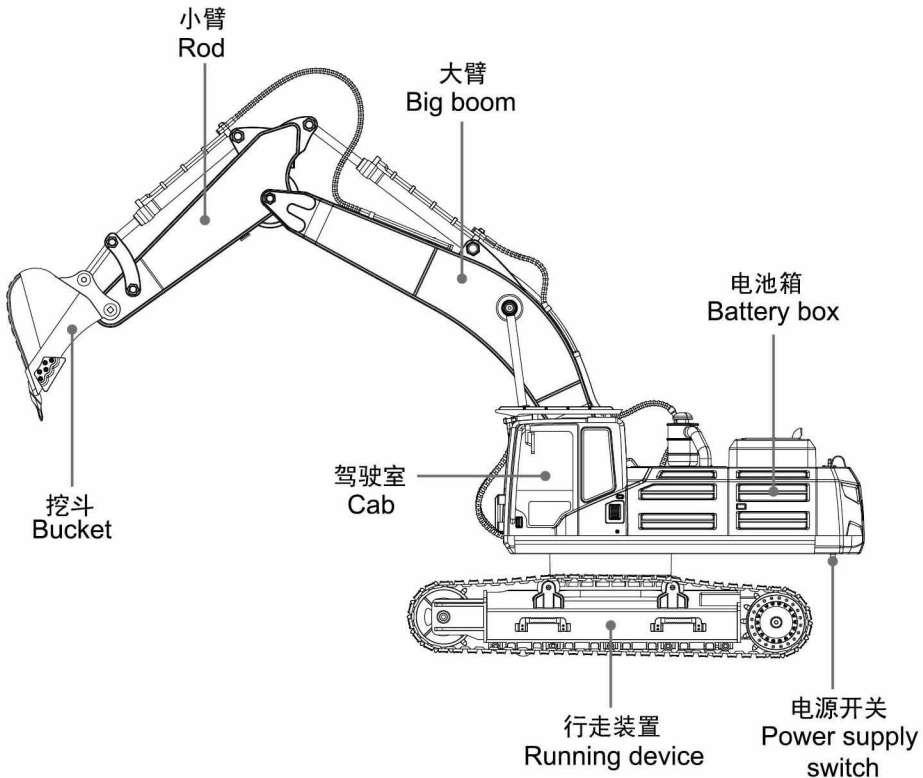


- 1 -

为了您能高效便捷的操控遥控挖掘机，请在使用前完整的阅读说明书。包装和说明书含有重要信息，请予以保留。产品图片与实物可能存在差异，请以实物为准。



To ensure that you can control the remote control excavator efficiently and conveniently, please read the manual thoroughly before use. Important information is contained in the product package and manual, please retain them. The product picture is only for reference, please refer to the real object.

挖掘机介绍 | Excavator Introduction

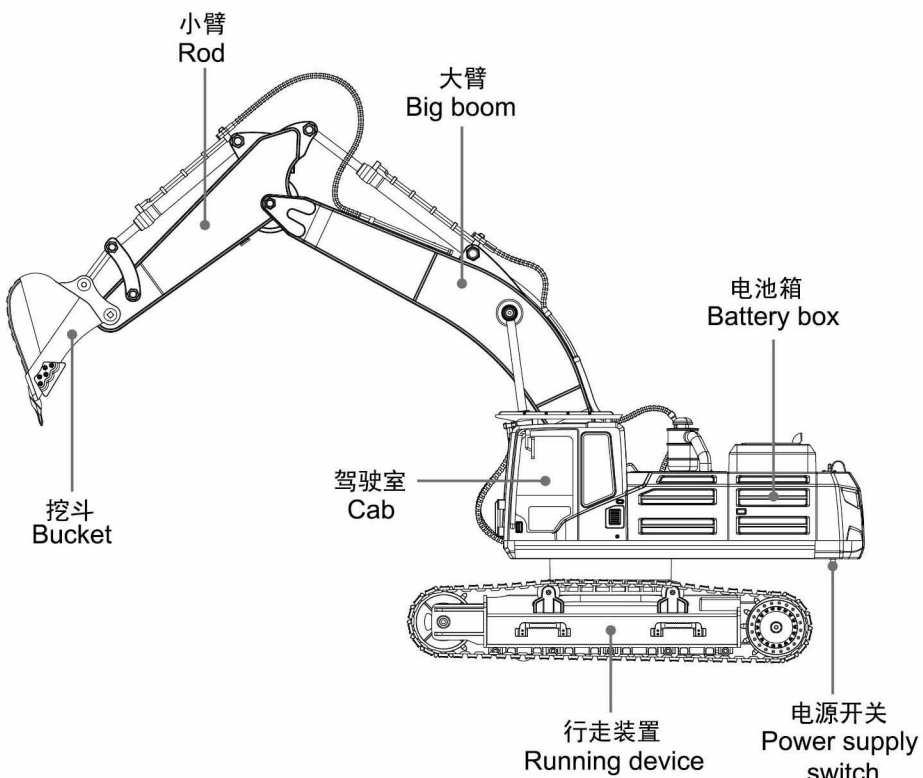


- 1 -



破拆机操控 | Operation and control of the demolition machine

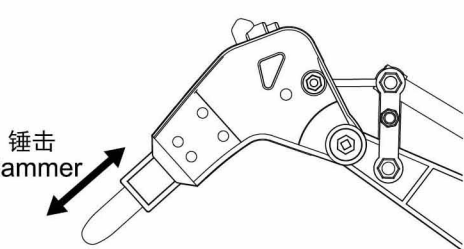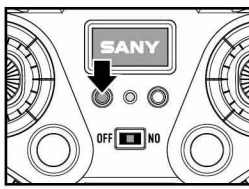  

锤击
Hammer

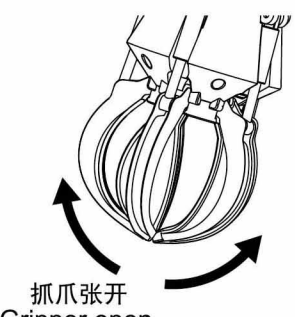 



抓爪张开
Gripper open

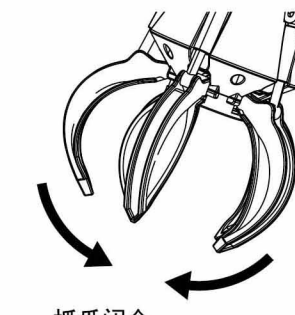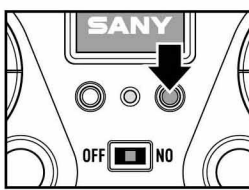  



抓爪闭合
Gripper close

- 10 -



破拆机操控 | Operation and control of the demolition machine

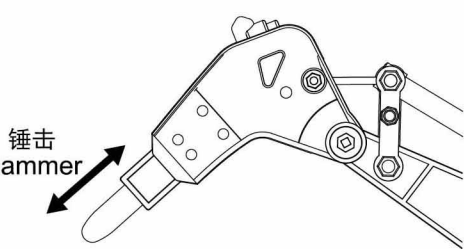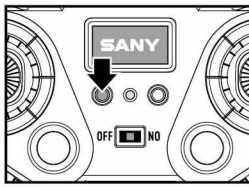

锤击
Hammer

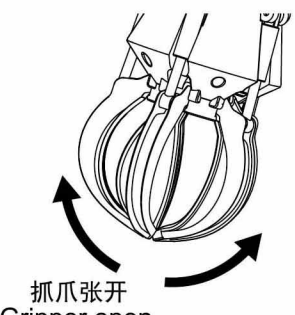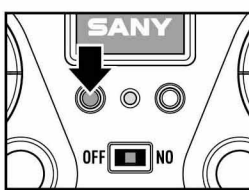



抓爪张开
Gripper open

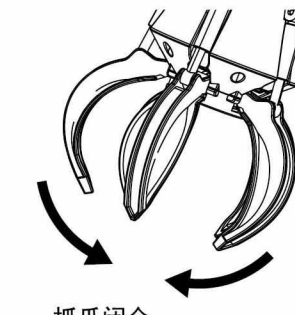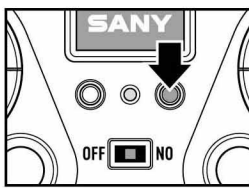



抓爪闭合
Gripper close

- 10 -

抓料机操控 | Operation and control of the scrap handler

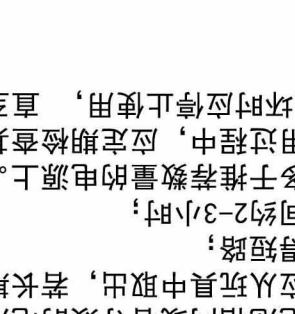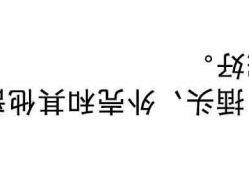  

抓爪张开
Gripper open

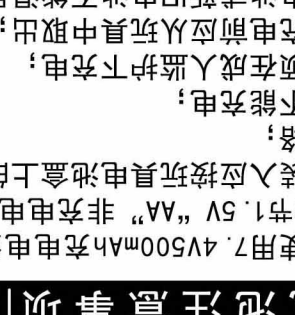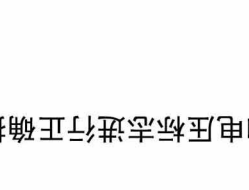

抓爪闭合
Gripper close

- 10 -

否损坏，发现损坏时应停止使用，直至修复完好。

USB充电线在使用过程中，应定期检查电源线、插头、外壳和其他部件是

11. 不能连接到多于推荐数量的电源上。

10. 电池充电时间约2-3小时；

9. 电源端子不得短路；

8. 用尽的电池应从玩具中取出，若长期不使用，请将玩具中电池取出；

7. 只有和推荐电池相同或者等效的电池方可使用；

6. 不同类型的电池或新旧电池不能混用；

5. 充电电池在充电前应从玩具中取出；

4. 非充电电池不能在成人监护下充电；

3. 非充电电池不能充电；

2. 电池取出和装入前应接玩具电池盒上的极性标志进行正确操作，

1. 遥控器使用3节1.5V "AA" 非充电电池，

7. 4V 500mAh 充电电池组

Charging time: 2-3 hours

USB充电线。

充电时间：2-3小时

充电线完成，请及时连接

充电时LED灯熄灭；

3. LED灯熄灭时充电完成；

2. 充电时LED灯常亮；

1. 连接时LED灯熄灭；

充电时USB指示灯状态：

智能USB充电线（内附）

充电时LED灯熄灭；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；

充电时LED灯常亮；


充电时LED灯常亮；

充电时LED灯常亮；


充电时LED灯常亮；

遥控器电池安装说明 | Installation instructions for remote control battery

 1. 用螺丝刀松开电池盖螺丝，取出电池盖。
1. Loosen the battery cover screws with a screwdriver, to remove the battery cover.

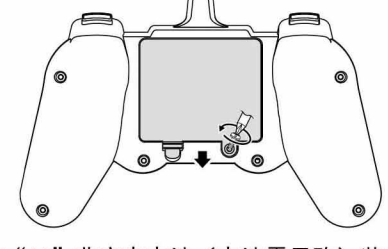


 2. 按正确极性将3节1.5V "AA" 非充电电池（电池需另购）装入遥控器底部电池箱。
2. According to the correct polarity, install three 1.5V "AA" non-rechargeable batteries (batteries shall be purchased separately) into the battery box at the bottom of the remote control.

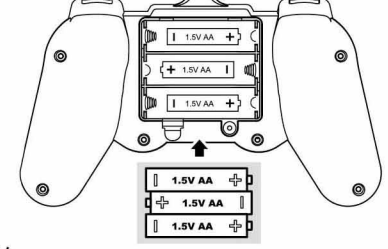

注意：
电池应插入正确的极性。
Note: Battery shall be installed correctly according to its polarity.

3. 盖上电池盖，拧紧螺丝。
3. Install the battery cover and tighten the screws.




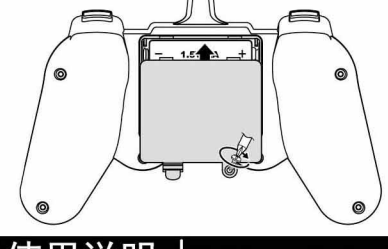


电池安全使用说明：Safety use instructions for battery

1. 按正确的方法取出和安放电池；
2. 非充电电池不能充电；
3. 充电电池只能在成人的监护下充电；
4. 不同类型的电池或新旧电池不能混用；
5. 型号相同或与推荐型号等同的电池才可以使用；
6. 充电电池在充电前应从模型中取出；
7. 电池以正确的极性放入；
8. 用尽的电池应从模型中取出；
9. 电源端子不得短路；
1. Remove and place the battery in the correct method;
2. Do not charge the non-rechargeable battery;
3. Charge the rechargeable battery in the custody of adults;
4. Do not mix different types of batteries or old and new batteries;
5. Only use the batteries with the same model or batteries which model is equivalent to the recommended model;
6. Remove the rechargeable battery from its model before charging;
7. Place the battery according to the correct polarity;
8. Remove the exhausted battery from the model;
9. Ensure the power terminals are not short-circuited;

- 3 -


底盘行驶操控 | Operation and control of the chassis driving

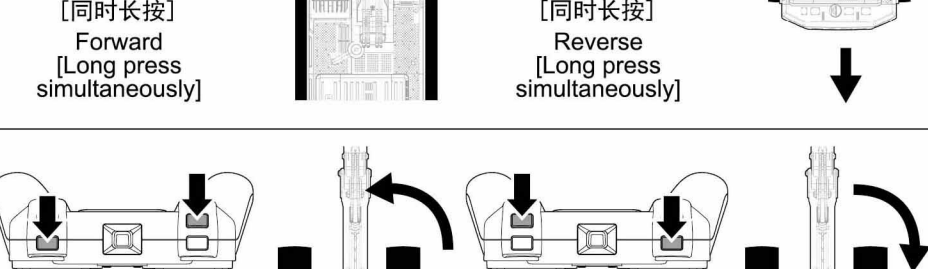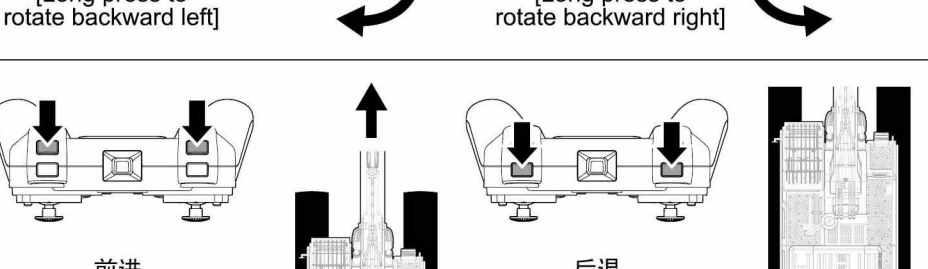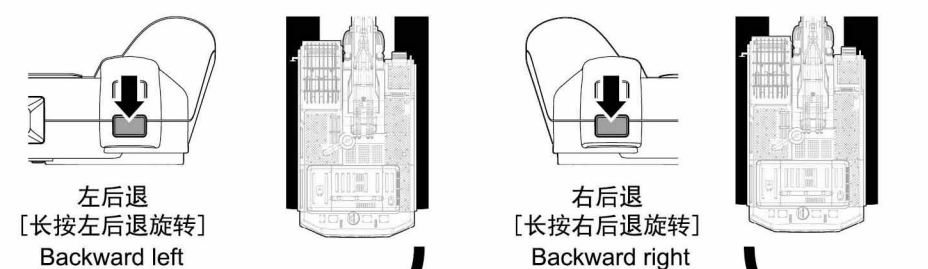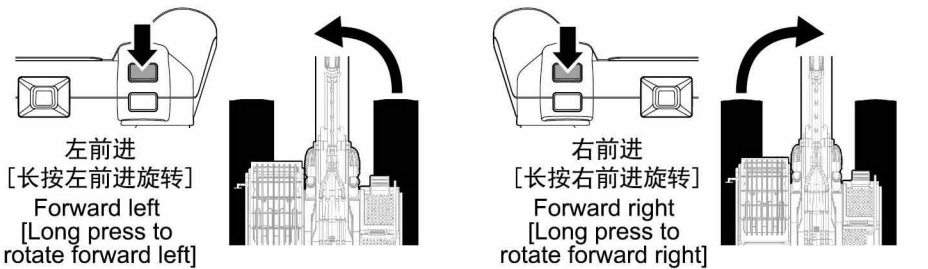



- 8 -

配件更换（配件需另购）

 1. 先卸下挖斗固定螺丝（图示1），取下挖斗（图示2）。
1. Firstly loosen the bucket set screws (Figure 1), and then remove the bucket (Figure 2).

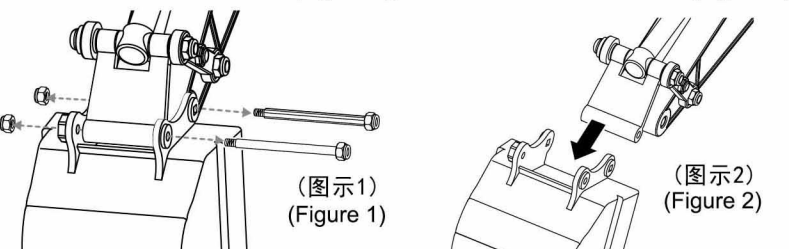


2. 将配件安装到小臂上，插入螺栓上螺母锁紧（2款配件安装方法相同）。
2. Install the accessories onto the rod, insert the bolt and then tighten the nut (installation method of the two accessories is the same).

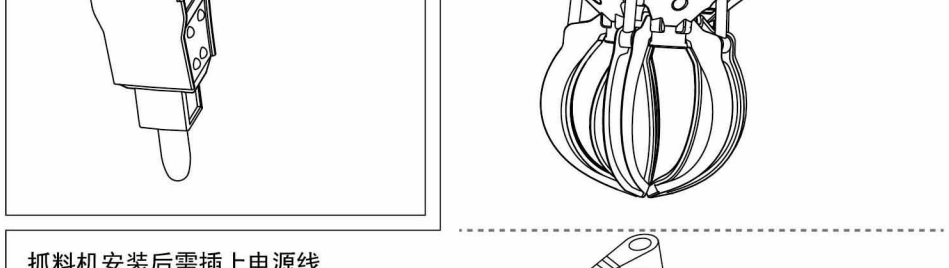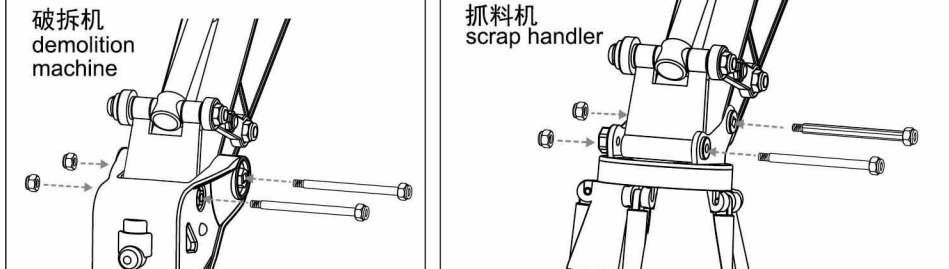

- 9 -

遥控器功能介绍 | Introduction of the remote control function

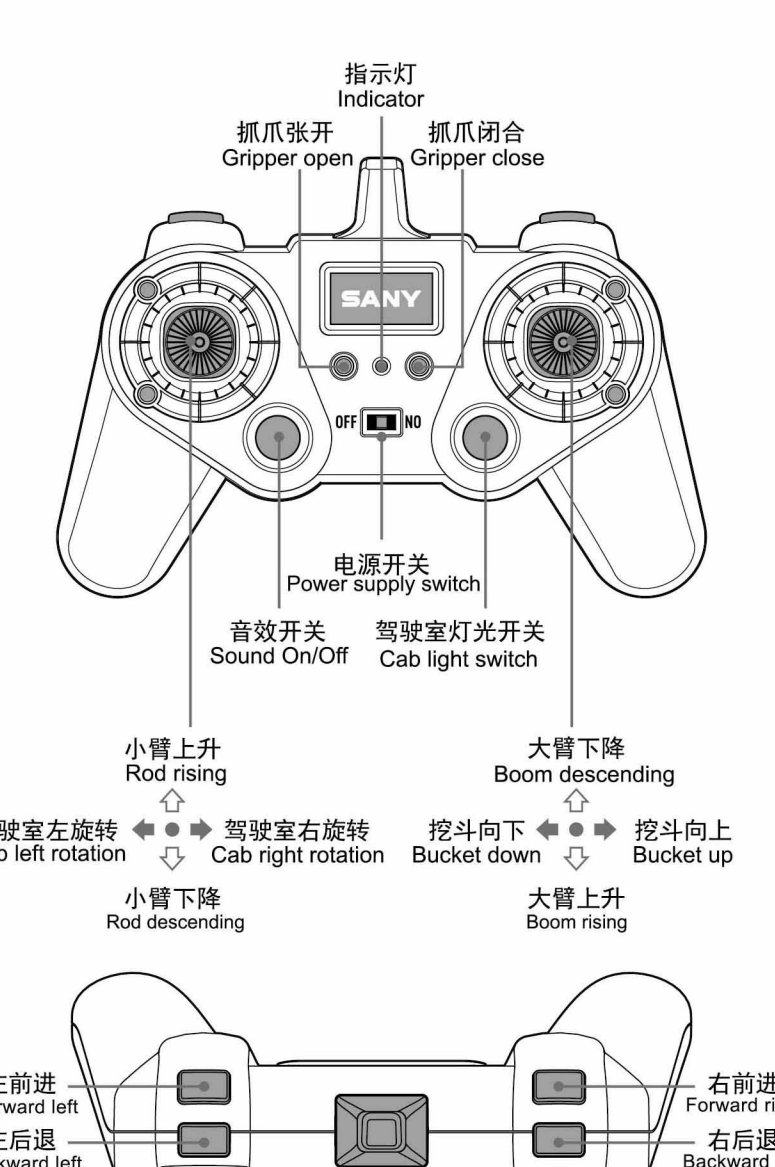

- 2 -