


60\*100mm

### 无线K歌音箱


#### 使用说明书

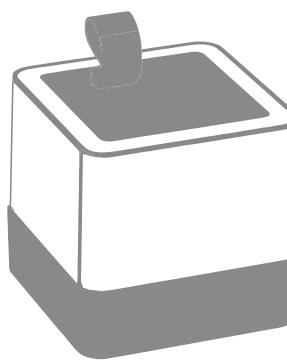


蓝牙名称: K18

#### 结构和功能

1. 开关/暂停 2. 模式/消原声 3. 下一曲/音量+  
4. 上一曲/音量- 5. 灯光

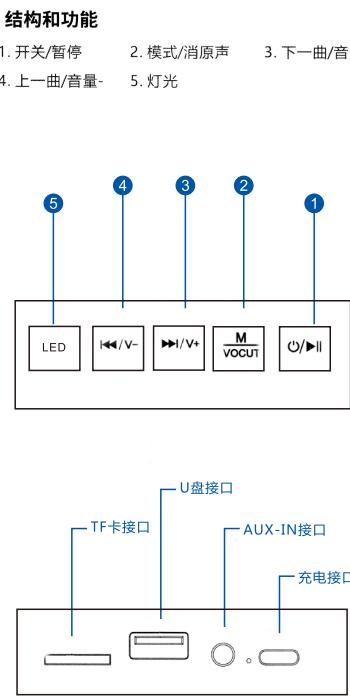

#### 话筒功能操作

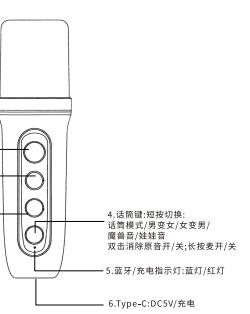

1. 1号键:长按开关机  
2. 2号键:短按切换话筒调节/混响调节/双击控制音效播放暂停  
3. 3号键:短按切换话筒音量加/混响音量加/伴奏音量加;  
4. 4号键:短按切换话筒音量减/混响音量减/伴奏音量减;  
5. 5号键:长按控制音乐下一曲  
6. 6号键:长按控制音乐上一曲

#### 按键功能

开关/暂停:长按开关机,短按暂停或播放音乐。  
上一曲音量- & 下一曲/音量+:短按调节音量大小,长按切换上下曲。  
模式按钮/消原声:短按切换蓝牙、MicroSD(TF)卡、U盘、AUX模式。长按可消除歌曲里的人声,只留下伴奏。  
灯光按钮:按下切换灯光模式。长按开关灯光。  
音效切换:循环切换原声、男声、女声、娃娃音、魔音音效。

#### 如何使用

通过蓝牙连接手机唱歌


1. 打开音箱电源:长按开关键开机,电源指示灯会开始闪烁。
2. 蓝牙连接:打开手机蓝牙并扫描,搜索到“K18”后,点击进行配对连接。连接成功时音箱会发出提示音。
3. 打开麦克风:长按麦克风上的电源键打开麦克风,麦克风开机后会自动和音箱连接,音箱上对应的指示灯会亮起。
4. 调整音效:调节好音箱和麦克风的音量,并选择合适的音效。

#### 技术参数

频率范围:20Hz-20kHz  
总谐波失真:<1%, 1kHz  
供电方式:内置锂电池  
充电电源:DC 5V

### Wireless Karaoke Speaker


#### User manual

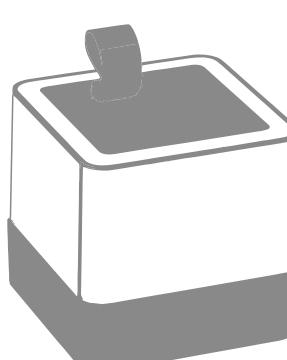


Bluetooth name : K18

#### Parts and controls

1. Power/Pause 2. Mode/Vocal cut  
3. Next track/Volume+ 4. Previous track/Volume-  
5. LED

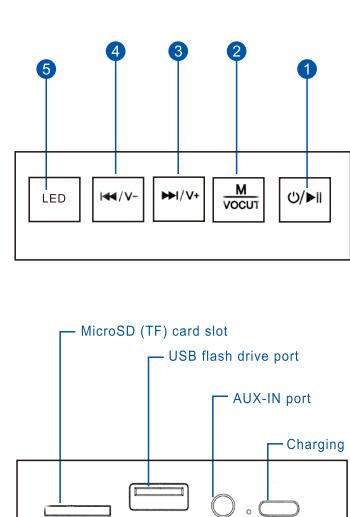

#### Microphone function operation

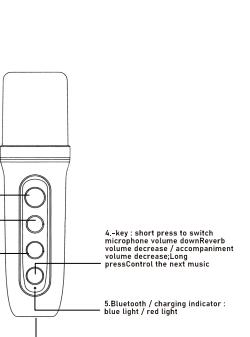

1. Power on key : long press to turn on / off short press to turn on / off microphone volume adjustment / reverb adjustment style adjustment / double click control audio playback pause.  
2. 2-key : short press to switch microphone volume increase / accompaniment volume increase; long press control the next music  
3. 3-key : short press to switch microphone volume down / reverb volume decrease / accompaniment volume decrease; long press control the previous music  
4. 4-key : short press to switch microphone volume down / reverb volume decrease / accompaniment volume decrease; long press control the next music  
5. 5-key : short press to switch microphone volume down / reverb volume decrease / accompaniment volume decrease; long press control the previous music  
6. 6-key : short press to switch microphone volume down / reverb volume decrease / accompaniment volume decrease; long press control the previous music

#### Button function details

**Power/Pause:** Press and hold to turn on/off the power. Press to pause or play the music.

**Previous track/Volume- & Next track/Volume+:** Short press to adjust the volume, long press to switch between up and down tracks.

**Mode button/Vocal cut:** Press to switch between Bluetooth mode, USB drive mode, MicroSD(TF) card mode and AUX mode. Press and hold to remove vocals from the song leaving only the background music.

**Change tone:** Press to switch between, original, male, female, child, magic sound effect.

#### How to use

**Sing by Bluetooth**

1. **Turn on the speaker:** Press and hold the power button to turn on the speaker. The power indicator will start flashing.
2. **Bluetooth connection:** Turn on the Bluetooth on your smart phone. In the Bluetooth setting, find the device name “K18” and pair. The speaker will make a tone if the pairing is complete.
3. **Turn on the microphone:** Press and hold the power button on the microphone. The microphone will be connected to the speaker automatically and the corresponding indicator on the speaker will be on.

#### How to charge

1. When the battery is low. The device will shut down automatically.
2. Connect a 5V DC charger to the charging connector to charge the speaker or microphones. The charging indicator will turn red when charging and turn off when fully charged.

#### Parameters

Frequency range: 20Hz-20kHz  
THD: <1%, 1kHz  
Power supply: Built-in lithium-ion battery  
Charging voltage: DC 5V

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.