

NOEL

WORSHIP PLAYER

사용 설명서

Korean



사용전에 안전을 위한 주의사항을 반드시 읽고 정확하게 사용해 주십시오.
사용설명서 상의 그림은 설명을 위해 그려진 것으로 실제의 모양과 부분적으로 다를 수 있습니다.

목차

1	제품 구성	
1-1	구성품	3
1-2	Noel 찬양예배 플레이어 각 부분의 명칭	4
2	제품 연결 방법	
2-1	전원 연결 및 켜기	5
2-2	HDMI 연결	6
2-3	3.5mm 오디오 잭 연결	7
2-4	유선 LAN 연결	8
2-5	USB 메모리 연결	9
2-6	Micro SD 카드 연결	10
3	사용 방법	
3-1	메인 메뉴 화면	11
3-2	설정 메뉴 화면	12
3-3	찬양 메뉴 기능	13
3-4	성경 메뉴 기능	17
3-5	주기도문	20
3-6	사도신경	21
3-7	교독문	22
3-8	예배 메뉴 기능	24

4	안전을 위한 주의 사항	44
5	문제해결	45
6	고객 센터	46

1 제품구성

1-1 구성품

구성품을 확인합니다.

박스를 열어 Noel 본체와 기타 부속물을 확인합니다.

 
① 본체




Noel 찬양예배 플레이어

② 부속물

전원 어댑터



설명서

 

Noel 곡목집



Micro SD

★ Micro SD 메모리 카드는 본체에 장착되어 있습니다.

※ Micro SD 메모리 카드를 제품과 분리시 'Noel 찬양예배' 기능이 동작되지 않습니다.
※ Micro SD 메모리를 분실, 도난, 훼손 되지 않도록 주의하시기 바라며, 분실, 도난, 훼손시 당사는 책임지지 않습니다.

- 제조사 사정에 따라 구성품은 달라질 수 있습니다.
- 제품의 구성품은 모델에 따라 외관과 색상이 다를 수 있습니다.

1 제품구성

1-2 Noel 찬양 예배 플레이어 각 부분의 명칭

전면부



후면부



 
옆면부



2 제품 연결 방법

2-1 전원 연결 및 켜기

1 전원 어댑터를 연결합니다.

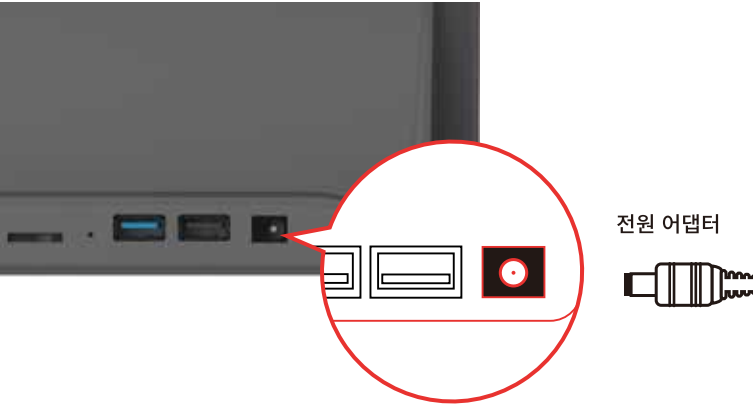

충전 : 전원 어댑터를 통해 제품 내부에 있는 배터리를 충전합니다

 
2 전원 버튼을 길게 누릅니다.




2 제품 연결 방법

2-2 HDMI 연결

후면부

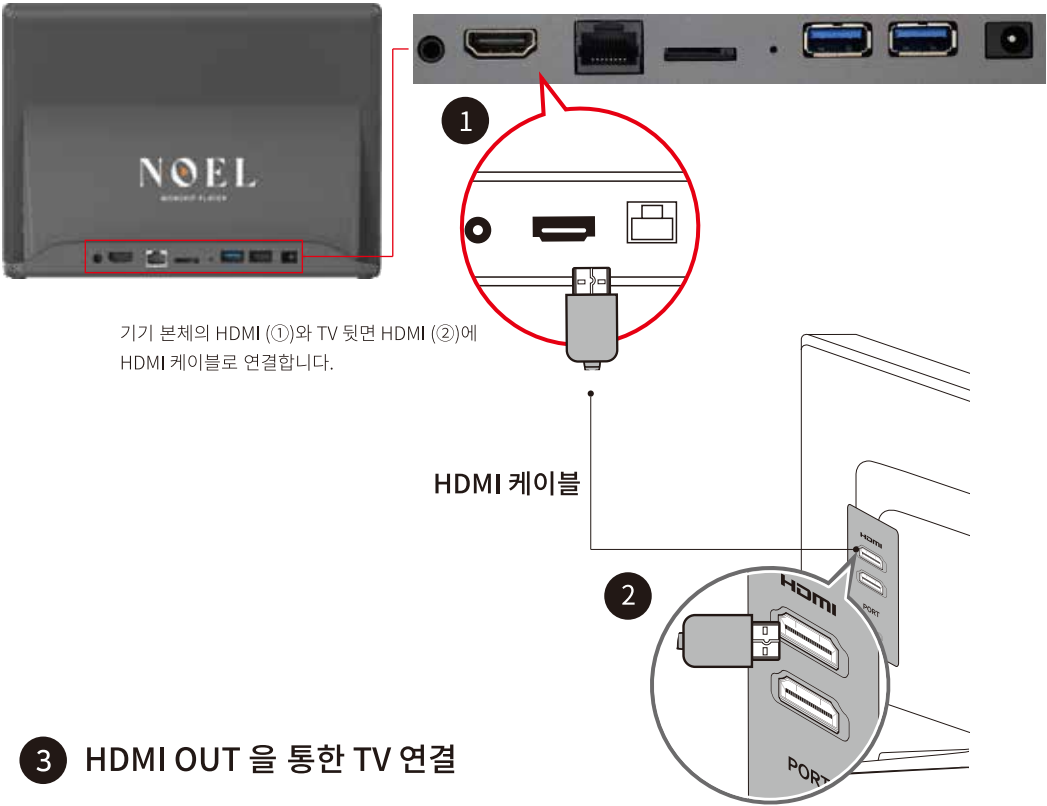


3 HDMI OUT 을 통한 TV 연결

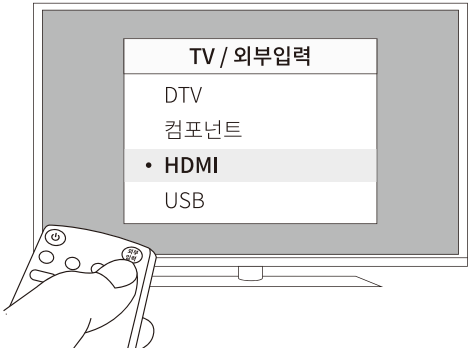 

TV 전원을 켜 후 TV 리모컨에서 외부입력을 누르고 Noel 기기와 TV를 연결한 외부입력 HDMI Port 번호를 선택해 줍니다.


2 제품 연결 방법

 2-3 3.5mm 오디오 잭 연결

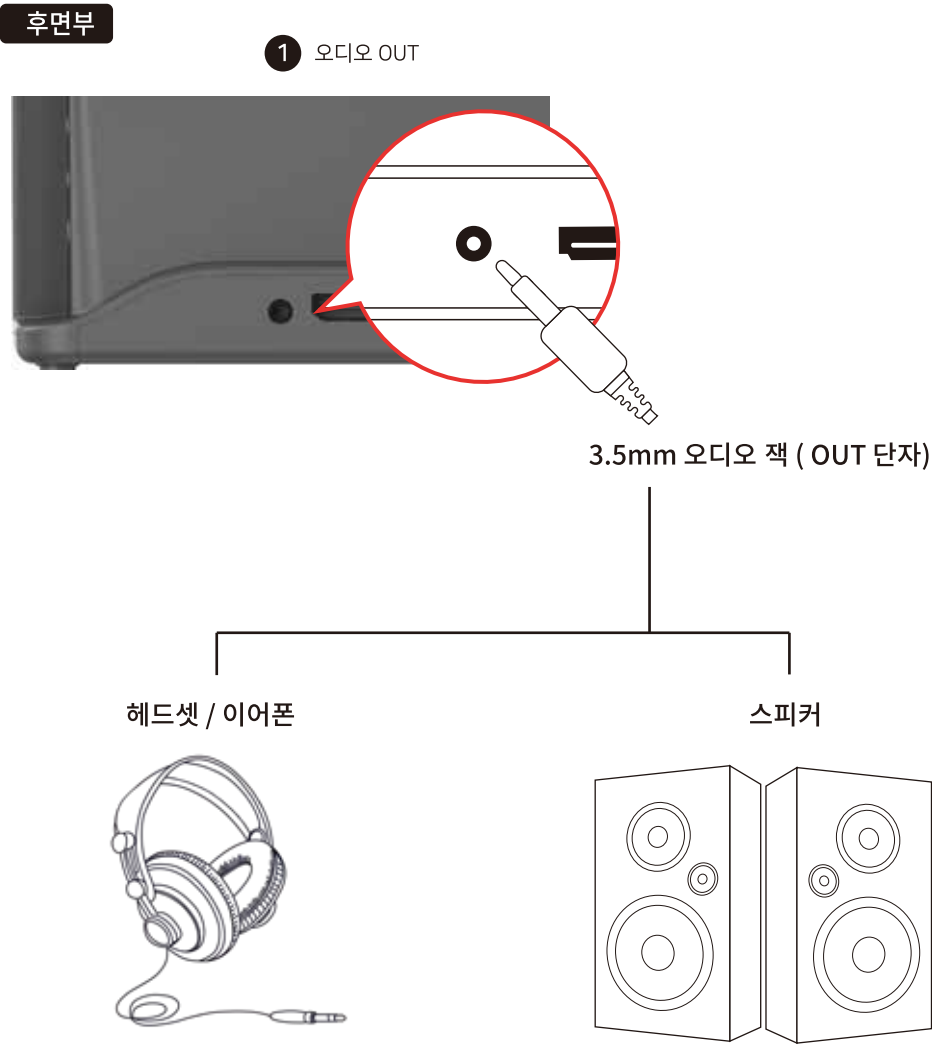

2 제품 연결 방법

 2-4 유선 LAN 연결

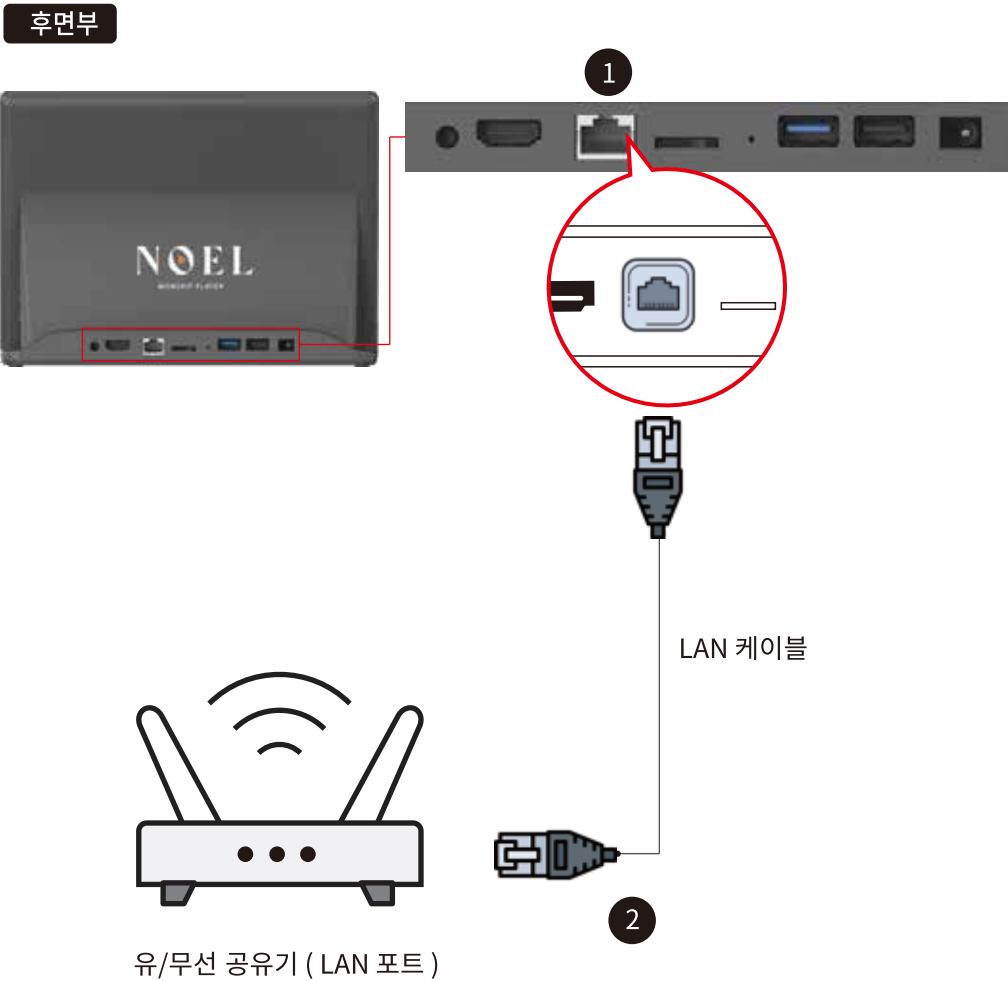

2 제품 연결 방법

2-5 USB 메모리 연결

후면부




USB 3.0 메모리 슬롯 x 2



※ USB 3.0 (파란색) : 최대 속도 5 Gbps

 빠른 속도를 지원하는 USB 3.0 (파란색) 을 정상적인 속도로 사용하기 위해서는
사용하시는 USB 메모리도 USB 3.0 이상을 지원하여야 합니다.

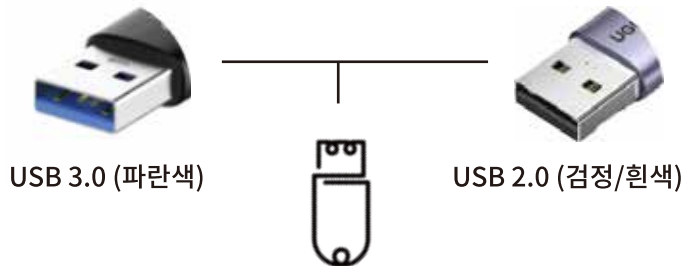


USB 3.0 (파란색)

USB 2.0 (검정/흰색)

2 제품 연결 방법

2-6 Micro SD 카드 연결

 후면부

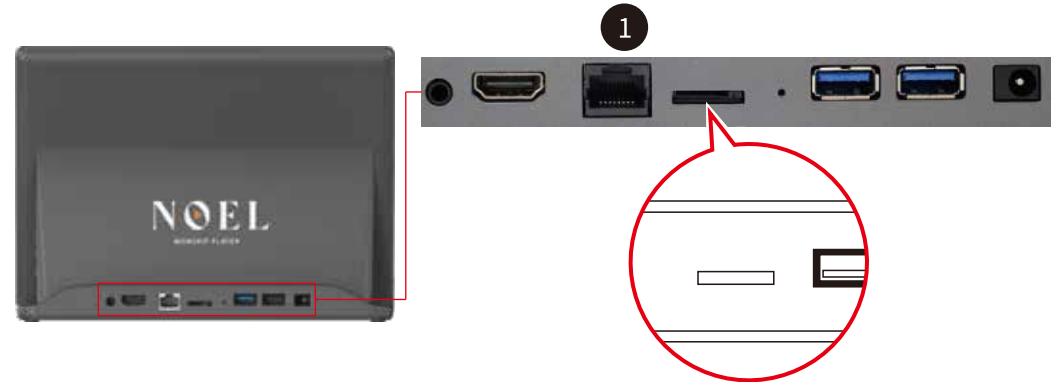

※삽입 / 추출 시 “딸깍” 거리는 느낌이 있어야지만
연결/연결해제가 정상적으로 됩니다.



Micro SD 카드

 
※ Noel 찬양예배 플레이어에는 출고시 “찬양 및 예배관련 데이터 콘텐츠”가
탑재되어 있는 Micro SD 카드가 장착되어 있습니다.

※ 장착되어 있는 Micro SD 카드를 분리하면 “Noel 찬양예배” 프로그램 동작이
정상적으로 실행되지 않습니다.

※ 다른 Micro SD 카드를 필요시 사용하신 후에는, 반드시 기존 탑재되어 있는
“Noel 찬양예배 용 Micro SD 카드”를 연결하여, 정상적으로 연결이 된 것을
확인하신 후 사용하시기 바랍니다.

3 사용 방법

3-1 메인 메뉴 화면

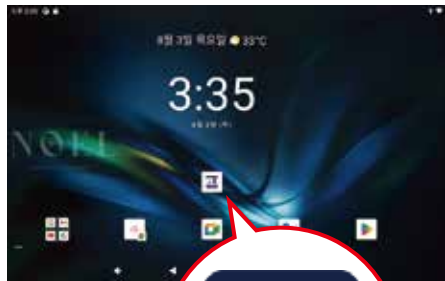

부팅 후 구글 안드로이드 앱의 홈 화면 (시작화면)



① “NOEL” 찬양예배 앱을 실행 합니다.

② “NOEL” 찬양예배 앱이 실행되면 아래의 메인메뉴 화면이 표시됩니다.



- Ⓐ 찬양 메뉴
- Ⓑ 성경 메뉴
- Ⓒ 예배 메뉴
- Ⓓ 주기도문

- Ⓔ 사도신경
- Ⓕ 교독문
- Ⓖ 설정 메뉴

 
3 사용 방법

3-2 설정 메뉴 화면



메뉴 변경 선택 후 (저장) 버튼으로 저장 하여야만 변경 내용이 적용 됩니다.

1. 찬송선택 : 새찬송가(기본), 찬송가(구) - 찬송가의 종류를 선택합니다.
2. 성경선택 : 개역개정(기본), 개역한글 - 성경의 종류를 선택합니다.
3. 성경읽기 : 남자(기본), 여자 - 성경 읽기 기능의 남자, 여자 목소리 선택합니다.
4. 교 독 문 : 개역개정(기본), 개역한글 - 교독문의 종류를 선택합니다.
5. 주기도문 : 개역개정(기본), 개역한글 - 주기도문의 종류를 선택합니다.
6. 사도신경 : 개역개정(기본), 개역한글 - 사도신경의 종류를 선택합니다.
7. 독음표시 : 켜짐(기본), 꺼짐



독음 표시 켜짐



독음 표시 꺼짐

8. 멜로디바 : 켜짐(기본), 꺼짐



멜로디바 켜짐



멜로디바 꺼짐

3 사용 방법

3-3 찬양 메뉴 기능

[연주관련 기능]



 
악보 OFF



악보 ON

■ 악보 표출 기능

악보 표출 버튼으로 곡의 악보 화면과 가사화면이 상호 전환 됩니다.

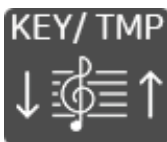

키/템포



키/템포

■ 키 / 템포

키/ 템포 조절을 위한 기능이 표시됩니다.
(키 조절 / 템포 조절 / 기본키 / 기본템포)



후렴 반복 OFF



후렴 반복 ON

■ 후렴 반복

찬송가 연주시 후렴 반복 버튼을 통해 후렴구를 반복할 수 있는 기능입니다.
(※ 후렴구 있는 곡에 한정됨)

3 사용 방법

3-3 찬양 메뉴 기능

[키 / 템포 조절]



키 / 템포 버튼을 누르면 세부 조절 버튼이 표출됩니다.



KEY +

음의 높이를 올립니다.(+7단계)

KEY -

음의 높이를 내립니다.(-7단계)

TEMPO +

음의 템포를 증가시킵니다.(+5단계)

TEMPO -

음의 템포를 감소시킵니다.(-5단계)

기본키

곡의 기본 음정으로 되돌립니다.

기본템포

곡의 기본 템포로 되돌립니다.

※ 음의 높이 단계는 한 옥타브가 아닌 음의 미세한 단계를 조절합니다.

 
※ 템포의 단계는 비례적 단계가 아닌 박자의 속도를 조절합니다.

3 사용 방법

3-4 성경 메뉴 기능



1. 메인 메뉴에서 “성경”을 터치 선택 합니다.

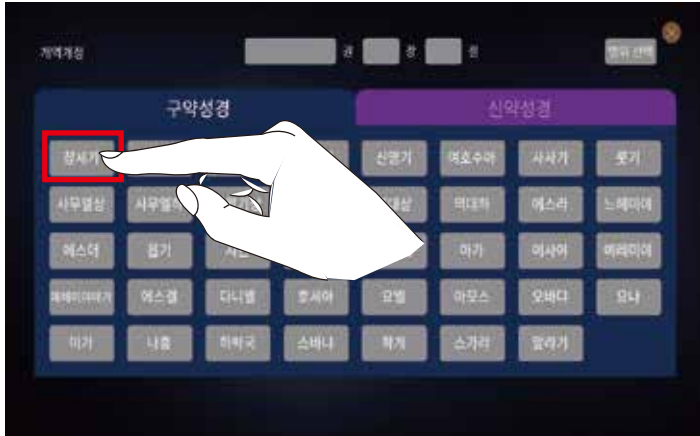

2. 구약성경 / 신약성경이 탭으로 구분되어 있습니다.
3. 원하는 성경(구약/신약)을 선택하고 “권(예:창세기)”을 선택합니다.

3 사용 방법

3-4 성경 메뉴 기능



 
4. 원하는 (장)을 선택 합니다. 자동으로 (절) 선택으로 화면이 바뀝니다.




5. 원하는 (절)을 선택하면, 해당 성경 구간 내용이 표시됩니다.

3 사용 방법

3-4 성경 메뉴 기능

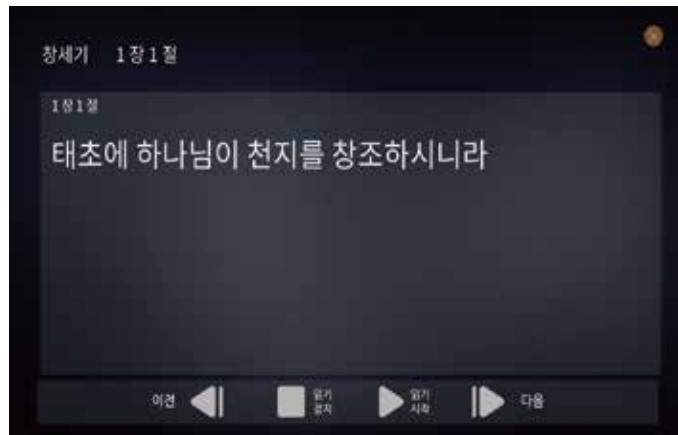

 
6. 선택한 성경 구간 내용부터 시작됩니다.



1. 이전 (◀): 현재 절의 이전 절로 이동합니다.
2. 다음 (▶): 현재 절의 다음 절로 이동합니다.
3. 읽기시작 (▶): 현재 절의 내용을 낭독 합니다.

절의 낭독이 끝나면, 자동으로 다음 절이 표시되고 낭독이 계속 됩니다.

 3. 읽기정지 (■): 성경 낭독을 정지합니다.



성경화면 우측 상단의 [범위 선택] 버튼을 통해 성경내용의 구간선택이 가능합니다.

 


3 사용 방법


3-5 주기도문



1. 메인 메뉴에서 “주기도문” 을 터치 선택 합니다.

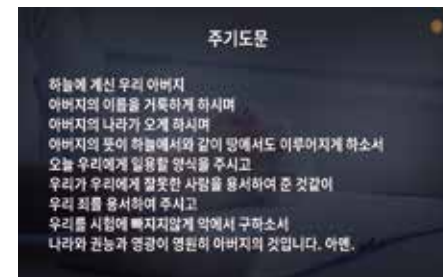


개역개정 주기도문

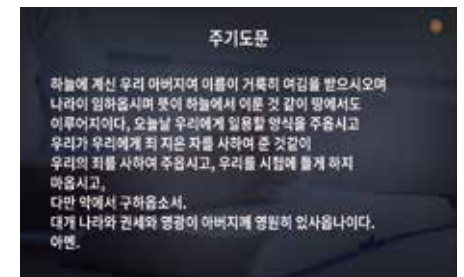 

개역한글 주기도문

 ※ 설정에서 선택되어있는 주기도문 종류로 표시됩니다.




3 사용 방법


3-6 사도신경



 1. 메인 메뉴에서 “사도신경”을 터치 선택 합니다.

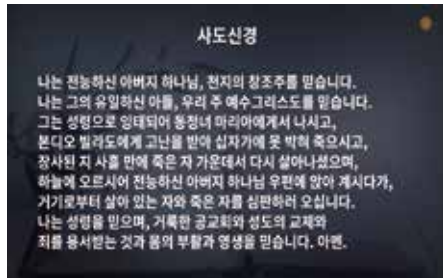

개역개정 사도신경

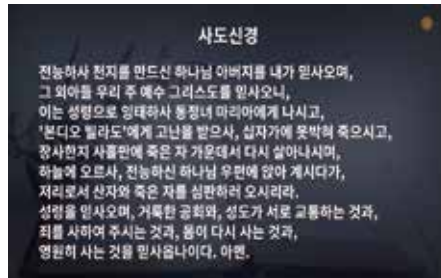 

개역한글 사도신경

※ 설정에서 선택되어있는 사도신경 종류로 표시됩니다.



3 사용 방법

3-7 교독문

 


1. 메인 메뉴에서 “교독문”을 터치 선택 합니다.




2. 원하는 교독문의 내용을 선택합니다.

※ 교독문의 종류는 “설정”의 교독문 종류 선택에 따라 표시됩니다.



3 사용 방법

 3-7 교독문

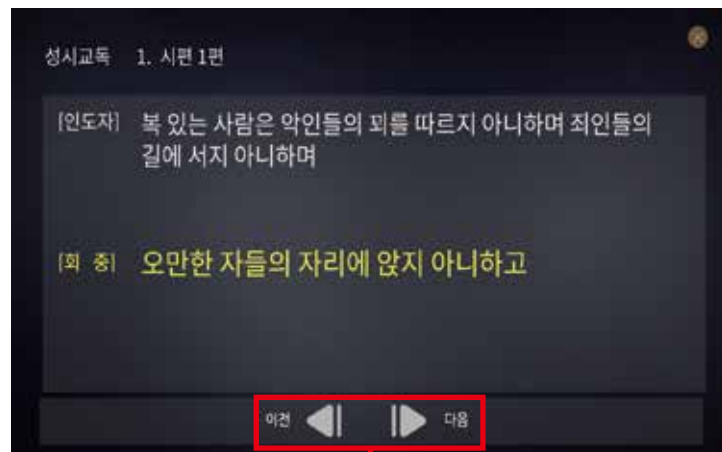

1. 이전 (◀): 선택되어 표시되고 있는 교독문의 이전 줄의 내용을 보여줍니다.
2. 다음 (▶): 선택되어 표시되고 있는 교독문의 다음 줄의 내용을 보여줍니다.

3 사용 방법

3-8 예배 메뉴 기능



1. 메인 메뉴에서 “예배” 를 터치 선택 합니다.



2. “예배순서 만들기” 메뉴를 선택하여, 예배시 진행할 순서를 만듭니다.

3 사용 방법

3-8 예배 메뉴 기능

예배 순서 만들기

[Step 1] - 예배리스트 생성 또는 수정



1. [+ 새로만들기] 버튼 : 새로운 예배 순서 만들기



※ 기존 만들어 놓은 리스트는 [수정]을 통해 내용 수정



3 사용 방법

3-8 예배 메뉴 기능

[Step 2] - 예배리스트 제목 및 배경화면 선택



- 1 예배제목 입력창을 선택 하면 입력 키보드가 표시되어 제목을 입력합니다.
- 2 제목입력 후 화면에 표시되어 있는 배경이미지 중 하나를 선택합니다.
- 3 선택 완료 후 (저장) 버튼을 선택하여 저장합니다.

3 사용 방법

3-8 예배 메뉴 기능

[Step 3] - 예배 순서 만들기



1. 만들고자 하는 예배의 순서에 맞춰서 [선택]을 누릅니다.



2. 총 6개의 내용으로 구성된 메뉴 버튼이 표시됩니다.

3 사용 방법

 
3-8 예배 메뉴 기능

3. 6개 메뉴의 구성 내용



■ 순서화면 [타이틀 표지 화면]

순서화면은 내용만 표시하는 표지 화면입니다.
2줄로 구성되며, 1줄은 제목, 2줄은 내용입니다.

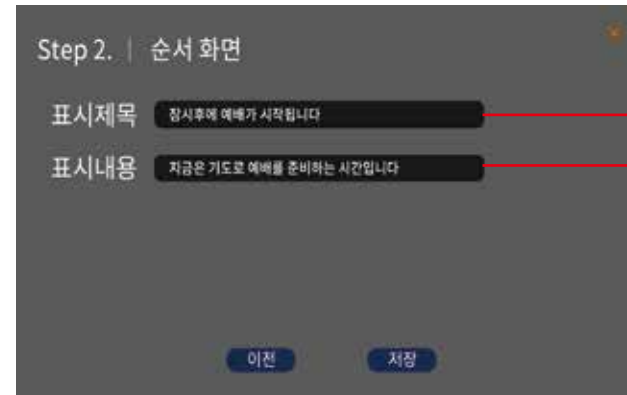

[입력화면]



[예배시 실제 표출 화면]

3 사용 방법

3-8 예배 메뉴 기능



■ 찬송화면 [타이틀 표지 화면+찬송화면]
찬송화면은 내용 제목과 찬송가번호 입력입니다.
2줄로 구성되며, 1줄은 제목, 2줄은 곡번호입니다.



[입력화면]



[예배시 실제 표출 화면]

※ 제목화면 표시 후 우측 하단 ▶ 버튼 선택 하면 연주화면으로 진행 됩니다.

3 사용 방법

 
3-8 예배 메뉴 기능



■ 사도신경 [타이틀 표지 화면+사도신경 화면]
사도신경은 표지에 표시할 제목을 입력하면
표지제목 후 사도신경이 표시됩니다.



[입력화면]

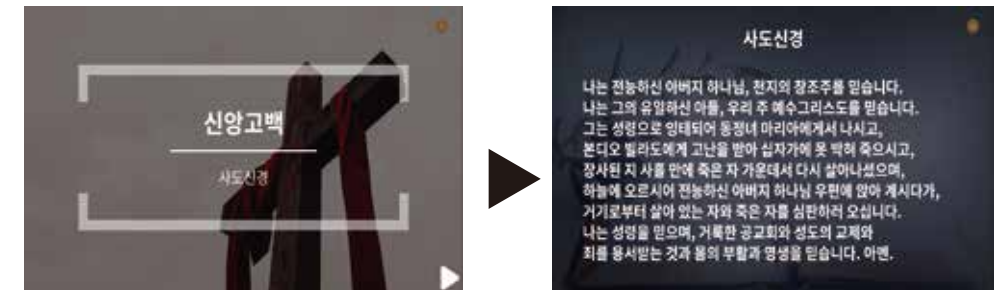

[예배시 실제 표출 화면]

※ 제목화면 표시 후 우측 하단 ▶ 버튼 선택 하면 사도신경화면으로 진행 됩니다.

3 사용 방법

 
3-8 예배 메뉴 기능



■ 주기도문 [타이틀 표지 화면+주기도문 화면]
주기도문은 표지에 표시할 제목을 입력하면
표지제목 후 주기도문이 표시됩니다.



[입력화면]

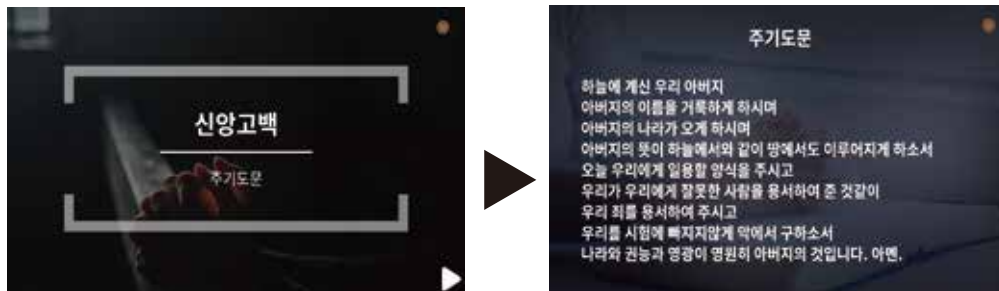

[예배시 실제 표출 화면]

※ 제목화면 표시 후 우측 하단 ▶ 버튼 선택 하면 주기도문화면으로
진행 됩니다.

3 사용 방법

3-8 예배 메뉴 기능



■ 교독문 [타이틀 표지 화면+교독문 화면]
교독문은 표지에 표시할 제목을 입력하고
표시내용에서 성시교독의 항목을 선택합니다.



[입력화면]



[예배시 실제 표출 화면]

 
※ 제목화면 표시 후 우측 하단 ▶ 버튼 선택 하면 주기도문화면으로
진행 됩니다.

3 사용 방법

3-8 예배 메뉴 기능




■ 성경화면 [타이틀 표지 화면+성경 화면]
 성경화면은 내용 제목과 성경 내용 선택입니다.
 1줄은 제목, 2줄은 내용표시, 3줄은 성경내용선택

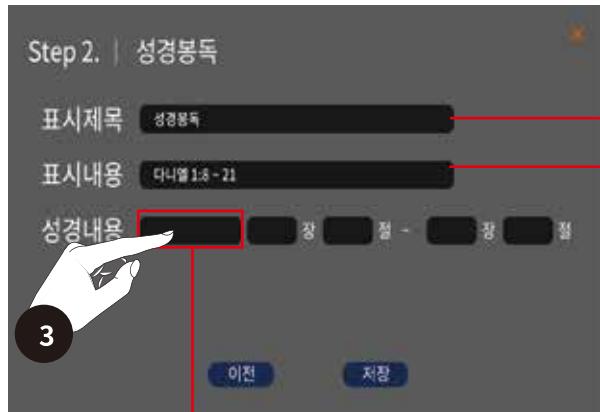

- 1 제목 입력
- 2 내용 입력

 [성경내용 “권”선택하기]

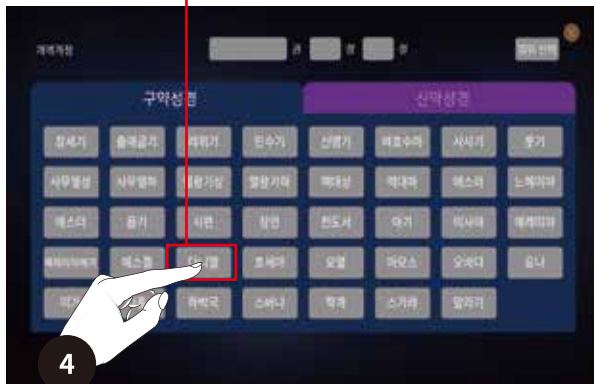


[성경내용 “권”선택하기]

※ 성경내용 선택은 “권” - “장” - “절” 순서로 각각 선택 합니다

3 사용 방법

 3-8 예배 메뉴 기능

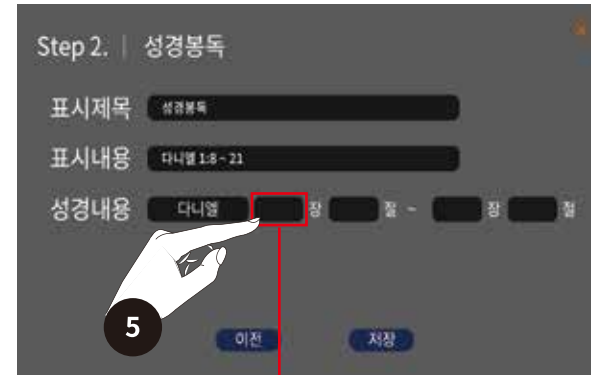


[성경내용 “장”선택하기]




[성경내용 “장”선택하기]

※ 선택되어진 “권”의 “장”이 표시되고, 표시된 “장”에서 시작할 “절”을 선택합니다.

 3-8 예배 메뉴 기능

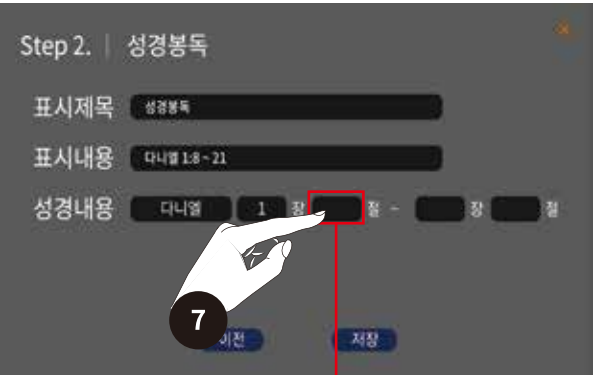


[성경내용 “절”선택하기]

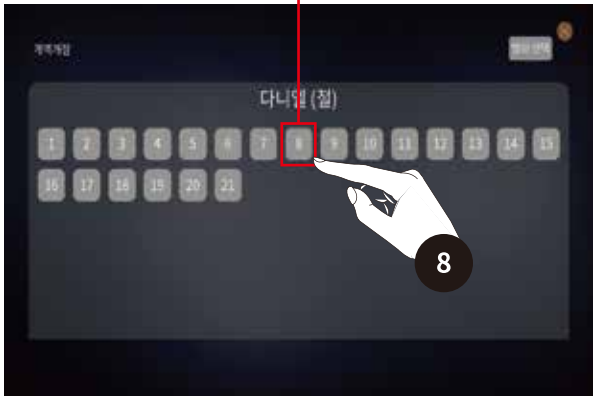 


[성경내용 “절”선택하기]

※ 선택되어진 “장”의 “절”이 표시되고, 표시된 “절”에서 시작할 “절”을 선택합니다.

 3-8 예배 메뉴 기능

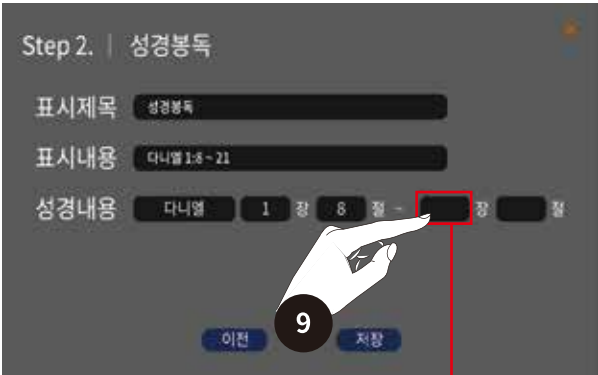

[성경내용 종료 할“장”선택하기]

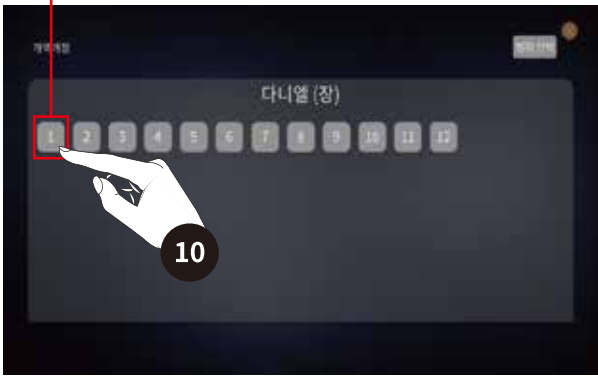 


[성경내용 종료 할“장”선택하기]


※ 시작되어진 “권”의 “장”이 표시되고, 표시된 “장”에서 종료할 “장”을 선택합니다.

3 사용 방법

 3-8 예배 메뉴 기능

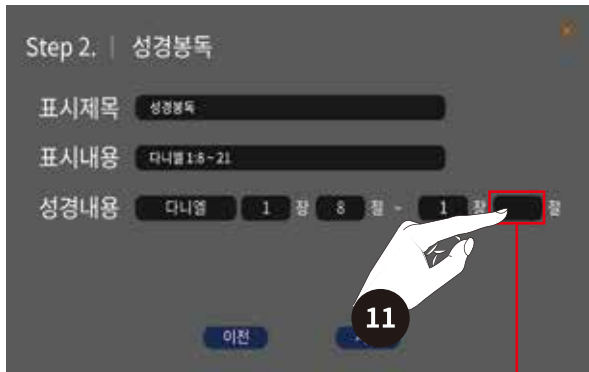

[성경내용 종료“절”선택하기]

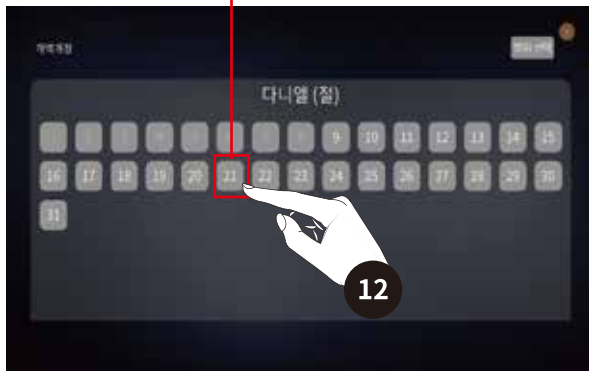 

[성경내용 종료“절”선택하기]

※ 시작되어진 “절”은 선택불가로 되어 있으며, 그 이후의 종료 “절”을 선택할 수 있습니다.

3 사용 방법

3-8 예배 메뉴 기능



 
[성경내용 선택완료]



[선택완료 성경내용 저장]


※ 성경내용을 [시작] 과 [종료]를 완료 한 후 반드시 (저장) 버튼을 눌러 해당 사항을 저장합니다.

3-8 예배 메뉴 기능

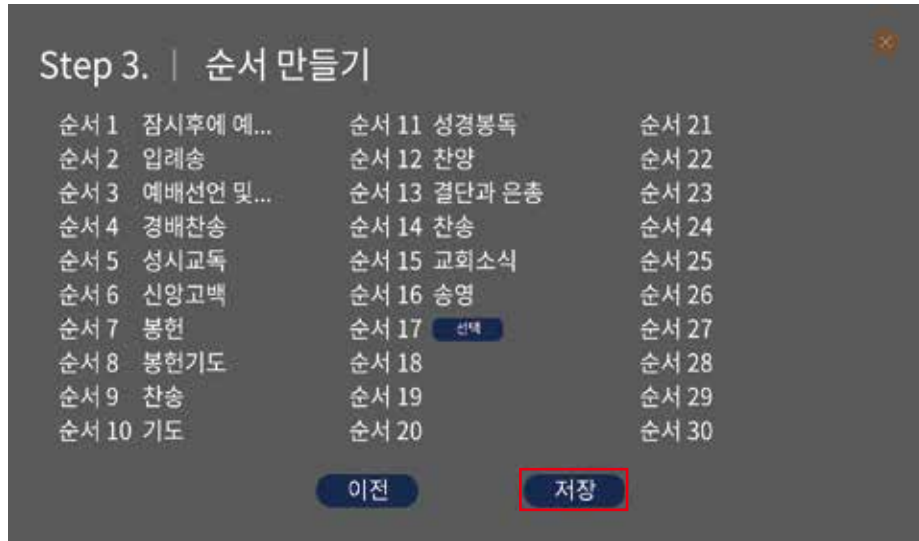

※ 총 6개의 메뉴기능을 이용하여 “예배 순서”를 원하는 내용으로 만든 후 항상 하단의 (저장) 버튼을 눌러 저장합니다.

 3-8 예배 메뉴 기능

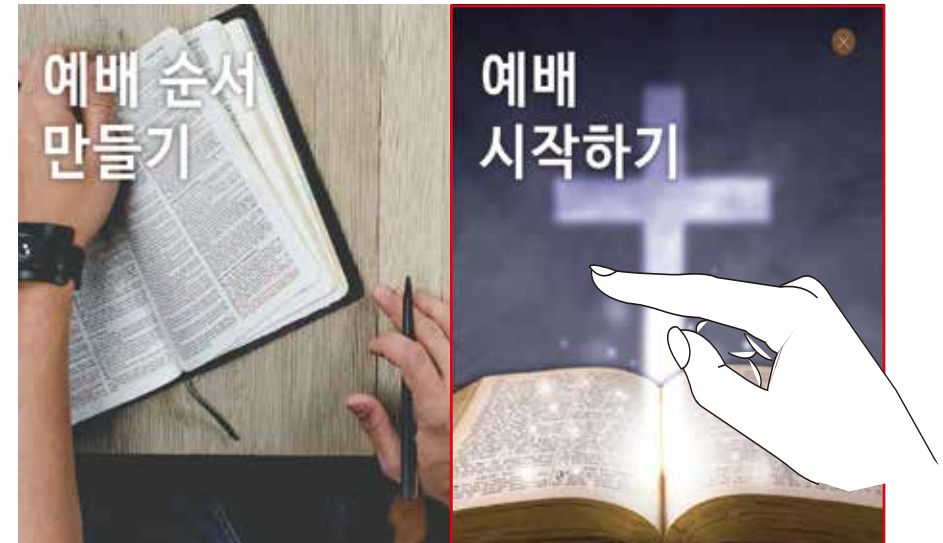

1. [예배 시작하기] 메뉴를 선택합니다.



2. [예배 리스트]가 표출 됩니다.

※ [예배 순서 만들기]에서 먼저 만들어 놓은 “예배 순서”가 최근 만든 순서 또는 수정한 순서로 정렬되어 리스트 표출 됩니다.

3 사용 방법

 
3-8 예배 메뉴 기능

예배 시작하기



1. [예배 리스트] 중에서 원하는 항목의 [시작]을 선택합니다.

※ 예배 리스트 만들기에서 만들어 놓은 순서 내용

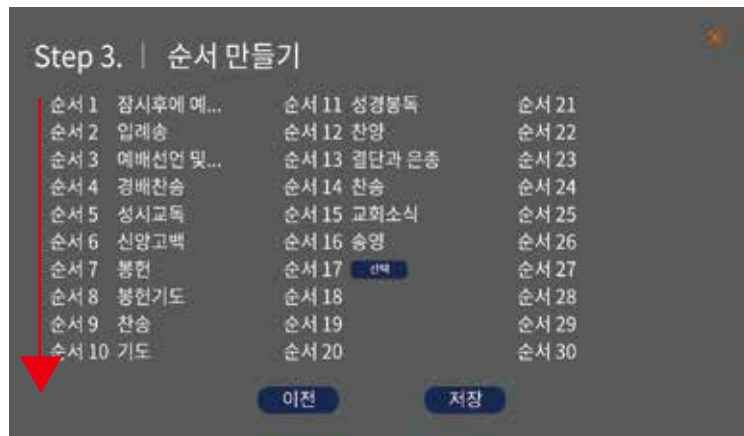

※ 순서만들기에서 만들어 놓은 순서로 시작됩니다

3 사용 방법

3-8 예배 메뉴 기능

※ 예) 만들어 놓은 순서로 예배 시작된 화면

(순서 1)



(순서 2)



3 사용 방법

3-8 예배 메뉴 기능



종료 버튼

하늘에 계신(주기도문)

하늘에 계신 아버지 이름 거룩 하사

주님 나라 임하 시고 뜻이 이루어 지이 다 일용할

악보 / 가사 화면 전환



4 안전을 위한 주의 사항

⊘ 금지항목



직사광선이 들거나 전열기 등의 열이 발생하는 기기 옆에 설치 하지 마십시오. 감전, 화재, 고장 및 변형의 원인이 됩니다.



고장시에는 분해하지 마시고 반드시 지정된 서비스 업체로부터 수리를 받으십시오. 본체 분해시 수리를 받지 못할 수 있습니다.



전가락, 철사, 송곳 등과 같은 쇠붙이나 종이, 성냥 등과 같은 인화성 물질을 제품 내부 및 후면 단자(마이크, 오디오 출력)에 삽입하지 마십시오.



멀티 콘센트에 많은 전자 제품을 연결할 경우 과열로 인한 화재의 위험이 있습니다.



물기가 있는 손으로 전원 플러그를 만지지 마십시오. 감전의 위험이 있습니다.



제품을 던지거나 발로 차는 행위, 손으로 두드리는 행위 등 직접적인 충격을 주는 행위는 손상의 가장 큰 원인이 됩니다.



제품을 청소할 경우에 물을 뿌리거나 화학 약품을 사용하여 닦지 마십시오.

⚠ 필수항목



제품에서 이상한 소리, 타는 냄새 또는 연기가 나면 즉시 전원을 끄고, 충전어댑터가 연결되어 있으면 연결 코드를 제거하고 A/S를 신청해 주세요



먼지가 없는 청결한 장소, 습기가 없는 곳, 충격이나 진동이 없는 곳, 고정되고 안정된 장소에 설치하십시오.

Q 고객 사유로 제품 및 부속물이 분실되거나, 훼손되었을 경우

A 고객님의 사용 중에 발생하는 분실이나, 훼손 시에는 직접 구매를 하셔야 합니다.

Q HDMI 외부연결을 통한 TV 화면이 나오지 않는 경우

A 배터리가 충분히 충전되어 있는지 확인해 주시고, 충전 어댑터를 연결하여 전원을 켜보시기 바랍니다.
TV가 [외부 입력]모드로 선택되어 있어야 합니다.
또한, TV가 HDMI 외부 입력을 정확히 지원하는 지 확인하여야 합니다.
일반적으로 TV의 HDMI 외부 입력 지원이 보편적이지만, 특정 브랜드의 특정 TV 제품은 HDMI 케이블 또는 HDMI 버전에 따라 원활한 지원이 되지 않는 경우가 있습니다.

Q 인증되지 않은 콘텐츠입니다.

A 삽입되어 있는 Micro SD 카드의 인식불량일 경우 빼어내어 다시 삽입하여 보시기 바랍니다.
계속 동일 증상일 경우 Micro SD 카드의 불량 또는 오류일 수 있으므로, A/S 센터로 연락하여 주십시오.
사용자의 훼손 및 부주의에 의한 불량일 경우 보증기간 내에서 교체해 드립니다.
※ 불법으로 복제한 Micro SD 카드일 경우 민,형사 고발 조치가 발생할 수 있으므로, 불법 복제 콘텐츠를 사용하지 마시기 바랍니다.

Q 내장 배터리의 사용 시간

A 본체에 내장되어 있는 7000mAh 대용량 배터리의 일반적인 사용시간은 사용조건 및 환경에 따라 차이가 있습니다.

- ① 완충 소요 시간 : 약 6시간
- ② 테스트 환경에서 사용 시간 : 약 4시간
 - ※ 테스트 환경 : 1080p 비디오 재생
 - 최대 화면 밝기
 - 최대 소리
 - 와이파이 및 블루투스 동작
 - 외부 USB 메모리 연결

제품 사용 중 불편사항이나 문의사항이 있으시면 홈페이지 질문게시판의 "Noel Worship Player" 항목으로 연락주시기 바랍니다.
빠르게 도와드리겠습니다.

설명서는 홈페이지에서 다운로드 받으실 수 있습니다.

이용시간
평일 오전 10시 ~ 오후 6시
점심시간 낮 12시 ~ 오후 1시
토요일/일요일/공휴일 휴무

www.musicboxent.net

주소 서울특별시 용산구 한강대로 283, 2층 201-1호
전화 82 2 6743 0030

주식회사 뮤직박스엔터테인먼트

NOEL

WORSHIP PLAYER

User Manual

English



※ Before use, be sure to read the precautions for safety and use it correctly.
The pictures in the user manual are drawn for explanation purposes and may partially differ from the actual shape.

Index

1	Product composition	
1-1	Components	3
1-2	Noel Praise Worship Player Name of Each Part	4
2	Product connection method	
2-1	Power connection and turn on	5
2-2	HDMI connection	6
2-3	3.5mm audio jack connection	7
2-4	Wired LAN Connection	8
2-5	USB memory connection	9
2-6	Micro SD card connection	10
3	How to use	
3-1	Main menu screen	11
3-2	Settings menu screen	12
3-3	Praise menu function	13
3-4	Bible menu function	17
3-5	Lord's Prayer	20
3-6	Apostles' Creed	21
3-7	Responsive Reading	22
3-8	Worship menu function	24

4	Precautions for Safety	44
5	Problem solving	45
6	Customer service center	47

1 Product composition

1-1 Components

Check the components.

Open the box to see the 'Noel' body and other accessories.

① Body



 
Noel Praise Worship Player

② accessories

power adapter



manual



Noel songbook



Micro SD

 
- ★ Micro SD memory card is installed in the body.
- ※ When the Micro SD memory card is separated from the product, the 'Noel praise service' function does not work.
- ※ Please be careful not to lose, steal or damage the Micro SD memory, and in case of loss, theft or damage, we will not responsible.

- Components may vary depending on the manufacturer's circumstances.
- Product components may differ in appearance and color depending on the model.

1 product composition

1-2 Noel Praise Worship Player Part Names


Front

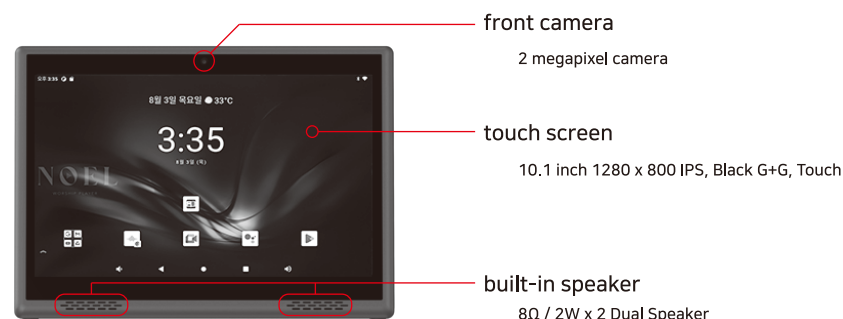

Rear



 Side

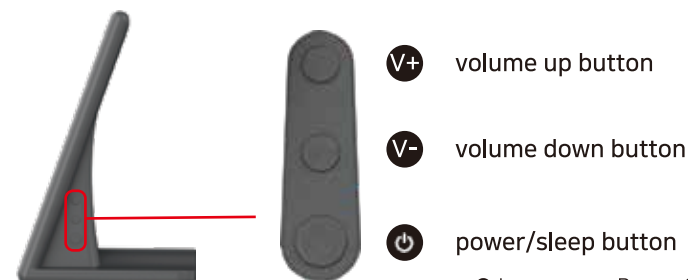


- Long press: Power ON / OFF
- Short press: Sleep ON / OFF

2 Product connection method


2-1 Connect power and turn on

 1 Connect the power adapter.

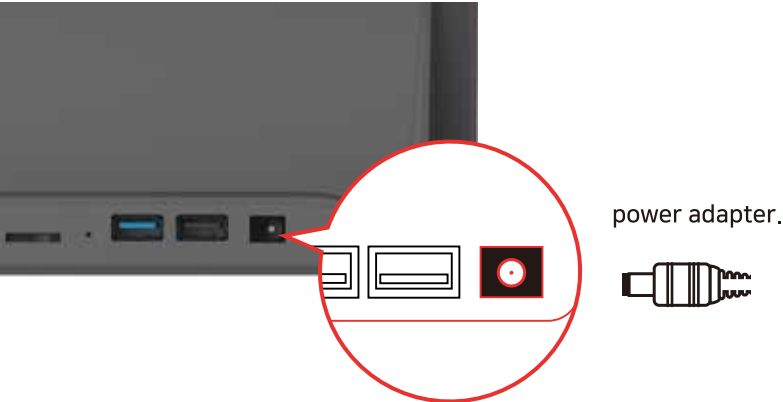

Charging: The built-in battery inside the product is charged when the power adapter is connected.

 
2 Press and hold the power button.

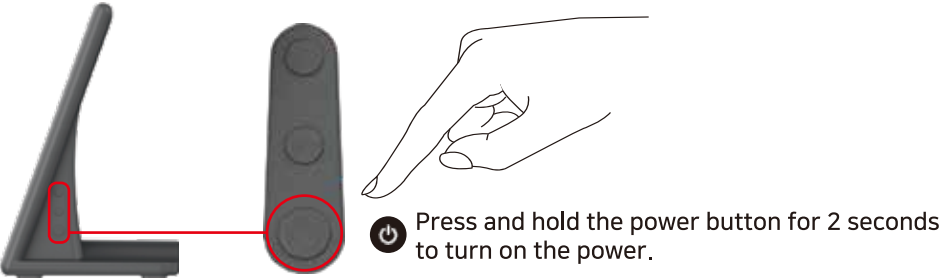


2 Product connection method

2-2 HDMI connection

 Rear

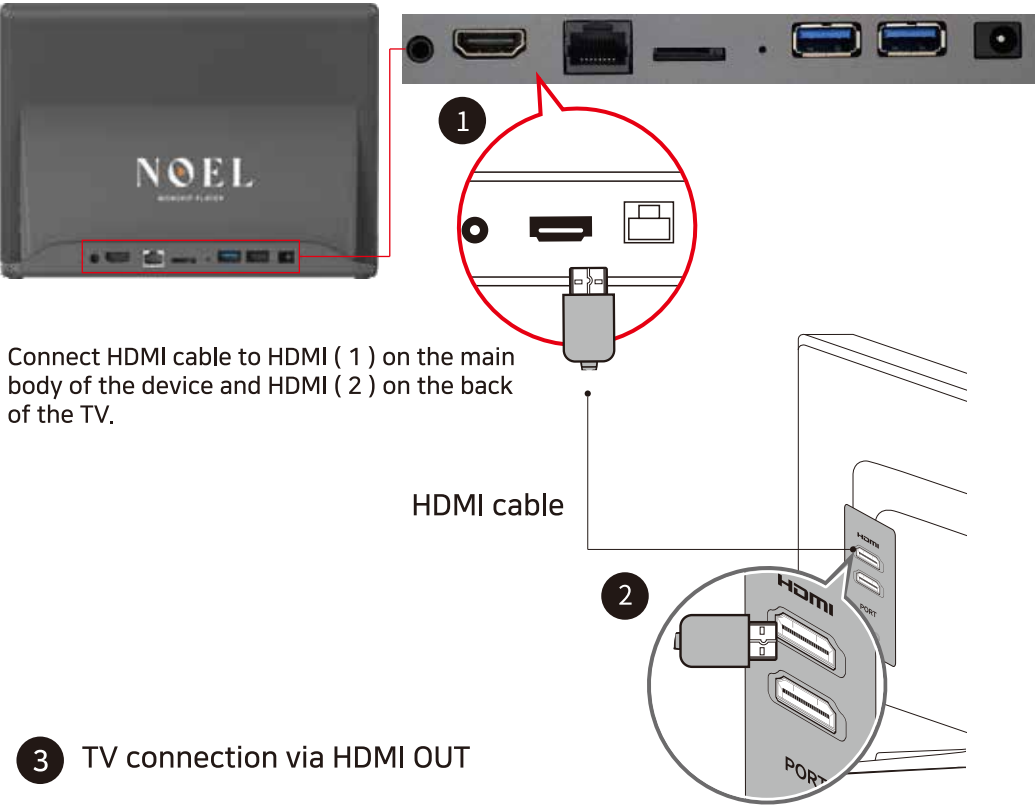


3 TV connection via HDMI OUT

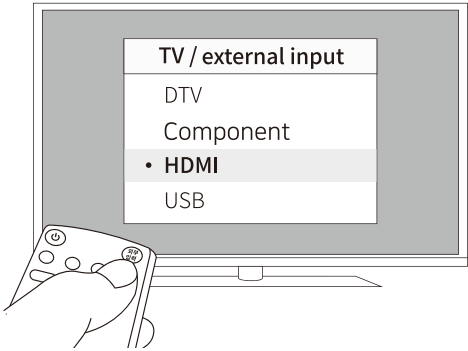 

After turning on the TV, press External Input on the TV remote control and select the external input HDMI Port number that connects the Noel device to the TV.


2 Product connection method

 2-3 3.5mm audio jack connection

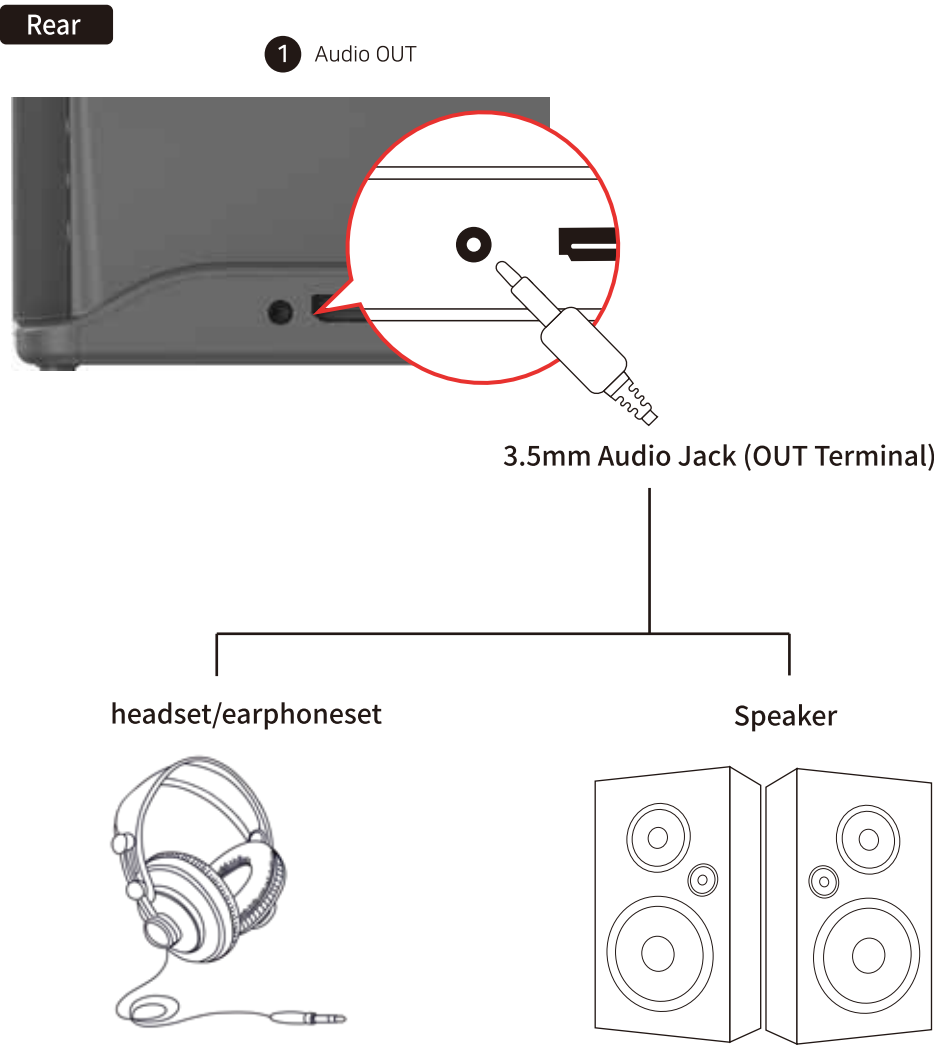


2 Product connection method

 2-4 wired LAN connection

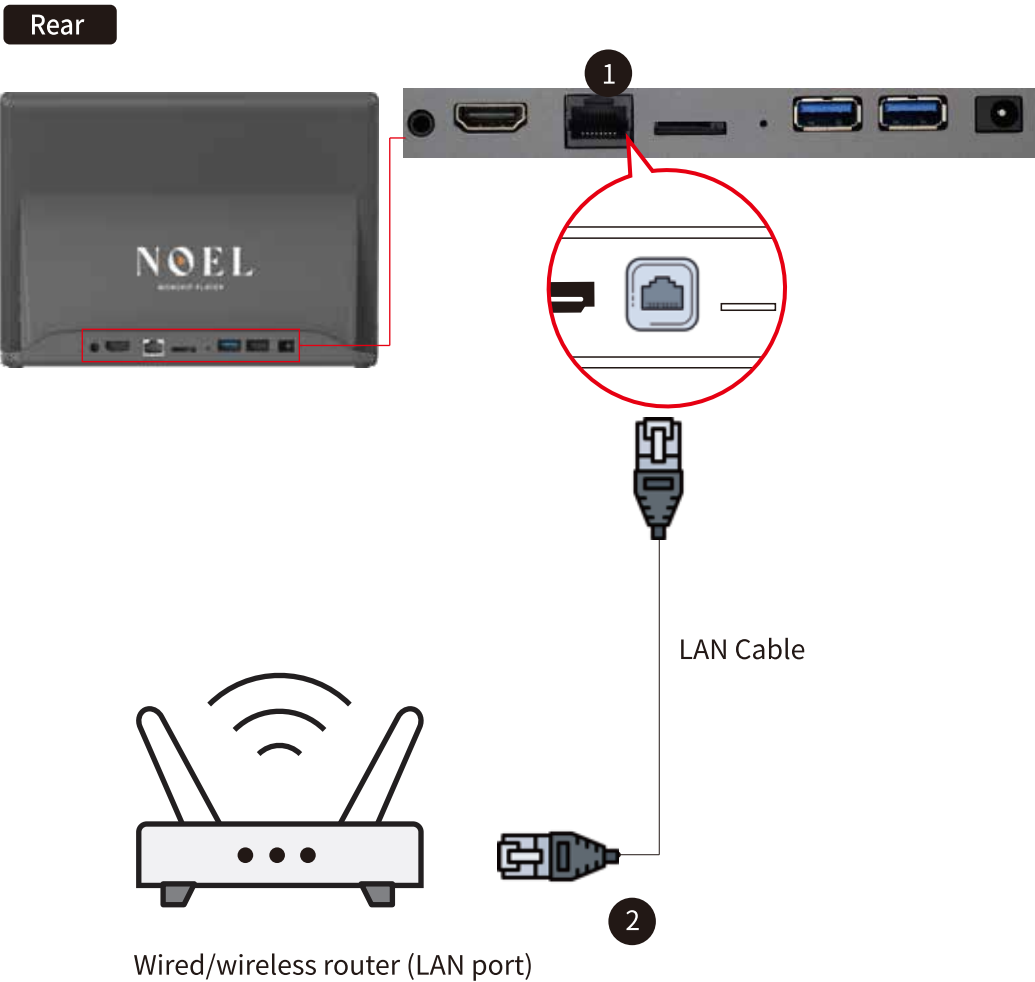


2 Product connection method

 2-5 USB memory connection

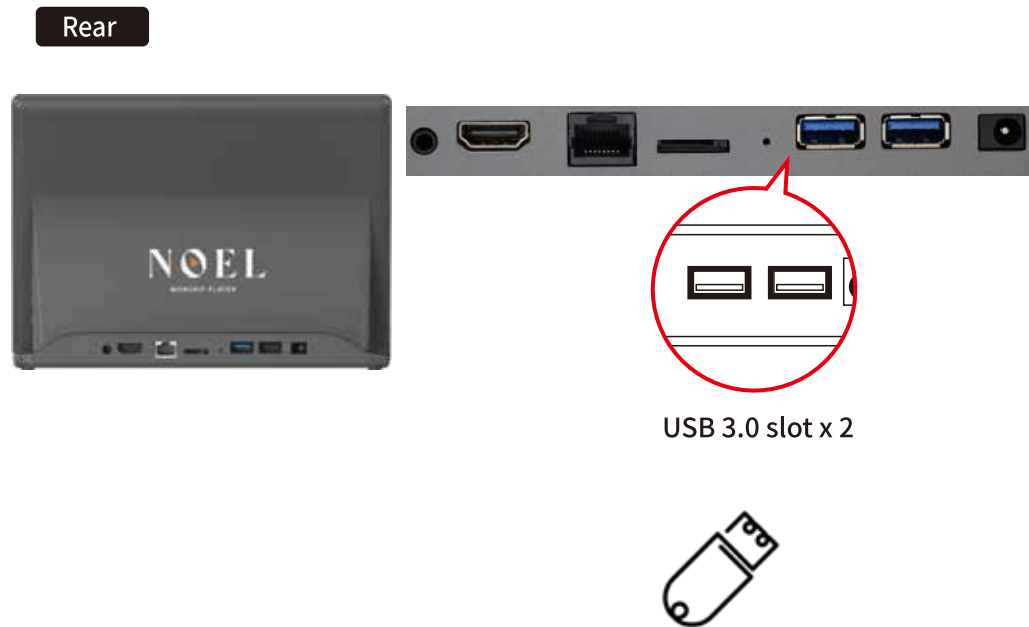


※ USB 3.0 (Blue): Max. 5 Gbps

 In order to use USB 3.0 (blue), which supports high speed, at normal speed, the USB memory used must also support USB 3.0 or higher.

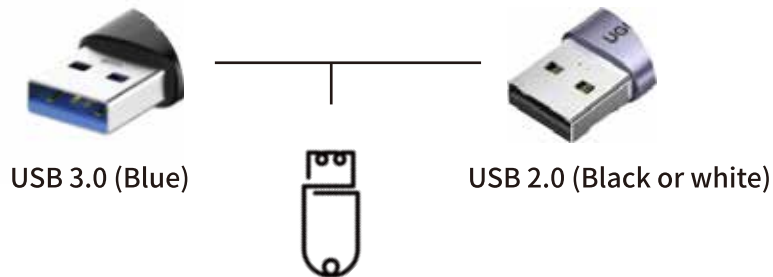

2 Product connection method

 2-6 Micro SD card connection

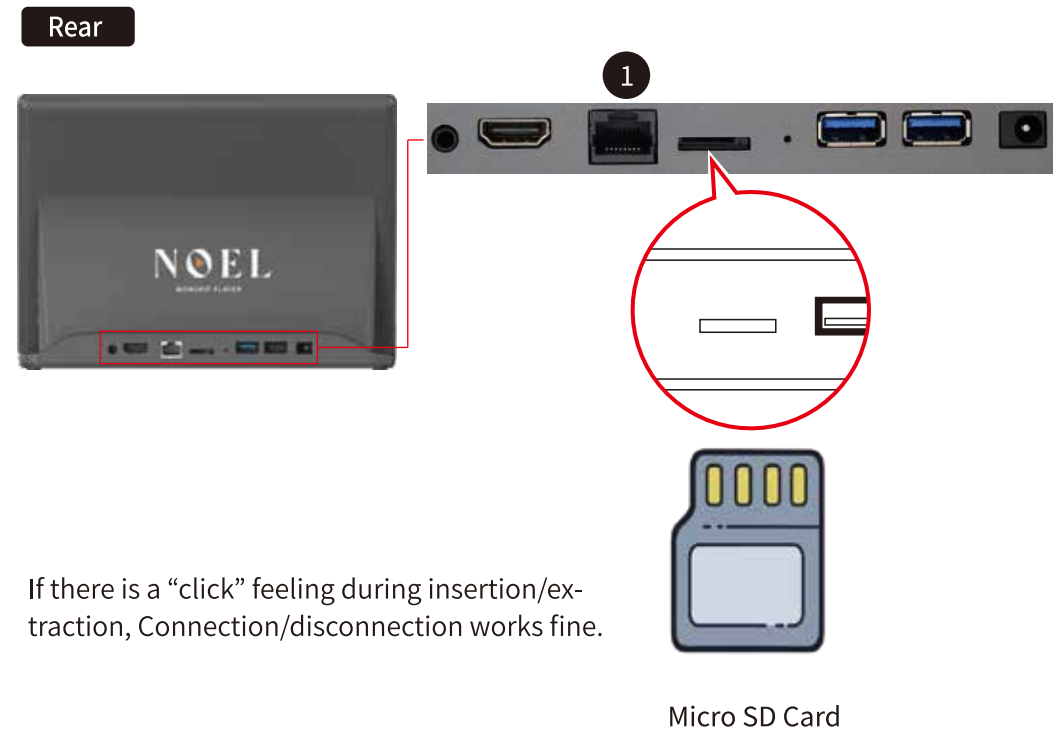


※ Noel Praise and Worship Player is equipped with a Micro SD card loaded with “Praise and Worship related data contents”.

※ If the installed Micro SD card is removed, the “Noel Praise and Worship” program will not run normally.

※ After using another Micro SD card if necessary, be sure to connect the existing “Micro SD card for Noel praise worship” and check that it is properly connected before using it.

3 How to use

 3-1 main menu screen

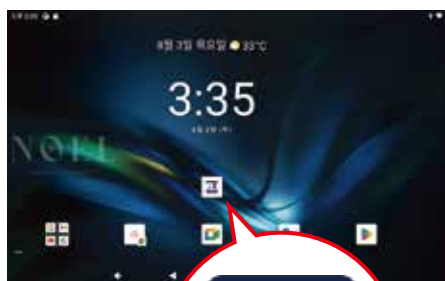

Home screen of Google Android app after booting up (startup screen)



1 Run the “NOEL” Praise Worship app.

2 When the “NOEL” praise and worship app is executed, the main menu screen below is displayed.



- A** praise menu
- B** bible menu
- C** worship menu
- D** Lord's Prayer
- E** Apostle Creed
- F** litany
- G** settings menu

3 How to use

3-2 Settings menu screen



After selecting the menu change, you must save it with the (Save) button to apply the change.

- 1. Select hymn: New hymn (default), hymn (old)** - Select the type of hymn.
- 2. Select Bible: Revised Version (default), Revised Korean** - Select the type of Bible.
- 3. Bible Reading: Male (default), Female**
 - Select the male or female voice of the Bible reading function.
- 4. Responsive Reading: Revised Version (default), Revised Korean**
 - Select the type of reading text.
- 5. The Lord's Prayer: Revised Version (default), Revised Korean**
 - Select the type of Lord's Prayer.
- 6. Apostles' Creed: Revised Version (default), Revised Korean**
 - Select the type of Apostles Creed.
- 7. Rubi display: On (default), Off**

 


Rubi display on



Rubi display off

- ### 8. Melody Bar: On (default), Off

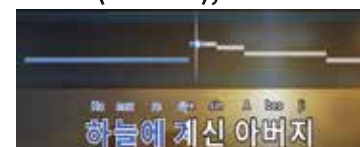

Melody bar on



Melody bar off

3 How to use

3-3 praise menu function



1. Touch and select “Praise” in the main menu.



- 2. A screen where you can search hymns/gospel songs appears.
- 3. If you “select touch” in the rectangular search box, a keyboard that can be entered appears at the bottom.

3 How to use

3-3 praise menu function



4. Enter the title of the song you are looking for or a known song number and press the button() to display the search results.

※ First consonant search: Ex) “만복의 근원 하나님” > “ㄹㅅㅇㄱㅇㅎㄴㅇ”
Integrated Search: Search all [Title/Singer] with the input contents by default.
The more accurate you enter, the more accurate the search result will be.

- Song number: All song numbers are 5-digit numbers,
 - ★ The song number of the new hymn begins with “35XXX” and the last 3 digits are the new hymn number.
 - ★ The song number of the (old) hymn begins with “30XXX” and the last 3 digits are the (old) hymn number.



Search result list

 
3 How to use

3-3 praise menu function

[Performance-related functions]




Sheet OFF

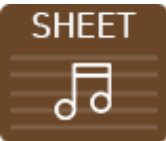


Sheet ON

 ■ Musical Sheet display function
The sheet display button switches the sheet screen and the lyrics screen of the song.

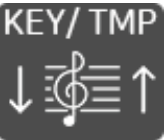

Pitch/Tempo

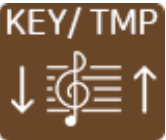 

Pitch/Tempo

■ Pitch / Tempo
Functions for pitch/tempo adjustment are displayed.
(pitch control / tempo control / basic pitch / basic tempo)



Chorus Repet OFF



 
Chorus Repet ON

■ Chorus repetition
This is a function that allows you to repeat the chorus through the chorus repeat button when playing a hymn.
(※ limited to songs with chorus)

3 How to use

3-3 praise menu function

[Pitch / Tempo adjust]



press the Pitch / tempo button, detailed control buttons are displayed.



Raise the pitch of the note (+7 steps)



Lower the pitch of the note. (+7 steps)



Increases the tempo of notes. (+5 steps)



Decreases the tempo of notes (+5 steps)



Returns to the default pitch of the song.



Returns to the default tempo of the song.

 
※ The pitch level adjusts the fine level of the pitch, not an octave.
※ The tempo step adjusts the speed of the beat, not a proportional step.

3 How to use

3-4 Bible menu function



1. Touch and select “Bible” in the main menu.

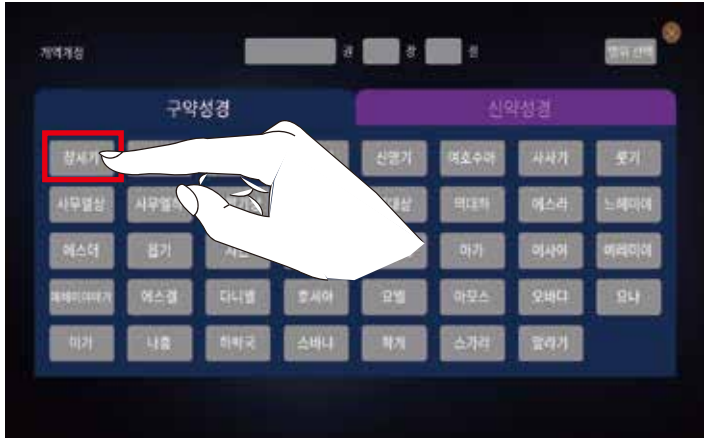

- 2. The Old Testament / New Testament are separated by tabs.
- 3. Select the desired Bible (Old Testament/New Testament) and select “Books (Example: Genesis)”.

3 How to use

3-4 Bible menu function



 
4. Select the desired (chapter). The screen automatically changes to (verse) selection.




5. If you select the desired (verse), the contents of the Bible section are displayed.

3 How to use


3-4 Bible menu function

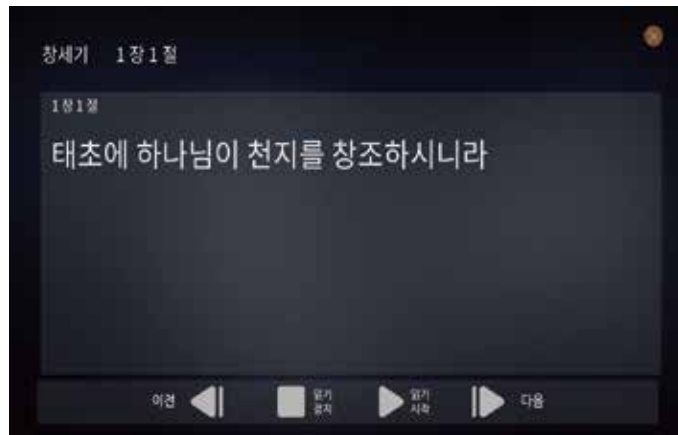

 6. It starts from the contents of the selected Bible section.



 1. Previous (◀): Moves to the previous verse of the current verse.
2. Next (▶): Moves to the next verse of the current verse.
3. Start Reading (▶): Read the contents of the current section aloud.
When a verse is finished reading, the next verse is automatically displayed and reading continues.
3. Stop Reading (■): Stop reading the Bible.



You can select a section of the Bible through the [Range Selection] button on the upper right of the Bible screen. it's possible.

 


3 How to use


3-5 Lord's Prayer



1. Touch and select "Lord's Prayer" in the main menu.

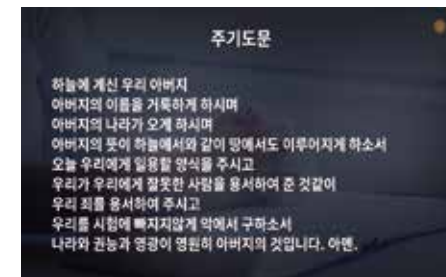


Revised Version Lord's Prayer

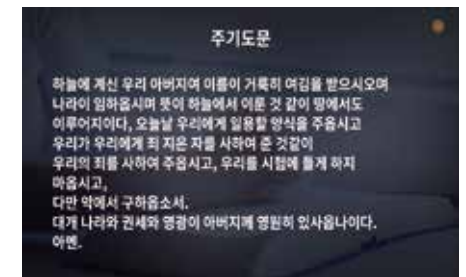 

Revised Korean Lord's Prayer

 ※ It is displayed as the Lord's Prayer type selected in Settings.




3 How to use


3-6 Apostle Creed



 1. Touch and select “Apostles Creed” in the main menu.

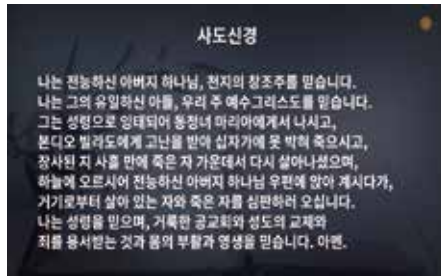

Revised Version Apostles'

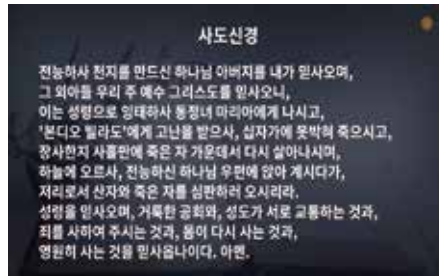 

Revised Korean Apostles'

※ It is displayed as the Apostles Creed type selected in Settings.



3 How to use

3-7 Responsive Reading

 


1. In the main menu, touch and select “Responsive Reading”.




2. Select the content of you want.

※ The type of Responsive Reading is displayed according to the type of Responsive Reading selected in “Settings”.



3 How to use

 3-7 Responsive Reading

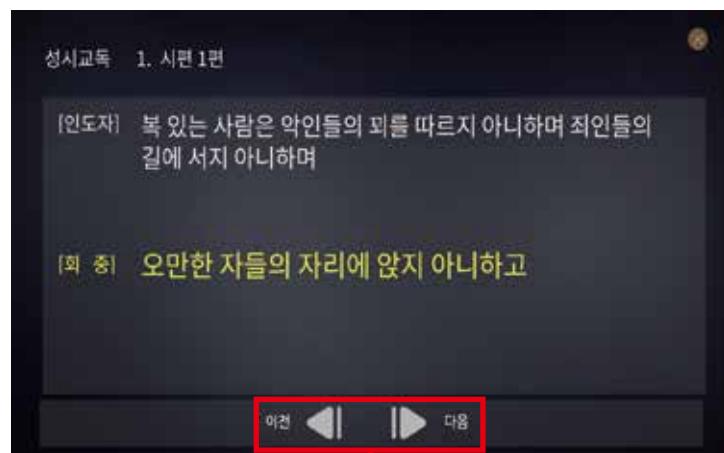

1. Previous (◀) : Shows the contents of the previous line of the selected Responsive Reading.
2. Next (▶) : Shows the contents of the next line of the selected Responsive Reading.

3 How to use

3-8 Worship menu function



1. Touch and select "Worship" in the main menu.



2. Select "Create Worship Order" menu to create an order for worship.

3 How to use

3-8 Worship menu function

Creating an Order of Worship

[Step 1] - Create or edit worship list



[+ New] button: Create a new order of worship



※ Modify the content of the previously created list through [Edit]



3 How to use

3-8 Worship menu function

[Step 2] - Worship list title and wallpaper selection



- 1 If you select the worship title input window, the input keyboard is displayed and enter the title.
- 2 After entering the title, select one of the background images displayed on the screen.
- 3 After selection is complete, select the (Save) button to save.

3-8 Worship menu function

[Step 3] - Creating an Order of Worship



1. Click [Select] according to the order of worship you want to create.



2. A menu button consisting of a total of 6 contents is displayed.

 
3-8 Worship menu function

3. Contents of the 6 menus



■ Sequence Screen [Title Cover Screen]

The sequence screen is a cover screen that displays only the content. It consists of 2 lines, 1 line is the title, 2 lines are the content.

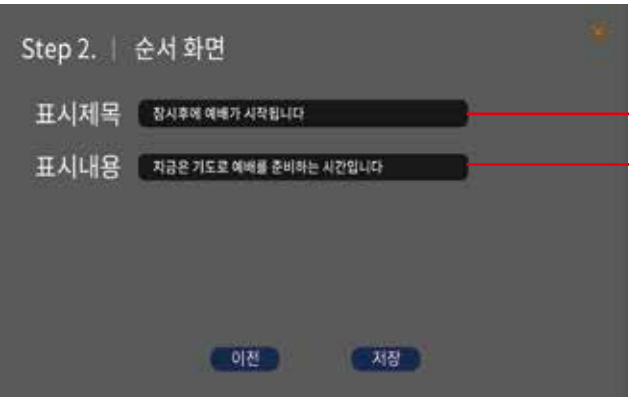

[Input screen]



[Actual display screen during worship]

3 How to use

3-8 Worship menu function



■ Hymn screen [title cover + hymn screen]

The hymn screen is for entering the content title and hymn number. It consists of 2 lines, the 1st line is the title and the 2nd line is the song number.



[Input screen]



[Actual display screen during worship]

※ After displaying the title screen, select the ► button at the bottom right to proceed to the performance screen.

3 How to use

3-8 Worship menu function

 


■ Apostles' Creed [Title cover screen + Apostles' Creed screen]

If you enter the title to be displayed on the cover, the Apostles' Creed is displayed after the cover title.



[Input screen]

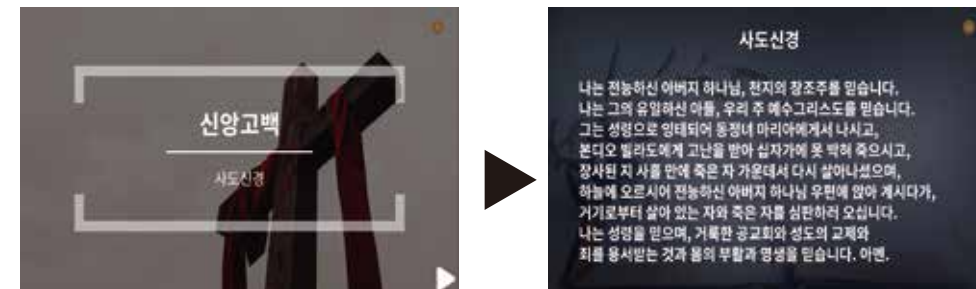

[Actual display screen during worship]

※ After displaying the title screen, select the ► button at the bottom right to proceed to the Apostles' Creed screen.

3 How to use

3-8 Worship menu function

 


■ Lord's Prayer [Title Cover Screen + Lord's Prayer Screen]

For the Lord's Prayer, if you enter the title to be displayed on the cover, the Lord's Prayer is displayed after the cover title.



[Input screen]

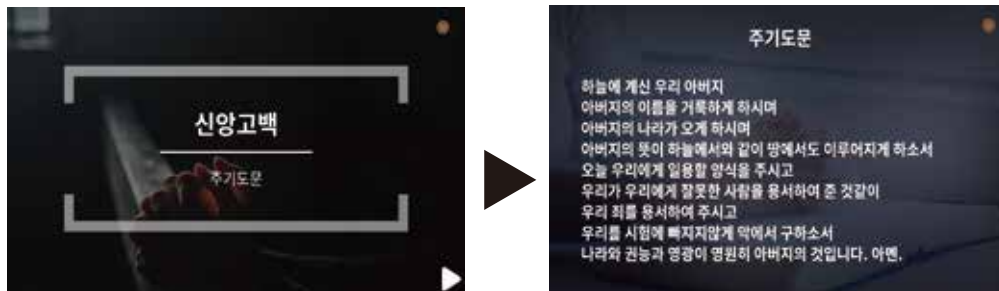

[Actual display screen during worship]

※ After displaying the title screen, select the ► button at the bottom right to proceed to the Lord's Prayer Culture screen.

3 How to use

3-8 Worship menu function



■ Responsive Reading [title cover screen + Responsive Reading screen]

For the Responsive Reading, enter the title to be displayed on the cover, Select the item of Holy Communion from the display contents.



[Input screen]



[Actual display screen during worship]

 
※ After displaying the title screen, select the ► button at the bottom right to proceed to the Lord's Prayer screen.

3-8 Worship menu function




■ Bible screen [Title cover screen + Bible screen]

The Bible screen is the content title and Bible content selection. Line 1 is the title, line 2 is the contents, and line 3 is the Bible content selection

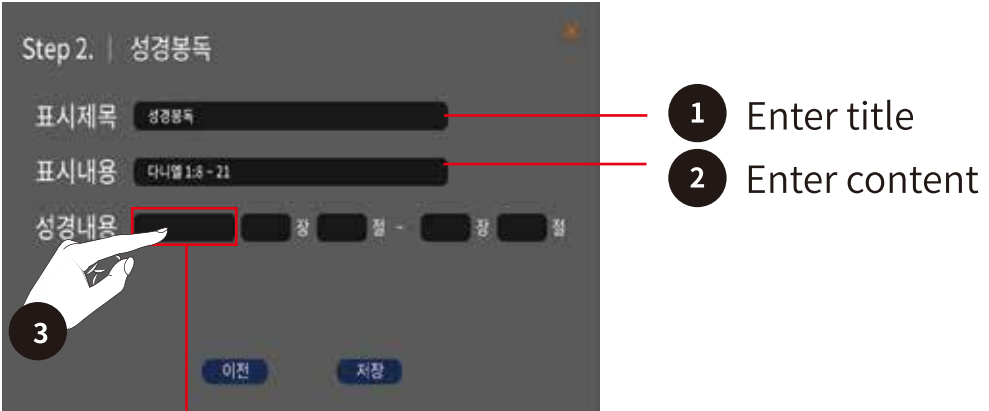

- 1 Enter title
- 2 Enter content

 
[Choose the “Book” of the Bible]

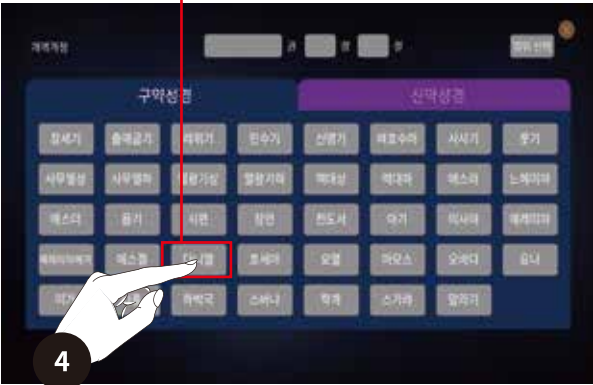


[Choose the “Book” of the Bible]

※ Select the content of the Bible in the order of “Book” - “Chapter” - “Verse”

 3-8 Worship menu function

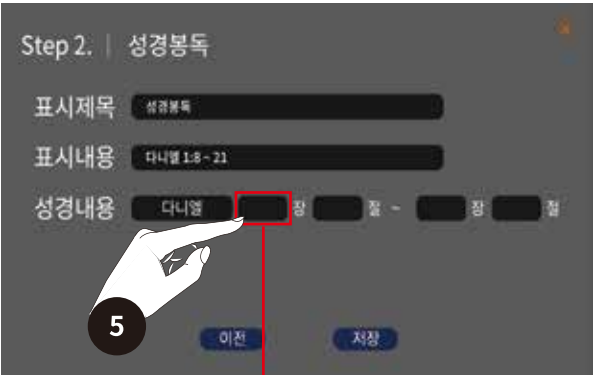


[Choose Bible “Chapter”]

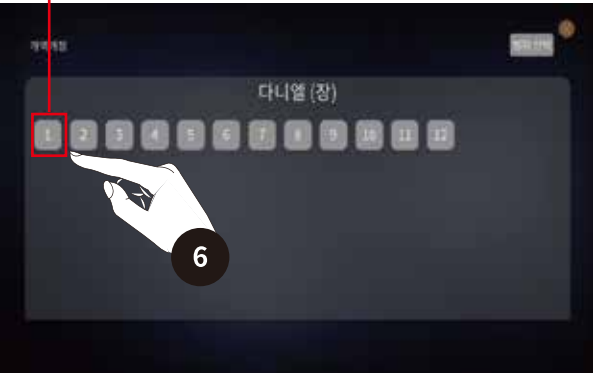 


[Choose Bible “Chapter”]

※ The “chapter” of the selected “Book” is displayed, and select the “chapter” to start from the displayed “chapter”.

 3-8 Worship menu function

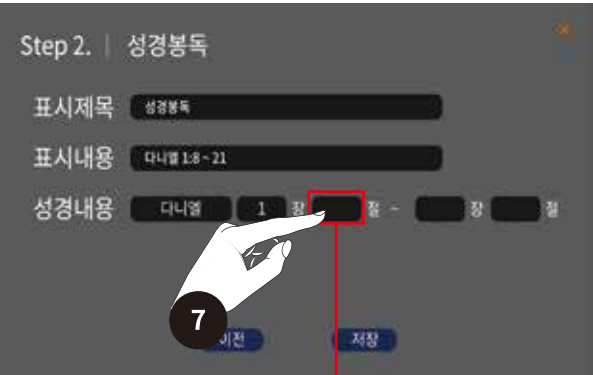


[Choose Bible “Verse”]

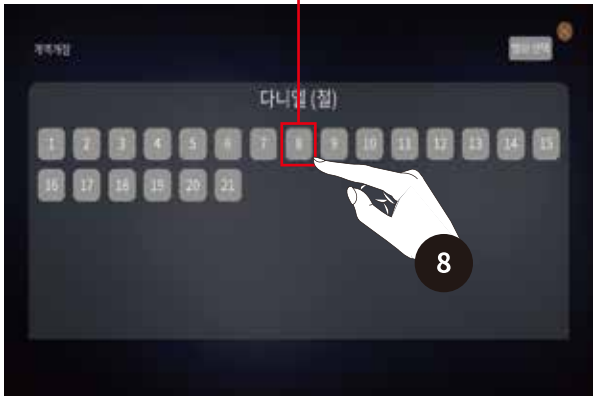 


[Choose Bible “Verse”]

※ The “Verse” of the selected “Chapter” is displayed, and select the “Verse” to start from the displayed “Verse”.

 3-8 Worship menu function

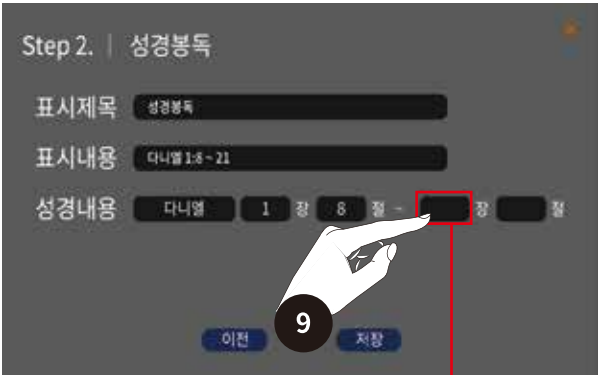

 [Choose the “chapter” to end the Bible content]

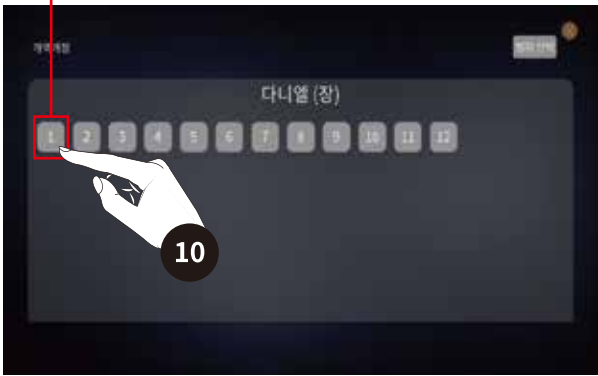


[Choose the “chapter” to end the Bible content]


※ The “chapter” of the “Book” that has started is displayed, and select the “chapter” to end from the displayed “chapter”.

3 How to use

 3-8 Worship menu function

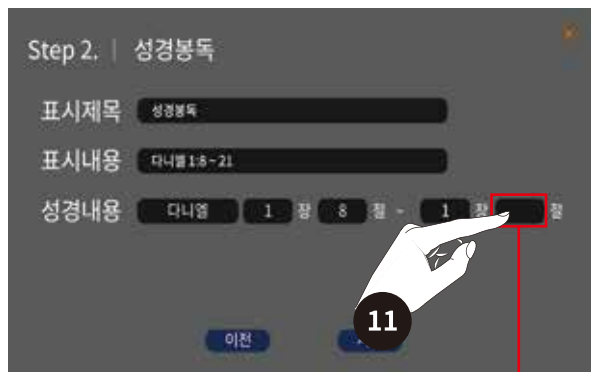

[Choose End of Bible Content "Verse"]

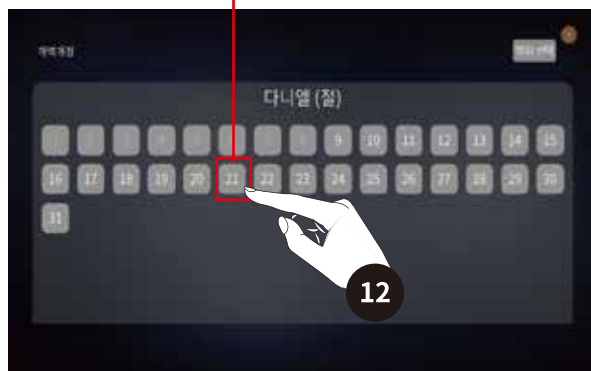 


[Choose End of Bible Content "Verse"]


※ The starting "Verse" cannot be selected, and you can select the ending "Verse" after that.

3 How to use

 3-8 Worship menu function

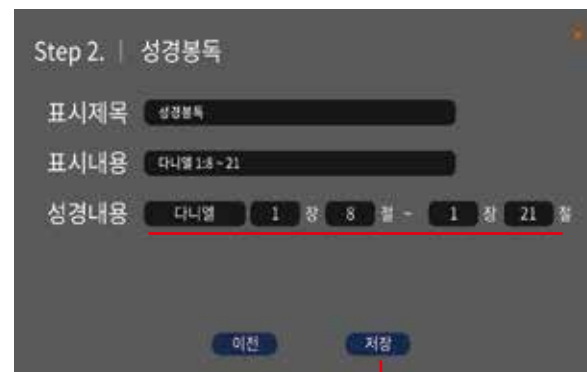

[Bible content selection completed]

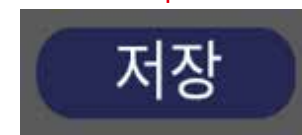 


[Save selected Bible contents]

※ After completing [Start] and [End] of the contents of the Bible, be sure to press the (Save) button to save the contents.

3 How to use

 
3-8 Worship menu function

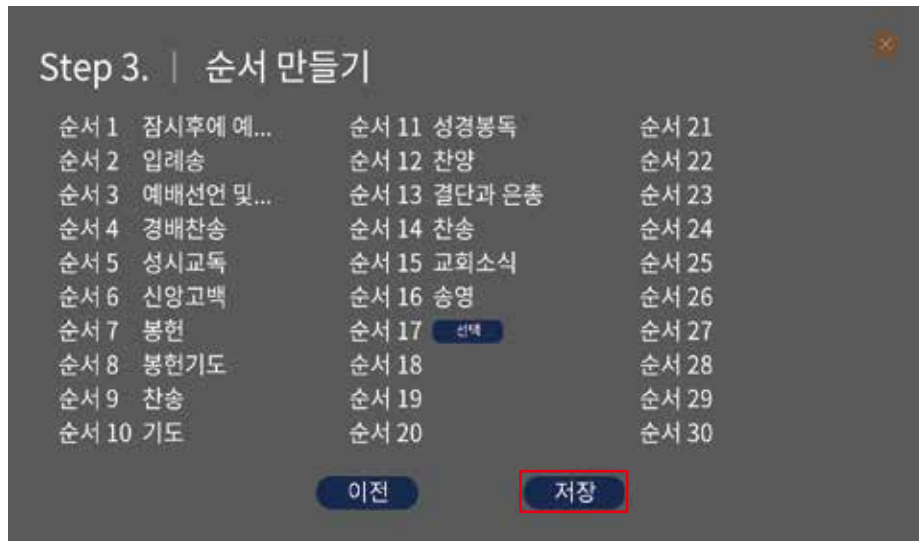

※ After making the “Worship Order” as desired by using a total of 6 menu functions, always press the (Save) button at the bottom to save.

3 How to use

 3-8 Worship menu function

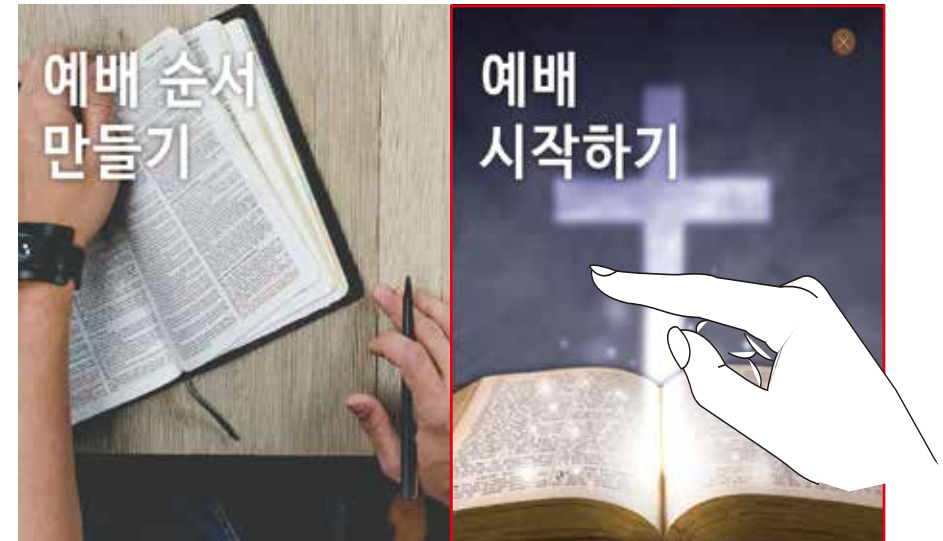

1. Select the [Start Worship] menu.



2. [Worship list] is displayed.

※ The “worship order” created first in [Create Worship Order] is sorted and displayed in the order of recent creation or modification.

3 How to use

 
3-8 Worship menu function

start worship



1. Select [Start] of the desired item from [Worship List].

※ The contents of the order made in the worship list creation

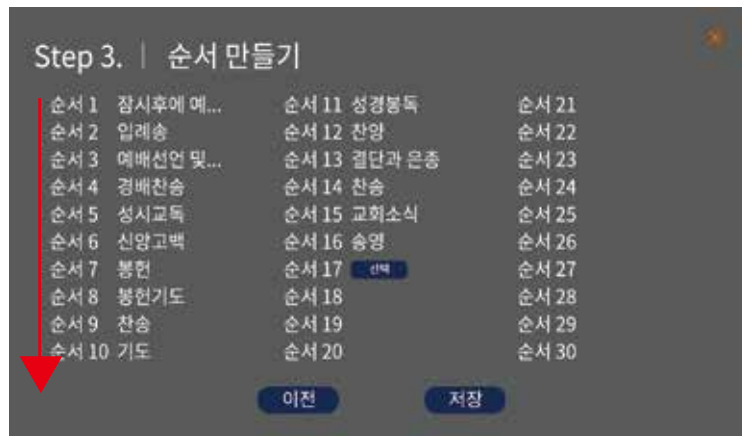

※ It starts in the order made in order creation

3 How to use

3-8 Worship menu function

※ Ex) The screen where worship started in the order you made

(Step 1)



(순서 2)



3 How to use

3-8 Worship menu function



하늘에 계신(주기도문)

하늘에 계신 아버지 이름 거룩 하사

주님 나라 임하 시고 뜻이 이루어 지이 다 일용할

exit button

Music Sheet/Lyrics screen switching



4 Precautions for Safety

Prohibited items



Do not install in direct sunlight or next to a device that generates heat such as a heater. It may cause electric shock, fire, failure or deformation.



In case of a malfunction, do not disassemble it, but be sure to get repairs from a designated service company. If you disassemble the body, you may not be able to receive repairs.



If many electronic products are connected to a multi-outlet, there is a risk of fire due to overheating.



If many electronic products are connected to a multi-outlet, there is a risk of fire due to overheating.



Do not touch the power plug with wet hands. There is a risk of electric shock.



Actions that give direct impact, such as throwing, kicking, or tapping the product, are the most likely cause of damage.



When cleaning the product, do not spray water or use chemicals to wipe it.

Required



If there is a strange sound, burning smell or smoke coming from the product, immediately turn off the power and, if the charging adapter is connected, remove the connection cord and request A/S.



Install in a clean, dust-free, damp, shock or vibration-free, fixed and stable location.

Q In case the product and accessories are lost or damaged due to customer reasons

A In case of loss or damage during use, you must purchase it yourself.

Q If the TV screen is not displayed through HDMI external connection

A Make sure the battery is sufficiently charged, and connect the charging adapter to turn on the power. The TV must be selected in [External Input] mode.

Also, make sure your TV supports HDMI external input correctly.
In general, TVs support HDMI external input, but certain TV products of certain brands may not be supported smoothly depending on the HDMI cable or HDMI version.

Q **This is unauthorized content.**

A If the inserted Micro SD card is not recognized, take it out and insert it again.
If the problem continues to be the same, it may be a defect or error in the Micro SD card, so please contact the A/S center.
If the product is not defective due to damage or negligence of the user, it will be replaced within the warranty period.
※ In the case of illegally copied Micro SD cards, civil and criminal charges may occur.
Please do not use the illegal content.

Q **Usage time of built-in battery**

A The general usage time of the 7000mAh large-capacity battery built into the main body varies depending on the usage conditions and environment.

- ① Approximate charging time: about 6 hours
- ② Approximate usage time in test environment: about 4 hours
 - ※ Test environment: 1080p video playback
maximum screen brightness
maximum sound
WiFi and Bluetooth operation
External USB memory connection

1. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

6 customer service center ---

If you have any inconveniences or inquiries while using the product, please contact the “Noel worship player” item on the question board on the homepage.

We will help you quickly.

The manual can be downloaded from the website.

www.musicboxent.net

Address 2F 201-1, 283, Hangang-Daero, Yongsan-Gu, Seoul
Tel +82 2 6743 0030

MusicBox Entertainment, Inc.