

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

RESTAURANT PAGER

MODEL: 9106

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

RESTAURANT PAGER

MODEL: 9106

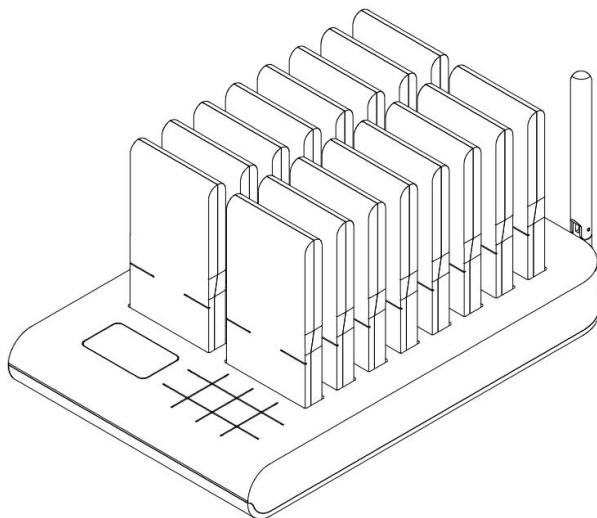

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	CORRECT DISPOSAL This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	To minimize hazards to health and the environment at the end of this product's life , laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent in order to remove the batteries and for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.
	Compliance is a EC & UK security certification.
 WARNING	Move away from any potential source of ignition immediately if the battery leaks or emits an unusual odor. When you notice unusual smell, heat, discoloration, deformation, or any other unusual situations in the process of using, charging, or storing batteries, you should immediately remove them from the device or charger and stop using them.

IMPORTANT SAFEGUARDS

Thank you for using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operation and keep it properly for future reference. Please be sure to read the precautions and safety rules on this page to ensure your safe use.

This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Caution and common sense are not built into this product, since we believe that the uses will comply with these codes. If you have any problems, please call us. Do not try to fix the problems yourself, or it will cause injury or property damage.

Please read ALL the instructions before using your machine.

1. If the battery is low, please charge it in time.
2. Do not let children, minors, and pets get close to or touch the machine.
3. Do not immerse the appliance in water or any other liquid.
4. Do not disassemble the product.
5. Using any accessories or attachments that are not provided or recommended by the manufacturer may cause injury.
6. If the machine is not to be used for a long period of time, remove the pagers. Do not use other adapters than the included AC adapter.
7. Do not leave the product hanging over the edge of table or counter or let it come into contact with any hot surfaces.
8. Do not place the product on or near hot air, electric burners or heaters.
9. Do not apply this unit to any other purposes than the indicated usage.
10. KEEP IT OUT OF CHILDREN'S REACH.
11. DO NOT CLEAN IT WITH ANY ABRASIVE MATERIAL.
12. Please clean it regularly, at least once a month.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safe.

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

PRODUCT PARAMETERS

Model	9106
Working frequency	433MHz(ASK)
Modulation	OOK AM
Power adapter In put	AC100-240V 50/60Hz
Power adapter Out Put	DC12V 1A
Pagers	16PCS

BEFORE USING

1. Before using the appliance for the first time, peel off any promotional and packaging materials and check that the product is clean and dust-free.
2. Please dispose of all plastic bags carefully and keep them away from children and pets.
3. Check all components provided according to the list in this manual. Make sure you have all of the parts listed.

SETUP CONSIDERATIONS

1. Please put the pager into the main unit to charge for more than 20 minutes before setting up.
2. In the first three seconds after the pagers is called, pressing the cancel button will not cancel the call.
3. Power on: Place all pager in the charging slot of the main unit, and turn on the pager automatically after connecting the power to the base of the main unit.
4. Power off: Place all pager in the charging slot of the main unit, enter "999" from the base keyboard and short press the [Call] key.

Note: The extension needs to be coded and set with the host base

before it can be shut down normally.

5. Enter the setting menu: Within 5 seconds of power on, press the [Call] key and the [Delete] key at the same time. When the host screen displays [F1], it will enter the menu selection interface. At this time, enter the key from the keyboard. Select the menu according to the numbers "1-6" and press the [Call] key to enter the setting menu. The setting is completed. Then short press the [Delete] key to exit the setting menu, and the standby screen displays " --- ".

- Enter the number "1": [F1] Host ID number setting
- Enter the number "2": [F2] Code setting
- Enter the number "3": [F3] Setting the number of prompts
- Enter the number "4": [F4] Buzzer switch setting
- Enter the number "5": [F5] Vibration switch setting
- Enter the number "6": [F6] Light switch setting

6. Operation process: First set the [F1] host ID number setting, followed by the [F3] prompt Number of times setting and [F4] buzzer switch setting, then [F5] vibration switch setting and [F6] Light switch setting, after completing the above operations, proceed to [F2] code setting.

Note:

1. F1, F3, F4, F5 and F6 are set in no order.

2. After modifying any value, you need to re-code it before setting it to the extension.

HOST ID NUMBER SETTING [F1]

Enter the setting menu, and the default screen will flash the current host ID number. At this time, enter it from the host keyboard. After entering the new number "01-99", short press the [Call] key to save and automatically return to [F1].

Note: If there are no special needs, please do not modify the host base number, otherwise all extensions will need to be reset. The newly set number can be used.

CODE SETTING [F2]

1. First remove all extensions from the base, and then enter the settings menu. The default screen flashes [001] . After entering the new ID number [001-998] from the keyboard, change the points to be set. After the phone is inserted into the charging slot, the function light flashes to indicate successful coding. After removing the extension, the same Set the next one in the same way until all extensions are set and short press the [Delete] key quit.
2. Do not set [999] as the extension number. This number is a shutdown command.
3. If you need to modify the extension number, just overwrite the old number with the new number.

SETTING THE NUMBER OF PROMPTS [F3]

Enter the settings menu, the default screen flashes "Current prompt times", then enter from the keyboard "001-999 times", short press the [Call] key to save, and automatically return to [F3].

BUZZER SWITCH SETTING [F4]

Enter the setting menu, and the default screen flashes "Current Status Value". At this time, enter "0 to turn off, 1 to turn on" from the keyboard, short press the [Call] key to save, and automatically return to [F4].

VIBRATION SWITCH SETTING [F5]

Enter the setting menu, and the default screen flashes "Current Status Value". At this time, enter "0 to turn off, 1 to turn on" from the keyboard, short press the [Call] key to save, and automatically return to [F5].

LIGHT SWITCH SETTING [F6]

Enter the setting menu, and the default screen flashes "Current Status Value". At this time, enter "0 to turn off, 1 to turn on" from the keyboard, short press the [Call] key to save, and automatically return to [F6].

Light status display instruction table	
Charge	Red light always on
Full	Blue light always on
Standby	Blue light flashing
Low battery	Red light flashing
Call	4 red lights flashing

CLEANING AND STORAGE

1. If the machine is not to be used for a long period of time, Remove power, clean and cover it and store it in a dry and safe place.
2. Wipe with a soft, dry cloth. Be sure to keep the product dry
3. Please put the pager and host together.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.

Suite 250,9166 Anaheim Place, Rancho Cucamonga, CA 91730



SHUNSHUN GmbH

Römeräcker 9 Z2021,76351

Linkenheim-Hochstetten, Germany

euvertreter@gmail.com

+49 1727041930



Pooledas Group Ltd

Unit 5 Albert Edward House, The

Pavilions Preston, United Kingdom

pooledas123@gmail.com

Tel: 01772418127

Made In China

IC INFORMATION

IC Caution:

-English:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

-French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Le matériel a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Le dispositif peut être utilisé dans des conditions d'exposition portables illimitées.



Technical Support and E-Warranty Certificate
www.vevor.com/support