

Bluetooth connector specifications



Model No:	BE-BLU
Chipset	富两坤 FR8016HA
Bluetooth standard	Bluetooth V5.1 (LE Mode)
Frequency range	2.402GHz-2480GHz
transmitting power	-20-10dBm (可调)
Operating Voltage	Input: 4.8V-5.2V, 典型 SV Output: MAX:8mA(2.9-3.3V)

Operation:

1. Turn on the battery to active the bluetooth receiver, and Open the bluetooth APP.
2. The bluetooth number will be listed in the APP. Select the bluetooth number you need.
3. Click the bluetooth number and enter in to the bluetooth app, and then you can check the battery information of the battery status, State of charge, current, and voltage, etc.

Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body