


BUUO
C
C
S

Fruit And Vegetable
Cleaning Machine

BUUO

User Manual

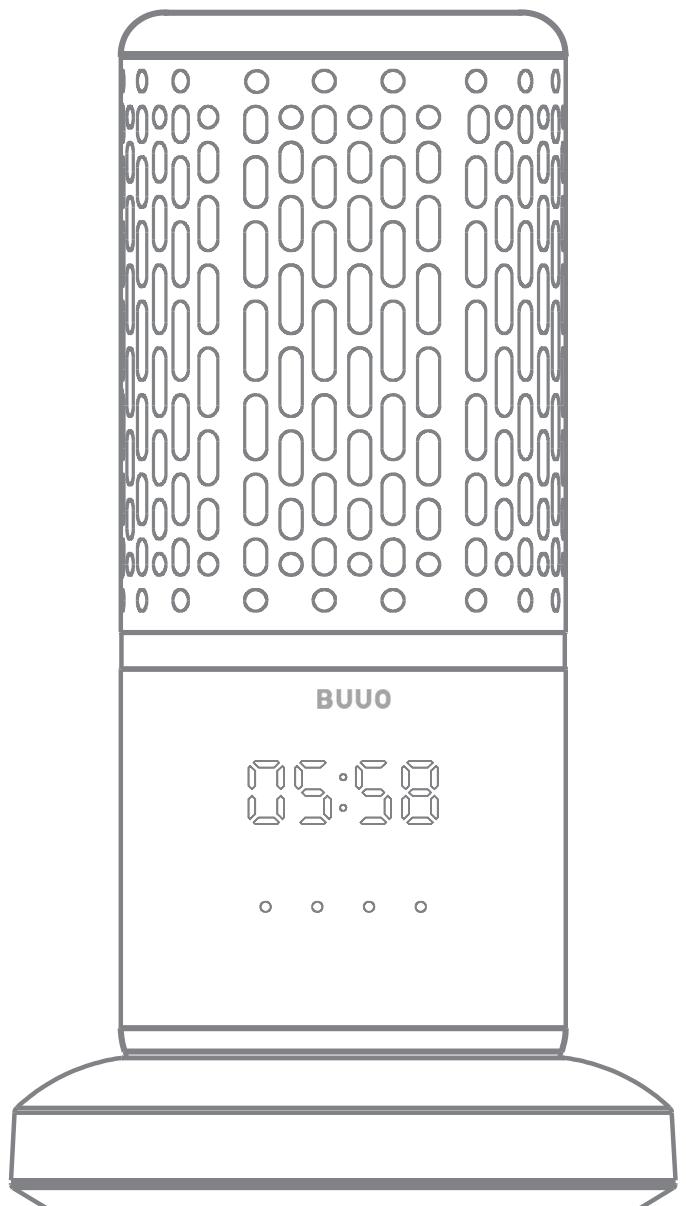

Catalog

Important Safety Instructions	01
Understanding The Product	03
Product Details	03
How To Use The Product	04
Interactive Experience	06
Cleaning And Maintenance	08
Product Warranty	09


Important Safety Instructions:

Please Read The Instructions Carefully
Before Using The Product

- ① Before use, please verify that the voltage indicated at the bottom of this product is consistent with the voltage used at the time.
- ② It is strictly prohibited to immerse the wireless charging base in water or other liquids to avoid danger.
- ③ Do not use this product in areas with flammable and explosive gases or in gas stations.
- ④ Do not charge on tilted or unstable surfaces, and do not approach or place it on any electrical appliances.
- ⑤ The charging base is used in conjunction with the the cleaning machine, and it is strictly prohibited to use other charging bases as a matching device.
- ⑥ This product is equipped with a built-in battery. Do not expose the product to a high-temperature environment or fire source, nor dispose of it as general waste.

- ⑦ The exposed electrolytic electrode is the working component of this product, and it should be avoided from collision during use to avoid deformation of the electrolytic electrode sheet and prevent it from not working properly.
- ⑧ When charging is not required, please unplug the charger plug from the power outlet.
- ⑨ For children do not use this product unattended.
- ⑩ The charging base is not waterproof, please do not expose the device to flooding, flushing, or damp environments.
- ⑪ Please do not use the product when there is no water inside the container or the water surface has not submerged the machine to avoid causing damage to the machine.
- ⑫ Under any circumstances, do not insert pin, iron wires, metal sheets or other conductive objects between the two electrodes to avoid short circuit of the electrodes and failure of normal operation.
- ⑬ Using, cleaning and maintenance of equipment should not be done by children without supervision.

Understanding The Product

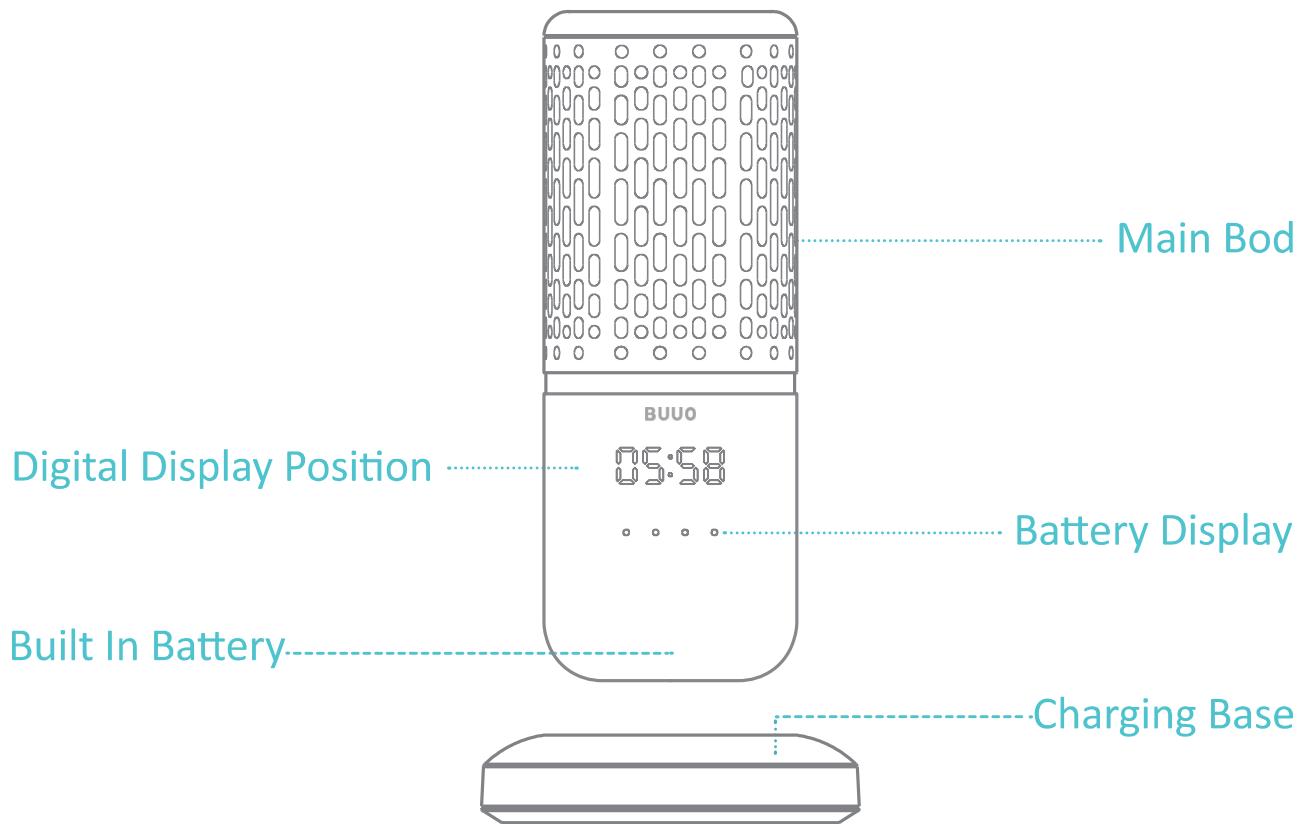


Product Details

Product Name	Fruit And Vegetable Cleaning Machine
Model	XZ-GSJ001
Brand	BUUU
Rated Power	5W
Battery Capacity	1800mA/h
IP Waterproof Level	IPX7
Rated Charging Current	2A
Rated Charging Voltage	5V


How to Use The Product

Before use, please use a 5V==2A adapter to charge the product; If the product has not been used for over an hour, please place it on the charging base for one second to activate before use.


The activation is successful when the indicator light is on.

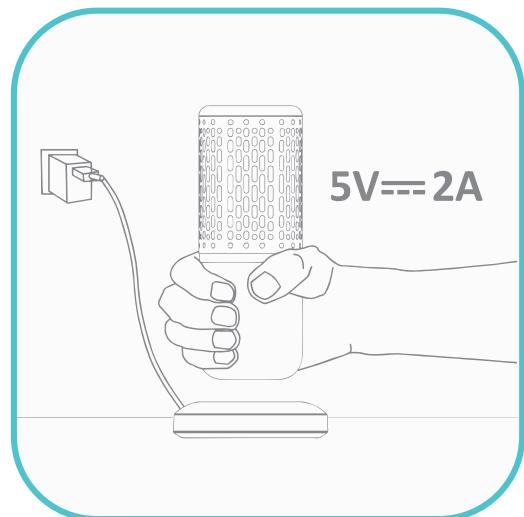


Battery Level	Indicator Lights
0-25%	Four LED beads are displayed in a cycle, and the first one will turn off
26-50%	The 2nd, 3rd, and 4th light beads are displayed in a cycle, with the 1st one on
51-75%	The 3rd, and 4th light beads are displayed in a cycle, with the 1st and 2nd one on
76-99%	The 4th light beads flickers, and the 1st 2nd and 3rd remains on
100%	All 4 light beads are on when the machine is fully charged, and will turn off after 1 minute

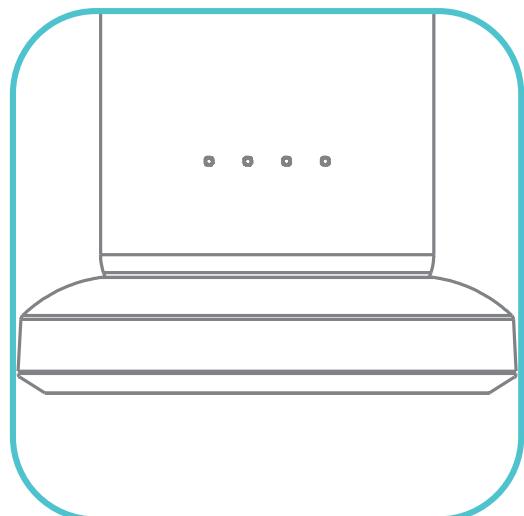

Add an appropriate amount of tap water (with a water depth of 6 centimeters or more, and the total amount should not exceed 5 liters) to containers such as vegetable basins or sinks. Add vegetables or fruits to be cleaned.

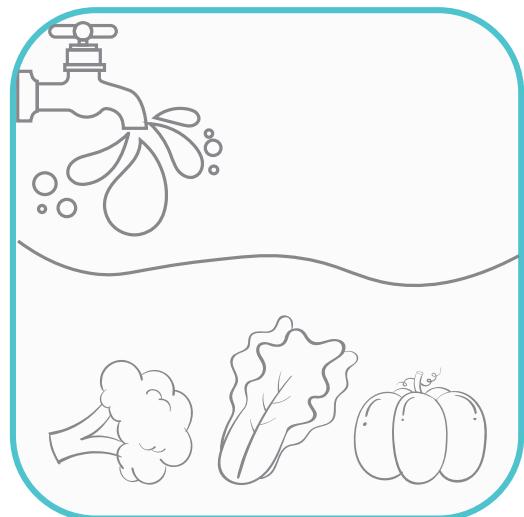


Place the machine in a flat position in the vegetable washing basin, gently tap the fruits and vegetables in the basin to sink the machine into the water, and the digital time display side will automatically face upwards.

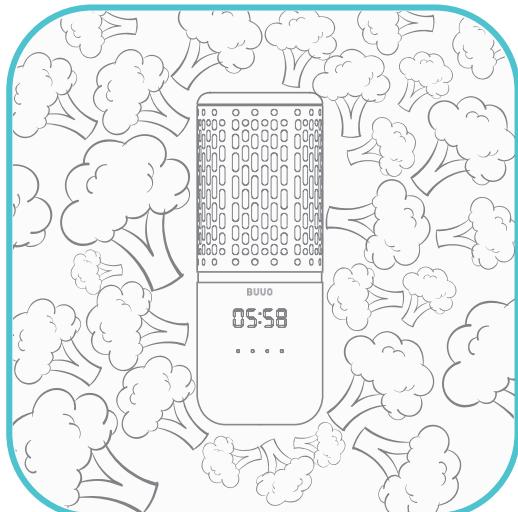


After entering the water, the fruit and vegetable cleaning machine will automatically beep and start working; The digital time display shows the total purification time of 6 minutes and starts the countdown, while the current remaining battery level is displayed below.

*Note: If the fruit and vegetable cleaning machine does not start working after being put into water, the reason may be that the machine has entered a dormant state due to prolonged inactivity. At this point, place the fruit and vegetable machine on the charging base for activation, and then it will wake up and work normally.

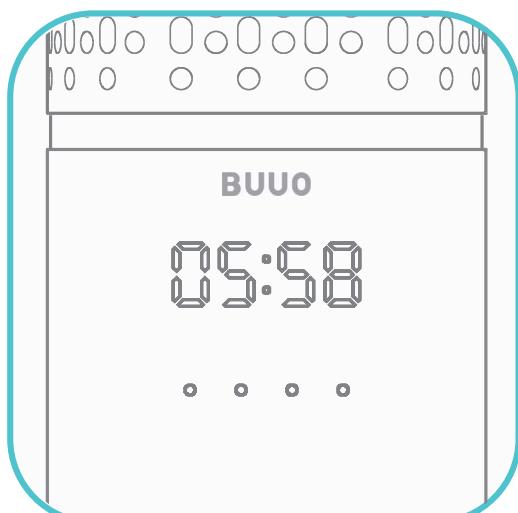


During the purification period of the fruit and vegetable machine, gently stirring the fruits and vegetables in the basin can achieve a better and more comprehensive cleaning effect.

*Note: The electrolytic water will give off slight odor of disinfectant and detergent, which is a normal physical phenomenon. Please feel free to use it.

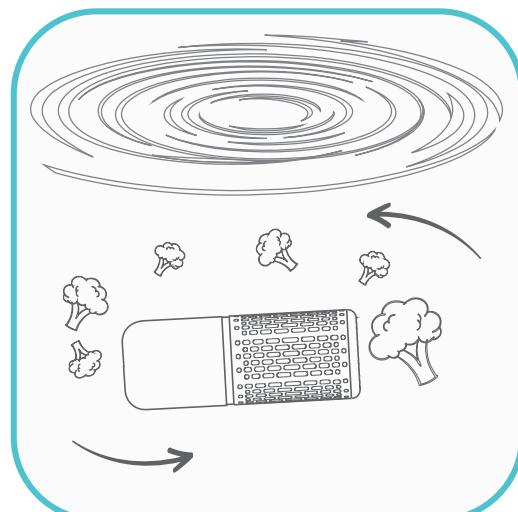

After a 6-minute purification, the fruits and vegetables cleaning machine will flash at 00:00, and at the same time, 5 long beeps will indicate that the purification has been completed. After that all displays will turn off.

*Note: At this point, to achieve further purification effects, please leave the fruits and vegetables in water for about 10 minutes. And then rinse the fruits and vegetables with clean water to enjoy with peace of mind.

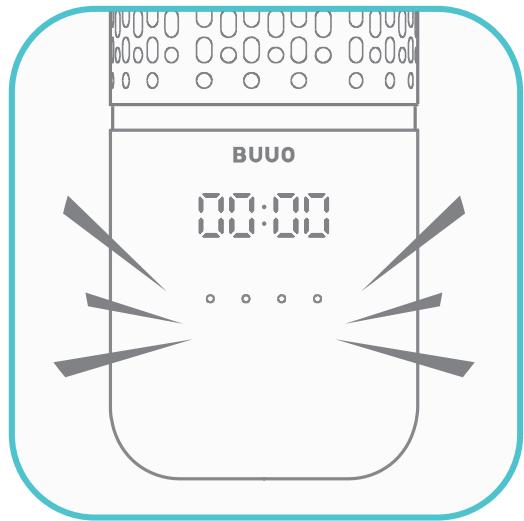

Interactive Experience

1. Charging State

- ① Place the fruit and vegetable cleaning machine on the charging base and the machine will start charging.
- ② Digital time display will not display.
- ③ The four white indicator lights below display the current battery level.

Battery Level	Indicator Lights
0-25%	Four LED beads are displayed in a cycle, and the first one will turn off
26-50%	The 2nd, 3rd, and 4th light beads are displayed in a cycle, with the 1st one on
51-75%	The 3rd, and 4th light beads are displayed in a cycle, with the 1st and 2nd one on
76-99%	The 4th light beads flickers, and the 1st 2nd and 3rd remains on
100%	All 4 light beads are on when the machine is fully charged, and will turn off after 1 minute

2. Standby And Hibernation

① After picking up the machine from the charging base, it automatically enters standby mode:

1. Standby mode will last for 1 hour.
2. During charging and working, the 1-hour standby countdown will be continuously reset.
3. The machine will be completely dormant when the standby countdown has ended.

② When standby, all LEDs are not displayed.

③ When hibernate, please place the fruit and vegetable cleaning machine on the charging base for one second to activate it before use.

3. Purification (Working)

① In standby mode, put the fruit and vegetable cleaning machine into the water and it will automatically start the purification.

② Purification time: 6 minutes.

③ During purification, the digital countdown shows the remaining time and the four indicator lights below display the current battery level.

1. When the battery level is 0-10%, only the leftmost red light will on.
2. When the battery level is 11-25%, leftmost white light is on and others are off.
3. When the battery level is 26-50%, two white lights on the far left are on, and the others are off.
4. When the battery level is 51-75%, the three white lights the leftmost side are on, and the fourth is off.
5. When the battery level is 76-99%, turn on four white lights and turn off the others.
6. When the battery level is below 0%, it automatically shuts down and enters a sleep state.
7. When the total battery capacity is less than 5%, it will not be included in the calculation of battery capacity.

④ Purification countdown ended, and prompt with beeping.


1. The number '00:00' flashes.
2. The buzzer will beep 5 times.
3. The beep ends, all displays turn off, and the system switches to standby mode.

⑤ If the machine is taken out of the water during purification, an alarm would be triggered.


1. Countdown is paused, and the current remaining time display will flash as prompt.
2. Buzzer continuously prompts.
3. When returned to water, the machine will automatically restore purification, and countdown continues.
4. If it is not returned after 10 seconds, all displays will turn off and it will switch to standby mode.

Cleaning And Maintenance

① When foreign objects fall into the machine, please rotate the top cover to open and clean it.

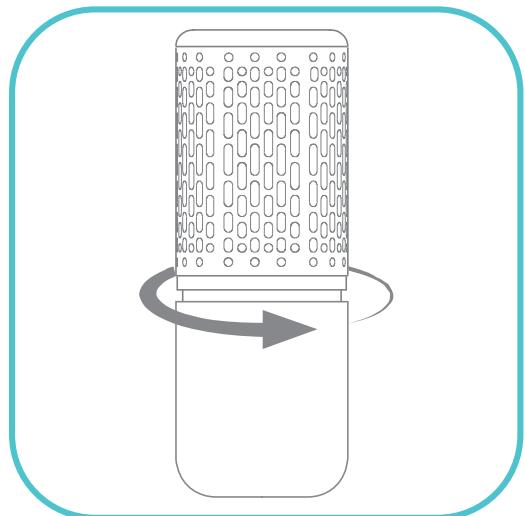

② Please keep the electrolytic sheet free of foreign objects, otherwise it may cause the product to malfunction.

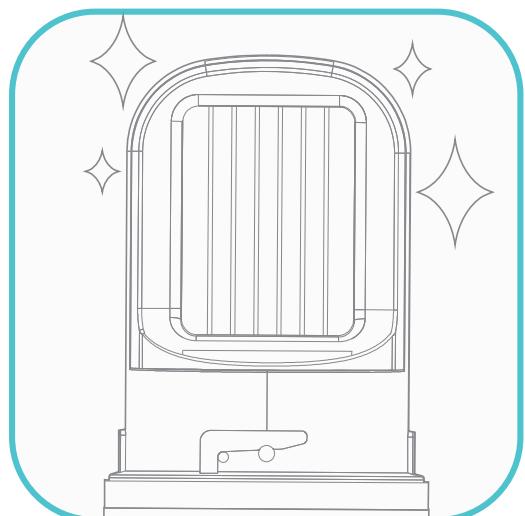

- ③ The cover of the fruit and vegetable cleaning machine can be disassembled for main body cleaning.



- ④ Clean with a brush of appropriate width to ensure that there are no foreign objects blocking between the electrolytic plates.

*Tips: After removing the machine from the water, the cover can be unscrewed to quickly drain the water.



Product Warranty

We at BUUO truly appreciate your business and your trust to us. If by any chance you encounter any quality issue of the product,

Get in touch with BUUO at:

✉ **buuoservice@gmail.com**

We offer 12-month product warranty for any quality problem of the product you purchase. Free replacement or exchange due to product quality within 12-month are all on our cost.

Thank you for choosing BUUO

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.