

Singmood

Unleash

your inner superstar

USER MANUAL

Karaoke Machine S-68

Singmood

User manual



Karaoke Machine S-68

Congratulations!

You've just elevated your entertainment game.

Sometimes you just know you're a star in your own right. **Singfinity S-68** knows it too...the ultimate karaoke machine.


The S-68's multi-functional, WiFi-enabled, built-in Android 12.1 touch screen serves as a control panel, lyrics display, and music library all at once. This top-notch machine comes with 2 premium UHF wireless microphones, a remote control, and an impressive 100-watt speaker, all designed to help you host the most unforgettable karaoke party!

Choose from Bluetooth, AUX, USB, MicroSD, or HDMI to surround your space with tunes. Belt out Broadway classics with family, rock out to chart-toppers with friends, or serenade your special someone. Plus, the guitar input lets you jam along with your favorite tracks. Perfect for singers of all skill levels, from ages 5 to 125.

Ready to take your show on the go? The S-68 tablet locks securely in place and travels effortlessly with the included carry-strap. Need to make announcements during your big event? No worries! This portable, versatile machine doubles as a powerful PA system for adjustable, crystal-clear announcements.

When the night comes to an end, simply clip the mics to the side and power down. Before you know it, you'll be ready for an encore performance.

Sing on with Singfinity S-68!

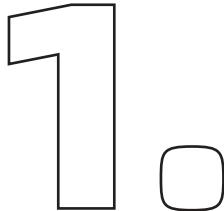

It's All in One!


Parts & Features

What's included...

1x Singfinity S-68
2x Wireless Microphones
1x Remote Control

1x Power Adapter
1x Shoulder Strap
1x Performer's Manual


Function Board

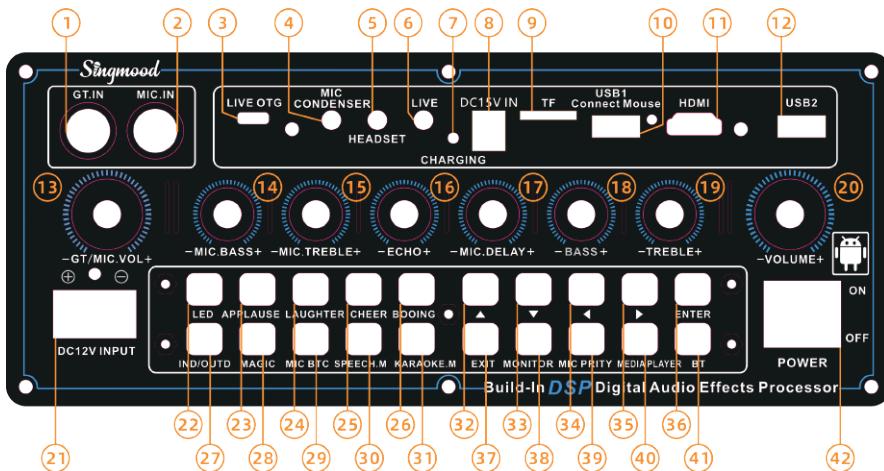

1. Guitar Input	15. Mic Treble	29. Vocal beautification
2. Microphone Input	16. Audio Echo	30. Speech Mode (On/Off)
3. Digital Live OTG	17. Mic (Voice) Delay	31. Karaoke Mode - Vocal Removal (On/Off)
4. Condenser Microphone Input	18. Music Bass	32. Up
5. 3.5mm Headset Port	19. Music Treble	33. Down
6. 3.5mm Live Audio Port	20. Master Volume	34. Left
7. Charging Indicator Light	21. DC12V Car Charging Port	35. Right
8. DC15V (regular) Charging Port	22. Led Light Ring (On/Off)	36. Enter
9. TF Slot (MicroSD)	23. Applause Sound Effect	37. Exit
10. USB Slot (Mouse can be connected)	24. Laughter Sound Effect	38. Monitor
11. HDMI Line Out	25. Cheer Sound Effect	39. Mic Priority
12. USB Slot	26. Booming Sound Effect	40. Media Player
13. Guitar & Mics Volume	27. Indoor & Outdoor Mode	41. Bluetooth
14. Mic Bass	28. Magic	42. Machine Power

Remote Control

7

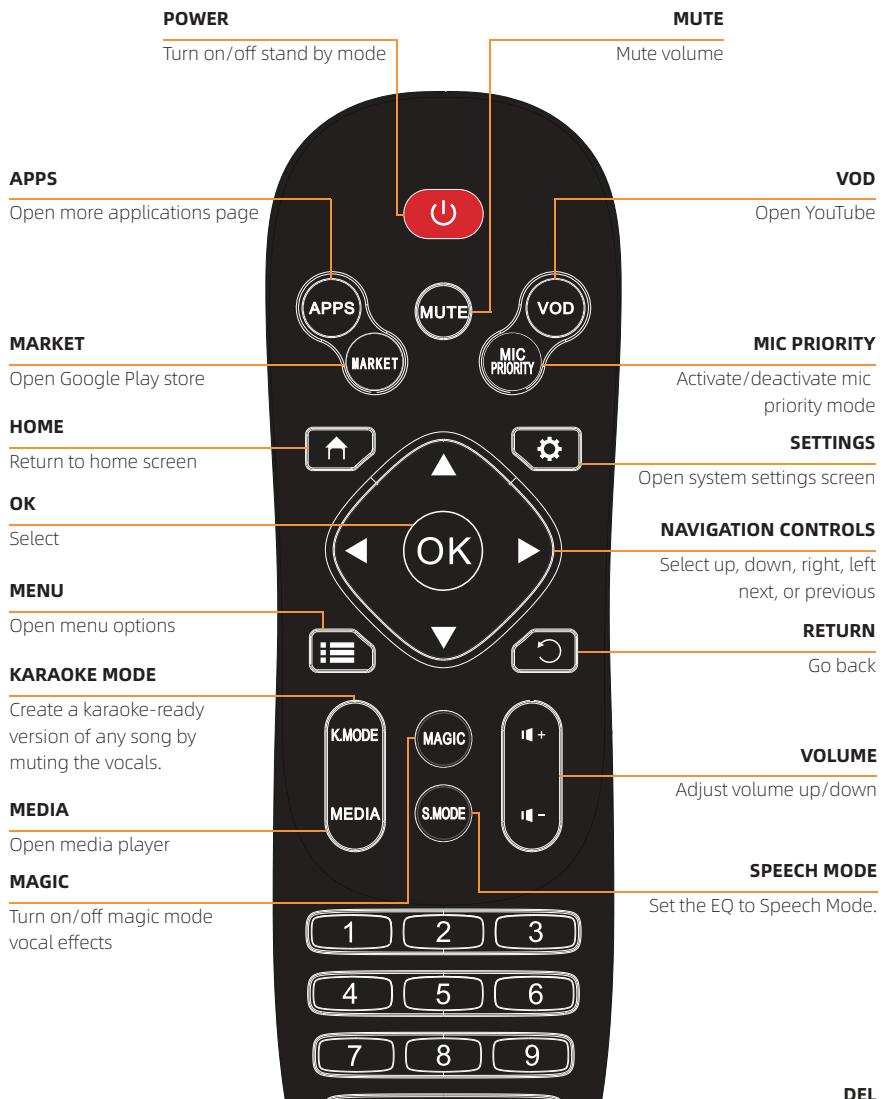



Safe Use Tips

Review Before using

1. Retain this manual for future reference.
2. Follow all warnings and safety guidelines.
3. Ensure proper ventilation; do not obstruct any vents or openings on the Singfinity S-68.
4. Install and set up the machine according to the manufacturer's instructions provided in this manual.
5. Avoid installing near heat sources (e.g., radiators, heat registers, stoves, amplifiers, or any objects that generate heat).
6. Use the polarized plug (or grounding plug) cautiously. These plugs are designed for safety purposes. Consult an electrician if the provided plug does not fit your outlet.
7. Safeguard the power cord to prevent it from being walked on or pinched, particularly at the plug, wall outlet, and connection to the machine.
8. Unplug the Singfinity S-68 during lightning storms or when not in use for extended periods.
9. Refer all technical services to qualified personnel. Servicing is required when the machine has sustained any damage, such as power-supply cord or plug damage, liquid contact, exposure to moisture or rain, or after being dropped.
10. Do not force the SD card into its slot; it can only be inserted in one direction. If it does not insert easily, remove, and try reinserting in the opposite direction.
11. To maintain optimal performance and battery longevity, fully charge the Singfinity S-68 at least once every three months and before storing it away for an extended period.

3

Ready, Set, Sing!

Quick Start Guide

#1 Charge the Singfinity S-68 and insert batteries into each microphone.

#2 Undock the tablet, and gently rotate it to the desired angle.

#3 Power on the Singfinity S-68 and microphones.

#4 Choose your preferred playback mode.

#5 Display your lyrics and let the fun begin!

Note: For more information on operating your Singfinity S-68, refer to the "Detailed Usage Guide" section in the manual.



Inspect the machine for damage before each use.



Avoid exposing the product to water, moisture, heat, or steam. Do not place objects filled with liquid on the product.



Use the Singfinity S-68 with manufacturer-approved attachments only.




When using the machine outdoors, avoid wet or extremely hot conditions. Keep the charging cable away from puddles or other sources of moisture.



Clean and store the Singfinity S-68 after each use.



Do not expose the battery to excessive heat sources such as sunlight, fire, or other heat sources to minimize the risk of fire or explosion.

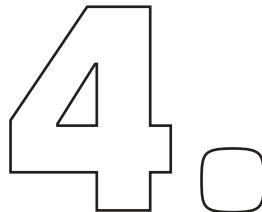

Don't Skip a Single Note

Detailed Usage Guide

Machine

How to charge the Singfinity S-68

Plug the power Adapter into the **DC15V** charging port (8) on the control panel and into a polarized wall outlet. Make sure to fully charge the device before each use. The indicator light will turn on to show it's charging.

How to turn the machine on/off

Turning the Singfinity S-68 on/off: Press the Power switch (42) towards the side labeled "On" to turn the device on.

To turn it off, press the same switch towards the side labeled "Off."

How to adjust the machine's touch-screen tablet

The touch-screen tablet is attached to the karaoke machine and cannot be removed. To adjust its position, simply flip it up from its resting position and rotate it to the desired angle.

Note that while the screen can rotate in any direction, it cannot turn a full 360 degrees. Once the screen can no longer rotate easily, do not force it as doing so may cause damage or even break the screen off from the machine.

Reminder: Although the tablet can face any direction according to the user's preference, it initially faces the back of the machine when first unlocked from its docking station. To have the tablet face the front, gently rotate it 180° so that it faces the same direction as the speaker.

How to turn the microphone on/off

Press the square button with a Power symbol on each of the microphones to turn them on or off.

How to replace the microphone batteries

Unscrew the bottom half of the microphone and insert batteries into the slots. Screw the cover back on and proceed to power on the microphone as directed above.

How to adjust the microphone volume

To set the volume level for the microphones, turn the knob labeled "Mic Vol" (13) on the control panel of your Singfinity S-68 to the desired volume level.

How to use PA and Mic Priority modes


To set the Singfinity S-68 to PA Mode, press the button 'Speech. M' (30) on the control panel.

Mic Priority mode automatically lowers the volume of the music to an almost inaudible level when someone begins speaking into the microphone.

To turn Mic Priority mode on or off, press the "Mic Priority" (39) button on the control panel of your Singfinity S-68. The music's volume will return to normal as soon as the person stops speaking into the microphone.

How to Avoid Dropouts When Using a Microphone

When using the microphones, it's important to hold it in the middle, avoiding covering the bottom part where the antenna is located. Holding the bottom can interfere with the signal transmission, leading to audio dropouts.

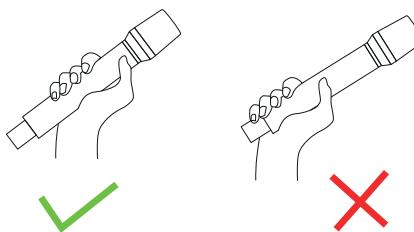

How to set up playback

Your Singfinity S-68 offers six different modes: Bluetooth, MicroSD, AUX, USB, HDMI, and PA. Each requires a unique setup process. Please refer to the 'Content/Parts' section for information on connection points. For detailed instructions on how to configure your chosen playback mode, please see the corresponding subsection below.

How to connect to Bluetooth

Playing music from your device

To utilize the Bluetooth feature, tap the 'Bluetooth' app on the touchscreen tablet or press the 'BT (41)' button on the machine's function panel. Locate and select "S-68" from the list of available devices in your device's Bluetooth settings to establish the connection.

Be aware that the Bluetooth connection will be discontinued once you close the Bluetooth app on the tablet.

Safety Warning: To prevent potential damage to the speakers, avoid setting your smart device's volume to its highest level. We recommend setting your device volume at the midrange, and then fine-tuning the volume using the machine's volume control (20). Feel free to use either your device's controls or the machine's controls to play, pause, or switch between tracks.

How to use SD mode

Insert your MicroSD card into the designated slot marked as 'TF Slot' (9) on the machine's control panel. Upon insertion, an icon will materialize on the tablet screen, signaling that the SD card is properly connected. To enable this playback mode, navigate to the 'Media Player' app, tap the 'SD' icon, and select the desired file for playback.

How to use AUX (out) mode

Playing music to an AUX-compatible device, like an external speaker, by following these steps. First, connect an AUX or AUX-RCA cable to the 'Headset' (5) port on the machine's control panel and then to the corresponding input on the device you intend to pair with.

How to use AUX (in) mode

Playing music *from* an AUX-compatible device (such as phone or MP3 player):

Once the machine is powered on, connect an Aux Cable to the 'Mic Condenser' (4) port on the machine's control panel and the corresponding input on your desired device.

Please take note: To prevent potential damage to the speakers, avoid setting the volume on your external device to its maximum. We recommend adjusting your device's volume to the midrange, and then fine-tuning the volume using the control on the machine. For play, pause, or track switching, you have the option to use the controls on either your device or the machine.

How to start USB mode

To play music from a USB drive, follow these steps: First, insert a USB stick or connect a USB cable into either USB slot (10 or 12) located on the machine's control panel. Upon insertion, an icon will pop up on the touch screen indicating successful USB connection. To commence playback, navigate to the 'Media Player' app, tap on the USB icon, and select the desired file to play.

How to connect to a TV (HDMI Mode)

Connect an HDMI cable to the HDMI Out slot (11) on the machine's function board and then to your TV. This will mirror the display from the S-68 screen onto your TV, turning the small screen into a big one instantly.

How to use Karaoke Mode

With Karaoke mode, you can create a karaoke-ready version of any song at the snap of your fingers, simply by muting the vocals.

Press the Karaoke Mode (31) button on the machine's control panel until the song's vocals are muted. To restore vocals, simply press the Karaoke Mode (31) button again.

How to connect a guitar to the machine

Connect your guitar to the machine by plugging a guitar cable into the GT.IN jack (1) on the machine, and the other end into your guitar. Adjusting the guitar's volume through the machine's speakers is straightforward—simply turn the GT.VOL (13) knob until you reach your preferred volume level.

How to use the live port to broadcast live with your phone

1. Download and register on your preferred live broadcasting app, such as Facebook, TikTok, YouTube, and so on.
2. Establish a connection between your phone and the 'Live' port (3 or 6) on the machine using a Type-c OTG cable or 3.5 mm Aux cable.
3. Launch the app on your phone, and you're all set to use the S-68's microphone for your live online broadcasts.


How to sing karaoke using your machine's tablet

1. First, make sure the microphones are properly set up and the microphone priority mode is disabled.
2. On the tablet, either choose from one of the pre-installed music apps or feel free to download your favorite music app.
3. Dive into your chosen app and hunt for karaoke tracks. These are versions of songs with the vocals removed, so you can add your own!
4. Once you've found a song, it's time to sing your heart out as if it's your special day!
5. Please Note: There's a wealth of both free and premium karaoke tracks readily available on most popular music apps. Many of these will also display the lyrics in time with the music. For example, if you search for 'Sing King' (or something similar) on YouTube, you'll come across dedicated karaoke channels that display lyrics.
6. Remember: Some music apps are specifically tailored for karaoke, offering a whole library of songs with these features.

Simply tap the Wi-Fi icon located on the screen, and then choose your desired Wi-Fi network from the list of available options.

How to use Magic Mode and EQ Settings

To tweak your EQ and Magic Mode settings, Swipe from the right edge of the screen towards the left with your finger to access the DSP interface.

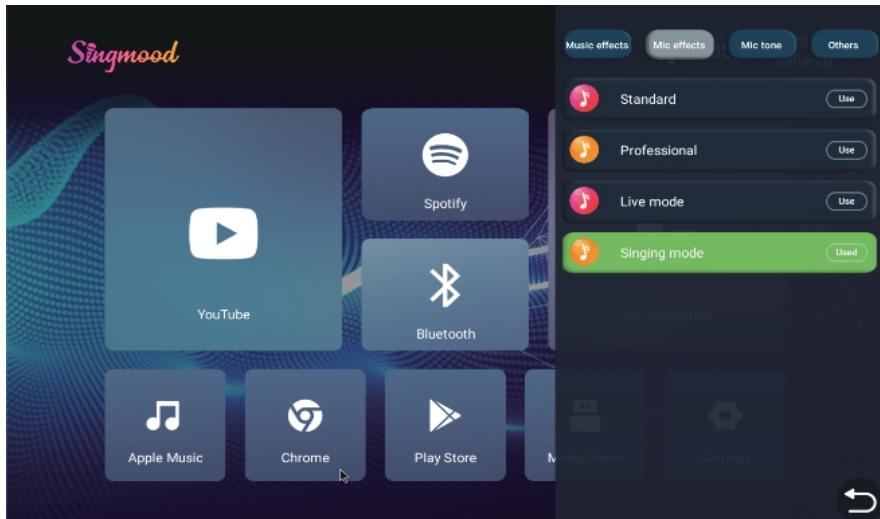

Magic Mode is where the fun begins—it lets you add exciting special effects to your voice on the fly via the microphones. To dive into Magic Mode, select your preferred setting under the 'Mic Effects' menu within the DSP interface.

Meanwhile, the EQ settings are your key to fine-tuning your audio balance to suit different types of music. You can choose from preset EQ settings under 'Music Effects'.

Built-in Power-Saving Mode

When there is no audio output or activity for 15 minutes, the screen will automatically turn off to save power. Simply touch the screen to wake it up.

How to download App?

1. Open the Google Play Store app.
2. Log in to your Google account: If you're not already signed in, follow the prompts to log in using your Google account credentials. If you don't have a Google account, you'll need to create one.
3. Search for the app: In the search bar at the top, type the name of the app you want to download.
4. Select the app: Locate the app in the search results and tap on it.
5. Install: Tap the Install button.
6. Open the app: Once the download and installation are complete, you can open the app directly from the Play Store or locate it in your apps list to open.

How to resolve app crash issues?

1. Check for Updates: Ensure both your app and your device's operating system are up-to-date. Developers frequently release updates to address bugs and improve performance.
2. Restart Your Device: Turn off your device and then turn it back on. This action often resolves memory issues or other minor glitches that might be causing the app to crash.
3. Reinstall the App: If the issue persists, uninstall the app, then reinstall it from your device's app store. This step can help fix any corrupted files from the initial installation.

Using the Remote Effectively

1. Power Up: First, insert two AAA batteries into the remote.
2. Locate the Sensor: The machine's remote sensor is tucked right behind its speaker grill.
3. Position Yourself: Stand directly in front of the machine. Keep in mind, the remote has a 60° sensing angle. So, try not to be more than 30° off-center horizontally or vertically from the speaker grill.
4. Stay Close: The remote works best within a 4-meter (13-foot) range. Make sure you're within this distance for optimal results.
5. Aim and Command: Point the remote straight at the speaker grill when pressing any buttons.

Pro Tip: Some apps don't support remote functionality. It's normal for the remote to be unresponsive in these cases due to restricted permissions.

Note: Aiming at the touchscreen won't get the job done. Always target the speaker grill!

Maintenance

How to clean

1. Power off the machine and microphones.
2. Disconnect the power cord and any connected AUX, HDMI, or USB devices.
3. Using a clean, dry cloth, gently wipe the machine's exterior.
4. Ensure all vents, buttons, and other openings remain free from lint and debris.
5. Avoid immersing the machine in water or using aggressive cleaning agents.

How to store

1. Ensure the machine and microphones are fully charged, preparing them for their next use.
2. Securely place the wireless microphones in their designated holsters.
3. Confirm that the machine's exterior is clean and free from moisture.
4. Neatly bundle the power cord and AUX cable using electrician-approved fasteners. (Remember: Respect the cords' natural curve. Avoid tight wrapping or folding, and refrain from coiling the cord around the machine.)
5. Store the machine in a location that's cool and dry, protected from harmful elements.
6. For optimal longevity, clean and store the machine after every use.

How to transport

The Singfinity S-68 is purposefully crafted for effortless mobility and transportation. Here's how you can prepare it for the move:

1. Start by disconnecting all cables from the machine.
2. Rotate the touch-screen tablet to fit snugly into its integrated mount.
3. Secure the microphones into the twin holders found on the machine's side.
4. Use the provided shoulder strap for ease of transport.
5. Now your Singfinity S-68 is ready for the journey! Safe travels.

5

When Things Go Flat

Troubleshooting Guide

Problem	Solution
Machine is not turning on	The battery is depleted. Be sure to charge the machine after each use.
Microphone is not turning on	The Microphone battery is low or depleted. Be sure to charge the microphone.
Touch-screen tablet is not turning on	To conserve energy, the screen automatically goes into sleep mode if left inactive for 15 minutes. Simply tap the screen to wake it up. If this doesn't work, try turning the power off and then back on.
USB or MicroSD mode is not working	Ensure the tablet is in the correct mode by navigating to the Media Player app and selecting the appropriate input icon. If that doesn't resolve the issue, disconnect the USB or MicroSD, power off the machine, and then power it back on. Reconnect the USB or MicroSD, launch the Media Player app, and select the desired input icon again.
Machine is not playing microphone vocals	Make sure the microphone's Power button is switched on. If there's still no sound, the microphone may need charging due to low battery.

The remote control is not working	<p>Ensure you're positioned close to and directly in front of the machine. Aim the remote at the speaker grill, not the tablet screen. (Refer to "Operating and aiming the remote" for guidance). If the issue persists, check the remote's batteries. Remember, some apps don't allow remote control access, which can render the remote unresponsive.</p>
Song name is garbled	<p>The title of the song file cannot be read. Manually edit the song title on your computer and retransfer the edited file to your device.</p>
No sound is playing from the speaker	<p>Make sure the volume on the machine, remote, and any connected devices is set to a hearable level. Press the 'Mute' button on the remote to ensure the system isn't muted. Additionally, verify if the monitor is switched on. If so, turn it off.</p>
Button or knob on the machine/remote control is not working properly	<p>Power off the machine and turn it back on.</p>
In Karaoke Mode, only the microphone output is playing with no music	<p>Mic Priority mode is turned on. Exit this mode by pressing Mic Priority (39) on either the remote control or the machine's function board.</p>
Machine is not connecting to WiFi	<p>Please ensure that the WiFi router and the machine are in close proximity to one another and that the WiFi network is functioning properly. If the WiFi still won't connect, try restarting your router and reconnecting to the network afterwards</p>

If you encounter persistent issues or notice any damage to the machine, stop using it immediately. Seek assistance from a qualified electrician for repairs. Avoid trying to fix or modify the machine on your own. For further support, please reach out to our customer service team.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Singmood