



Singfinity

PORTABLE KARAOKE MACHINE

S330
USER MANUAL

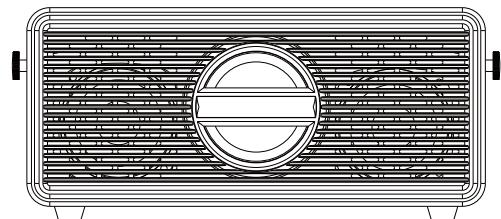


1. Speaker accessories

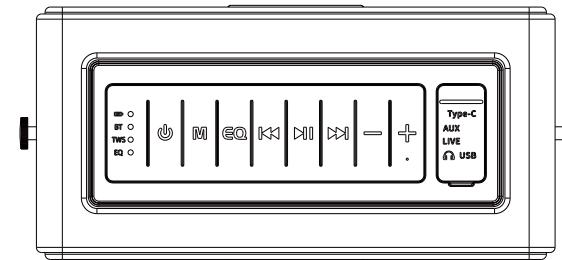


A 3.5mm LIVE line

The type-c charging cable

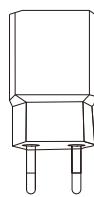


Adapter

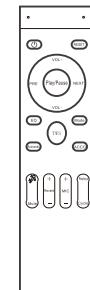

telecontroller

2. Show

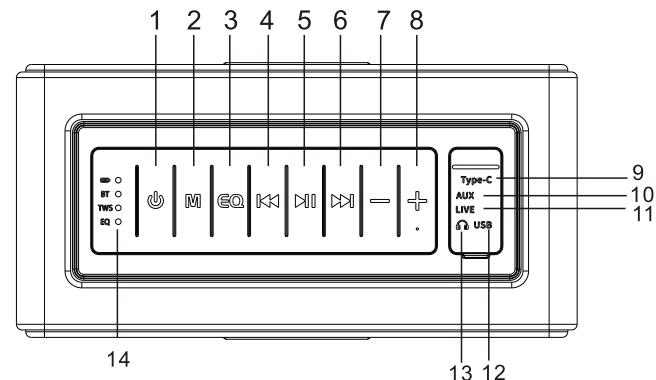

- 1 Long press open / shut down : Short press light mode
- 2 Short press mode switch / double click open tws
- 3 The eq sound effects, and switch between indoor / outdoor
- 4 Short press the last song
- 5 Short press to play / pause
- 6 Press the next song
- 7 Short press / long press for volume reduction
- 8 Short / long press volume is added
- 9 Type-C The charging port can also do otg live connection
- 10 AUX IN Audio port
- 11 Live input
- 12 USB mouth
- 13 Headphone listening
- 14 Status indicator light

3. Operation Guidance A

Key	Function	Functional operation
POWER	Turn on	Short press POWER key for 1 second, if there is a U disk, Linec in speaker boot memory into the last working mode, do not insert U disk, Linec in boot speaker automatically enter the Bluetooth mode search state; Have prompt sound
	shut down	On startup, press POWER for 2 seconds to turn off the Bluetooth speaker. There is a cue tone
	Turn on/off RGB linht	On startup, press POWER key to switch RGB lighting mode
	Forced shutdown	In the crash state, long press the POWER key for 8 seconds to turn off the Bluetooth speaker
MODE	Mode switching	A short press of the MODE key can switch to the BT / U disk / AUX mode.
	Factory data reset	In Bluetooth state, long press the MODE key for 8 seconds to restore the factory setting and clear the previous operation memory. There is a cue tone
	BT disconnection	With Bluetooth connection, long press the MODE key for 2 seconds to disconnect the Bluetooth connection with a prompt tone
	TWS	Double-click MODE (the speaker is in playback state and Bluetooth pairing state) and the speaker enters TWS state. (Double click MODE for the host), and then double click MODE to cancel TWS pairing.
		1). Only speaker A is in the Bluetooth pairing state, speaker B (connect the mobile phone and Bluetooth pairing state) double-click the MODE key to enter the TWS state, (double-click the MODE key for the host) the two speakers will automatically connect to the TWS connection
		2). During the TWS group pair process, double-click the MODE key of one of the speakers to cancel the TWS group pair (timeout mode: the TWS group pair has succeeded over 30 seconds, and the host automatically returns to Bluetooth mode)
		3). Group pair success, double click any speaker MODE key, automatically exit TWS team mode
		4) After TWS team, the machine can be switched on and off normally, and TWS can connect back
		5). In TWS mode, only the host speaker can answer, hang up, reject and call, and the secondary machine has no call function
	Eq changing-over	Switch default EQ indoor, short press the EQ key for outdoor.
	Save electricity	In the boot state, long press the EQ key for 5 seconds, the speaker is closed, and the power saving mode is turned on. At this time, you can provide 5V / 1A current to other electronic devices for a long time.
	loudspeaker mute	Press the EQ key under USB / AUX / BT for 2 seconds, and the speaker opens the external play mute function. At this time, the speaker is silent, and the listening interface is inserted into the headset.

3. Operation Guidance B

 Prev	prev	Short press Prev key to switch to the previous song, long press quick back function (BT/U disk mode)
 PALEY/PAUSE	Play / pause	Press PLAY / PAUSE on Bluetooth / USB to pause the playback.
	Call to answer	Press the PLAY / PAUSE button briefly during a phone call-in time. You can answer the phone call
 NEXT	Decline a call	Long press the PLAY / PAUSE key for 2 seconds to reject the call.
	Voice assistant	Connect the phone with Bluetooth, long press PALEY / PAUSE for 2 seconds to start the voice assistant function. There is a cue tone
 NEXT	The next song	Press NEXT to switch to next song, long press fast forward (BT/U disk mode)
 V-	Volume reduction	Press the V-key short to reduce the volume. Long press the V-key, the volume is quickly reduced.
 V+	Volume plus	Short press the V button, increase the volume. Long press the V button to increase the volume quickly. Turn volume to maximum sound.
Type-C	charge	5V / 2A smart charging. Charge red light on, full red light out.
AUX	AUX import	Insert the 3.5mm audio line to automatically play the music provided by AUX with a prompt sound. When playing, the blue light flashing, pause, the blue light long on.
LIVE	3.5 Live broadcast	Insert a 3.5mm headphone cable to automatically play the music of the speaker box.
USB	USB mouth	Insert the U disk, automatically play the U disk music, with a prompt sound. When playing, the blue light flashing, pause, the blue light long on.
 Headphone listening	Headphone listening	Insert a 3.5mm headphone cable to automatically play the music of the speaker box.

Status indicator light

- 1). Turn on, the Bluetooth indicator light is flashing.
- 2). Play / pause the blue light after Bluetooth connection.
- 3). U disk, AUX play the blue light slow flash, pause the blue light long light.
- 4). EQ default indoor, green light is not on, green light for outdoor sound effect
- 5). When the TWS function is started, the yellow light flashes. After successful TWS pairing, the main and auxiliary yellow lights are on and the phone is connected. The main yellow light, blue light long, auxiliary yellow light long, blue light out.
- 6). Charge, red light; full, red light out; low power reminder, red light flashing.

4. Other special states


- 1). If inserted U disk, Line in speaker boot, memory into the last working mode, do not insert U disk, Line in On, the speaker will automatically enter the Bluetooth mode search state.
- 2). Bluetooth input: after starting on, first connect the last matched device, and automatically enter the matching state after the connection fails. The connection will be disconnected beyond the communication distance. If the connection is disconnected due to the extra distance, the connection will be initiated every 30 seconds within 10 minutes Secondary reconnection, disconnected beyond time.
- 3). Line in Input: insert the 3.5mm audio line into the audio input port and automatically enter the Line in mode And play the audio input from the Line in
- 4). Under Bluetooth / U disk / Line in, no audio input, silent
- 5). When the volume is the minimum, silent
- 6). When the MODE key is clicked to enter the mode, the corresponding U disk or Line in is not switched to the mode
- 7). In Bluetooth mode: when connecting to Bluetooth, implement automatic shutdown after 10 minutes. (When connecting to the Bluetooth and the microphone Will not shut down; long press EQ speaker for 8 seconds, close, power saving mode)
- 8). Low-power alarm function. Low power alarm, red light flashing

5. Specification and parameters

BT version:	5.0	AUX mode: 3.5mm audio socket
DSP sound processing:	bass enhancement	Type-C: Type-C input/live streaming
Power rating:	100W	Horn size: 78mm*4
Maximumoutput:	120W	Cell: 6000mAh
Power input:	DC 5V/2A	product size: 319*147*142mm
Charging interval:	≥ 8hours	Naked weight: 3.7KG
The TWS connection distance:	≤ 6m	Charging method: Type-C 5V/2A
Bluetooth distance:	>10m(open area)	Impedance: 4R ±15%

6. Use of the remote control device


Detailed function of remote control

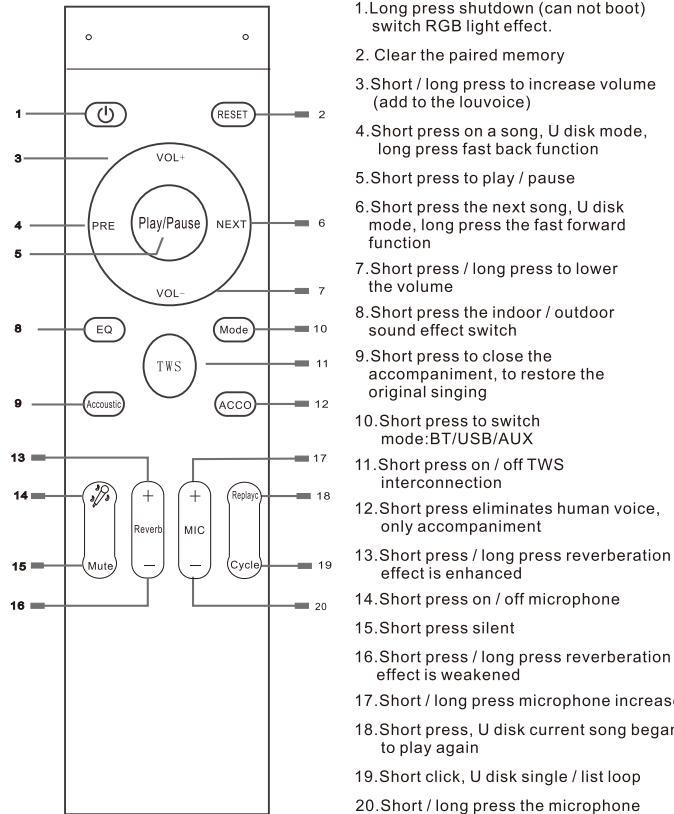

Note: When the battery is low, the brightness is insufficient. Please replace the battery in time to avoid affecting the effective use of remote control and remote control.

The remote control uses two no. 7 batteries. If not in use for a long time, please remove the battery to avoid leakage and damage to the remote control after the battery passes the shelf life

7. Microphone operation instructions

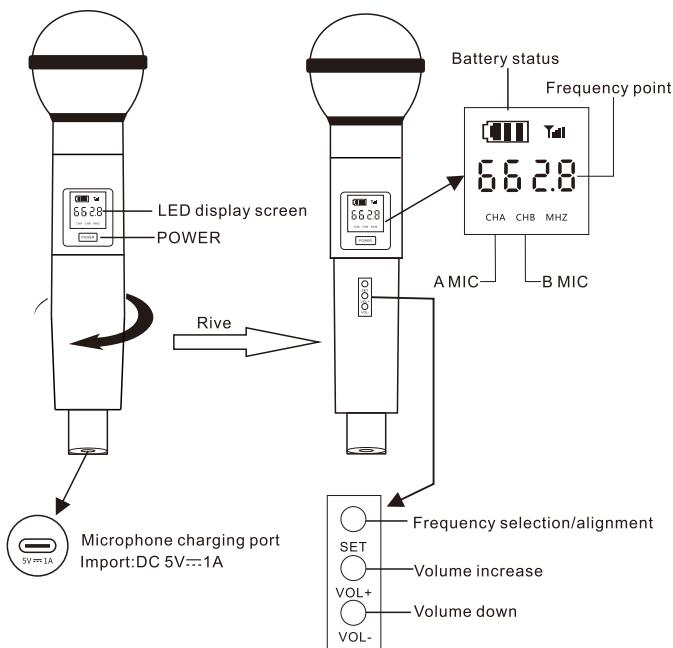

MIC A and B:

Open A MIC A (CHA below the MIC display)
Open A MIC B (CHB below the MIC display)

Microphone frequency alignment method:

Turn on the speaker power and within 3 seconds, align the device with the microphone

If the frequency alignment is not successful, first press and hold the power button to turn off the microphone

Unscrew the microphone tailpipe and have a SET button for frequency modulation and alignment

Press and hold the power button and SET button simultaneously, and a dashed line appears on the microphone display screen

When the dashed line disappears in the display screen, it indicates that the microphone has successfully aligned

8. Security Information

Security Information

Please read this manual carefully before using this machine. Pay attention to safe and correct operation, avoid unnecessary losses, and take preventive measures.

Warning: May cause malfunction or danger.

Safety warning

- If the machine emits smoke or other abnormal conditions occur, please quickly turn off the power and contact the local dealer for repair. Otherwise, it may cause fire and other hazards.
- Do not place containers containing liquids on the product, and do not allow liquids to enter the product as this may cause short circuits or other damage.
- Do not disassemble, repair or replace components without authorization.
- To prevent the dry battery from leaking liquid or heating and causing rupture, do not put the battery into fire, and pay attention to the type of battery used.
- Please use this machine in a well ventilated and dry place, and do not use it in damp places to avoid danger.
- The product remote control and wireless microphone contain batteries, which are easy for children to come into contact with and swallow. Ensure that the battery is always kept out of reach of children!
- Ensure that the product is placed horizontally and remains stable. Do not place it on a table or near debris that is prone to shaking.
- Do not place the product and accessories containing batteries in areas with high temperatures (such as direct sunlight or heating equipment).

Precautions

Attention: May affect machine functionality or cause damage.

- Do not use it for a long time at high volume, as this listening environment will stimulate your ears and even seriously damage your hearing.
- Do not use pesticides, alcohol, paint thinners, or similar chemical solvents to clean this machine, as this may cause peeling or turbid corrosion on the surface of the casing. Please wipe with a clean dry cloth.
- If you do not use this device for a long time, please remove the remote control battery.

Important:
Keep the user manual for future reference.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1). Reorient or relocate the receiving antenna.
- 2). Increase the separation between the equipment and receiver.

3). Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body:
Use only the supplied antenna.

FCC ID:2BCH6-S330

PRODUTC INSPECTION CERTIFICATE

Production test: _____

Examination clerk: _____ Quantity: _____

Code: _____ Date of manufacture: _____

Operative norm: _____

Warranty card (please warranty)

User files: _____ month _____ day _____ year

User name	
Contact Address	
contact number	
Model	
Deater's signature	

Warranty terms

- Not specially marked, from the date of purchase, due to the purchased product quality problems (non-product software failure), the user can choose the return period is 7 days; the replacement period is 15 days; the warranty period is 12 months.
- When users encounter product quality problems, they can ask the designated service department of our company to provide three guarantees of services. If they need to be delivered, the user will bear the transportation and other related costs
- When the user requires three guarantees of service, he / she needs to voluntarily provide this valid warranty service certificate or invoice
- For additional services beyond the three guarantees of service, fees shall be charged in accordance with the relevant regulations. The warranty period of the products after charging maintenance is 3 months from the date of delivery or the date of delivery
- The services provided by our company are limited to products with quality problems; not including compensation for the loss of interest, loss caused by accident and any other indirect or direct loss
- Users should take the initiative to fill in some certificates at the seller according to the requirements. Our company will not bear the consequences of filling in the certificate according to the requirements, nor will we bear the commitment of the seller to provide the user beyond the warranty service regulations