

## 重要提示

- \*请认真阅读本使用指南。
- \*请妥善保管使用指南。将产品交给他人使用时请务必附带本使用指南。
- \*请注意所有警告提示并遵守使用指南内的所有指令。
- \*为了您的安全,请勿将产品放置在温度过高或潮湿的地方。



警告:请勿将产品放置于有腐蚀性化学物品的地方以免产品腐蚀损坏。

- \*本产品内有精密电子线路,需要维修时请联系授权的维修人员,未经许可擅自拆卸导致产品故障,不在本公司保修范围内。
- \*本产品已经过RoHS CE认证请参考国家标准使用和操作,因使用操作不当而造成机器损坏,不在保修范围内,当用户可以付费维修。
- \*此使用指南书依据本公司严格测试制定,手机和规格如有变更,恕不另行通知。


## 设备的规范使用

- \*仔细阅读本使用者指南特别是“重要提示”部分。
- \*在本使用者指南规定的工作条件下使用和保存本产品。
- \*如不按照本使用者指南使用产品或不遵守规定的工作或保存条件,将被视为违规使用。

## 物品清单



 七色爆闪灯x1



Type-C  
充电线x1



3M魔术贴x3



遥控器x1

## 产品介绍



开关按键



Type-C充电口  
内置电池 3.7V 600mAh  
充电5V1A



功能切换  
爆闪按键  
四色常亮

# 产品充电说明及遥控器电池

USB 适配器



产品充电: 将USB充电线接入电源, 再将USB充电线的另一端插头连接到产品充电口上。



 
遥控器使用1粒CR2032纽扣电池。

## 使用方法:



1. 长按2秒开关机, 短按触发为调节模式。
2. 振动模式, 振动亮灯, 持续静止15秒熄灯, 熄灯后长按遥控器点3. 震动模式切换。
- a. 接收按键快速按动两次进行模式切换, (绿灯闪为开启震动模式) (蓝灯闪则关闭震动模式)
- b. 遥控器中间按键长按退出震动模式
- c. 振动模式下两小时无振动时, 就进入休眠

灯光颜色: 白、红、绿、蓝、黄、粉红、冰蓝。  
模式: 七色快闪、七色慢闪、四色常亮、民航模式、循环模式等三十多种带记忆功能模式。



功能切换: 振动模式下熄灯, 长按点亮灯

爆闪功能: 短按进入爆闪模式, 长按退出振动模式

常亮功能: 短按进入常亮模式

## 规格参数:

内置电池	3.7V 600mAh	充电	5V1A
充电接口	Type-C	充电时间	约120分钟
颜色	白、红、绿、蓝、黄、紫、天空蓝	设置	快频闪灯、慢频闪灯
重量	36.5克	尺寸	55x60.2x18.9mm
使用时间	闪烁时可使用约12小时, 长亮约3.5小时		

\*亮度数据为平均数据, 不同灯的亮度会有微小差异。

中国制造

# Important Note

\*Please read this user guide carefully.

\*Please keep the usage guide properly. Please be sure to include this user guide when handing over the product to others for use.

\*Please pay attention to all warning prompts and follow all instructions in the user guide.

\*For your safety, please do not place the product in areas with high temperatures or humidity.



Warning: Do not place the product in a place with corrosive chemicals to avoid corrosion and damage.

\*This product contains precision electronic circuits. If maintenance is required, please contact authorized maintenance personnel. Unauthorized disassembly may cause product malfunction and is not covered by our company's warranty.

\*This product has passed RoHS CE certification. Please refer to national standards for use and operation. Improper use and operation may cause machine damage, which is not covered by the warranty. Users can pay for repairs.

\*This user guide is strictly tested and developed by our company. The phone and specifications are subject to change without prior notice.

 
## Standardized use of equipment

\*Carefully read this user guide, especially the "Important Tips" section.

\*Use and store this product under the working conditions specified in this user guide.

\*If the product is not used in accordance with this user guide or does not comply with the specified working or storage conditions, it will be considered as illegal use.

## Item List




Seven color flashing light x1 Type-C charging cable x1 M Velcro x3 Remote control x1

## Product Introduction



 Switch button



Type-C charging port  
Built-in battery 3.7V 600mAh  
Charging 5V1A




Function switching

Burst button

Four colors always bright

## Product charging instructions and remote control battery

 USB adapter



Product charging: Connect the USB charging cable to the power supply, and then connect the other end of the USB charging cable plug to the product charging port.



The remote control uses 1 CR2032 button battery.

## Usage:



1. Long press (2 seconds) to turn on the power. short press to adjust the mode. Double-click to switch (green light), there is a vibration function, it stops after 15 seconds of work, and it starts to work again with vibration.

2. Vibration mode, vibrate on the light, continue to stand still for 15 seconds to turn off the light, long press the remote control after turning off the light

Point 3. Vibration mode switching.

a. Receive the button to quickly press twice to switch the mode, (green light flashes to turn on vibration.)

Mode) (blue light flashes to turn off vibration mode)

b. Press and hold the middle button of the remote control to exit the vibration mode

c. When there is no vibration for two hours in vibration mode, it will go to sleep Light color: white, red, green, blue, yellow, pink, ice blue.

Mode: Seven-color flash flash, seven-color slow flash, four-color continuous light, civil aviation mode, circulation mode and other more than 30 kinds of memory function modes.



Function switching: turn off the light in vibration mode, long press to turn on the light

Burst function: Short press to enter burst mode, long press to exit vibration mode

Constant light function: Short press to enter constant light mode

## Specification parameters:

Built in battery	3.7V 600mAh	charging	5V1A
Charging interface	Type-C	Charging time	About 120 minutes
colour	White, Red, Green, Blue, Yellow, Purple, Sky Blue	set up	Fast strobe light, slow strobe light
weight	36.5 g	size	55x60.2x18.9mm
Usage time	When flashing, it can be used for about 12 hours and stay on for about 3.5 hours		

\*The brightness data is an average data, and there may be slight differences in brightness between different lights.

### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and

(2)This device must accept any interference received, including interference that may cause undesired operation.