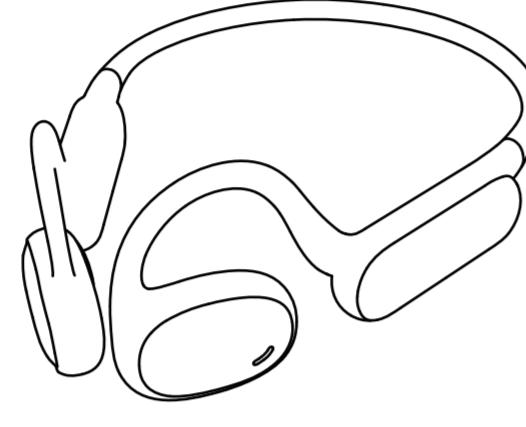
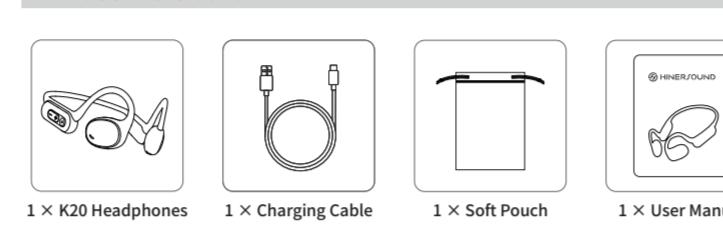
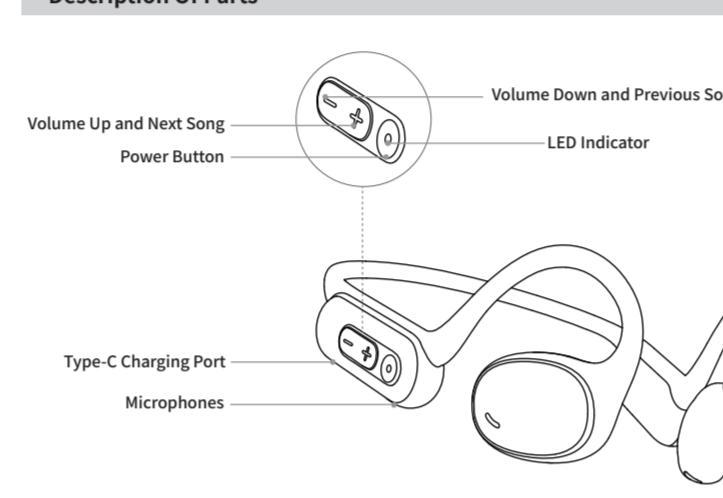
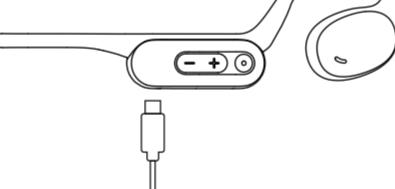


折痕	折痕	折痕
<p><b>HINERSOUND</b> KIDS WIRELESS OPEN-EAR HEADPHONES</p>  <p>USER MANUAL V1.0</p>	<p><b>What's in the box:</b></p>  <p><b>Description Of Parts</b></p>  <p><b>How It Works</b></p> <p><b>Power On/Off</b></p> <p>Power On: Press and hold the power button for 2 seconds to turn on. Power Off: Press and hold the power button for 2 seconds to turn off. Auto Power Off: If not connected to a playback device after power on, the headphones will automatically power off after 3 minutes.</p> <p><b>Bluetooth Pairing</b></p> <p>When using for the first time, press and hold the power button until the LED indicator flashes red and white alternately. The prompt voice will say "Bluetooth pairing". 2. Go to your device's Bluetooth settings and connect to "HINERSOUND K20", the indicator light will stay white and prompt voice will say "Bluetooth connected". 3. To disconnect the Bluetooth: Press the Bluetooth device's play, simultaneously press and hold the "+" and "-" buttons for 3 seconds to disconnect the Bluetooth connection. The indicator light will flash red and white alternately and prompt voice will say "Bluetooth disconnected".</p> <p><b>Volume Control / Music Control</b></p> <p>Increase volume: Short press "+" Next Song: Long press "+" for 2 seconds. Decrease volume: Short press "-" Previous Song: Long press "-" for 2 seconds. Play/pause music: Short press power button. (Playing: No indicator light, Pausing: White indicator light)</p> <p><b>Note:</b> Volume Limit: An audible prompt "tone" will sound when the volume reaches its maximum level.</p>	<p><b>Technical Support</b></p> <p>Email: hello@hinersound.com Website: www.hinersound.com @Hinersound_official @hinersound @Hinersound @hinersound_official</p> <p><b>Disclaimer:</b> This manual is subject to update without notice. <b>Electronic download address:</b> www.hinersound.com</p> <p><b>HINERSOUND</b> KIDS WIRELESS OPEN-EAR HEADPHONES</p>
	<p><b>Call Functions</b></p>  <p>Answer/End A Call: Short press power button. Reject A Call/Switch between phone and earphone (during an ongoing call): Long press the power button for 1.5 seconds.</p> <p><b>Charging Instructions</b></p> <p>When the headphones have low battery, the indicator light will flash red every 10 seconds, accompanied by the prompt "Battery level low,Please recharge headset." Use a USB Type-C charging cable to charge the headphones. The red light will remain illuminated during charging and will turn white when fully charged.</p>  <p><b>Switching Sound Modes</b></p> <p>To switch between sound modes: While the headphones are powered on, double-click the power button to alternate between Outdoor Mode(94dB), Kids Mode(85dB) and Toddler Mode(70dB).</p> <p><b>Dual Device Connection Function</b></p> <p>Steps1. Turn on the headphones. Connect the headphones to Device A. Steps2. Disconnect the headphones from Device A. The headphones will enter into pairing mode. Steps3. Connect the headphones to Device B. Steps4. Manually reconnect the headphones to Device A.</p> <p><b>Specifications</b></p> <p>Premium 16.2MM Dynamic Driver * 2 Input: 5V-100mA Frequency Response: 20Hz-20kHz Bluetooth Version: Support Bluetooth V5.3 Bluetooth Transmitter Frequency Range: 2400-2483.5MHz Bluetooth Transmitter Modulation: -96dBm@GFSK, 95.5dBm@1/4 DQPSK, -88.5dBm@8DPSK modulation Battery Type: Lithium-ion Polymer (3.7V, 110mAH) Bluetooth range: 10 m/ 32.8 ft</p> <p><b>Safety Information</b></p> <p><b>Hearing Safety</b></p> <ul style="list-style-type: none"> <li>To avoid hearing damage, do not listen for extended periods at high volume.</li> <li>Do not turn the volume so high that you're unable to hear your surroundings.</li> <li>Do not use earphones while driving.</li> <li>You should use caution or temporarily discontinue use in potentially hazardous situations.</li> </ul> <p><b>RF exposure statement</b></p> <p>This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.</p> <p><b>FCC Warning</b></p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>Usage Environment</b></p> <p>Store the product and accessories within a temperature range of -10°C to +45°C. The working temperature range is 0°C to +40°C. Do not use the product at excessively high or low temperatures. That may lead to device malfunctions.</p> <p>Do not expose the product to temperatures above 45°C, or place it near heat-emitting devices such as direct sunlight, heaters, microwaves, ovens, or water heaters.</p> <p>Avoid using the device in dusty or humid environments to prevent internal circuit failures.</p> <p><b>Battery and Power</b></p> <p>This device is equipped with a non-removable built-in battery. Do not attempt to replace the battery yourself, as it may result in device malfunction or battery damage. The use of unauthorized or incompatible batteries may lead to fire, explosion, or other hazards.</p> <p>Recycle rechargeable batteries in accordance with local laws.</p> <p>Do not expose the device or the battery to fire, excessive heat or excessive humidity.</p> <p>Plugs and original or certified cables and power adapters must meet standard requirements for charging. Reference standards: Input voltage AC: 100V-240V 50/60Hz, output voltage 5V, output current 0.5A or above.</p> <p><b>Repairs and Protection</b></p> <p>For all repair services, please consult qualified service person. Do not attempt to disassemble or repair the device yourself. Contact customer service for repair assistance. Do not insert any sharp objects into the device.</p> <p>Clean the headphones regularly, gently wipe its surface with a soft cloth or paper towel to remove the dust and dirt. Avoid using chemicals or strong cleaners that may potentially damage the headphones' surface.</p> <p><b>Warning:</b></p> <ul style="list-style-type: none"> <li>This product and its accessories may contain small parts. Children under 14 years old should use the product under adult supervision.</li> <li>All packaging materials, such as tapes, trays, labels, etc., are not part of the product and are not suitable for children's play. Please handle these packaging materials properly.</li> </ul>	

## 技术要求:

1. 工艺: 风琴折纸;
2. 材质: 128g双铜纸, 单面过哑膜;
3. 印刷: 四色印刷;
4. 尺寸: 成型尺寸: 432 \* 145mm; 单页尺寸: 108 \* 145mm;