 


PUNKWOLF

D68F

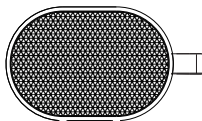


## PRODUCT INSTRUCTIONS
 
### parameter data

Product name: LED Portable Bluetooth Speaker  
Model name: D68F  
Bluetooth version 5.0  
The horn: 57MM  
Bluetooth distance: Max 400Inch  
Battery capacity: 1200mAh  
Playing time: Max 10 hours (without light)  
Charging time: 3 hours  
Charging input: 5V/1A  
Output power: 5 watts

### Product Operating Instructions




1. After the speaker is turned on by pressing "⏻" for 2 seconds, you will hear the boot prompt tone, the LED light of the speaker will light up, and enter the pairing mode.

2. Turn on the Bluetooth device and search for Bluetooth devices, and find "D68F" in the Bluetooth device list. After the connection is successful, the speaker will emit a prompt tone, and the colored lights will move back and forth.
3. In the subsequent use, as long as the Bluetooth of the mobile device is turned on, it can be connected automatically

### Buttons and Functions



 - Key ①: button: Power button Long press the power button for 2 seconds to turn on/off; short press
- Key ②: volume-/previous song
- Key ③: volume + next song
- Key ④: Light switch



### Shutdown

When the speaker is not in use, press and hold the "⏻" button to turn it off to prevent power loss, low battery alarm and automatic shutdown function: when the battery is lower than 20%, the speaker will emit a low power prompt sound, and you should call the speaker in time Charging, when the power is lower than 10%, the speaker will automatically shut down.

### TWS mode

1. Two D68F devices need to be turned on at the same time
2. Press "⏻" four times and hear the beep "TWS ON" to start TWS pairing
3. When the beep sound "deng deng", the TWS pairing is completed

### Bluetooth mode

disconnect bluetooth	Short press "Volume + and Volume -" at the same time, the time for 1s
Bluetooth connection	Short press "Volume + and Volume -" at the same time, the time for 1s
Bluetooth clear memory	Press "Volume + and Volume -" at the same time, the time for 4s

### Item list

Speaker X1  
Charging cable X1  
Manual X1

### Precautions for product use

1. Do not try to disassemble or replace any parts in the product except for the operation methods marked in the manual.
2. Do not put the product into water or any other liquid, this product is not waterproof design.
3. If any liquid accidentally enters the product, please immediately disconnect and remove the product.
4. To avoid electric shock, keep water off your hands when installing or uninstalling the product.
5. Do not place the product near heat sources or expose them directly to fire.
6. Do not place this product in an environment with strong electromagnetic force, otherwise it will cause product failure

### Solutions to common problems

Multiple connection pairing failed	Turn off the speaker and turn it on again or turn off Bluetooth on the phone and turn it on again
Music playback breaks down	Whether the connection distance is out of range or there is an obstacle between the speaker and the phone
Play silent	Check if the speakers are the quietest
Can not boot	Is the built-in battery of the speaker charged?
Power light is off	Check if the charging port is plugged in

### FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.