


User Manual
Magnetic wireless charging power bank
Model :WP3

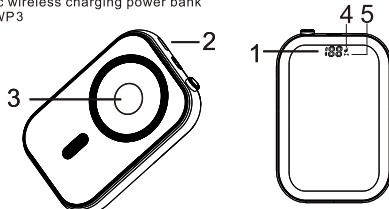

Function introduction

1. Battery power indicator
2. Type C input 5V/3A;9V/2A
Type C output 5V/3A;9V/2.22A;12V/1.67A
3. Wireless output 15W(Max) iWatch 2.5W
4. Fast charging indicator light.
5. Wireless charging indicator light.

Operating instructions:

1. Press the power button to display the remaining power.
2. Power input and output: Use the power cable to connect the power adapter to charge the power bank, connect the power bank to charge the device to be charged through the power cable, or use the wireless charger to charge the mobile phone and iWatch (the device needs to support wireless input function).

Technical parameters:

Battery type : Polymer battery
Executive standard: GB/T35590:2017
Capacity :10000mAh
Input: 5V/3A;9V/2A
Output:5V/3A;9V/2.22A ;12V/1.67A
Wireless output: 15W(Max) iWatch 2.5W
Size:101.6*67.9*18mm
Weight:192±5g

How to charge for power bank

1. Use the Type C charging cable to charge for power bank.
2. It is recommended to connect the power adaptor to charge for power bank.
3. It can be connected to the USB port of the computer to charge for power bank.
4. After press the power button , The power bank shows the battery level in digital display and the indicator light is white.
5. While charging, The power bank displays the power level in numbers and the indicator light flashes white.
6. When fully charged, The power bank displays the power level in numbers and the indicator light stays on white.

FCC Statement

1.This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user ' s authority to operate the equipment. Note:This equipment has been tested and found to comply with the limits for a class B digital device,pursuant to Part 15 of the FCC Rules. These limit. However,there is no guarantee that interference will not occur in a particular installation,if this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Charging for iWatch or mobile phone

1. Power bank is used to charge for digital products like iWatch or mobile phone.
2. Connecting power bank and mobile phone with power cable ,mobile phone is charged by power bank automatically.
3. Put the iWatch or mobile phone which supports wireless function on power bank wireless charging area,then press the power button and wait for around 3 seconds, the power bank will be automatically charged for iWatch or mobile phone.
4. While the device is being charged, the digital display shows the power level and the indicator light is on in white.
5. After iWatch or mobile phone is fully charged, the power bank will be shutdown automatically within 30 seconds after disconnecting.

Note:

1. The charging time of this power bank is about 4-5 hours. The specific time is subject to the actual situation.
2. If the power bank cannot be charged or the iWatch or mobile phone cannot be charged by power bank, please check if the connection cable is normal and firm, the charging port accessory is suitable or not. It is recommended to use a regular brand power adapter to charge for power bank .
3. There is a conversion rate of power bank, so the capacity of power bank is not equal to the rechargeable capacity.
4. If the power bank cannot be turned on for short circuit protection due to improper operation, please charge the power bank to activate it.

Safety Information:

Warning: Failure to follow these safety instructions may result in fire, electric shock, damage or other injury.
1. Please try to keep the storage temperature of the product between 10-35 C.
2. Do not fall, do not disassemble or puncture, repair the power bank by yourself.
3. Do not expose the power bank in fire, high temperature or water.
4. Stop using the power bank if you find any abnormal phenomena such as expansion or expansion of the charged device.
5. This device is not suitable for using by persons with immature physical, perceptual and mental abilities (including children), nor by persons lacking relevant experience and knowledge, unless supervised and guided by someone who is professionally responsible for their personal safety. Please control children to ensure that they do not use this device as a toy.
6. Do not leave the product in the car for a long time, especially when parked in the sun.
7. Do not put foreign bodies into the product interface.
8. Please charge your power bank at least every three months.
The above information is for reference only and is subject to change without prior notice

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.