



USER MANUAL

PROFESSIONAL BATTERY TROLLEY SPEAKER

MODEL:RA 1208




Please read this user manual carefully before system connection

FCC ID:2BCKURA1208

IMPORTANT SAFETY MEASURES

 Before using this machine, please read all the safety and operating instructions. Please adhere to all the instructions herein, and save this information in a safe place for future use.



1. Please ensure the power cord for this unit is out of the path of foot traffic. Do not place heavy objects on the power cord as it will cause damage to the cord. Always firmly grasp the plug and pull the plug from the power supply, never yank the cable in order to pull out the plug. Avoid the use of an extension cable.

2. Ventilation: This unit should be placed in a well ventilated space where it has no less than 10cm ventilation space on either side of it. Do not cover the unit with a cloth or blanket. Do not put it on a bed, sofa, or carpet as this will stifle the ventilation of the unit.

3. Casing Dismantling: DO NOT dismantle the casing. There are no usable parts inside the unit. Make use of a service center in order to have your unit repaired.

4. Should the unit emit any smell or smoke, immediately turn off the power supply. Take the unit to the service center from which you bought it for repairs.

FEATURES

- Bluetooth & TWS Function
- Plays Mp3 files stored in SD card/USB drive/external audio device
- FM radio
- Guitar input
- Microphone inputs
- Wireless microphone included
- With remote control
- Built-in 7.4V 2200mAh 16.28Wh rechargeable battery

CONNECTING

1. This set applies to AC 110V~240V, 50/60Hz
2. AC power: battery can be charged when connected to AC power. Red light on battery is charging, it will change to green once battery complete charge.
3. Internal battery will be charged even device switch off when plugged in to AC power
4. Speaker battery can be charged using 12V external car battery as well(connect cable not included) by "DC 12V input". Please make sure "+" and "-" in right connection.
5. Adjust function keys to your personal audio preference.

BLUETOOTH INSTRUCTION

Change the mode into "BLUE", the bluetooth sign light twinkles, and speaker will give an alarm. Ensure you enable the Bluetooth function on your Bluetooth device. Search for Bluetooth connection until you find device model and pair.

TWS CONNECTION

STEP 1  Push the Mode Button on both speakers until speakers are in Bluetooth Mode. Screen will display the word **"BLUE"**.

STEP 2  When both speakers are in Bluetooth mode, push and hold the TWS button for 3 seconds. You will hear a beep & screen display "bt/btst". Next time you put both speakers in Bluetooth mode at the same time, speakers will connect automatically.

STEP 3  On your device, turn your Bluetooth settings "ON", you will then select the unit and pair. Enjoy TWS (True Wireless Stereo) sound from your phone via Bluetooth!

BATTERY & CHARGING

 
1. The units takes approximately 8 hours to fully charge. It will automatically begin charging once the power cord is connected.
2. If the battery power is low may caused sound distortion or stop play, pls charging the battery ontime.
3. To maximize the battery's lifespan, please charging the battery immediately. When the unit is not used for prolonged periods of time,the battery will gradually lose its power. It is recommended to fully charge the battery at least every 30days.
4. To saving battery, please power off once stop using.

REMOTE CONTROL




- Standby
- USB/SD/LINE/BLUETOOTH (Audio input)
- Prev/FM CH-
- Play/pause/FM tuner
- Next/FM CH+
- Repeat
- Stop
- Volume up
- Volume down
- Mute
- Equalizer
- Number

2X8" FRONT CONTROL PANEL

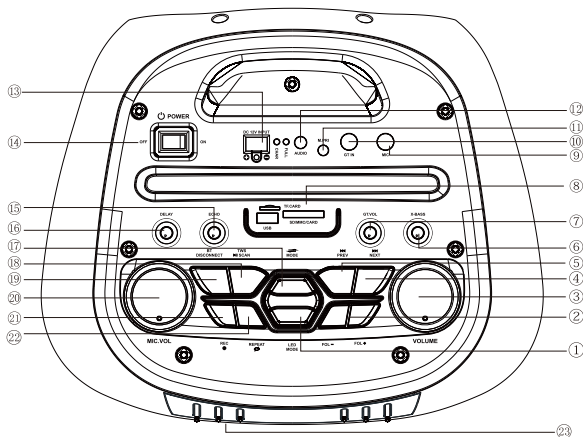


- ① **LED MODE ADJUSTMENT**
- ② **USB/SD/TF FOLDER SELECT**
- ③ **VOLUME** MASTER VOLUME ADJUST
- ④ **NEXT ►►** :NEXT SONG
- ⑤ **PREV ◄◄** :PREVIOUS SONG
- ⑥ **X-BASS** ADJUST
- ⑦ **G. VOL** GUITAR VOLUME ADJUST
- ⑧ **USB/SD/TF** CARD SOLT
- ⑨ **MIC** MICROPHONE INPUT JACK
- ⑩ **G.IN** GUITAR INPUT JACK
- ⑪ **M.PRI** MICROPHONE PRORITY ON/OFF SWITCH
- ⑫ **AUDIO** INPUT
- ⑬ **DC 12V INPUT**: DC 12V CHARGING INPUT
- ⑭ **POWER** ON/OFF SWITCH
- ⑮ **M.ECHO** ECHO ADJUST
- ⑯ **M.DELAY** DELAY ADJUST
- ⑰ **MODE** ⇐ :MODE SELECT
- ⑱ **SCAN/TWS ►►** :PLAY/PAUSE/TWS/FM STATION AUTOMATIC SEARCH
- ⑲ **BT DISCONNECT**
- ⑳ **MIC. VOL** MICROPHONE VOLUME ADJUST
- ㉑ **REC**: RECORDING; INSERT USB/SD CARD PRESS THIS
BUTTON FOR RECORDING, PRESS AGAIN TO STOP AND
PLAY RECORDING SOUND
- ㉒ **REPEAT**
- ㉓ **EQUALIZER**
DISPLAY SCREEN

 2X8" REAR CONTROL PANEL

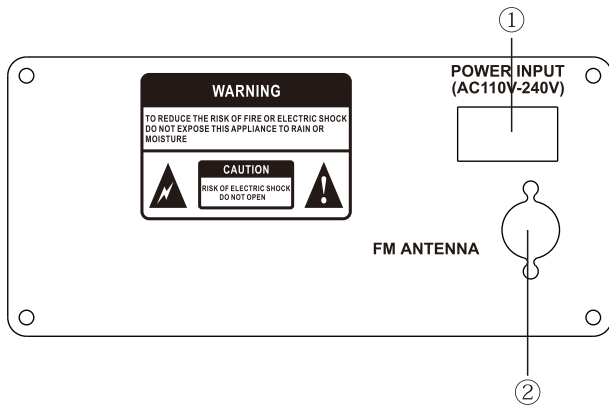

- ① POWER INPUT(AC 110V-240V)
- ② FM ANTENNA

 2X10" FRONT CONTROL PANEL

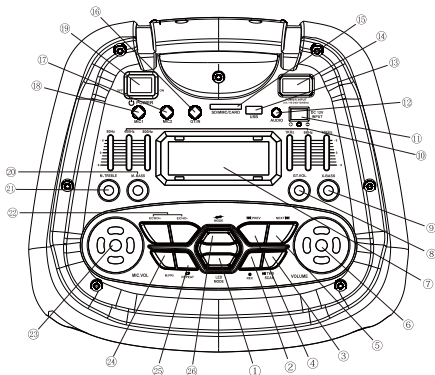

- ① **LED MODE ADJUSTMENT**
- ② **REC**: RECORDING; INSERT USB/SD CARD PRESS THIS BUTTON FOR RECORDING, PRESS AGAIN TO STOP AND PLAY RECORDING SOUND
- ③ **SCAN/TWS** ►►: PLAY/PAUSE/TWS/FM STATION AUTOMATIC SEARCH
- ④ **PREV** ◀◀: PREVIOUS SONG
- ⑤ **NEXT** ▶▶: NEXT SONG
- ⑥ **VOLUME** MASTER VOLUME ADJUST
- ⑦ **DISPLAY SCREEN**
- ⑧ **G.VOL** GUITAR VOLUME ADJUST
- ⑨ **X-BASS** ADJUST
- ⑩ **EQUALIZER**
- ⑪ **DC 12V INPUT**: DC 12V CHARGING INPUT
- ⑫ **AUDIO** INPUT
- ⑬ **USB** CARD SLOT
- ⑭ **POWER INPUT**(AC 110V-240V)
- ⑮ **SD/MMC/CARD** CARD SLOT
- ⑯ **G.IN** GUITAR INPUT JACK
- ⑰ **MIC.2** MICROPHONE INPUT JACK 2
- ⑱ **MIC.1** MICROPHONE INPUT JACK 1
- ⑲ **POWER** ON/OFF SWITCH
- ⑳ **M.BASS** BASS ADJUST
- ㉑ **M.TREBLE** TREBLE ADJUST
- ㉒ **M.ECHO** ECHO ADJUST
- ㉓ **MIC.VOL** MICROPHONE VOLUME ADJUST
- ㉔ **M.PRI** MICROPHONE PRIORITY ON/OFF SWITCH
- ㉕ **REPEAT**
- ㉖ **MODE** ⇐⇒: MODE SELECT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

