 


USER MANUAL

 
 

 
使用手册

使用方法






使用前，请先取出遥控器绝缘片。



使用方法1：仅阳具

- 1、长按  键1.5秒开机，进入待机状态
- 2、点按  键，10种震动频率循环切换
- 3、点按  键，3种伸缩速率循环切换
长按1.5秒可关闭该模式
- 4、长按  键1.5秒关机

使用方法2：阳具+遥控器

- 1、长按阳具  键1.5秒开机，进入待机状态
- 2、点按遥控器  键，10种震动频率循环切换
- 3、点按遥控器  键，3种伸缩速率循环切换
- 4、长按遥控器  键1.5秒可使阳具回到待机状态
- 5、长按阳具  键1.5秒关机

充电

阳具充电：磁吸充电口在阳具底部

- 1、充电前请确保充电口和充电线插针处未沾水或润滑油
- 2、将USB充电线连接充电口并接电源充电，充电时灯光闪烁，充满后灯光长亮
- 3、请勿在充电状态下使用本产品
- 4、请注意充电时间不要超过24小时
- 5、请使用原装充电配件

更换遥控器电池

遥控器使用一节AAA 1.5V电池，打开后盖更换。更换完成，对齐合上。

产品信息

材 质	液态硅胶+ABS
电 池	阳具内置可充电聚合物锂电池 遥控器使用一节AAA 1.5V电池
充电电压	5V
充电时间	约150分钟
使用时间	充满电后可使用约60分钟
工作模式	3速伸缩，10频震动

 
清洁、储存与安全

- 1、使用前/后请清洁。用温和的香皂或情趣玩具专用清洁剂清洗表面。
- 2、玩具清洁后请擦干并存放在阴凉通风处，请勿在阳光下暴晒。
- 3、油性润滑剂可能会损坏硅胶，建议使用水性润滑剂。
- 4、充电注意事项如上一页所述。


 
 

USER MANUAL

USAGE



 


Before use, please remove the tab of remote.



Usage 1: Dildo Only

1. Press and hold  Button for 1.5 seconds to turn on, activating standby mode.
2. Press  Button once to cycle through 10 vibration modes.
3. Press  Button once to cycle through 3 thrusting speeds.
Press and hold for 1.5 seconds can turn the mode off.
4. Press and hold  Button for 1.5 seconds to turn off.

Usage 2: Dildo with Remote

1. Press and hold  Button on dildo for 1.5 seconds to turn on, activating standby mode.
2. Press  Button on remote once to cycle through 10 vibration modes.
3. Press  Button on remote once to cycle through 3 thrusting speeds.
4. Press and hold  Button on remote for 1.5 seconds can get back to standby mode.
5. Press and hold  Button on dildo for 1.5 seconds to turn off.

CHARGING

Magnetic charging port on the bottom is for charging.

1. Before charging, please completely dry the charging port and charging pin.
2. Plug charging pin into charging port and connect USB to power source.
Light will flash while charging. Once fully charged, it will turn to solid light.
3. Please don't use the toy when charging.
4. Please don't charge over 24 hours.
5. Use the original charger provided for charging the toy.

Replacing Remote Battery

The remote requires one AAA 1.5V battery. Open the back cap, change the battery, and then close the cap.

SPECIFICATIONS

Material	Liquid silicone+ABS
Battery	Dildo: Built-in rechargeable polymer Lithium battery Remote: Requires one AAA 1.5V battery
Charging Voltage	5V
Charging Time	Approx. 150 minutes
Run Time	Approx. 60 minutes after fully charged
Working Mode	3 thrusting speeds, 10 vibration modes

CLEANING, STORAGE AND SAFETY

1. Please clean it before/after use. Wash the surface with gentle body soap or specialized sex toy cleaner.
2. After cleaning the toy, wipe it dry and store it in a cool, ventilated place.
Do not expose it to sunlight.
3. Oil-based lubricant may damage the silicone, water-based lubricant is suggested.
4. Precautions for charging are as mentioned previous page.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.