

USER MANUAL



1. Voltage & Battery Power



2. Press the side button to start



3. Press the side button to stop



4. Ready to connect: Double click and hold the button (Keep holding after the second click) until it shows "Ready to Connect" to enter APP pairing mode when on pause status

Please note: No connection after 30 seconds will back to the working interface.



5. APP is paired successfully



6. Foot pedal is paired successfully



7. APP & foot pedal are paired successfully



8. Ambient Light: Press the button while the screen facing down, perpendicular to the ground when on pause status.


Supporting ten colors.

5V





9. Adjust Voltage:

Press and keep holding the button then change the angle to your ideal voltage.

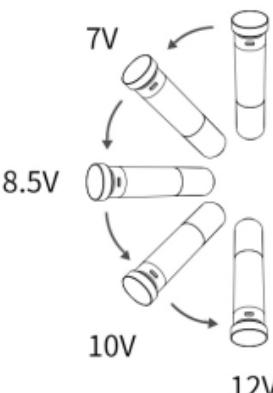

1、Please confirm
the marked point
Turn left to lock

2、Please confirm
the marked point
Turn right to unlock

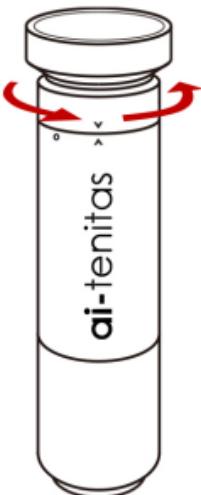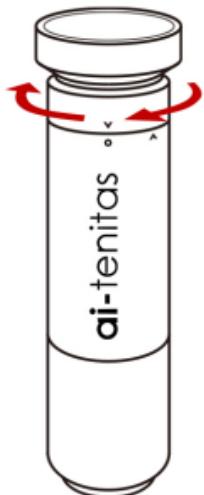

1.19-inch Round Full Color AMOLED Screen



DIY Round Ambient Light

Gyro Sensor Adjustment

Panasonic NCR18500A battery

Customized 9W German
FAULHABER Brushless Motor

TIPS:SHUT DOWN AFTER 45 MINUTES IN STANDBY MODE

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.