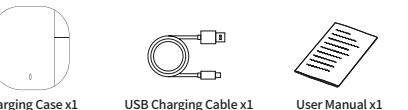 
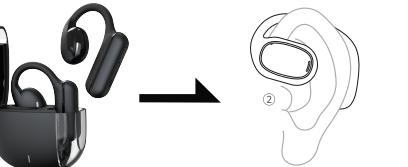


<h1>HJ-09</h1> <h2>User Manual</h2> <p>Please review this manual thoroughly before operating your device. In order to avoid unnecessary injuries, please do not Disassemble this product by yourself, and please use a standard charger.</p>	<p>Packing Including</p>  <p>Product Specification</p> <p>Driver : 16.2mm Bluetooth Version : V5.3 Headphones Charging Time <2 H Charging Case Charging Time <2 H Working Voltage : 5V Transmission Range : Up to 10m Working Temperature : -20°C-60°C</p>	<p>Power on</p> <p>Method 1: Open the cover of the charging box, take the headset out and turn it on automatically. (Power on prompt tone :"Pairing")</p> <p>Method 2: With a single earphone outside the charging box, long press the "control button" for 3 seconds to turn it on. (Power on prompt tone :"du")</p> <p>Power off</p> <p>Method 1: Put the headset into the charging box, automatically shutdown and charge.</p> <p>Method 2: if there is no connection with the device, it will automatically shutdown after 3 minutes. (Shutdown tone : power off")</p> <p>Method 3: When the earphone is not connected, long press the touch button of either earphone for 5 seconds, and the left and right earphones will be turned off at the same time. (Shutdown tone : power off")</p>	<p>First Pairing</p> <p>Step 1: Please turn on the bluetooth function on your cellphone/laptop.</p> <p>Step 2: Open the charging case, take the headphones out, the red and white lights flash on headphones.</p> <p>Step 3: Select "HJ-09" on your phone/laptop and connect the device, the red and white lights off when you connect successfully. (The headphones will automatically turn off if not connected the device within 3 minutes.)</p> <p>Reset Headphones</p> <p>If only one headphone connects to phone or the headphones can not pair together, Please try the reset steps:</p> <p>Step 1: Take the headphones out from charging case.</p> <p>Step 2: Press the control button 5 times.</p>
--	---	--	--

<p>Product Wear</p>  <p>Step 1: Take the headphones out from charging case. Step 2: Hang the headphones on your ears.</p> <p>Gaming Mode Long press the right control button 2 seconds to switch between music mode and game mode. (Default Music Mode) Gaming mode can provide you low latency from screen to your headphones when you playing game.</p>	<p>Product Control</p> <table border="0"> <tr> <td> Answer a Call Short press the control button twice.</td><td> End a call Press the control button twice.</td></tr> <tr> <td> Reject call Long press the control button for 2 seconds.</td><td> Play/Pause Press the control button twice.</td></tr> <tr> <td> Activate Siri Long press the Left control button for 2 seconds to activate Siri.</td><td> Previous Song Press the Left control button 3 times.</td></tr> <tr> <td> Volume Up Press the Right control button once.</td><td> Next Song Press the Right control button 3 times.</td></tr> <tr> <td> Volume Down Press the Left control button once.</td><td></td></tr> </table>	 Answer a Call Short press the control button twice.	 End a call Press the control button twice.	 Reject call Long press the control button for 2 seconds.	 Play/Pause Press the control button twice.	 Activate Siri Long press the Left control button for 2 seconds to activate Siri.	 Previous Song Press the Left control button 3 times.	 Volume Up Press the Right control button once.	 Next Song Press the Right control button 3 times.	 Volume Down Press the Left control button once.		<p>Product Charging</p> <p>1)Put the earbuds back in the charging case to charging earbuds. 2)Plug the USB type-C to charging the charging case.</p>  <p>Control Button  USB type-C  Charging Port </p> <p>Warranty The warranty covers your device , including accessories against manufacturing defects for 1 year from the date of purchase.</p>	<p>Safety For You</p> <ul style="list-style-type: none">  Do not expose device to liquids, moisture or humidity. It has electronics and a battery in it. Neither of them likes getting wet.  Don't try to disassemble your device. There are no user serviceable parts inside it.  Try not to drop your device and keep it away from sharp objects such as keys in your pockets.  Only charge your device from 5V USB ports such as phone chargers and laptops or PCs.  Remove and clean the earbuds tips regularly, to ensure that you always enjoy the best sound possible from your device.  Do not expose device to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.  Never listen to music at high volumes or you may permanently damage your hearing.  Pay attention to your surroundings and never wear any headphones while riding, driving or walking in traffic. You do not come with any warranty.  Do not throw your device in a fire to dispose it. The internal battery may explode.
 Answer a Call Short press the control button twice.	 End a call Press the control button twice.												
 Reject call Long press the control button for 2 seconds.	 Play/Pause Press the control button twice.												
 Activate Siri Long press the Left control button for 2 seconds to activate Siri.	 Previous Song Press the Left control button 3 times.												
 Volume Up Press the Right control button once.	 Next Song Press the Right control button 3 times.												
 Volume Down Press the Left control button once.													

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.