

## 提示

- 不要将无人机撞到沙子或泥土中，无人机齿轮可能堵塞
- 当第一次学习飞行时，练习起飞和旋转
- 请离墙壁和建筑物十几米远
- 坠毁或螺旋桨中卡住东西时，始终将油门操作杆一直压到底
- 切勿在人身或附近使用无人机，风的突然变化或其他情况可能导致意外坠毁
- 驾驶无人机时要谨慎，遵守有关法律，尊重他人的隐私和财产权利
- 除预期用途外，不得改装或用于任何用途

**警告：**未经责任方明确批准，对本装置进行的更改或修改可能会使用户失去操作设备的权限

## 故障排除

打开遥控器开关时，遥控灯不亮：

- 1) 检查遥控器中的电池是否安装正确
- 2) 更换新电池

飞行中遥控电源指示灯闪烁！

- 1) 远程电池电量不足，立即降落无人机
- 2) 更换旧电池

无人机和遥控器配对正确，但无人机不会升空：

无人机电池需要充电，使用USB充电线将无人机电池连接到电源

在微调无人机后，飞行非常不稳定，无法正常飞行：

- 1) 有可能一个或多个叶片损坏，请更换合适的叶片，再次尝试飞行
- 2) 向下内侧按遥控杆5秒钟，遥控器滴滴2声，复位陀螺仪
- 3) 关闭无人机和遥控器，然后重新配对无人机

遥控器和无人机不能配对：遥控器必须在无人机三米以内

**注：**如果三米内有多架未配对的无人机，则必须先成功配对一架，然后才能配对其他无人机

07

适合年龄14岁以上

# 四轴飞行器使用说明书



 
- 为保证航空无线电电磁环境的要求，（禁止在以机场跑道中心线两侧各10公里、跑道两端各20公里范围）以及民航航线、航线。停止使用各类模型、无人机。在国家有关部门发布的禁飞区域，停止使用各类模型、无人机。

## 内容




## 如何更换螺旋桨

1. 用力拉动以卸下损坏的螺旋桨，换一个新的，用力小心地推动
2. 每个叶片上都有一个字母，将桨叶与无人机上的对应字母匹配

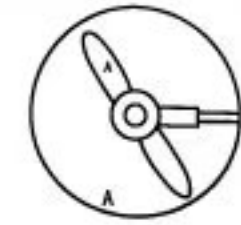


## 概述

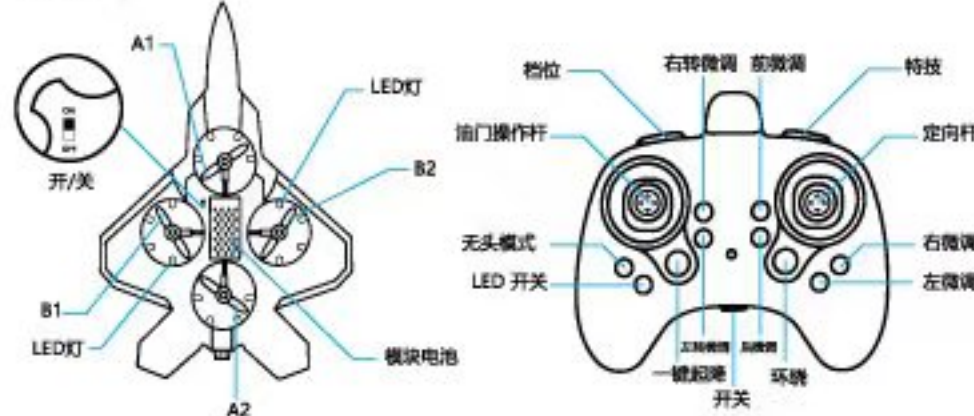 


01

## 高级模式

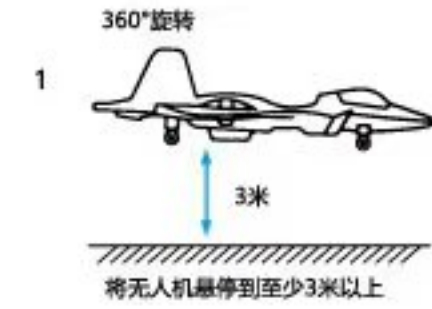 


## 自动定向

 当无人机处于无头模式时，无论无人机向哪个方向，无人机都将对用户（遥控器）定向

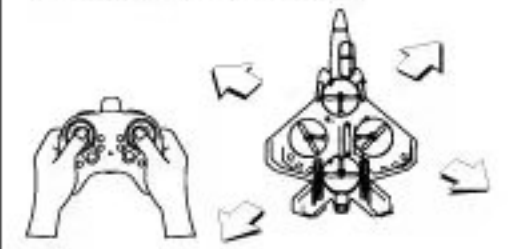

06

## 操作介绍

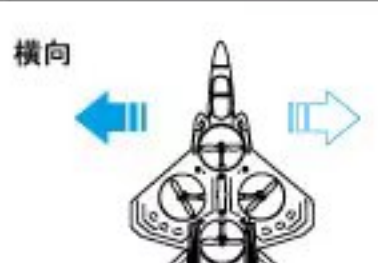 

05

## 充电/电池

1. 充电前请关掉无人机
2. 将电池充电器连接到无人机的充电端口
3. 将充电线连接到电源

注意：USB充电线在电池充电时会亮起，在电池充满后电线会熄灭。充电时间约为60分钟。

## 遥控

打开电池盖并安装3节1.5V“AA”电池，如图所示



## 可充电电池警告（可更换电池）

如果电池被刺穿、损坏或误用，则有火灾和人身伤害的危险

 
- 请勿拆卸、压碎、焚烧或使用短路的可充电电池
- 切勿将电池暴露在极端温度或湿度下
- 远离易燃材料和强光直射
- 只能使用提供的充电器、电线或适配器充电
- 电池只能由成人充电
- 充电时需成人监督
- 充电时让电池冷却到适当温度
- 如果电池变形、膨胀、冒烟或散发出强烈的气味，请停止充电
- 应在不燃物品上充电，远离易燃品
- 应定期检查与本产品一起使用的电池充电器、电源线插头、外壳和其他部件，并观察是否损坏，如果损坏，则必须在修理损坏后才能使用
- 存放之前，请取出电池（如果可以拆卸）
- 根据地方法律回收或处理电池
- 电池或电池组不应被拆解、粉碎、刺破，打开或以其他方式损坏
- 如果电池被吞下，请立即就医
- 如果电解液接触到皮肤或眼睛，请立即用淡水冲洗至少15分钟并立即就医
- 将电池存放在原始包装中，并远离可能会使它们短路的金属物体
- 请勿使电池跌落或使其受到强烈的机械冲击
- 在使用和储存期间，保持电池或电池组清洁和干燥，如果金属端子变脏，请用柔软的干布擦拭
- 使用新电池或电池组充电
- 首次使用时或长时间存放后，可能需要对电池或电池组进行两次或三次充电和放电，才能获得最佳性能
- 除非制造商另有规定，否则最好在15°C至30°C的温度下为电池或电池组充电
- 保留原始产品资料以备将来参考

## ⚠ 电池警告

- 不要将新旧电池混用
- 不要将碱性电池、标准电池（碳锌电池）或可充电电池混合使用
- 建议使用碱性电池（仅使用指定电压的电池）
- 以正确的极性插入电池，务必在成人监督下使用，更换电池并为其充电（如果适用）
- 不要试图给不可充电的电池充电
- 请勿让电池的供电端子短路
- 不要在火中处理电池，电池可能爆炸或泄漏
- 请勿拆卸下电池
- 根据地方法律回收或处理电池
- 请保留这些说明以备将来参考


02

## 滑翔起飞

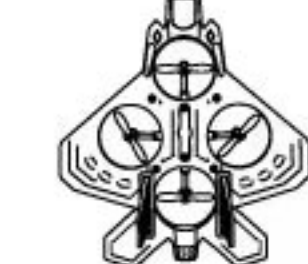

推杆推到最大，2秒左右滑翔起飞  
注意：滑翔起飞要在地图光滑、无风的情况下

## 一键起降

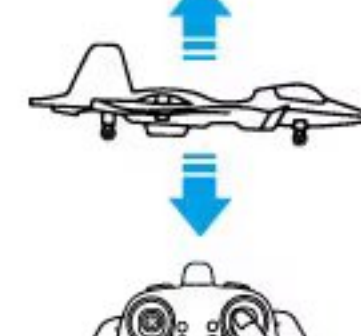 

按下一键起降键，触发自动起飞降落

## 环绕



长按环绕键飞机盘旋环绕，放开按键后飞机停止环绕。

 
03

## 无人机操作指南

### 1. 飞行前检查


1. 阅读所有的警告和说明
2. 安装无人机和遥控器电池
3. 确保无人机和遥控器已断电
4. 给电池充电

### 2. 选择位置

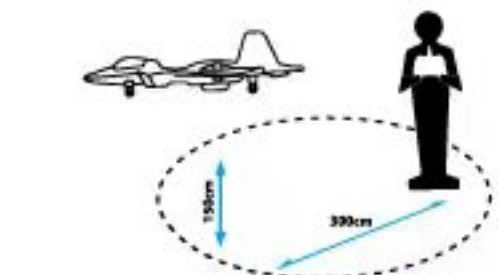

在取回或拿起无人机之前，请务必关闭遥控器，以避免意外启动螺旋桨

### 3. 配对无人机

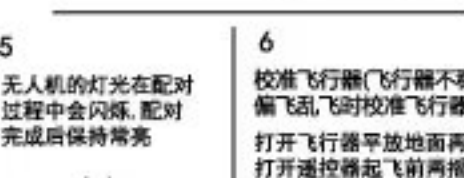 

04

## TIPS

- Do not crash the drone into sand or sand, the gears of the drone may be clogged
- When learning to fly for the first time, practice taking off and spinning
- Please keep several feet away from the walls and buildings
- Always press the throttle lever all the way after crashing or when something gets stuck in the propellers
- Do not use drone above or near people, sudden change of wind or other conditions may cause accidental crash
- You should be cautious when flying the drone, abide by the relevant laws, and respect the privacy and property rights of others
- The drone shall never be modified or used for anything except its intended purpose

**WARNING:** Without the explicit approval of the responsible party, changes or modifications to the device may cause the user to lose the authority to operate the equipment

## TROUBLE SHOOTING

When the remote control switch is turned on, the remote control lamp does not light:

- Check that the battery in the remote control is installed correctly
- Replace the battery with a new one

The remote control power indicator flashes during flight

- The remote battery is low. Land the drone immediately
- Replace the old battery

The drone and the remote control are paired correctly, but the drone can not take off:

The drone battery needs to be charged, use the USB charging cable to connect the drone battery to the power source

After fine-tuning the drone, the flight is very unstable, unable to fly normally:

- One or more blades may be damaged. Please replace the appropriate blades and try to fly again
- Press down the remote control lever to inner side of the remote control for 5 seconds, the remote control will make 2 beeps, and the gyroscope reset
- Turn off the drone and remote control, and then pairing the drone

Remote control and drone cannot be paired:

 
The remote control must be within 12 feet of the drone

**Note:** If there are multiple unpaired drones within 12 feet, one must be successfully paired before other drones can be paired

07


14+

## USER MANUAL FOR FOUR AXIS AIRCRAFT

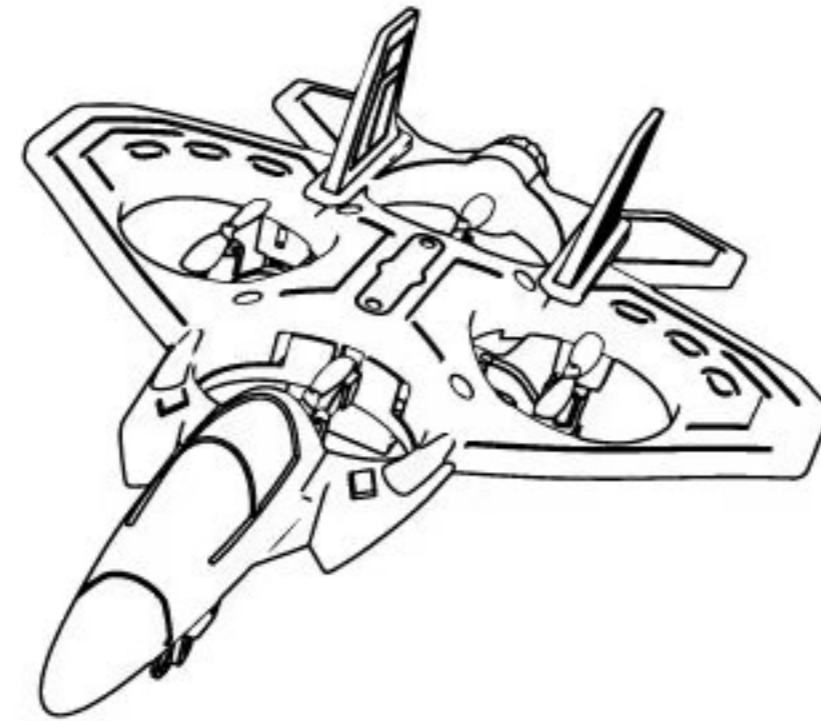


- To ensure the electromagnetic environment requirements of aviation radio stations, it is prohibited to operate on both sides of the airport runway centerline 10 kilometers, 20 kilometers at both ends of the runway, as well as civil aviation routes and routes. Stop using all kinds of models and UAVs in the no fly zone issued by relevant national departments.

## CONTENTS

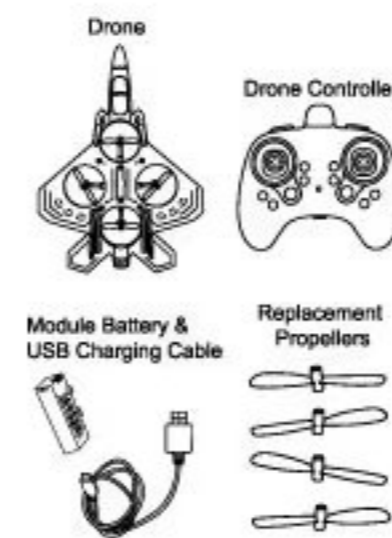 


### HOW TO REPLACE PROPELLER

 - Pull hard to remove the damaged propeller, replace it with a new one, and push hard and carefully
- There is a letter on each blade, match the blade with the corresponding letter on the drone

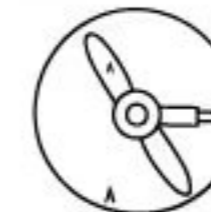

## OVERVIEW

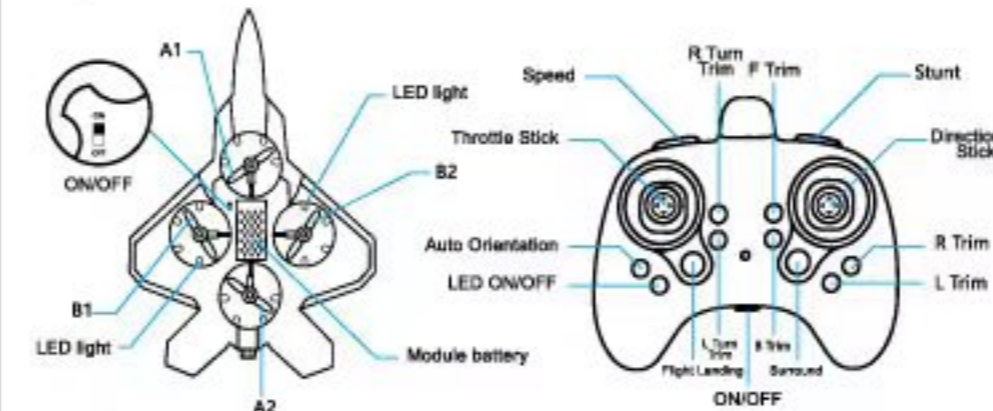 

01

## ADVANCED MODE

- 360° Stunt  
Hover the drone at least above 10 ft
- Press stunt button
- Move the directional button to left or right that make the drone flip

 
## AUTO ORIENTATION

When the drone is in Auto Orientation mode, the drone will orient to the user (remote) no matter which direction the drone faces

- Press the Auto Orientation button, the remote control will beep every 6 seconds, indicating that it is in Auto Orientation mode
- Push to right will send the drone away from the user, push to left will move to the left, and so on
- Press Auto Orientation button to exit the mode

06

## OPERATION INTRODUCTION

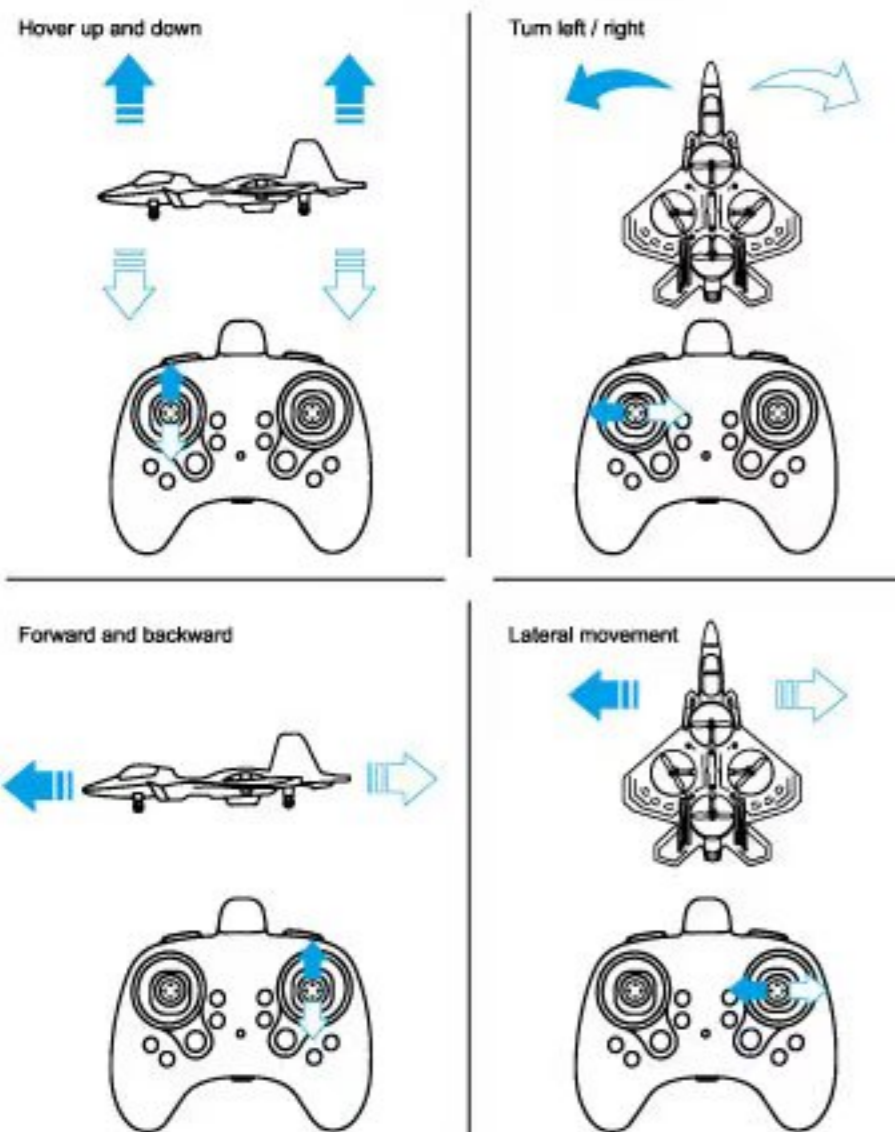

05


## CHARGING/BATTERY

 - Please turn off the drone before charging
- Connect the battery charger to the charging port of the drone
- Connect charging cable to power source


**Notes:** the USB charging cable will light up when the battery is charged, and it will turn off when the battery is full. The charging time is about 60 minutes.

## REMOTE

Open the battery cover and install it Three 1.5V "AA" batteries, as shown in figure

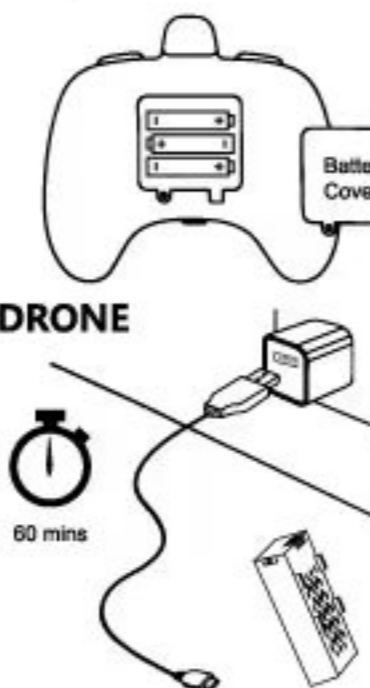

## DRONE

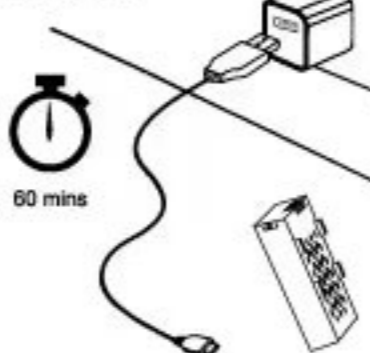 

### RECHARGEABLE BATTERY WARNING (REPLACEABLE BATTERY)

There is a risk of fire and personal injury if the battery is punctured, damaged or misused.

- Do not disassemble, crush, burn or use short-circuit batteries
- Do not expose the battery to extreme temperature or humidity
- Keep away from flammable materials and direct sunlight
- Only use the charger, wire or adapter provided
- The battery can only be charged by adults
- Adult supervision is required when charging
- Allow the battery to cool to the proper temperature before charging
- Please stop charging if the battery gets hot, expands, smokes or gives off a strong smell
- Charge on non flammable materials and keep away from flammable materials
- Battery chargers, power cords, plugs, enclosures and other components used with this product should be checked regularly and observed for damage or not, if damaged, used after repair of the damage
- Remove the battery before storage (if removable)
- Recycle or dispose of batteries according to local laws
- The battery or battery pack should not be disassembled, crushed, punctured, opened or otherwise destroyed
- If the battery is swollen, seek medical advice immediately
- If the electrolyte comes into contact with skin or eyes, wash immediately with fresh water for at least 15 minutes and seek medical advice immediately
- Store batteries in their original packaging and keep away from metal objects that may short circuit them
- Do not drop the battery or subject it to strong mechanical impact
- During use and storage, keep the battery or battery pack clean and dry. If the metal terminal is dirty, please wipe it with a soft dry cloth
- Charge the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

- Change the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

- Remove the battery before storage (if removable)
- Recycle or dispose of batteries according to local laws
- The battery or battery pack should not be disassembled, crushed, punctured, opened or otherwise destroyed
- If the battery is swollen, seek medical advice immediately
- If the electrolyte comes into contact with skin or eyes, wash immediately with fresh water for at least 15 minutes and seek medical advice immediately
- Store batteries in their original packaging and keep away from metal objects that may short circuit them
- Do not drop the battery or subject it to strong mechanical impact
- During use and storage, keep the battery or battery pack clean and dry. If the metal terminal is dirty, please wipe it with a soft dry cloth
- Charge the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

- Remove the battery before storage (if removable)
- Recycle or dispose of batteries according to local laws
- The battery or battery pack should not be disassembled, crushed, punctured, opened or otherwise destroyed
- If the battery is swollen, seek medical advice immediately
- If the electrolyte comes into contact with skin or eyes, wash immediately with fresh water for at least 15 minutes and seek medical advice immediately
- Store batteries in their original packaging and keep away from metal objects that may short circuit them
- Do not drop the battery or subject it to strong mechanical impact
- During use and storage, keep the battery or battery pack clean and dry. If the metal terminal is dirty, please wipe it with a soft dry cloth
- Charge the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

- Remove the battery before storage (if removable)
- Recycle or dispose of batteries according to local laws
- The battery or battery pack should not be disassembled, crushed, punctured, opened or otherwise destroyed
- If the battery is swollen, seek medical advice immediately
- If the electrolyte comes into contact with skin or eyes, wash immediately with fresh water for at least 15 minutes and seek medical advice immediately
- Store batteries in their original packaging and keep away from metal objects that may short circuit them
- Do not drop the battery or subject it to strong mechanical impact
- During use and storage, keep the battery or battery pack clean and dry. If the metal terminal is dirty, please wipe it with a soft dry cloth
- Charge the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

- Remove the battery before storage (if removable)
- Recycle or dispose of batteries according to local laws
- The battery or battery pack should not be disassembled, crushed, punctured, opened or otherwise destroyed
- If the battery is swollen, seek medical advice immediately
- If the electrolyte comes into contact with skin or eyes, wash immediately with fresh water for at least 15 minutes and seek medical advice immediately
- Store batteries in their original packaging and keep away from metal objects that may short circuit them
- Do not drop the battery or subject it to strong mechanical impact
- During use and storage, keep the battery or battery pack clean and dry. If the metal terminal is dirty, please wipe it with a soft dry cloth
- Charge the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

- Remove the battery before storage (if removable)
- Recycle or dispose of batteries according to local laws
- The battery or battery pack should not be disassembled, crushed, punctured, opened or otherwise destroyed
- If the battery is swollen, seek medical advice immediately
- If the electrolyte comes into contact with skin or eyes, wash immediately with fresh water for at least 15 minutes and seek medical advice immediately
- Store batteries in their original packaging and keep away from metal objects that may short circuit them
- Do not drop the battery or subject it to strong mechanical impact
- During use and storage, keep the battery or battery pack clean and dry. If the metal terminal is dirty, please wipe it with a soft dry cloth
- Charge the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

- Remove the battery before storage (if removable)
- Recycle or dispose of batteries according to local laws
- The battery or battery pack should not be disassembled, crushed, punctured, opened or otherwise destroyed
- If the battery is swollen, seek medical advice immediately
- If the electrolyte comes into contact with skin or eyes, wash immediately with fresh water for at least 15 minutes and seek medical advice immediately
- Store batteries in their original packaging and keep away from metal objects that may short circuit them
- Do not drop the battery or subject it to strong mechanical impact
- During use and storage, keep the battery or battery pack clean and dry. If the metal terminal is dirty, please wipe it with a soft dry cloth
- Charge the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

- Remove the battery before storage (if removable)
- Recycle or dispose of batteries according to local laws
- The battery or battery pack should not be disassembled, crushed, punctured, opened or otherwise destroyed
- If the battery is swollen, seek medical advice immediately
- If the electrolyte comes into contact with skin or eyes, wash immediately with fresh water for at least 15 minutes and seek medical advice immediately
- Store batteries in their original packaging and keep away from metal objects that may short circuit them
- Do not drop the battery or subject it to strong mechanical impact
- During use and storage, keep the battery or battery pack clean and dry. If the metal terminal is dirty, please wipe it with a soft dry cloth
- Charge the battery or battery pack before use
- It may be necessary to charge and discharge the battery or battery pack twice or three times to obtain the best performance when it is used for the first time or stored for a long time
- It is better to charge the battery or battery pack at 15°C to 30°C. Unless otherwise specified by the manufacturer
- Keep original product information for future reference

02

## GLIDING TAKE OFF



Push the throttle to the maximum, glide and take off in about 2 seconds  
Note: glide take-off should be carried out on smooth and windless ground

## ONE KEY TAKE OFF & LANDING



Press Flight Landing button to trigger automatic take-off and landing

## SURROUND



Press and hold surround button to circle the drone, After releasing the button, the drone stops circling

 
03

## DRONE OPERATION GUIDE

### 1.Pre flight inspection

- Read all the warnings and instructions
- Install batteries of drone and remote control
- Make sure the drone and remote control are powered off
- Charge the battery

### 2.Select location

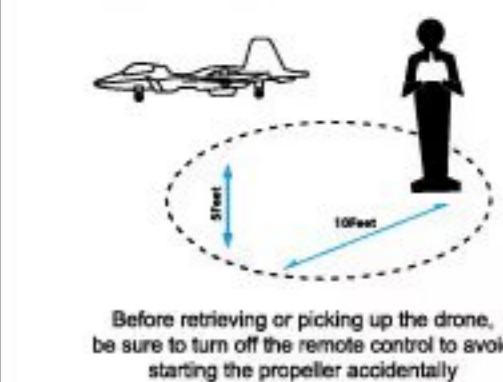

### 3.Paired drone



- Make sure the remote control is off
- Turn on the drone switch
- Put the drone on flat ground
- Turn on the remote, push up and then down
- The light of drone will flicker during the pairing process and remain on after pairing
- Calibrate the aircraft (calibrate the aircraft when the aircraft is unstable and flying wildly)  
Turn on the aircraft on the ground and turn on the remote control. Before take-off, push the trim buttons to the internal level for 3-5 seconds, wait for the aircraft light to turn from red to long light aircraft Calibration completed.

04

## **FCC Statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.