


正面


80\*110mm

3mm出血


**Wireless speaker User Manual**

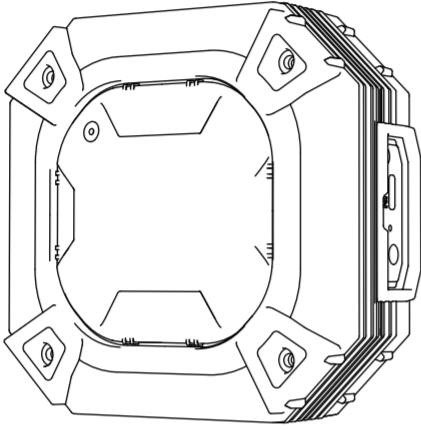

**What's Included**

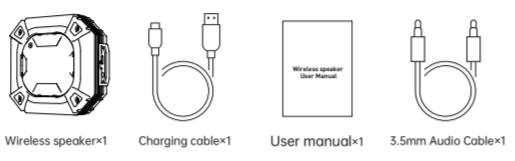


**Buttons Function**

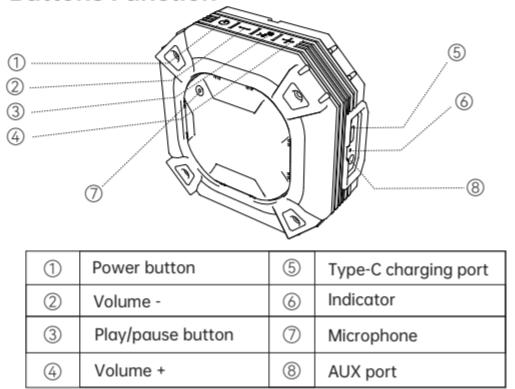

①	Power button	⑤	Type-C charging port
②	Volume -	⑥	Indicator
③	Play/pause button	⑦	Microphone
④	Volume +	⑧	AUX port

**Using Your Hearing Protector**

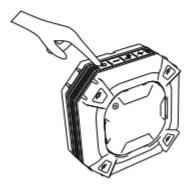

Turn ON: Press and hold the 2S MFB  
Turn OFF: Press and hold for 3S MFB

💡 THE speaker will automatically turn off after 10 minutes if no device is connected.

**Pair with your device**

\*Press and hold the power button 3s, Indicator will flashlight red and blue fast


\*open the Bluetooth on your device and select "SP-004" start to pairing.

\*When turned on, the speaker will automatically connect to the last connected device if available. If not, it will enter pairing mode

\*Having connection problems? Remove "SP-004" from your device's Bluetooth history, ensure it's less than 3 feet away then try pairing again.

\*TWS (True Wireless Stereo) Mode  
Two speakers can pair with each other for stereo sound. Both speakers can play the same audio (one as the left channel and the other as the right channel).

With one speaker connected to a smartphone, double press the ⚡ on two speakers to enter TWS pairing mode.

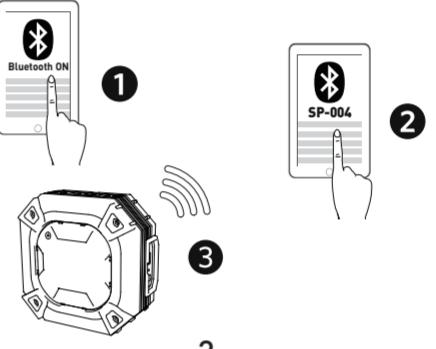

背面

3mm出血

⚡	Double press	Pairing
TWS	Steady Blue (Speaker1)	Enter / Exit TWS Mode
	Steady Blue (Speaker2)	Enter / Exit TWS Mode

**Music**

	operation	Action
📞	play/pause music	single press
+	volume +	single press
-	volume -	single press
+	Next song	press and hold 1second
-	Previous song	press and hold 1second

**Voice assistant**

📞	activate voice assistant	press and hold 1second
📞	stop voice assistant	press and hold 1second

**Call**

	operation	Action
📞	answer call	single press
📞	end call	single press

**Sound notifications**

Function	Voice
Turn on	Power on
Turn off	Power off
Bluetooth paring	Paring
Connected	Connected
Disconnected	Disconnected
Battery high	Battery high (70%-100%)
Battery Medium	Battery Medium (70%-100%)
Battery low	Battery low (70%-100%)
Low battery	Please charger

**Indicator**

Power on	Blue light flashes 3 seconds
Power off	Blue light flashes 2 seconds
Pairing	Flashes red and blue

Connected	Blue light flashes every 10 seconds
Charging	Red light
Fulled charged	Light off
Battery low	Red light flashes every 5 seconds

**Specifications**

Version	5.4
Input	5V=2A
Charging time	3 hours
Working range	15 meters
Working time	45 hours (80% volume)
Audio output	10W (peak power)
Battery capacity	4000mAh

Correct Disposal of This Product  
(Waste Electrical & Electronic Equipment)  
This marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.  
Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can make this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

**FCC STATEMENT:**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:  
(1)This device may not cause harmful interference, and  
(2)This device must accept any interference received, including interference that may cause undesired operation.  
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
The FCC ID and the IC number are also located on the bottom of the device.  
This equipment generates and uses radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Relocate or realign the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.  
RF warning statement:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**CE & FCC**  
FCCID:2BCRG-SP-004

WARNING: DO NOT DISPOSE OF THE UNIT IN FIRE OR WATER. → NEVER ATTEMPT TO DISASSEMBLE AND REASSEMBLE. WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. RECYCLE WHERE FACILITIES EXIST.  
→ CHECK WITH YOUR LOCAL AUTHORITIES FOR RECYCLING ADVICE. KEEP YOUR DEVICE AND ALL ACCESSORIES OUT OF THE REACH OF CHILDREN AND ANIMALS. → SMALL PARTS CAN CAUSE SUCCION OR INJURY. SMALL PARTS CAN CAUSE CHOKING OR SERIOUS INJURY IF SWALLOWED. → AVOID EXPOSURE TO EXTREME TEMPERATURES. → DO NOT EXPOSE YOUR DEVICE TO TEMPERATURES OF ABOVE 45°C. → EXTREME TEMPERATURES MAY CAUSE DEFORMATION OF THE DEVICE AND REDUCE THE CHARGING CAPACITY AND LIFETIME OF YOUR DEVICE. AND REDUCE THE CHARGING CAPACITY AND LIFE SPAN OF YOUR DEVICE. → DO NOT ALLOW YOUR DEVICE TO GET WET LIQUIDS CAN CAUSE SERIOUS DAMAGE.  
→ DO NOT HANDLE YOUR DEVICE WITH WET HANDS.