


A group of young people are gathered in a tent at night, laughing and playing guitars. The scene is lit with warm, golden light. In the foreground, a woman with long blonde hair is smiling and playing a guitar. Behind her, a man is laughing, and another woman is smiling. The overall atmosphere is joyful and social.

Break X1


Ikaraō®

QUICK START GUIDE


WHAT'S IN THE BOX

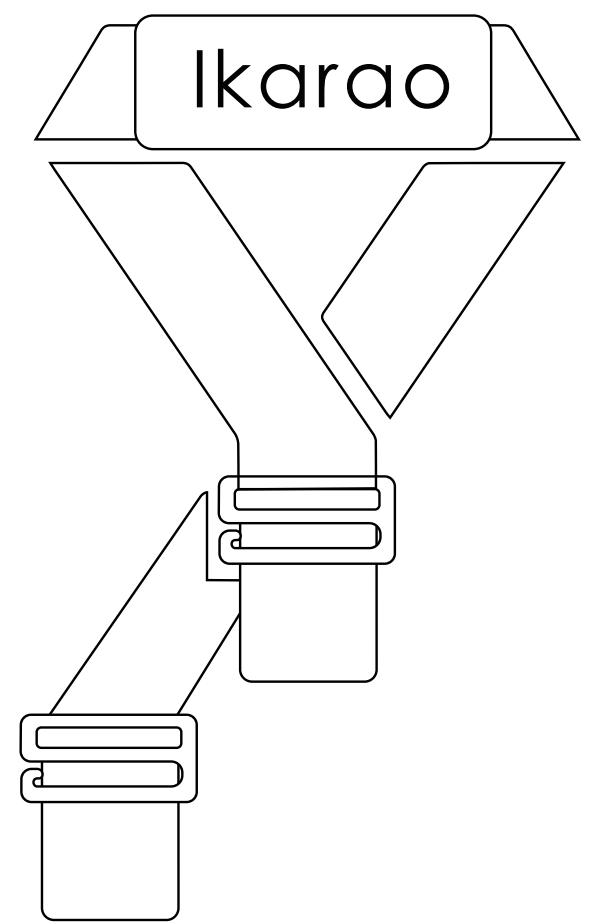

CARRYING STRAP

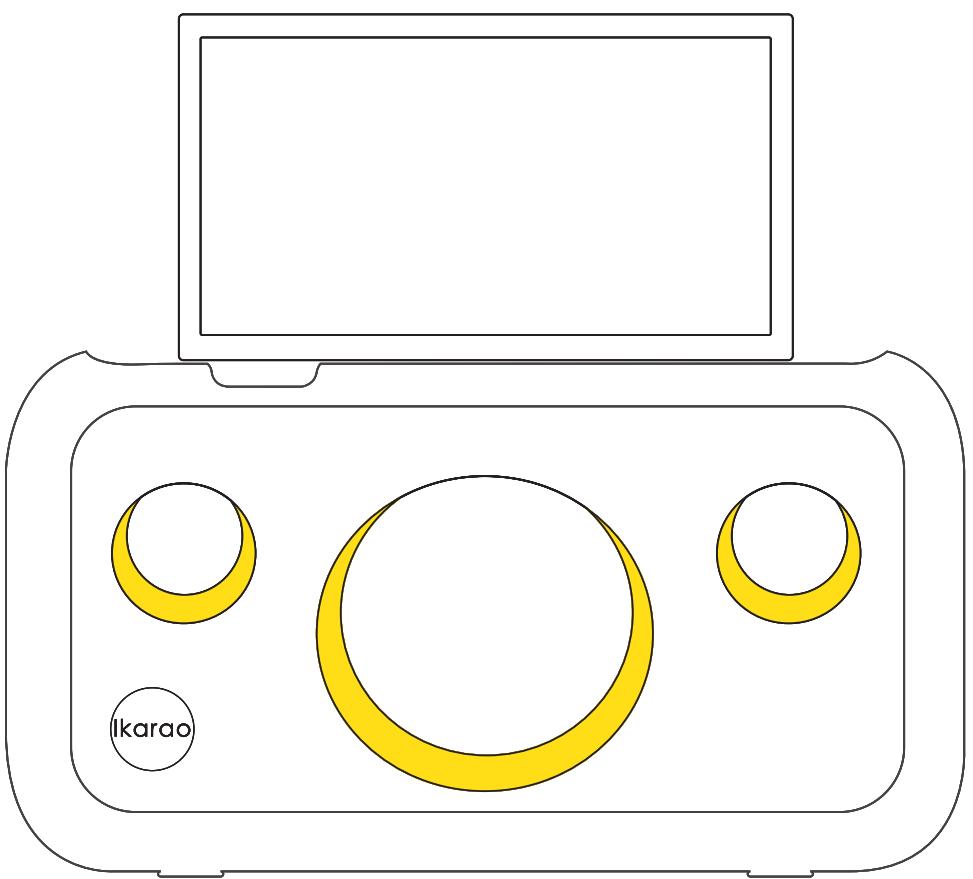


Break X1

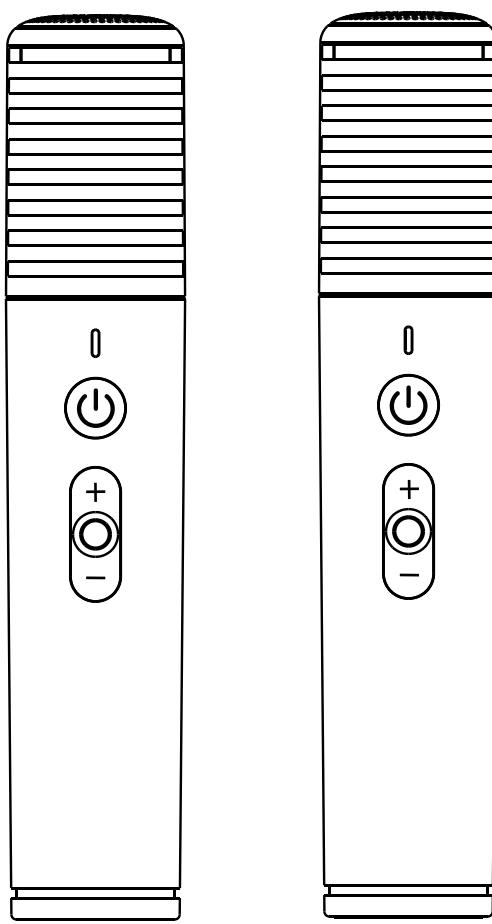



TWO WIRELESS MICS

Break M29

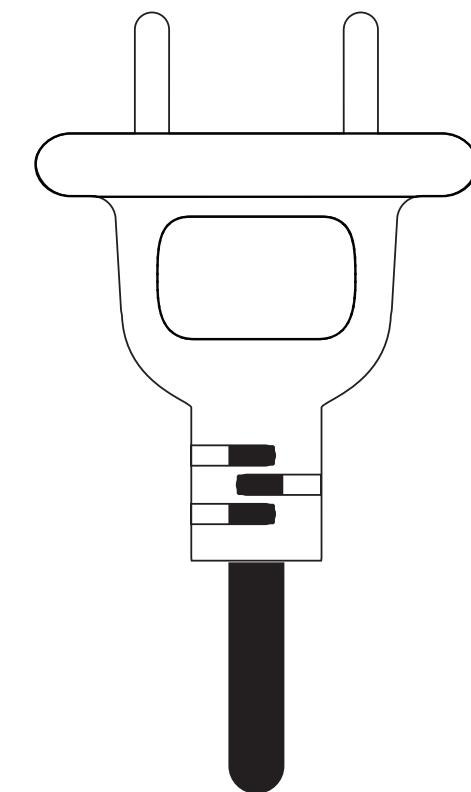


POWER CABLE


BUTTON

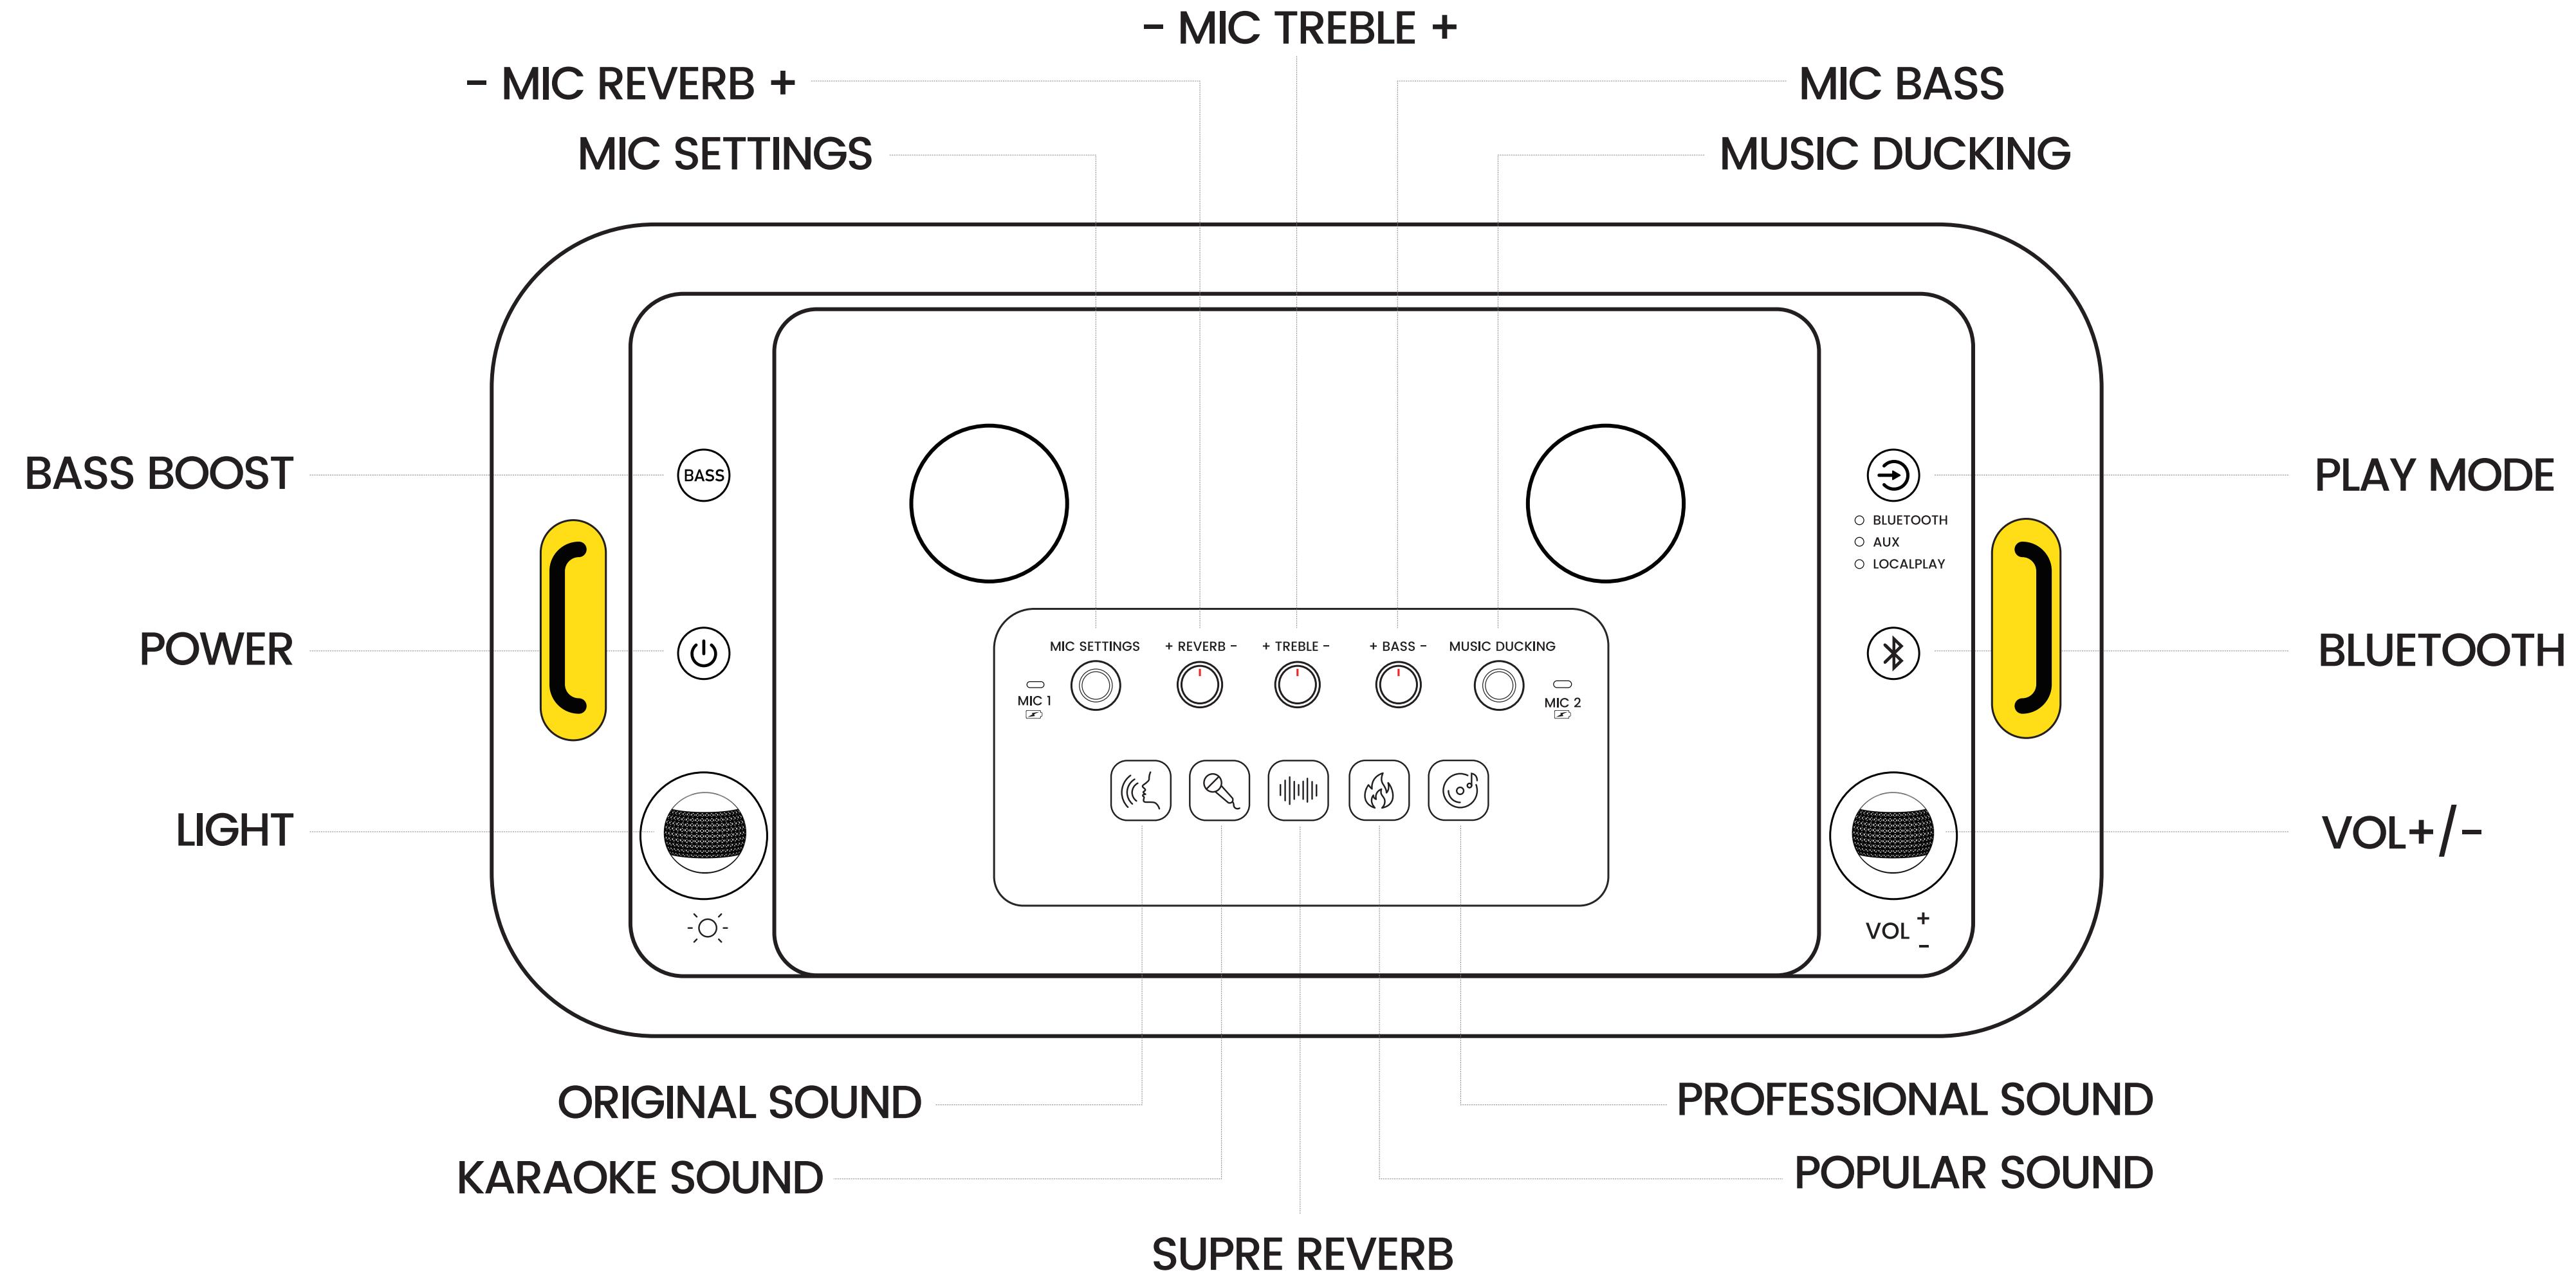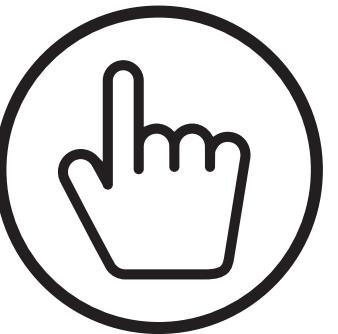


INTERFACES

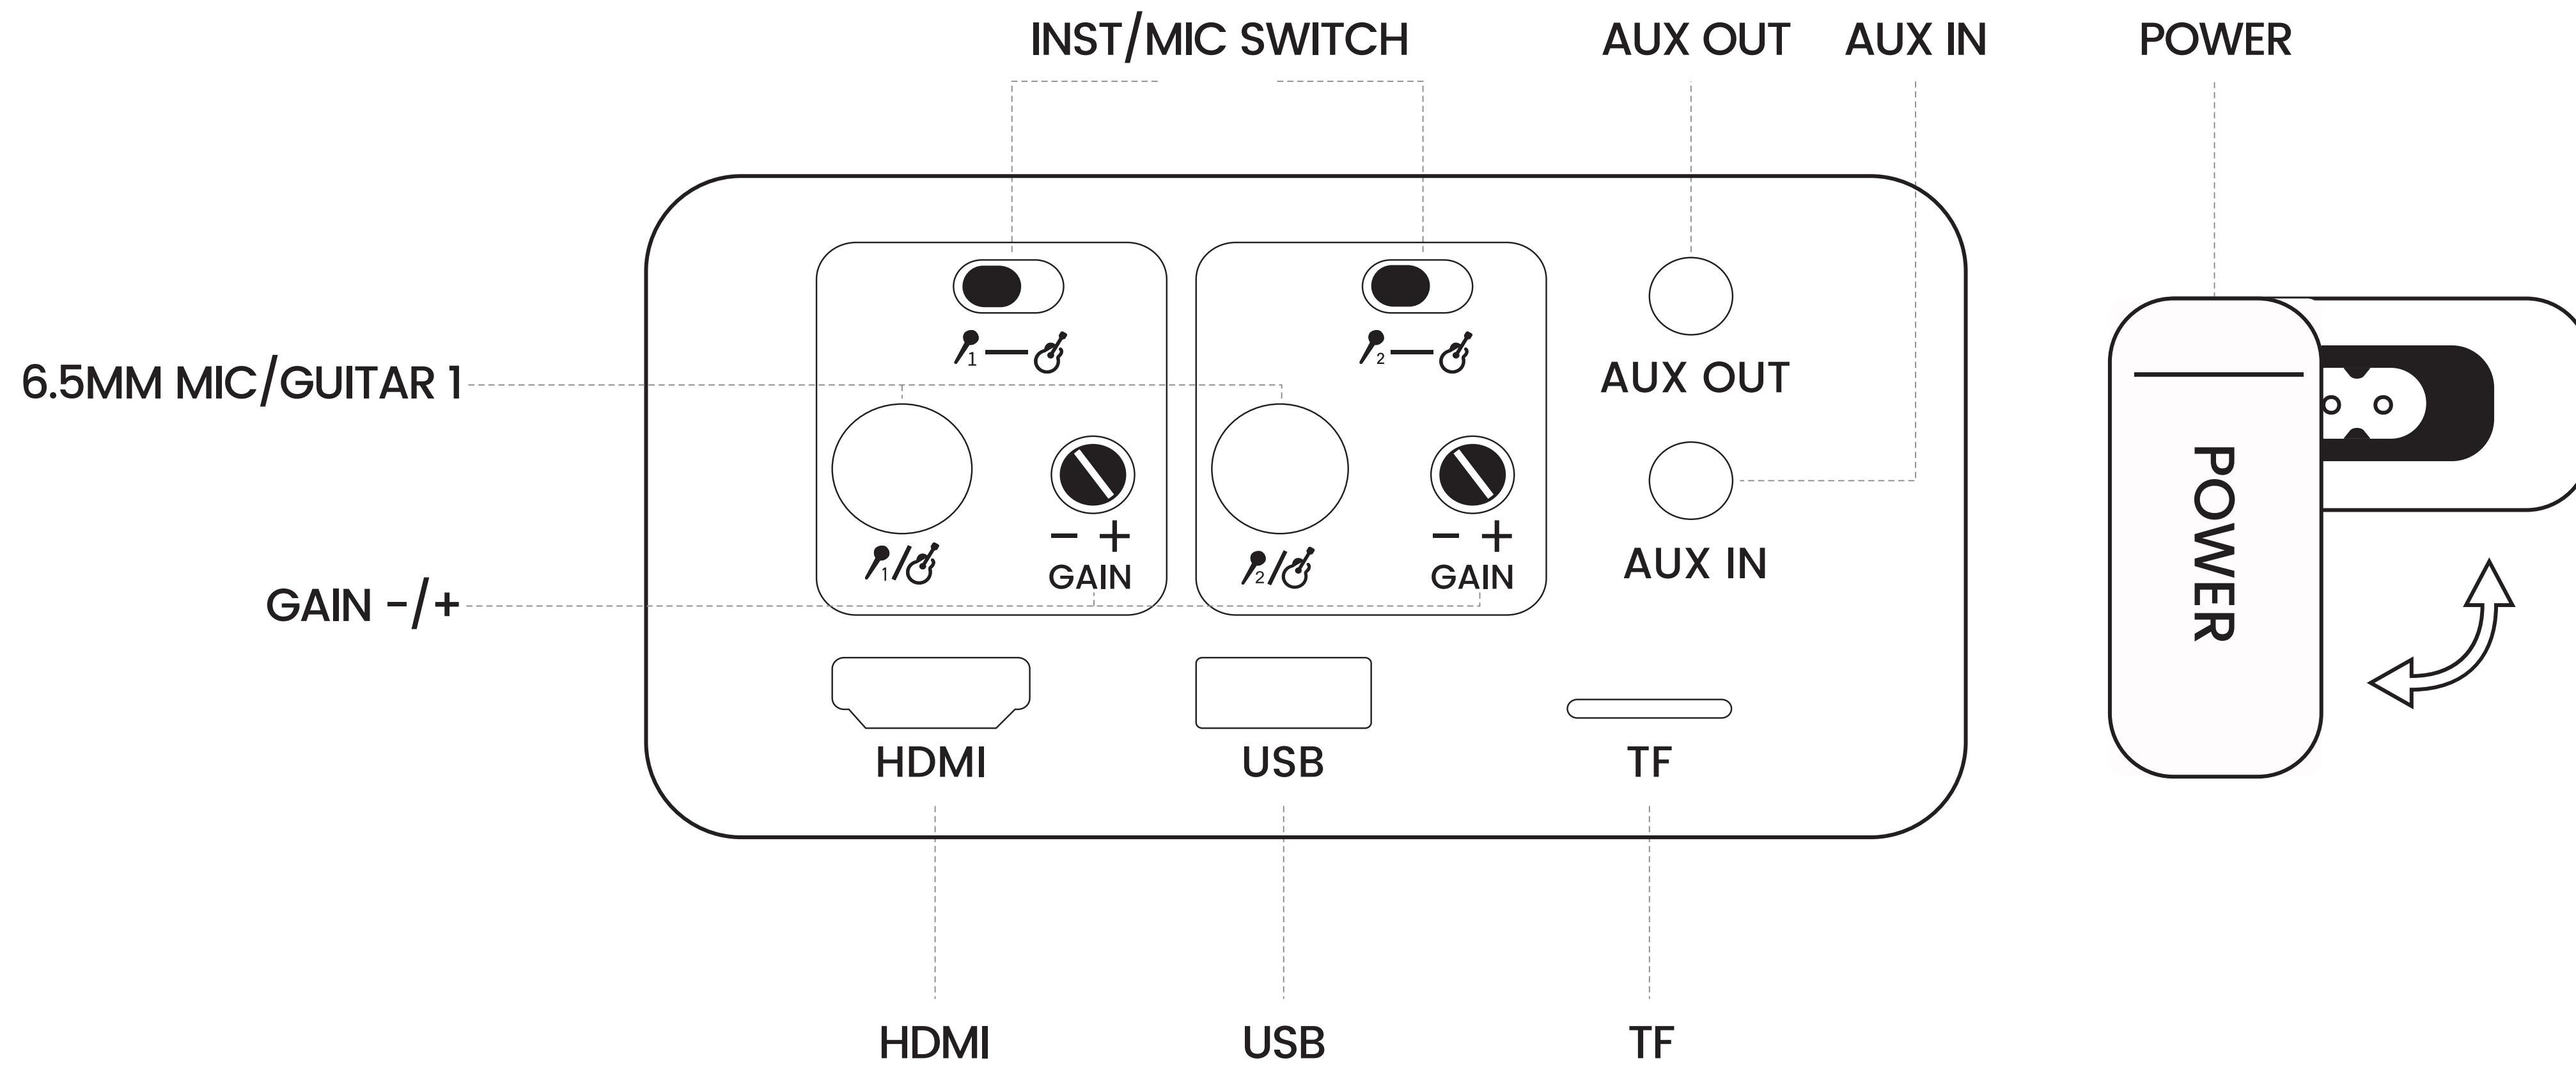


Homepage

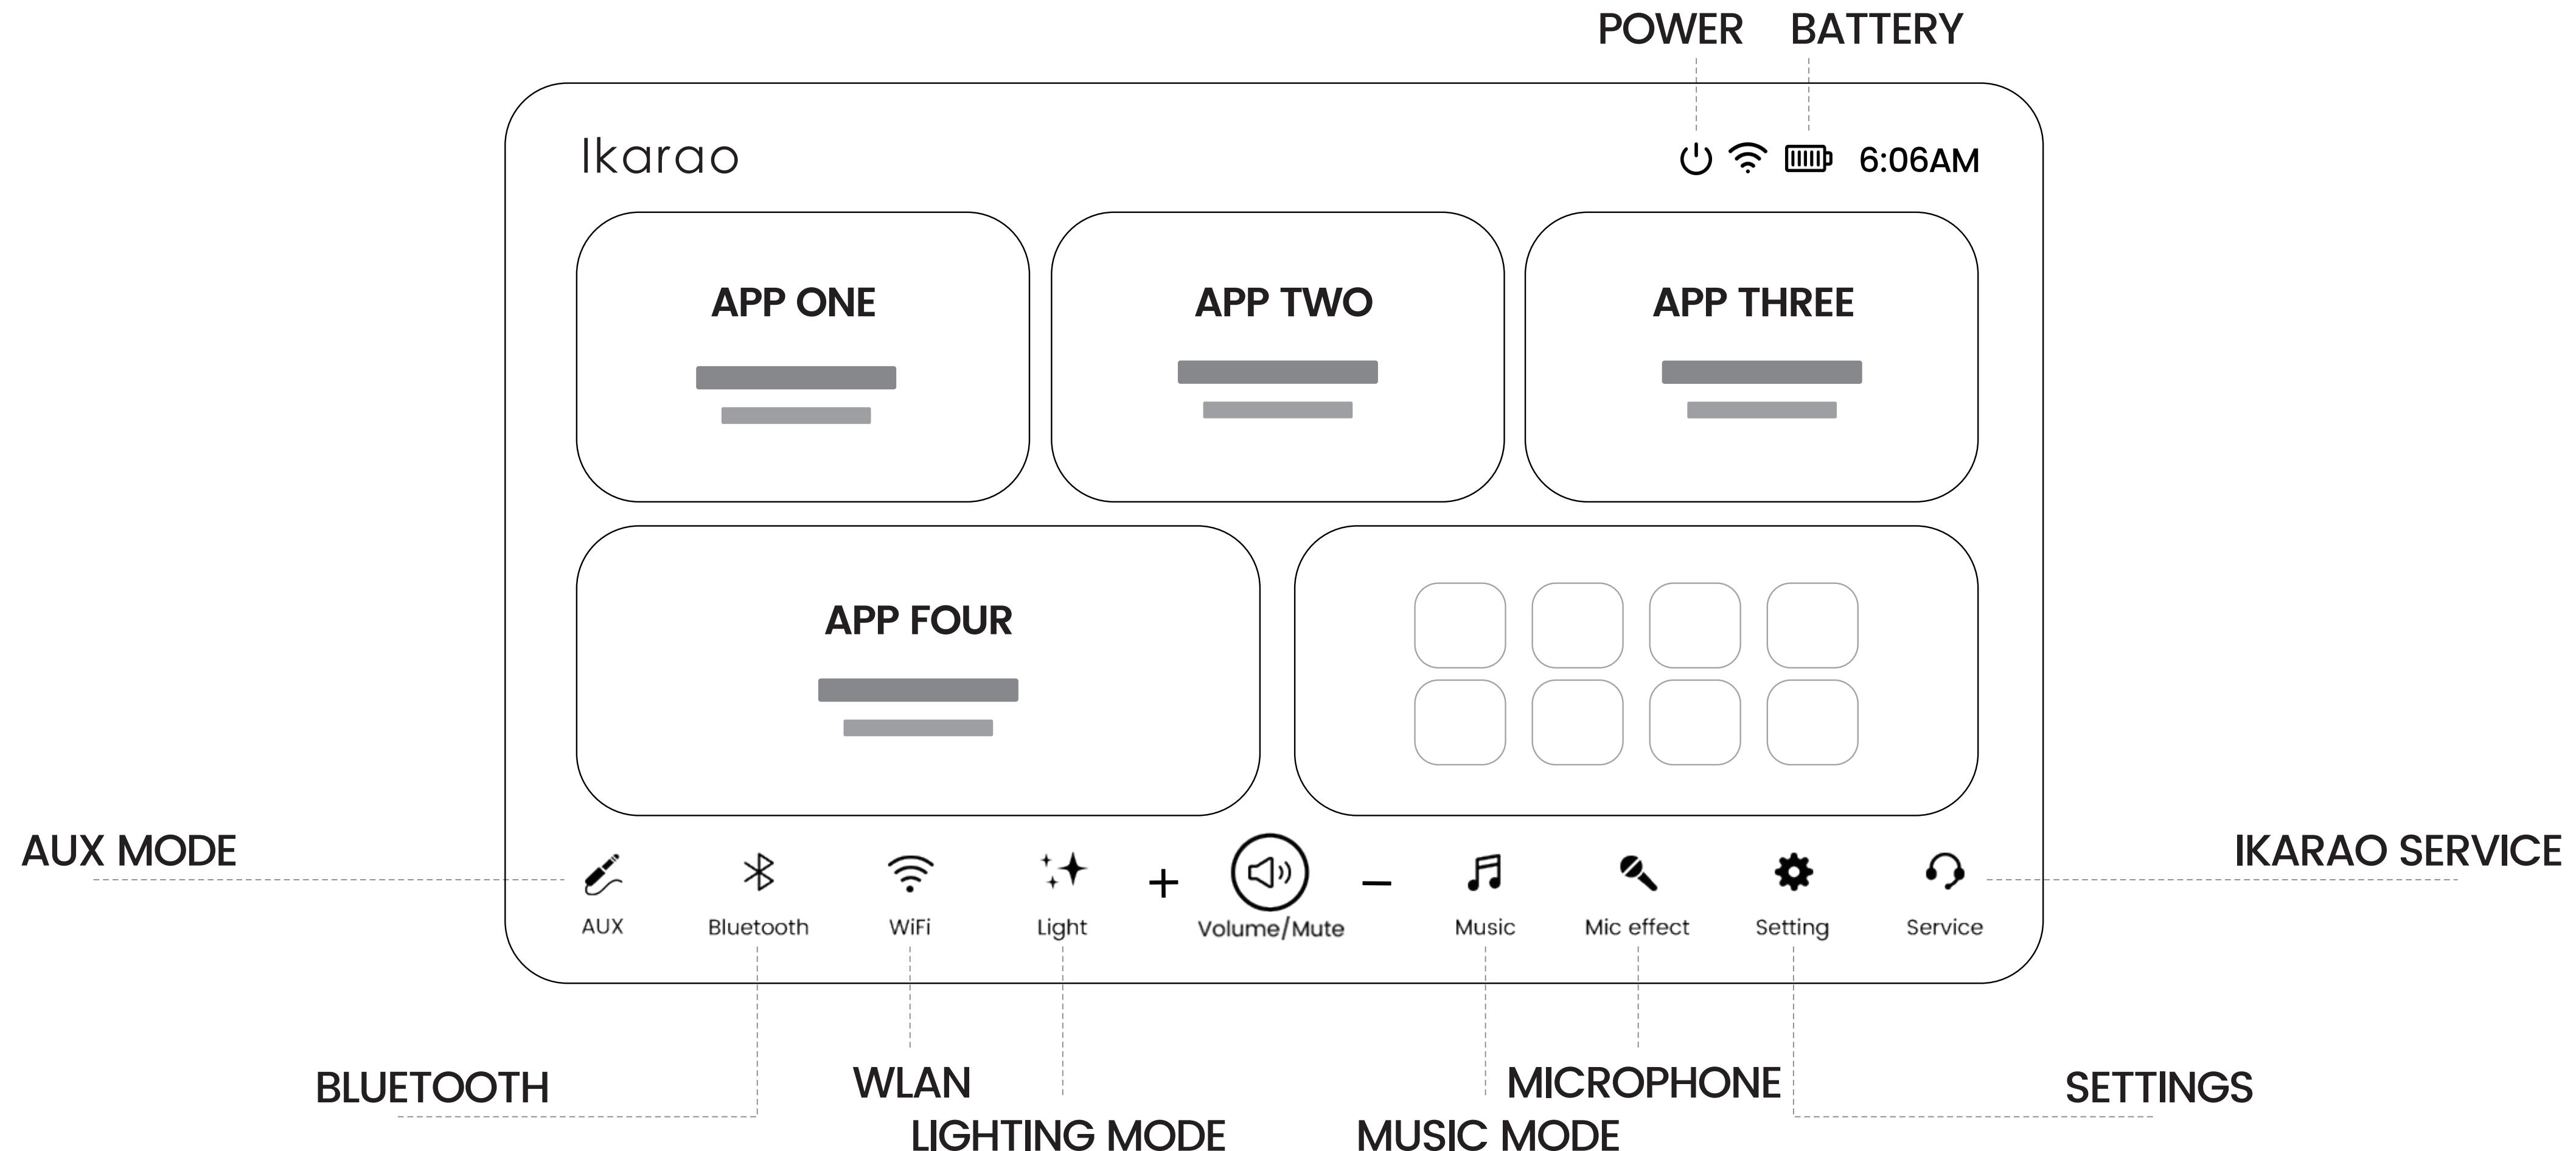


LIGHTING EFFECT

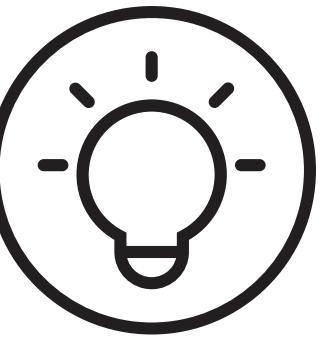



Microphone Indicator:

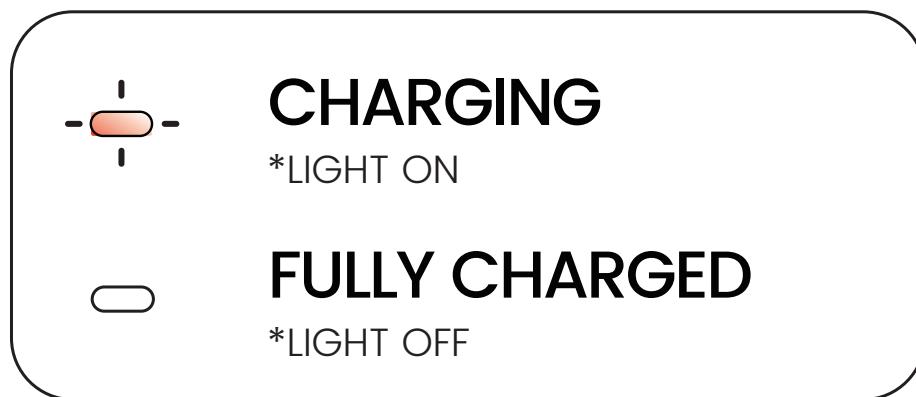


Bass Boost Indicator:

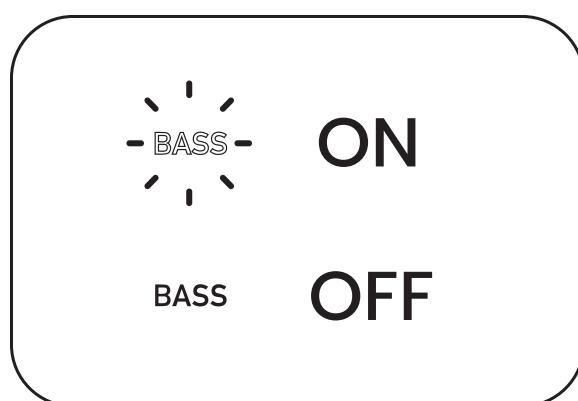


Charging Indicator:

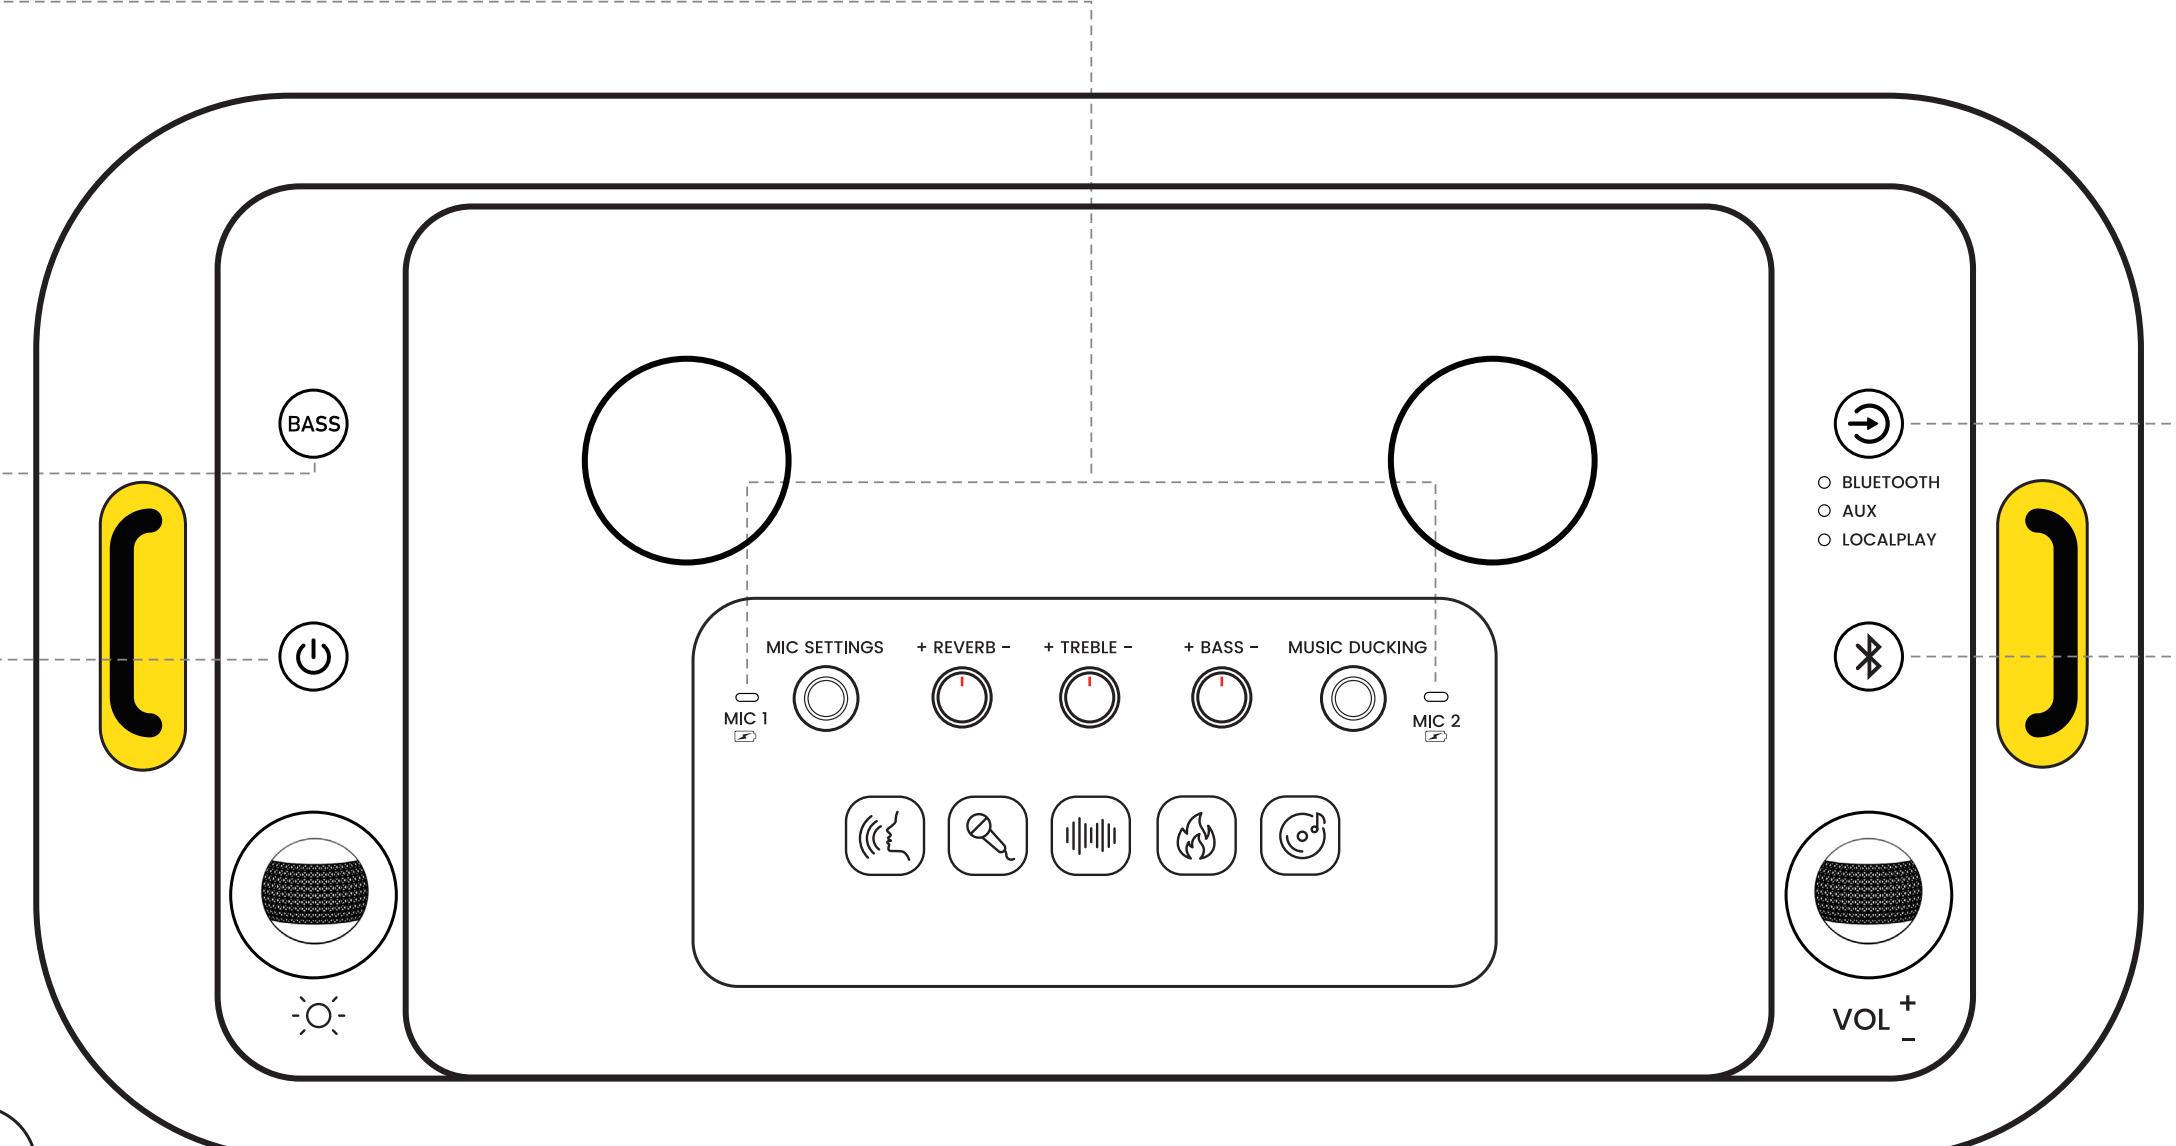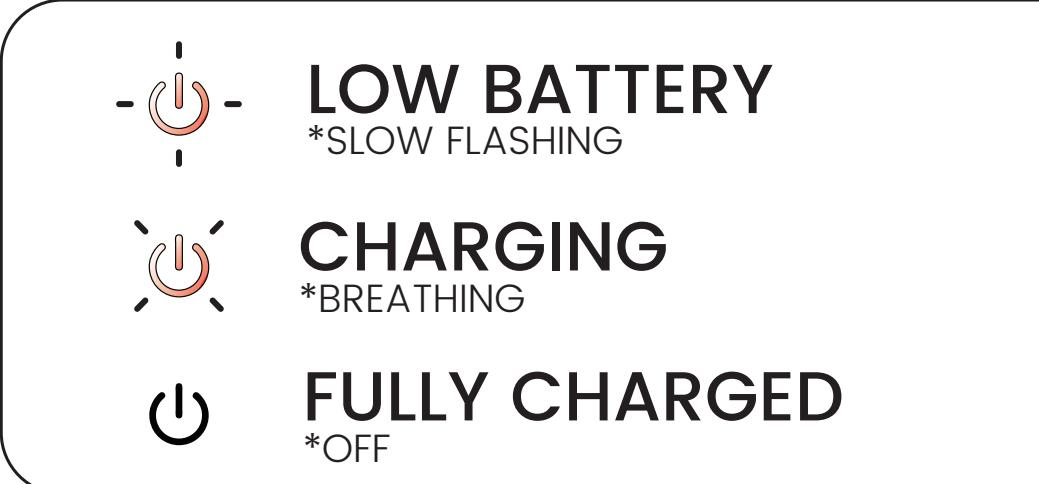



Playback Mode Indicator:

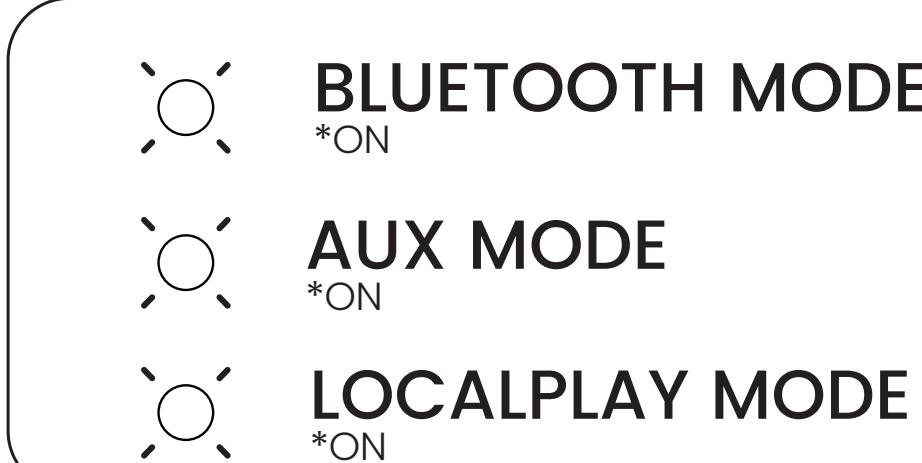

Bluetooth Indicator:

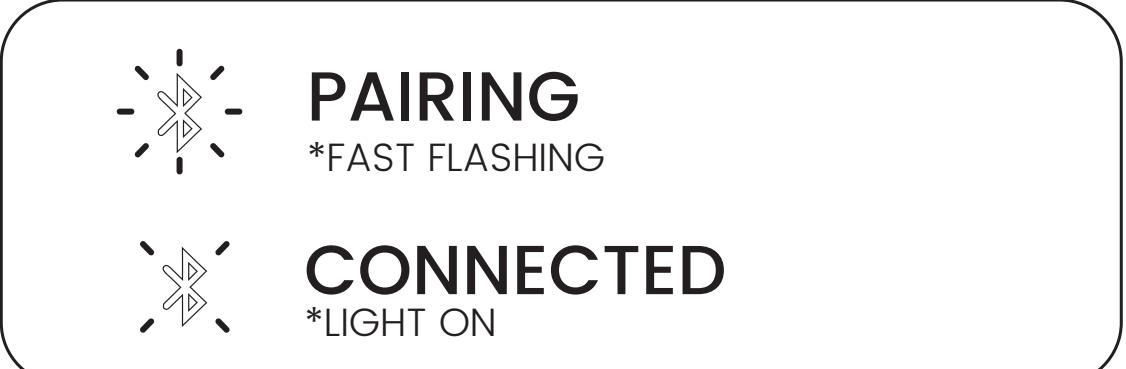


BLUETOOTH AUDIO

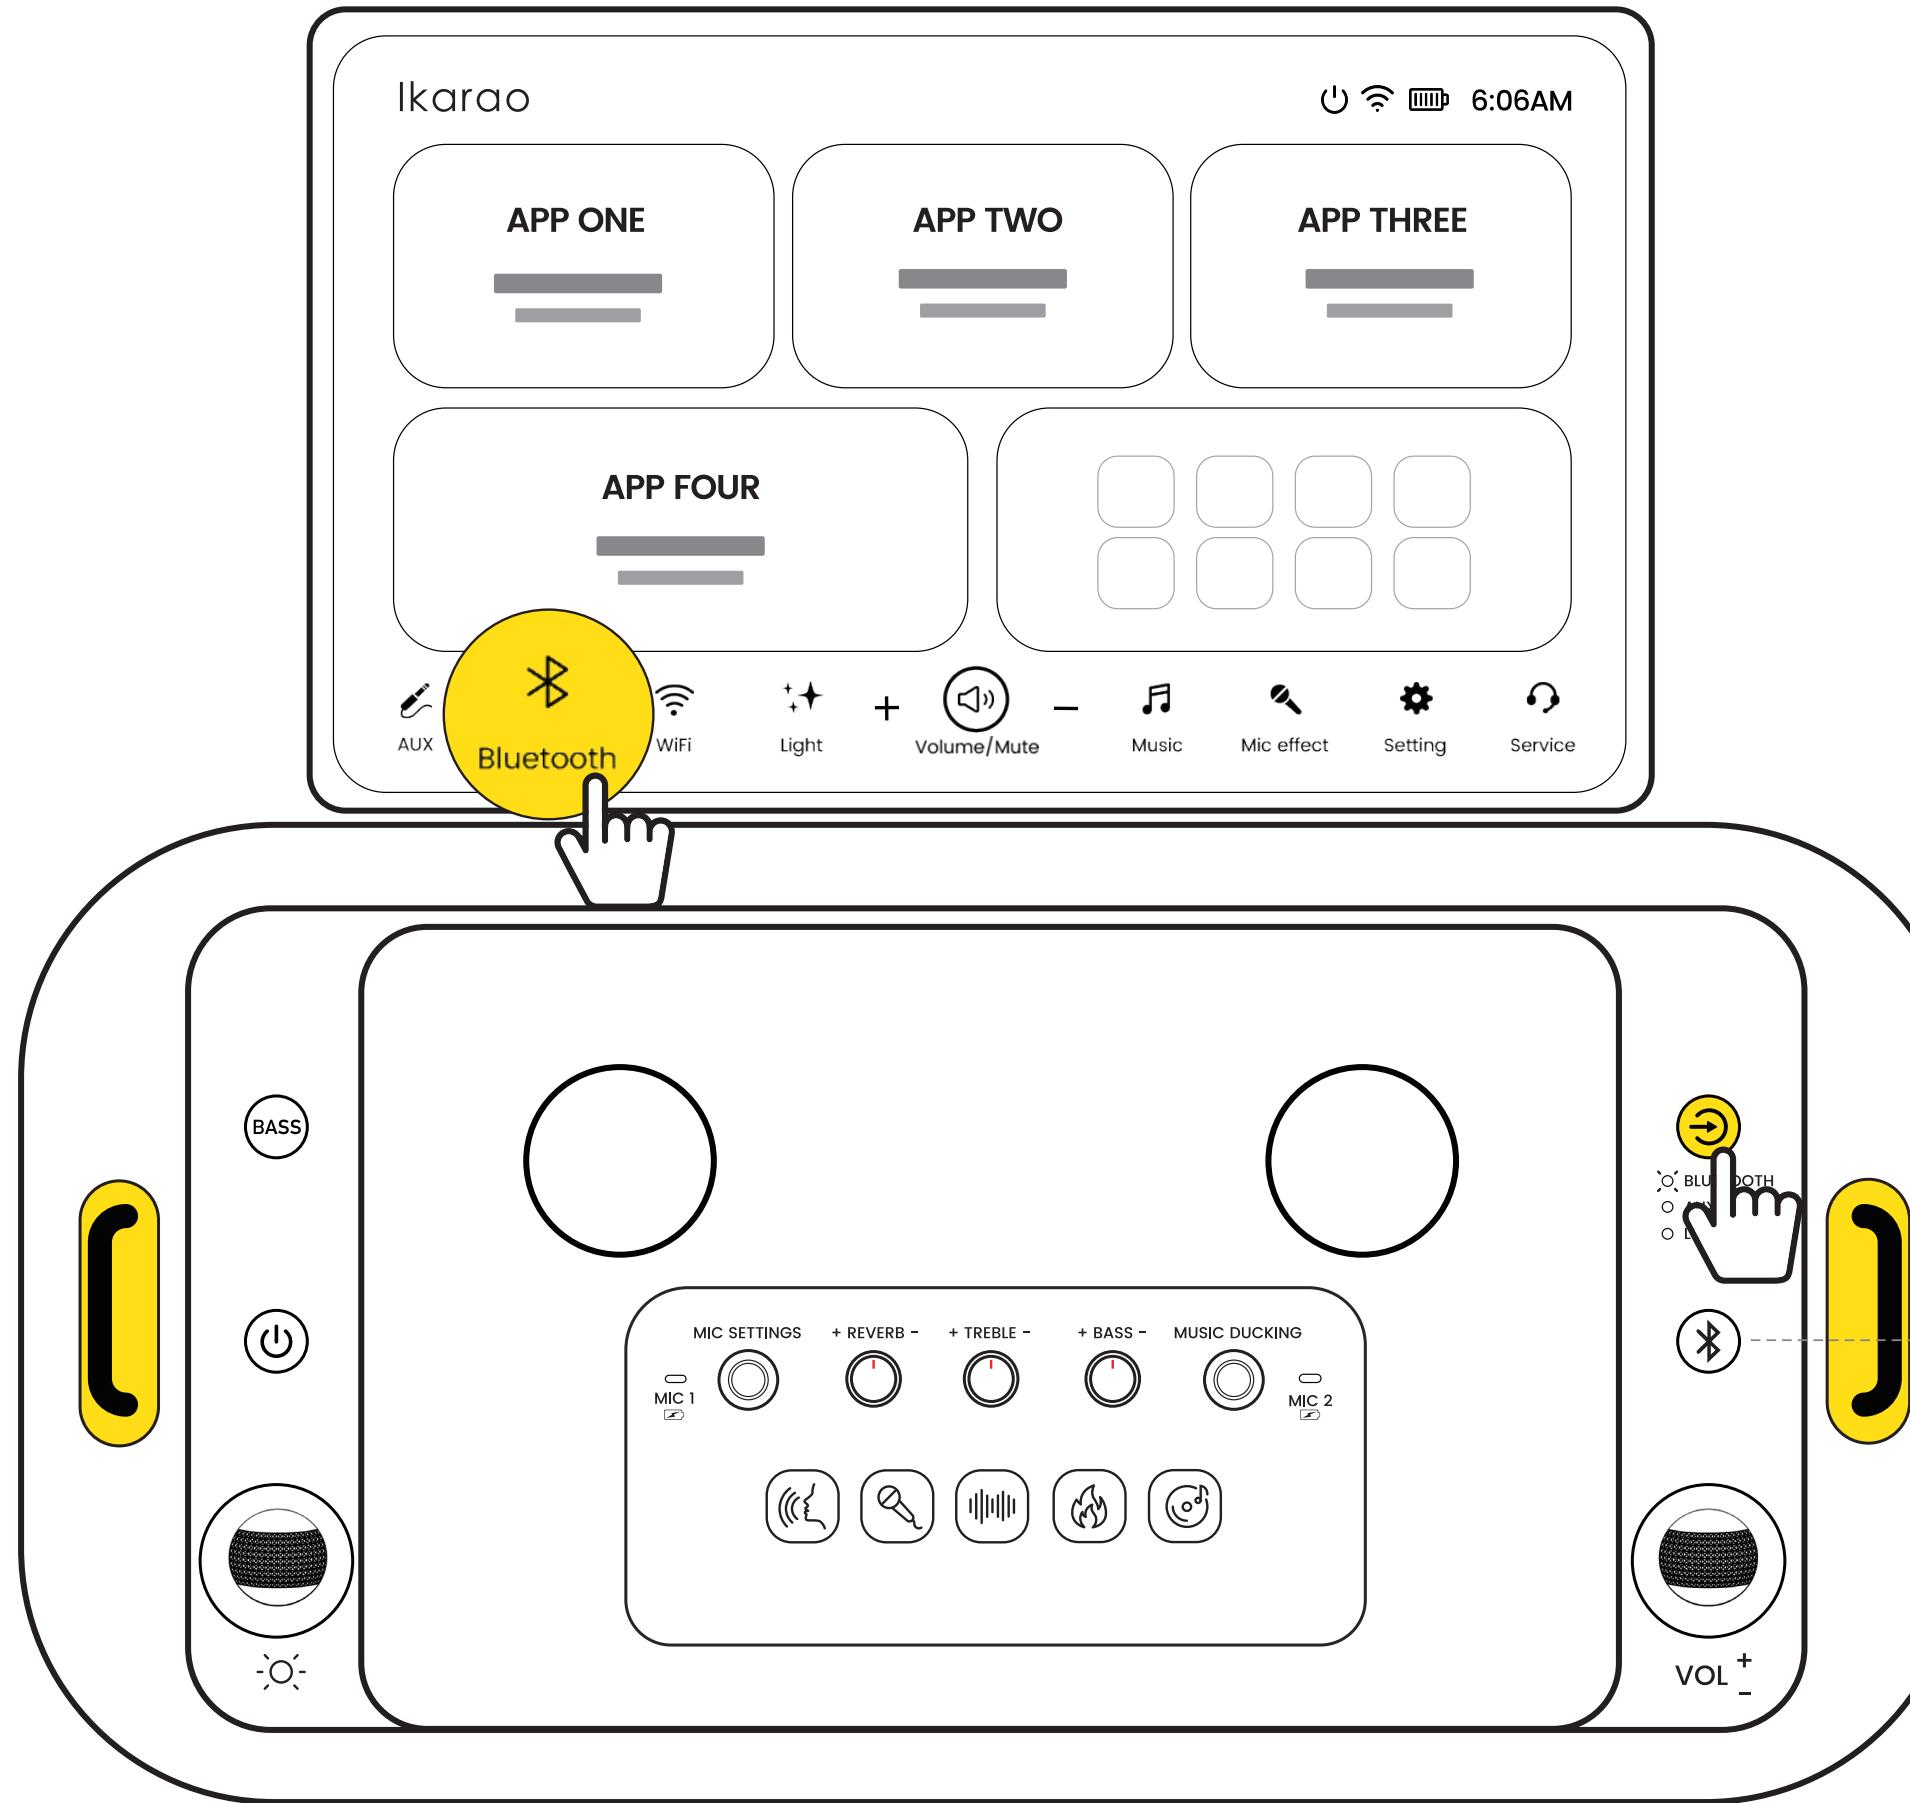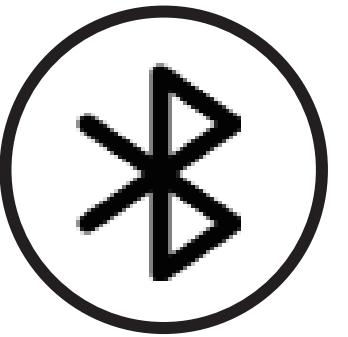

- 1 Press the **Bluetooth** button on the screen or press the playback mode button to switch into Bluetooth mode.


Bluetooth indicator light flashes fast.

2 Open the Bluetooth settings on your device and pair with 'IKARAO X1-XXXX'

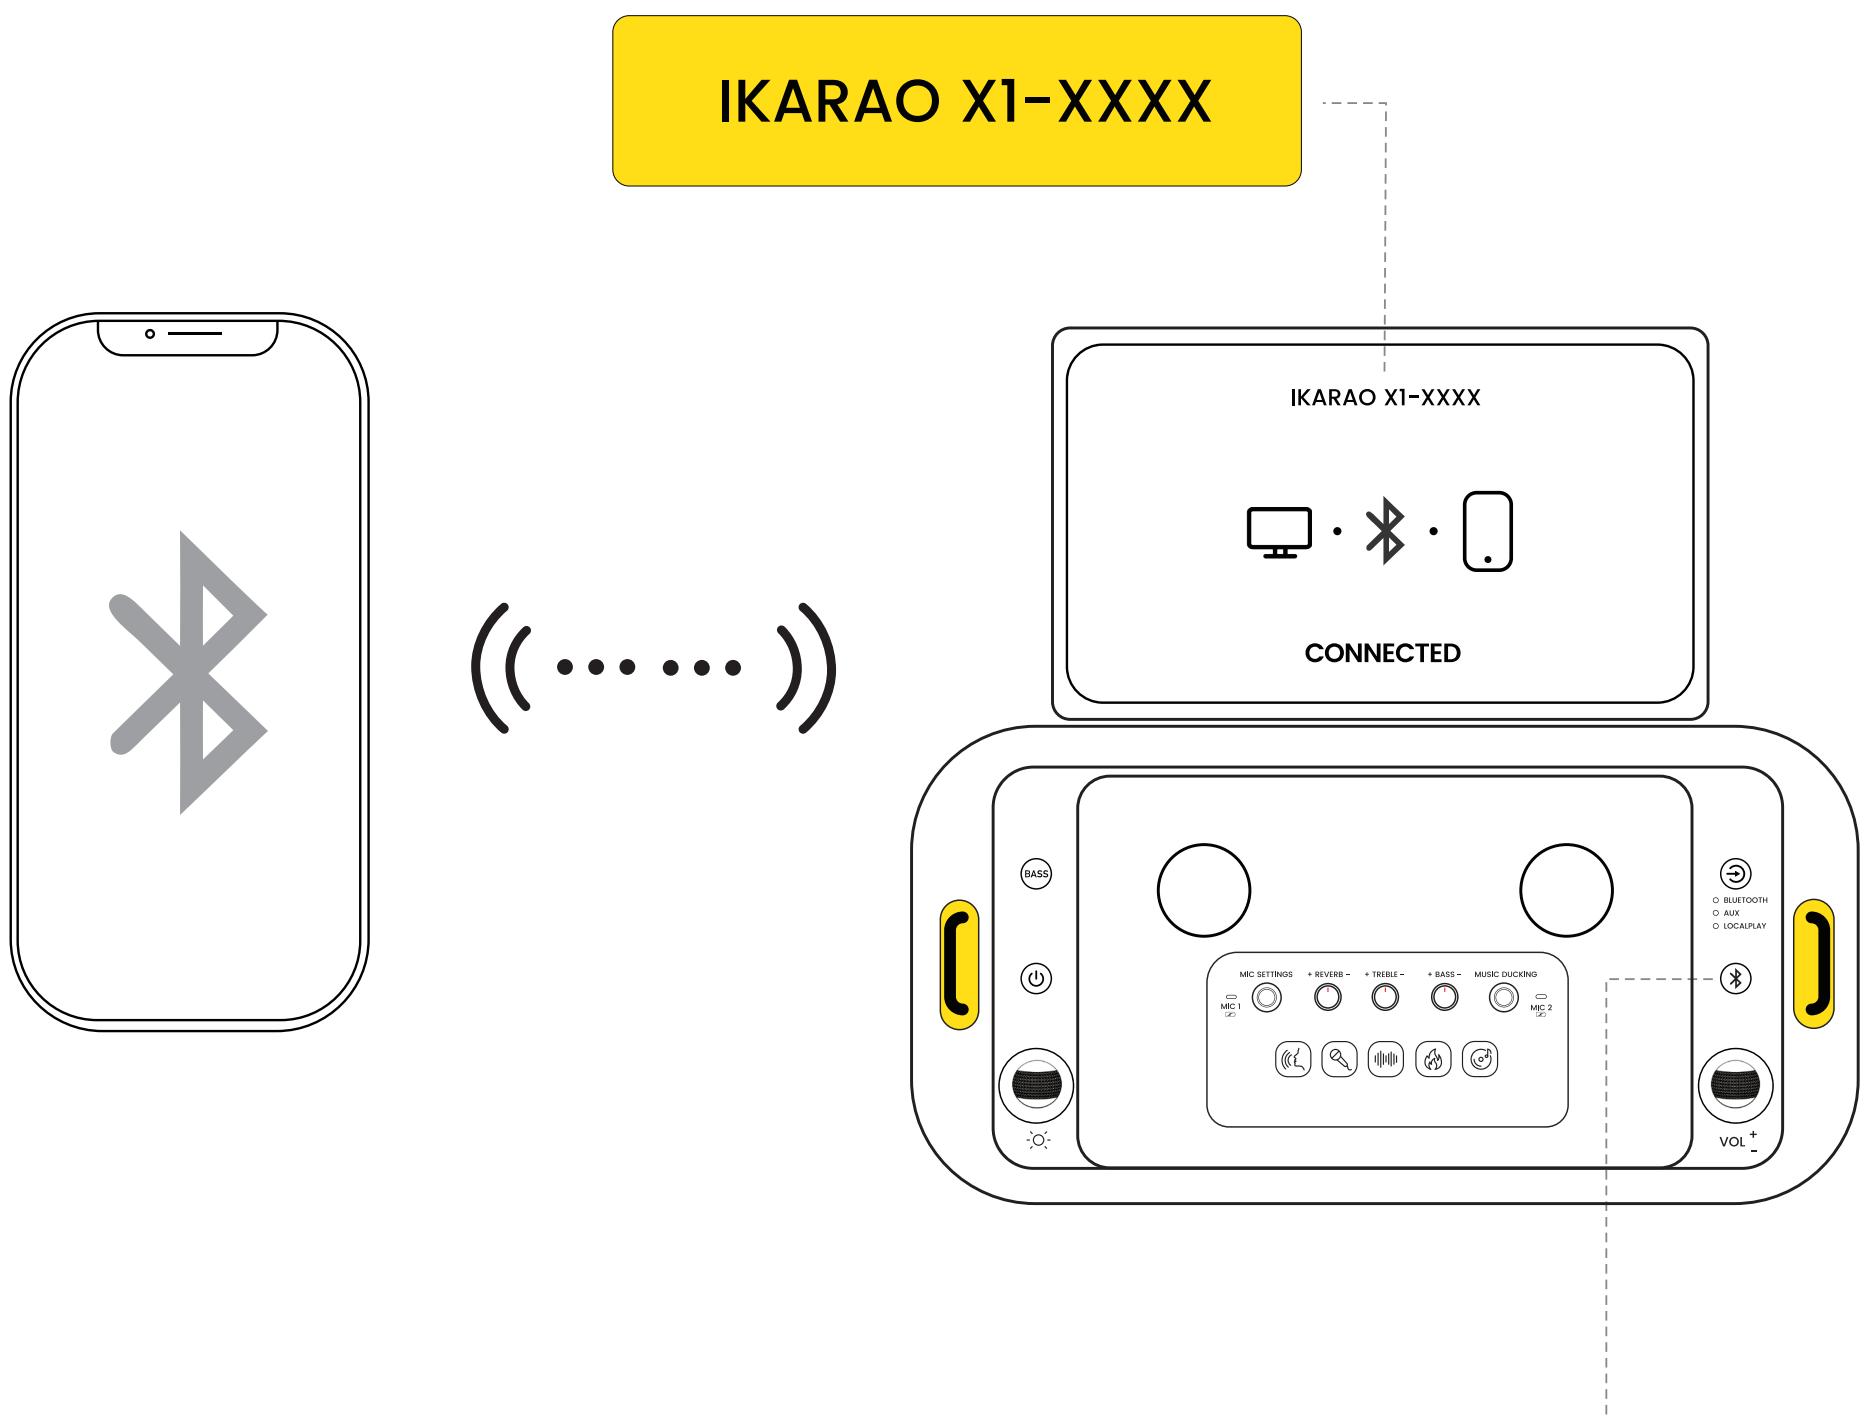


Light on when connected successfully.


3 Press the Bluetooth button to disconnect

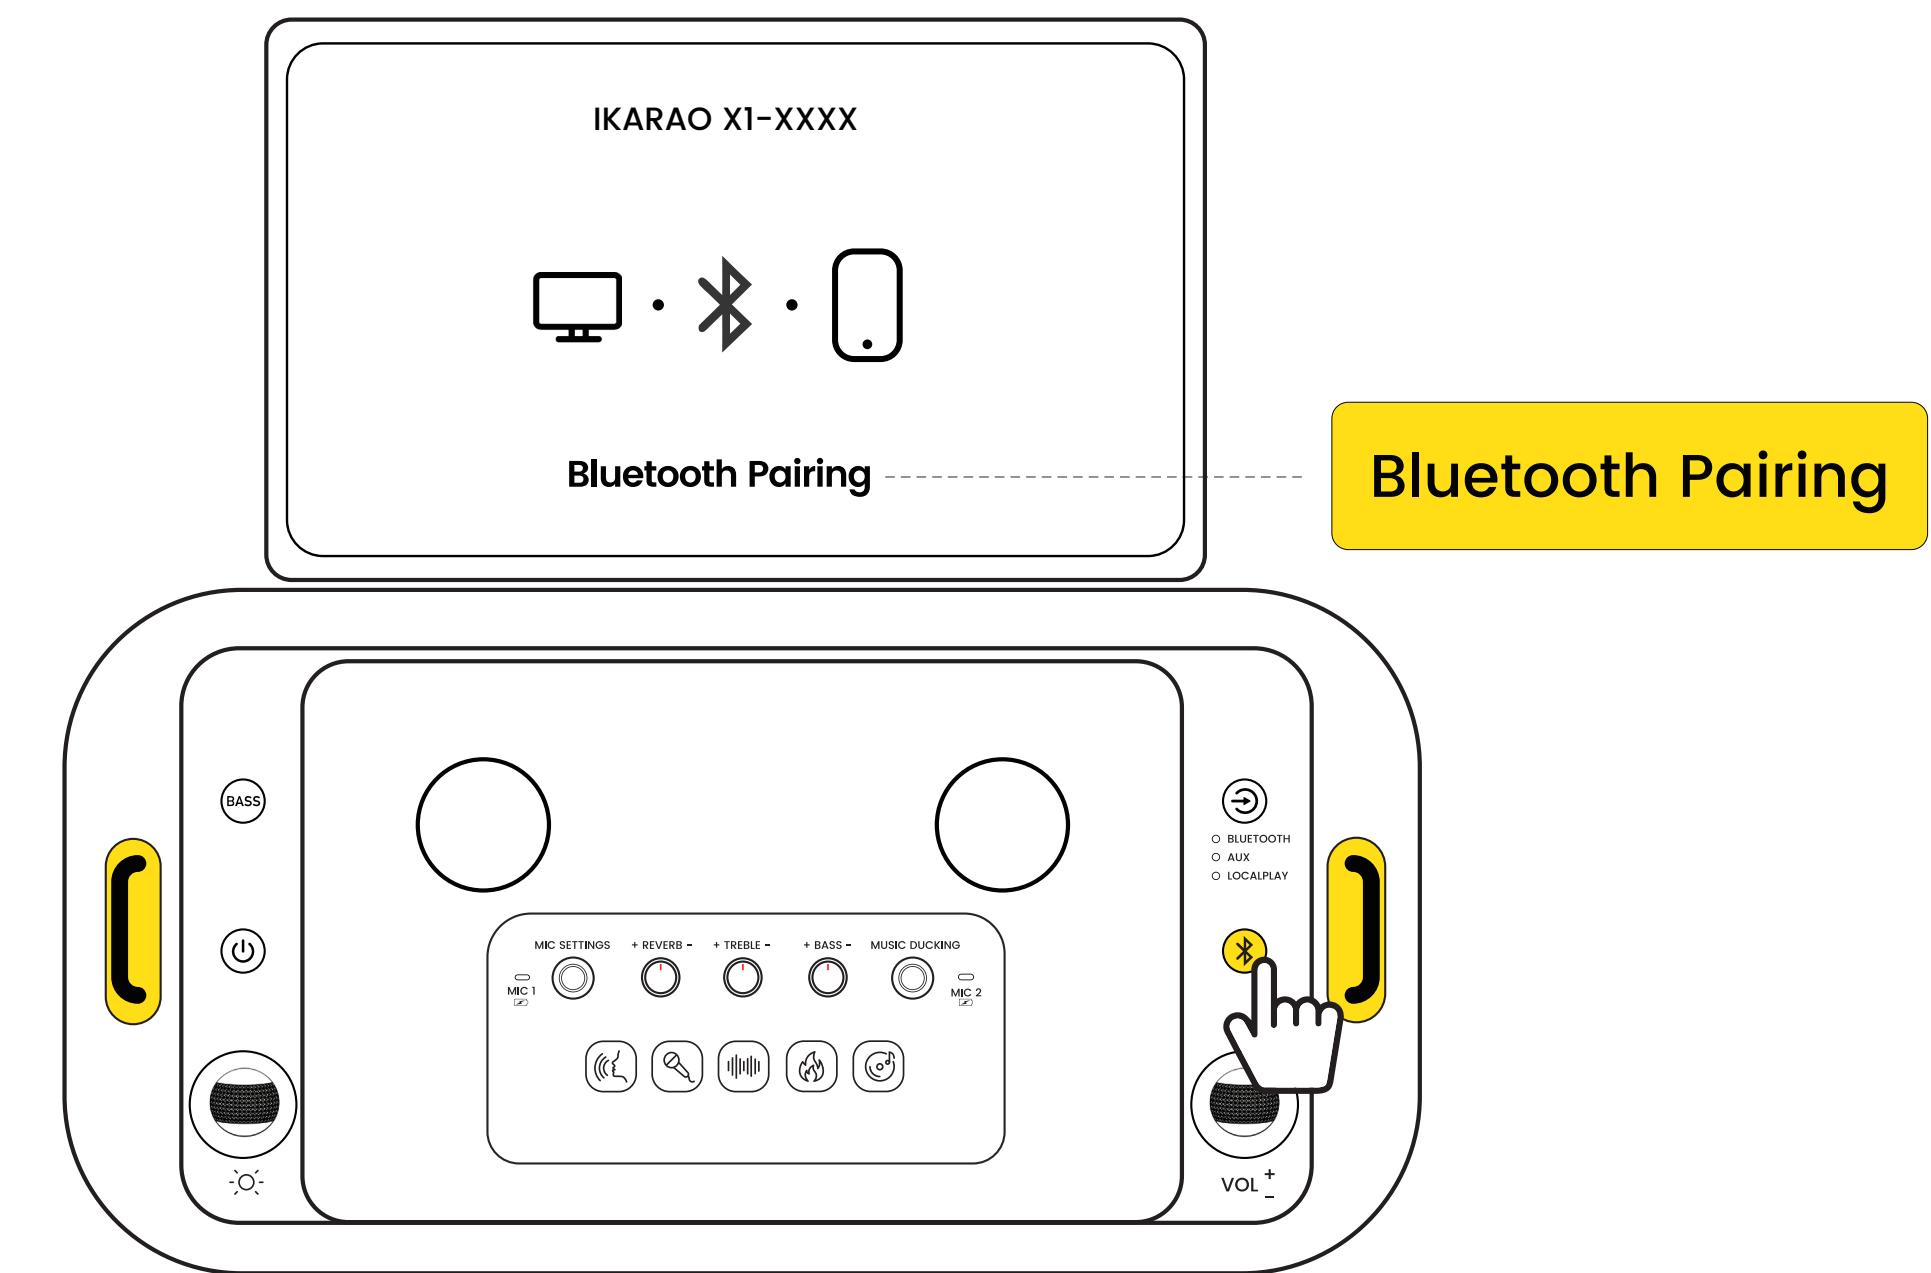


LOCAL AUDIO

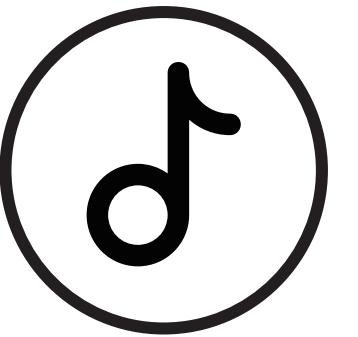


1 Insert a USB with audio/video files

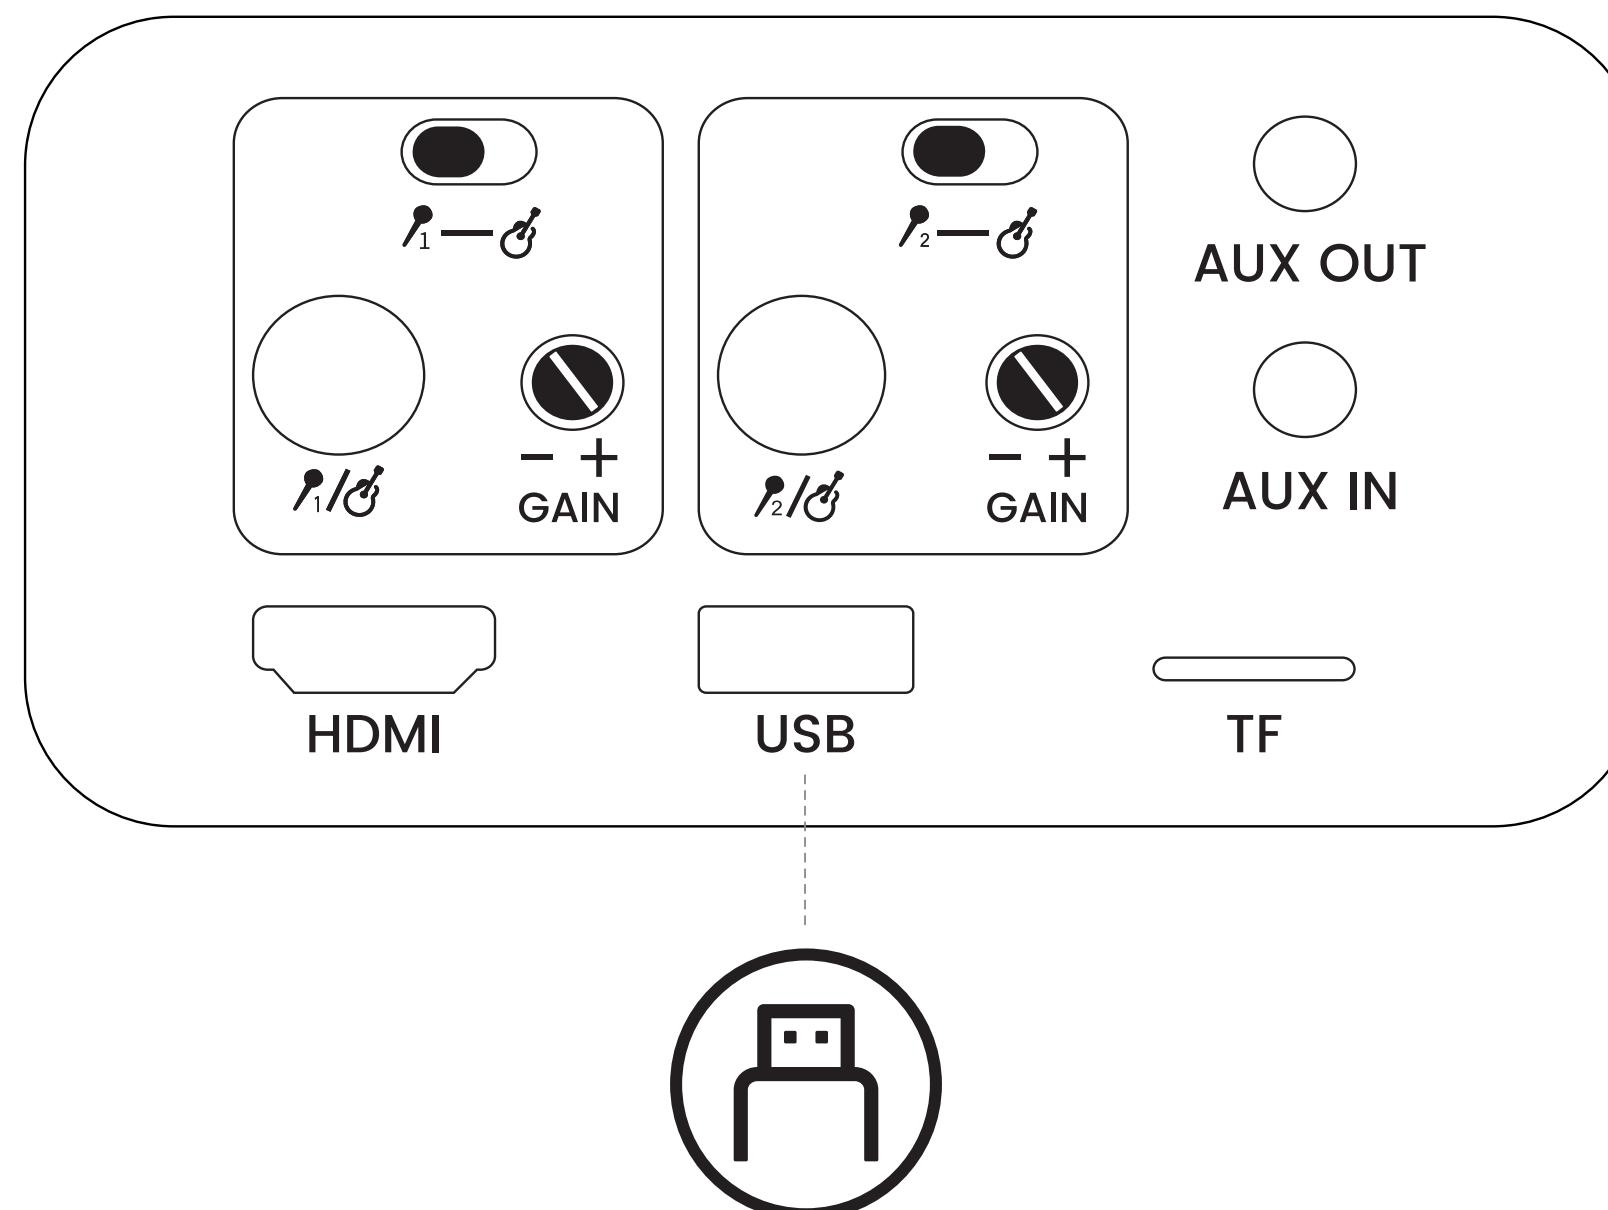

2 Click **Yes** on the screen prompt to enter the local media player

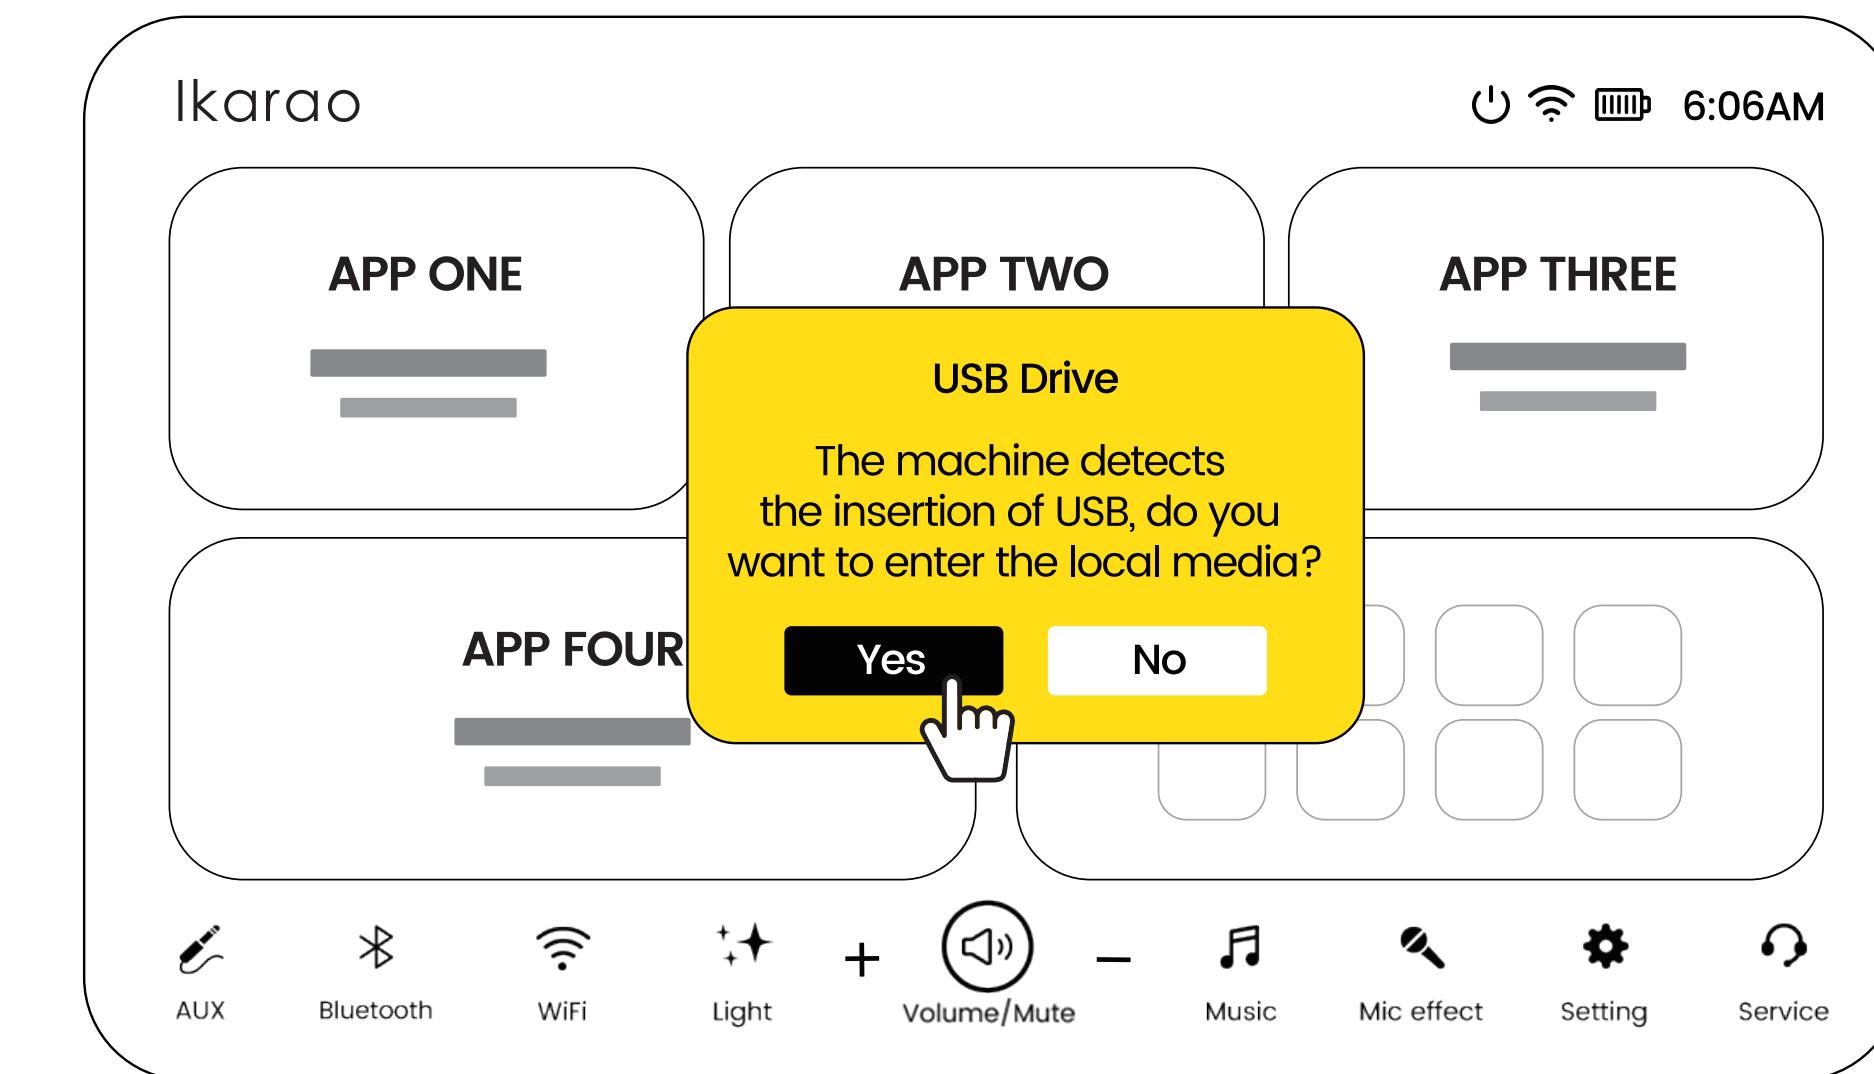


3 If you accidentally click **NO**,
re-enter the local media player by selecting
LOCAL MEDIA.

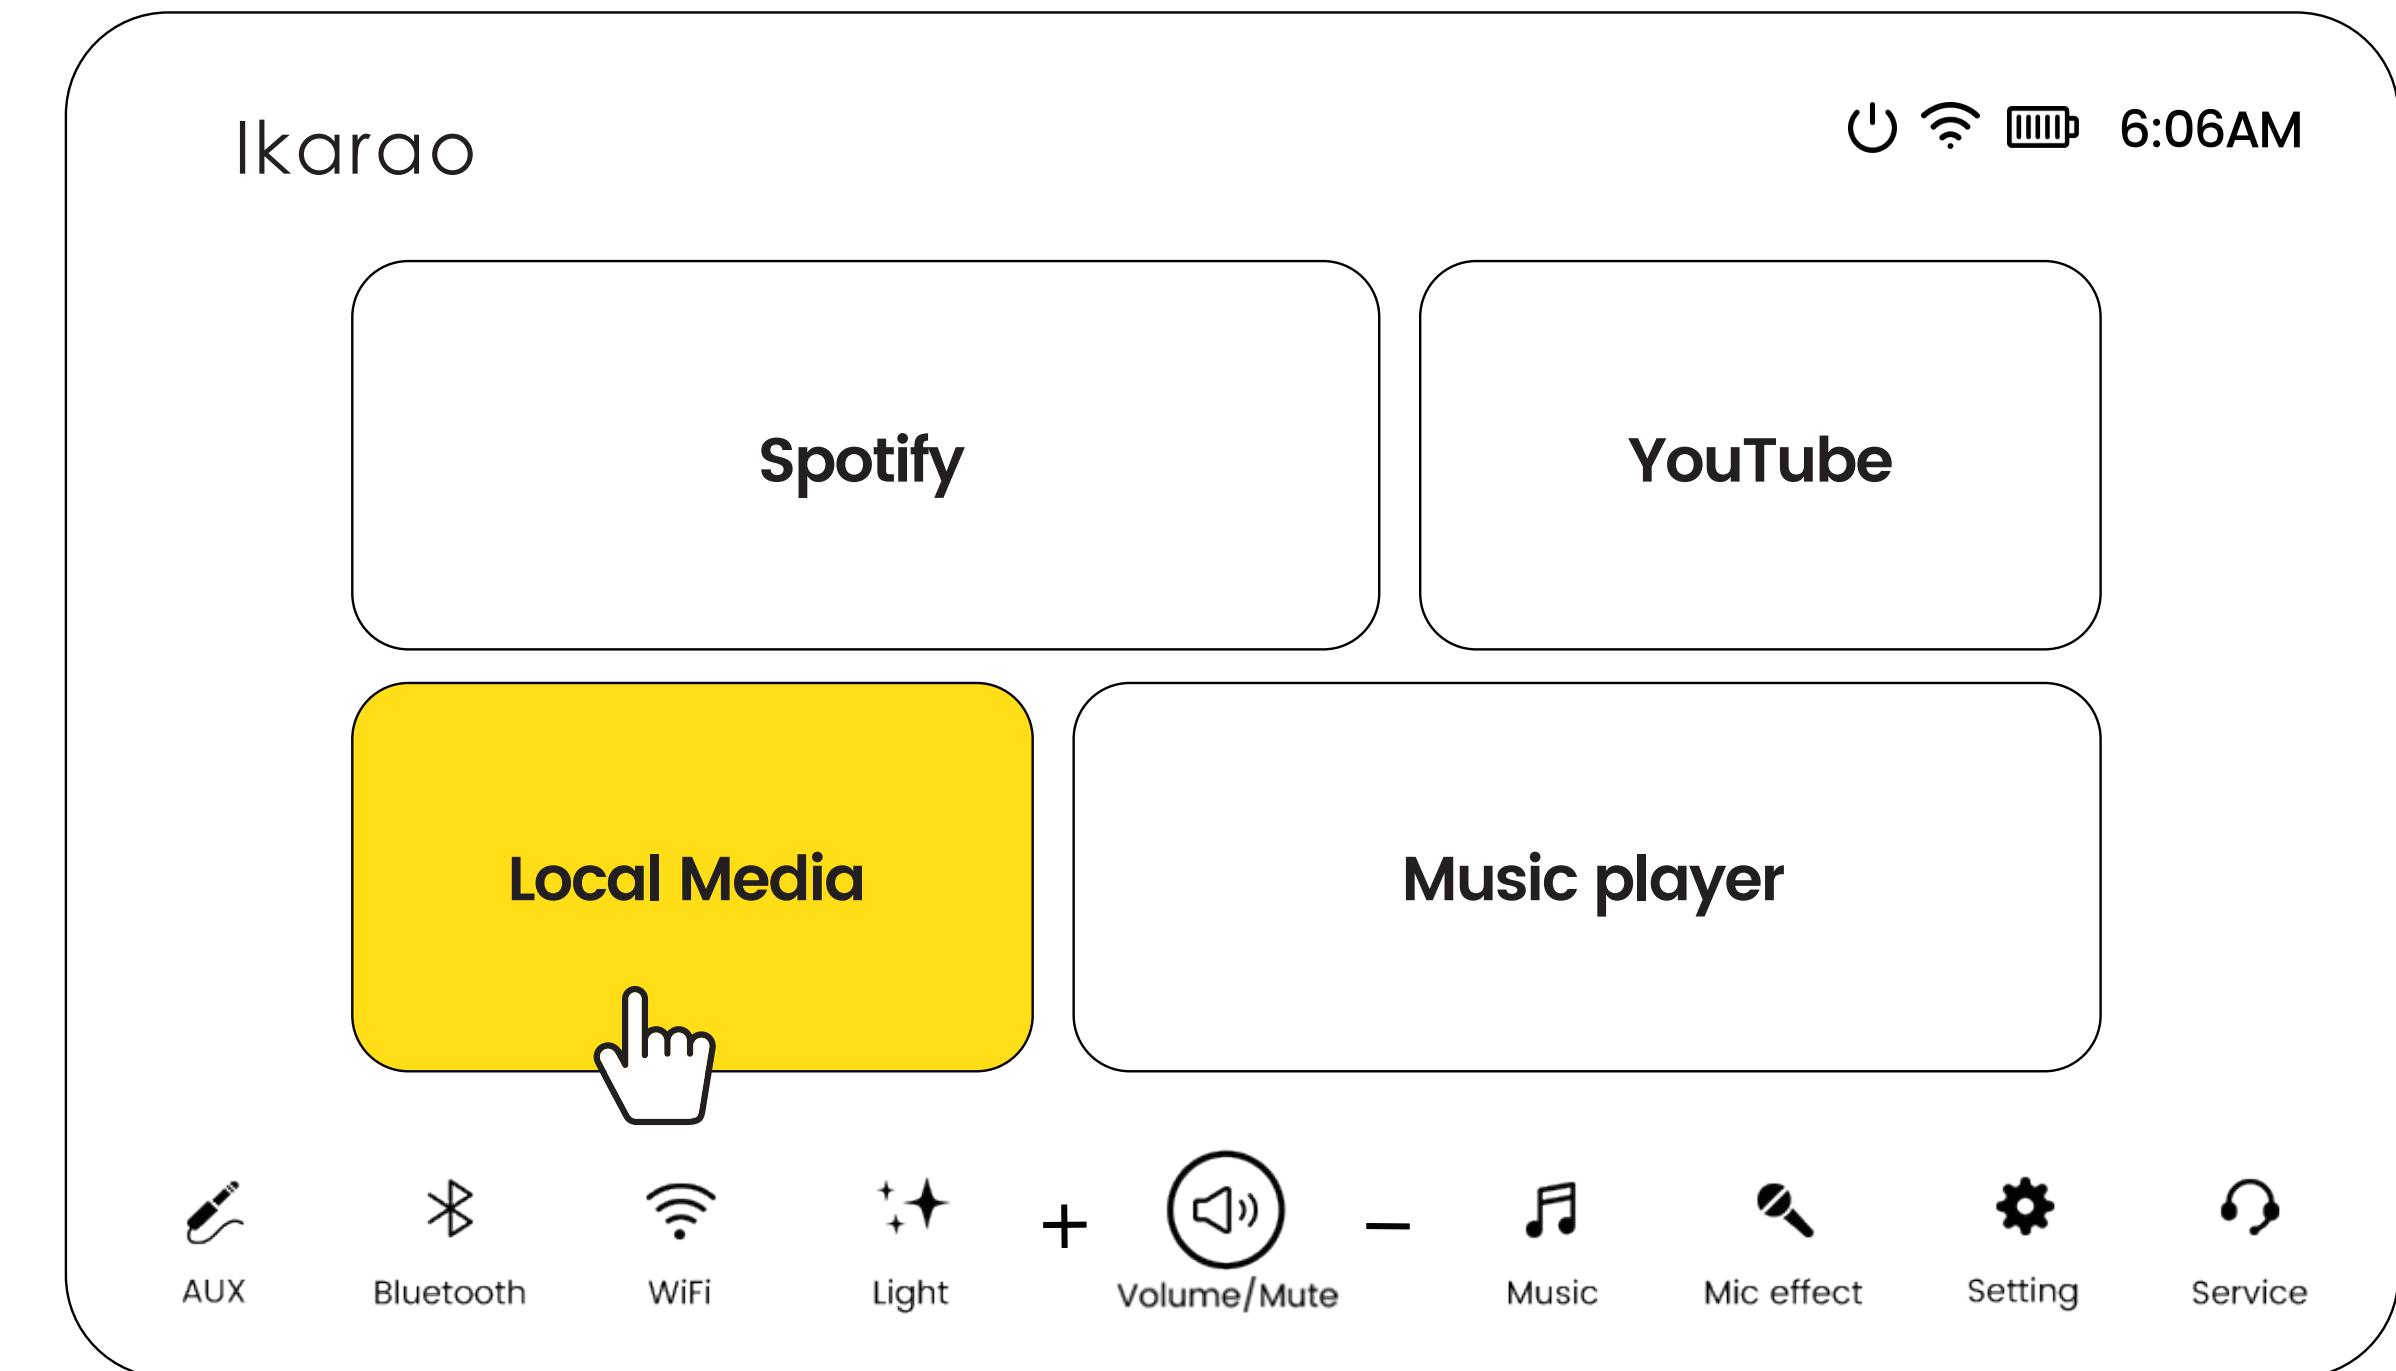


NOTE: Local Media Player auto-loads .LRC lyrics from the same directory as audio files.


WI-FI AUDIO

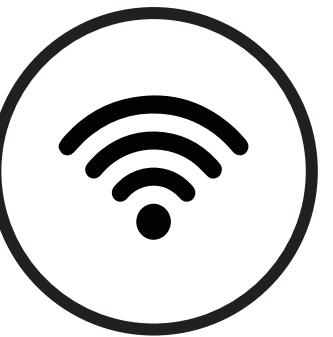

1 Click **Settings**

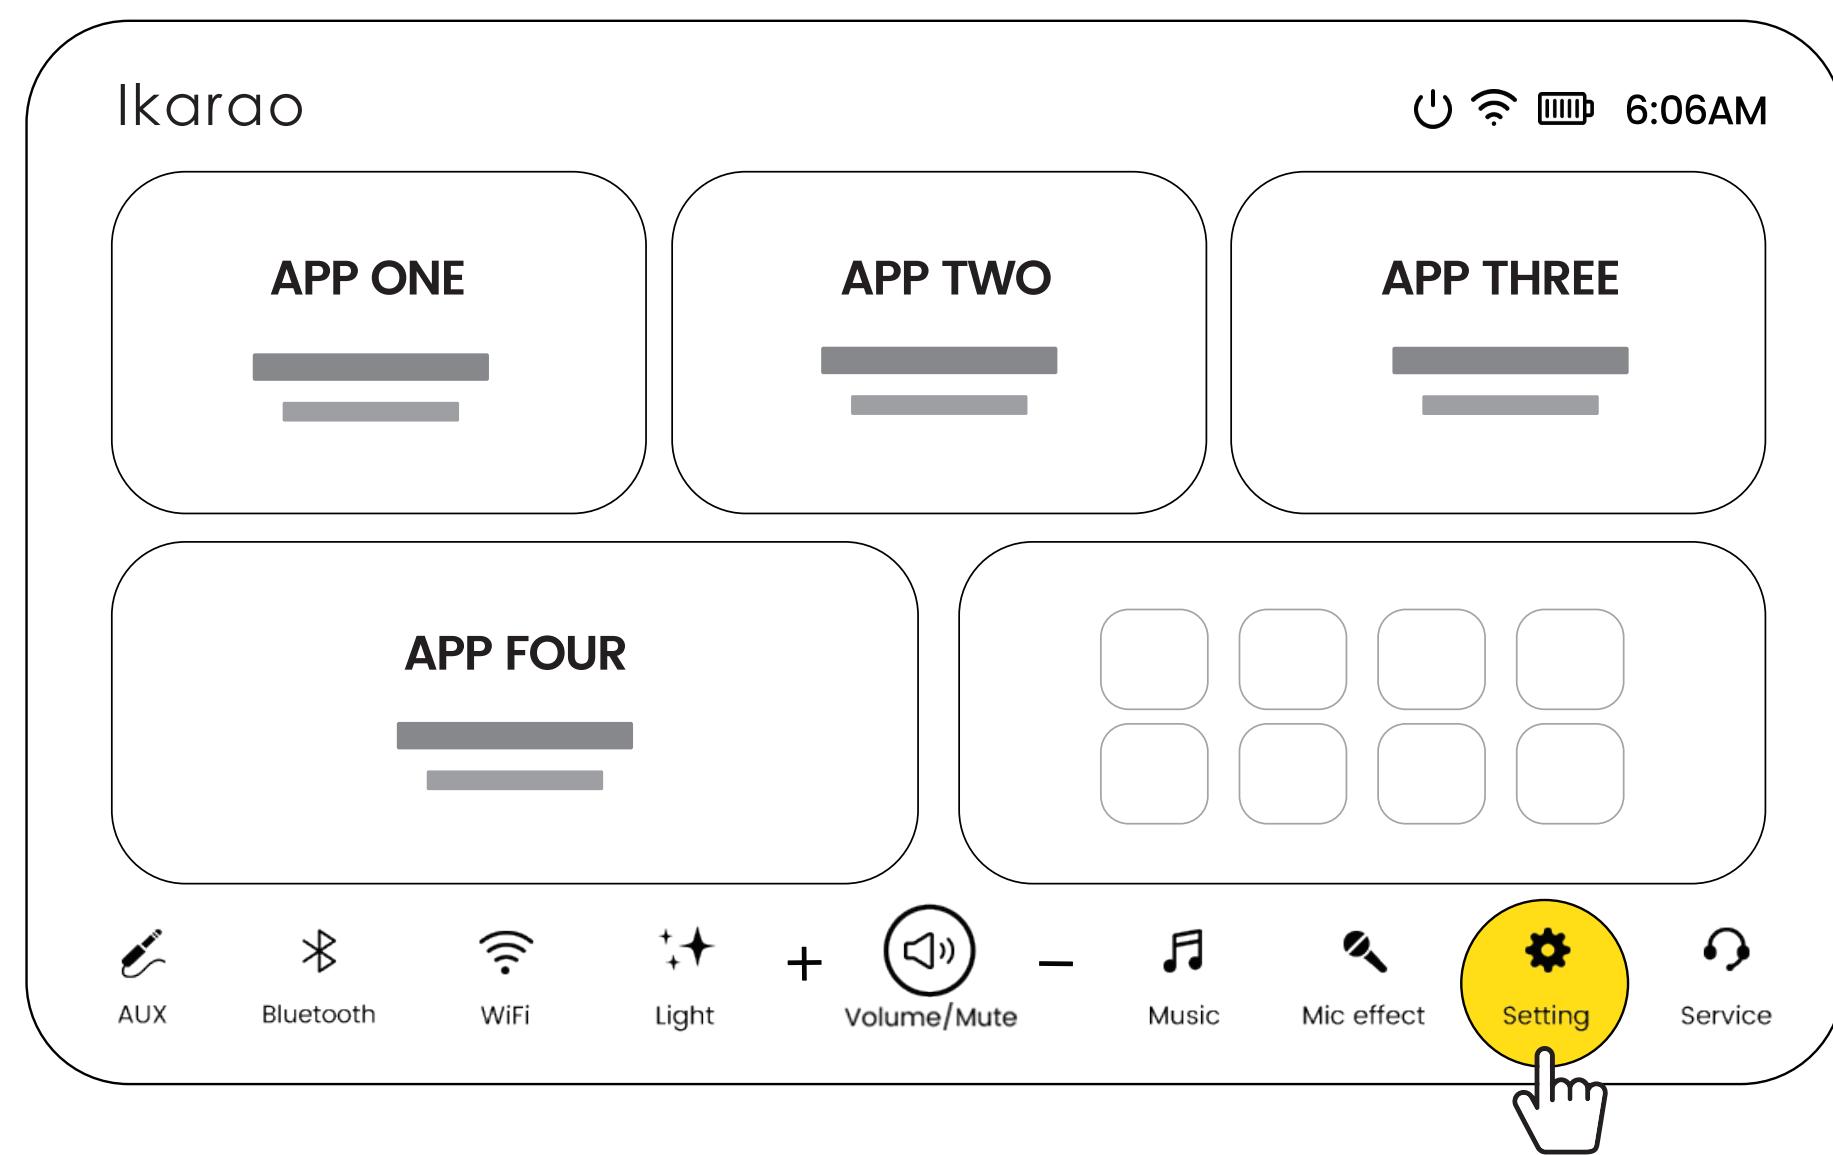

2 Connect Your Wlan

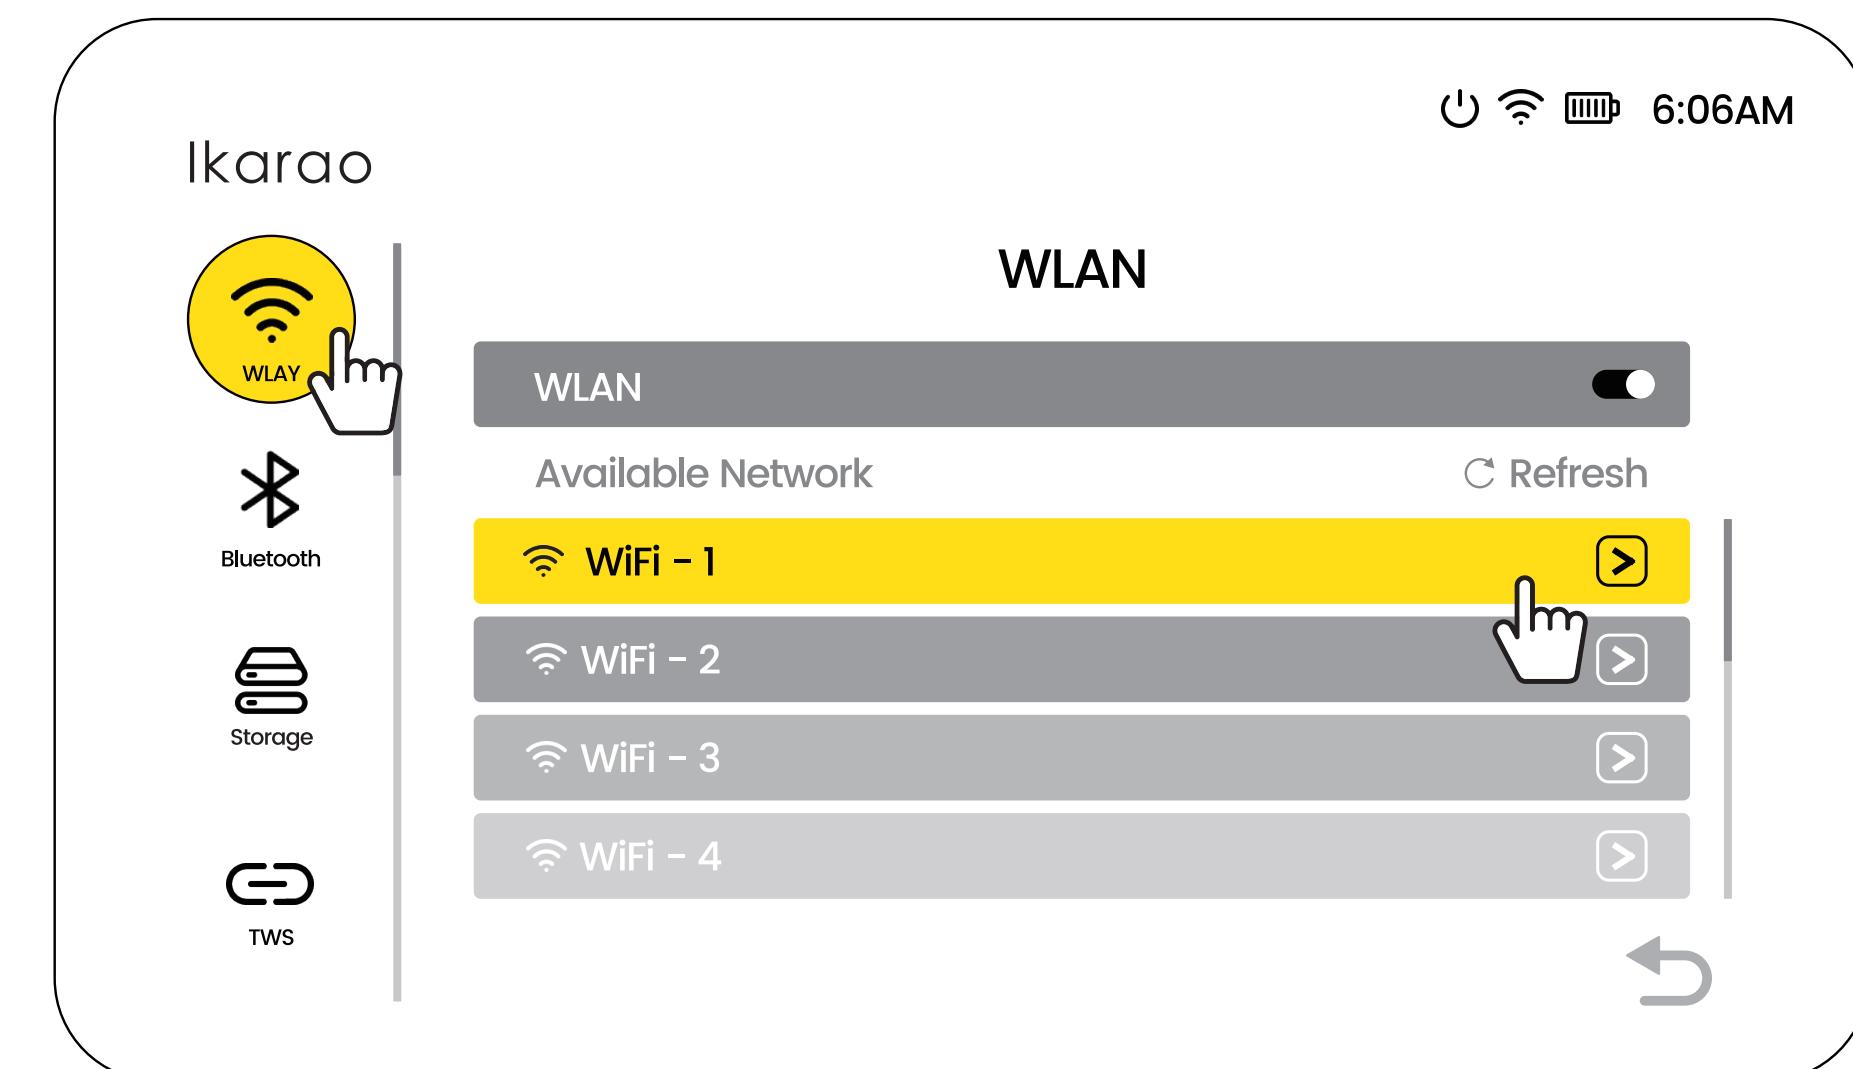


NOTE: After connecting to Wi-Fi, use pre-installed apps to play music.


HDMI



1 Connect using HDMI cable

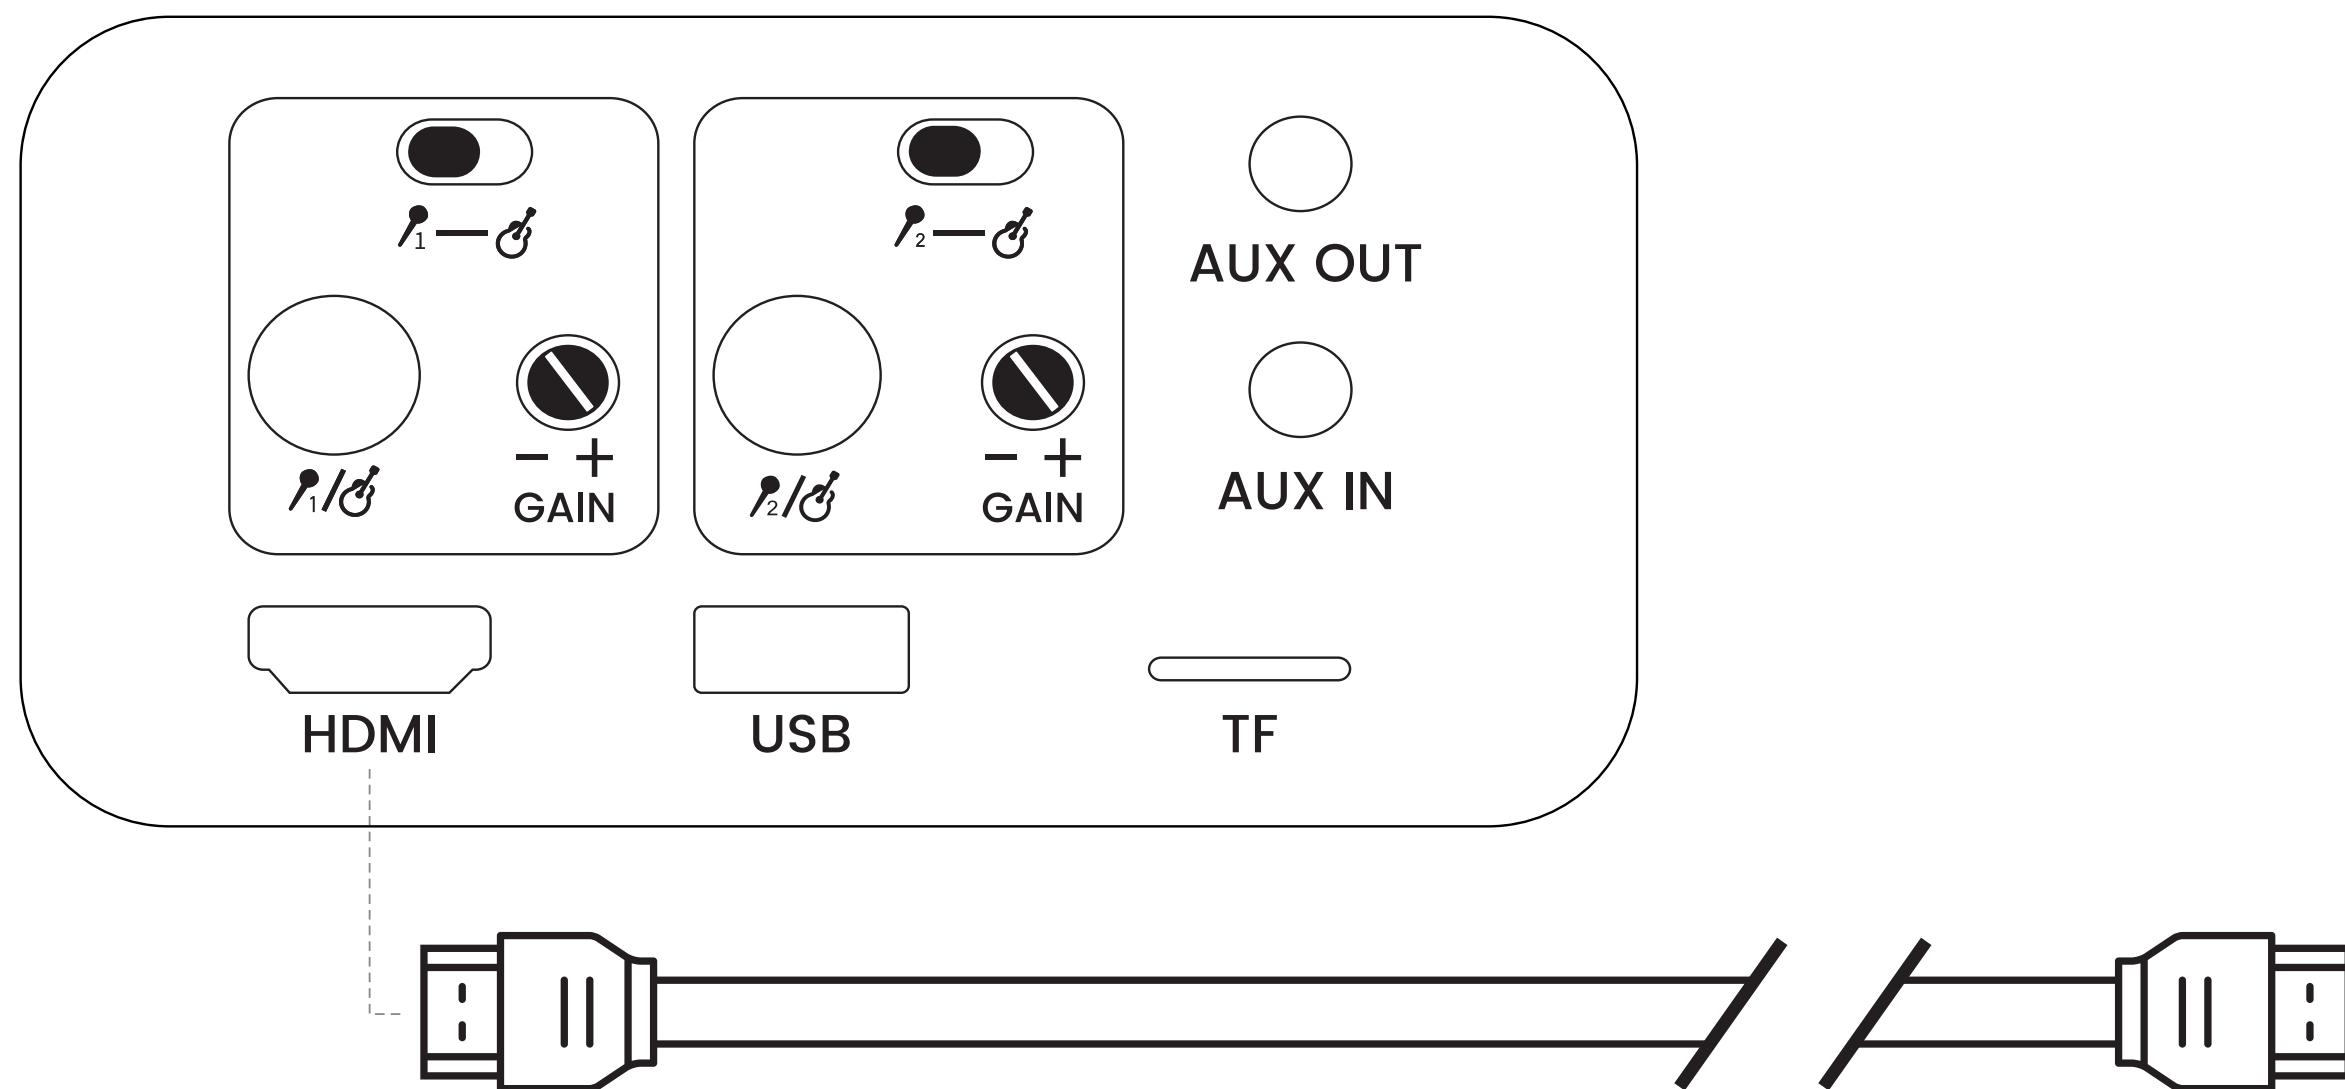


2 Select the HDMI input source to confirm connection

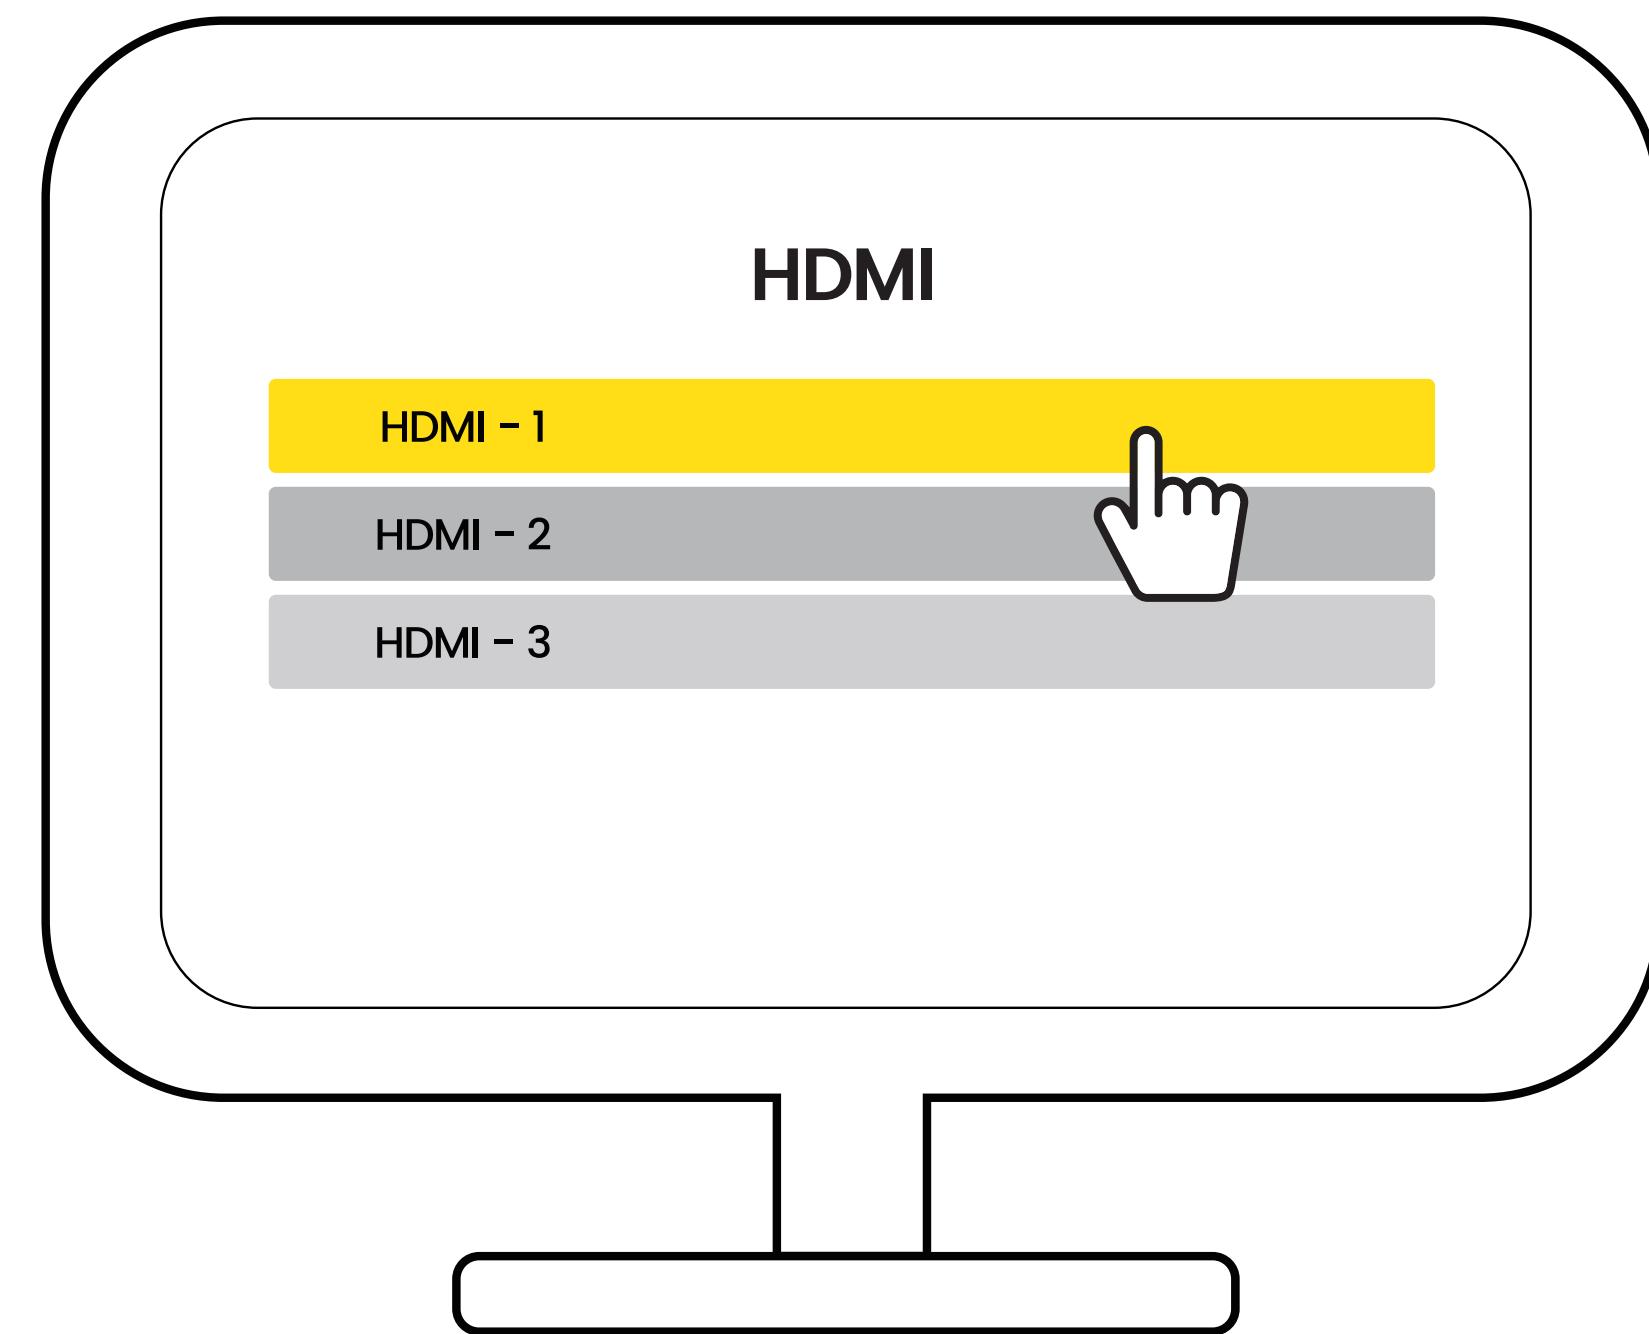

MICROPHONES




- 1 Hold the power button for 2 seconds to turn on.
Then the mic auto-pairs with the speaker.

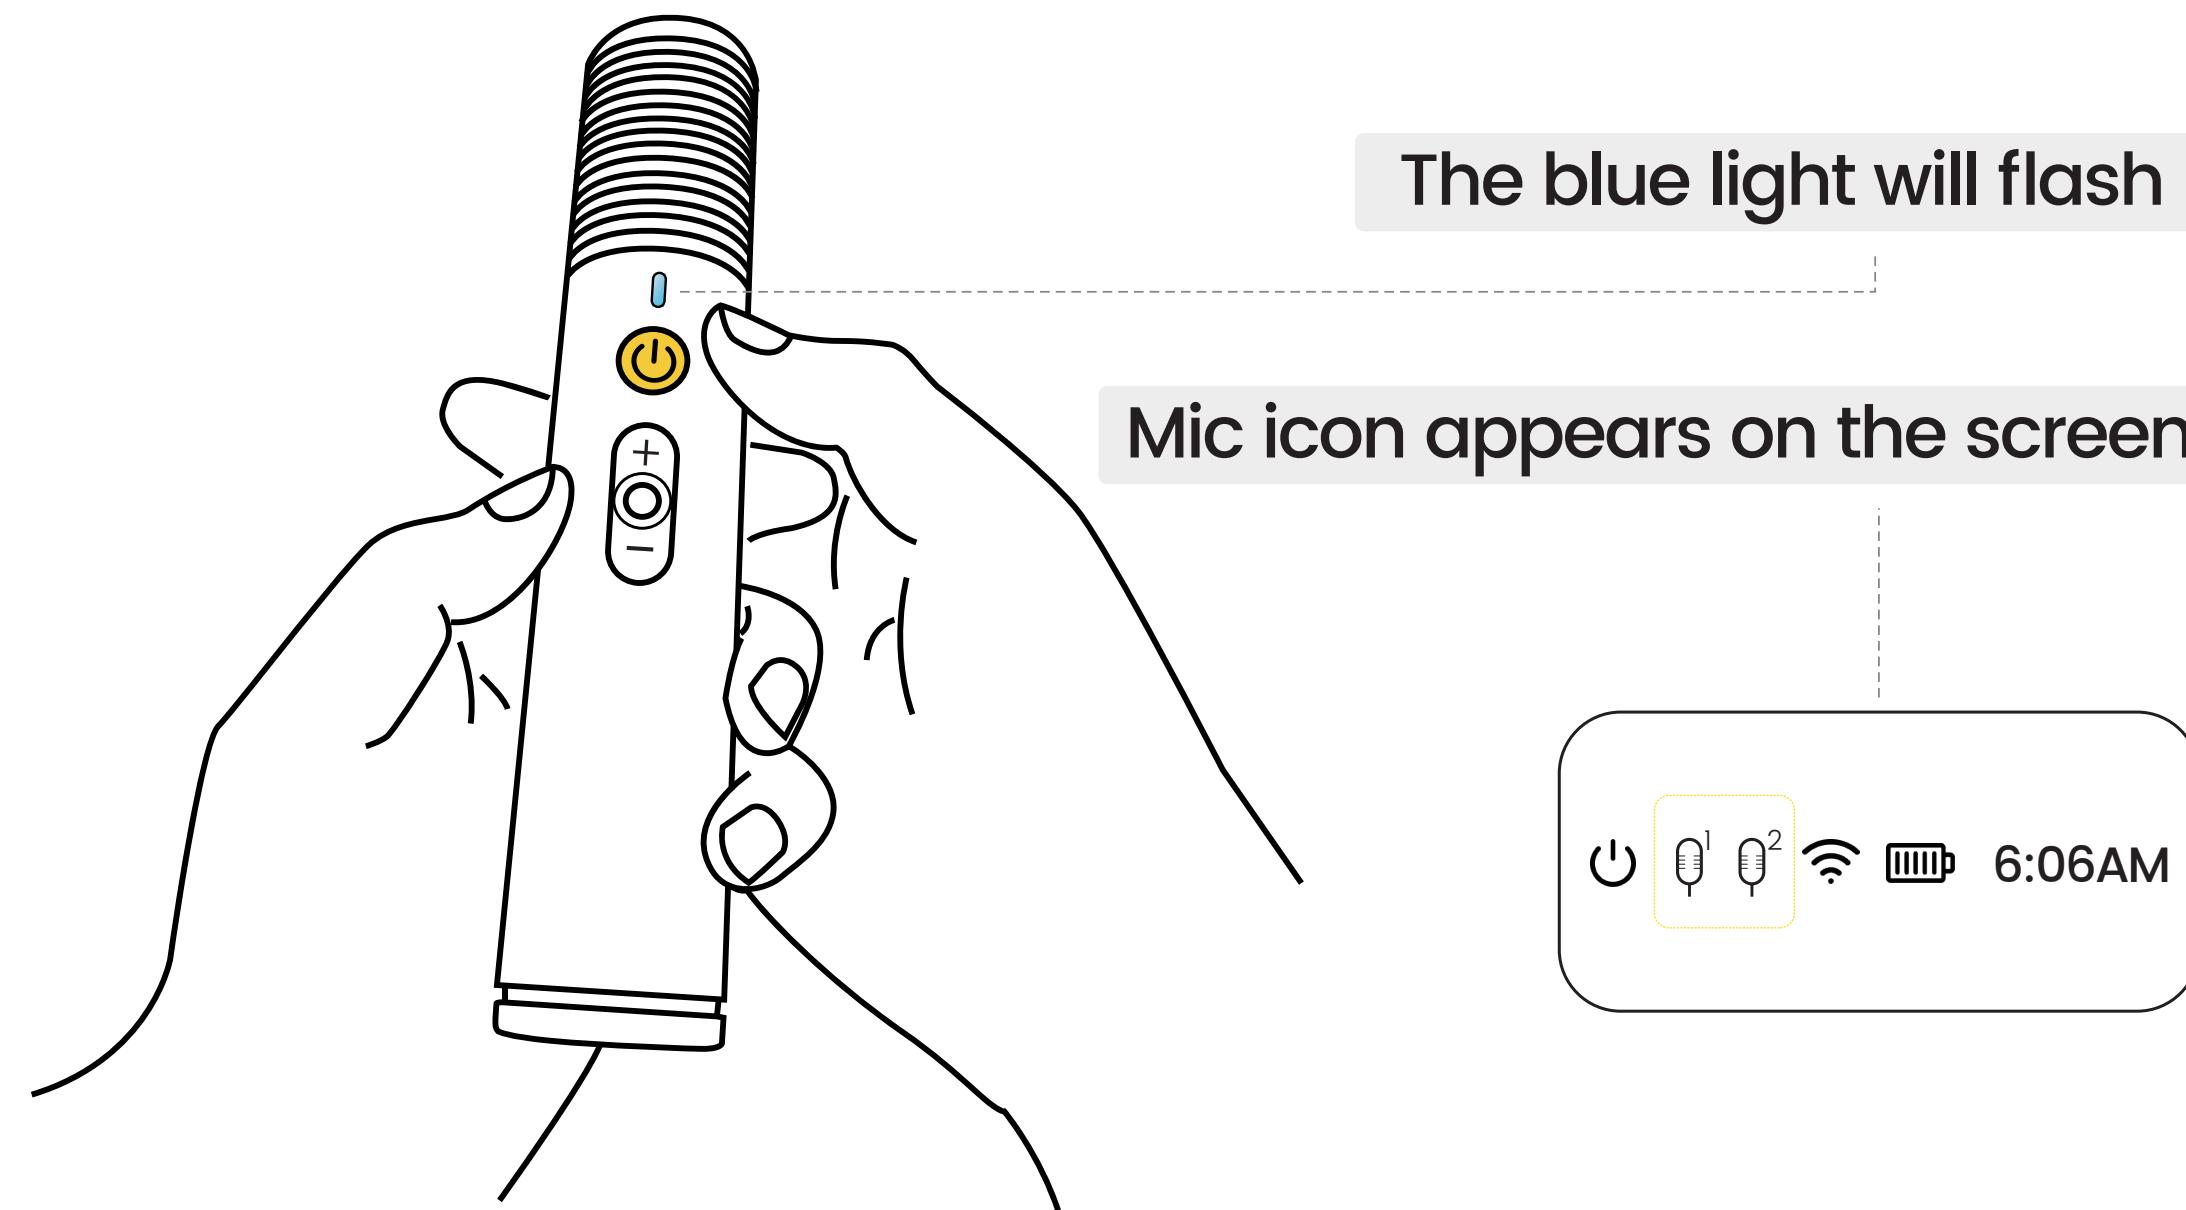


NOTE: Don't point the mic at the speaker to avoid interference.

Two operation of mic will differ due to the version difference.(change mic effect*1, skip forward >2S)


- 2 Use buttons to switch effects, adjust volume, and play/pause.

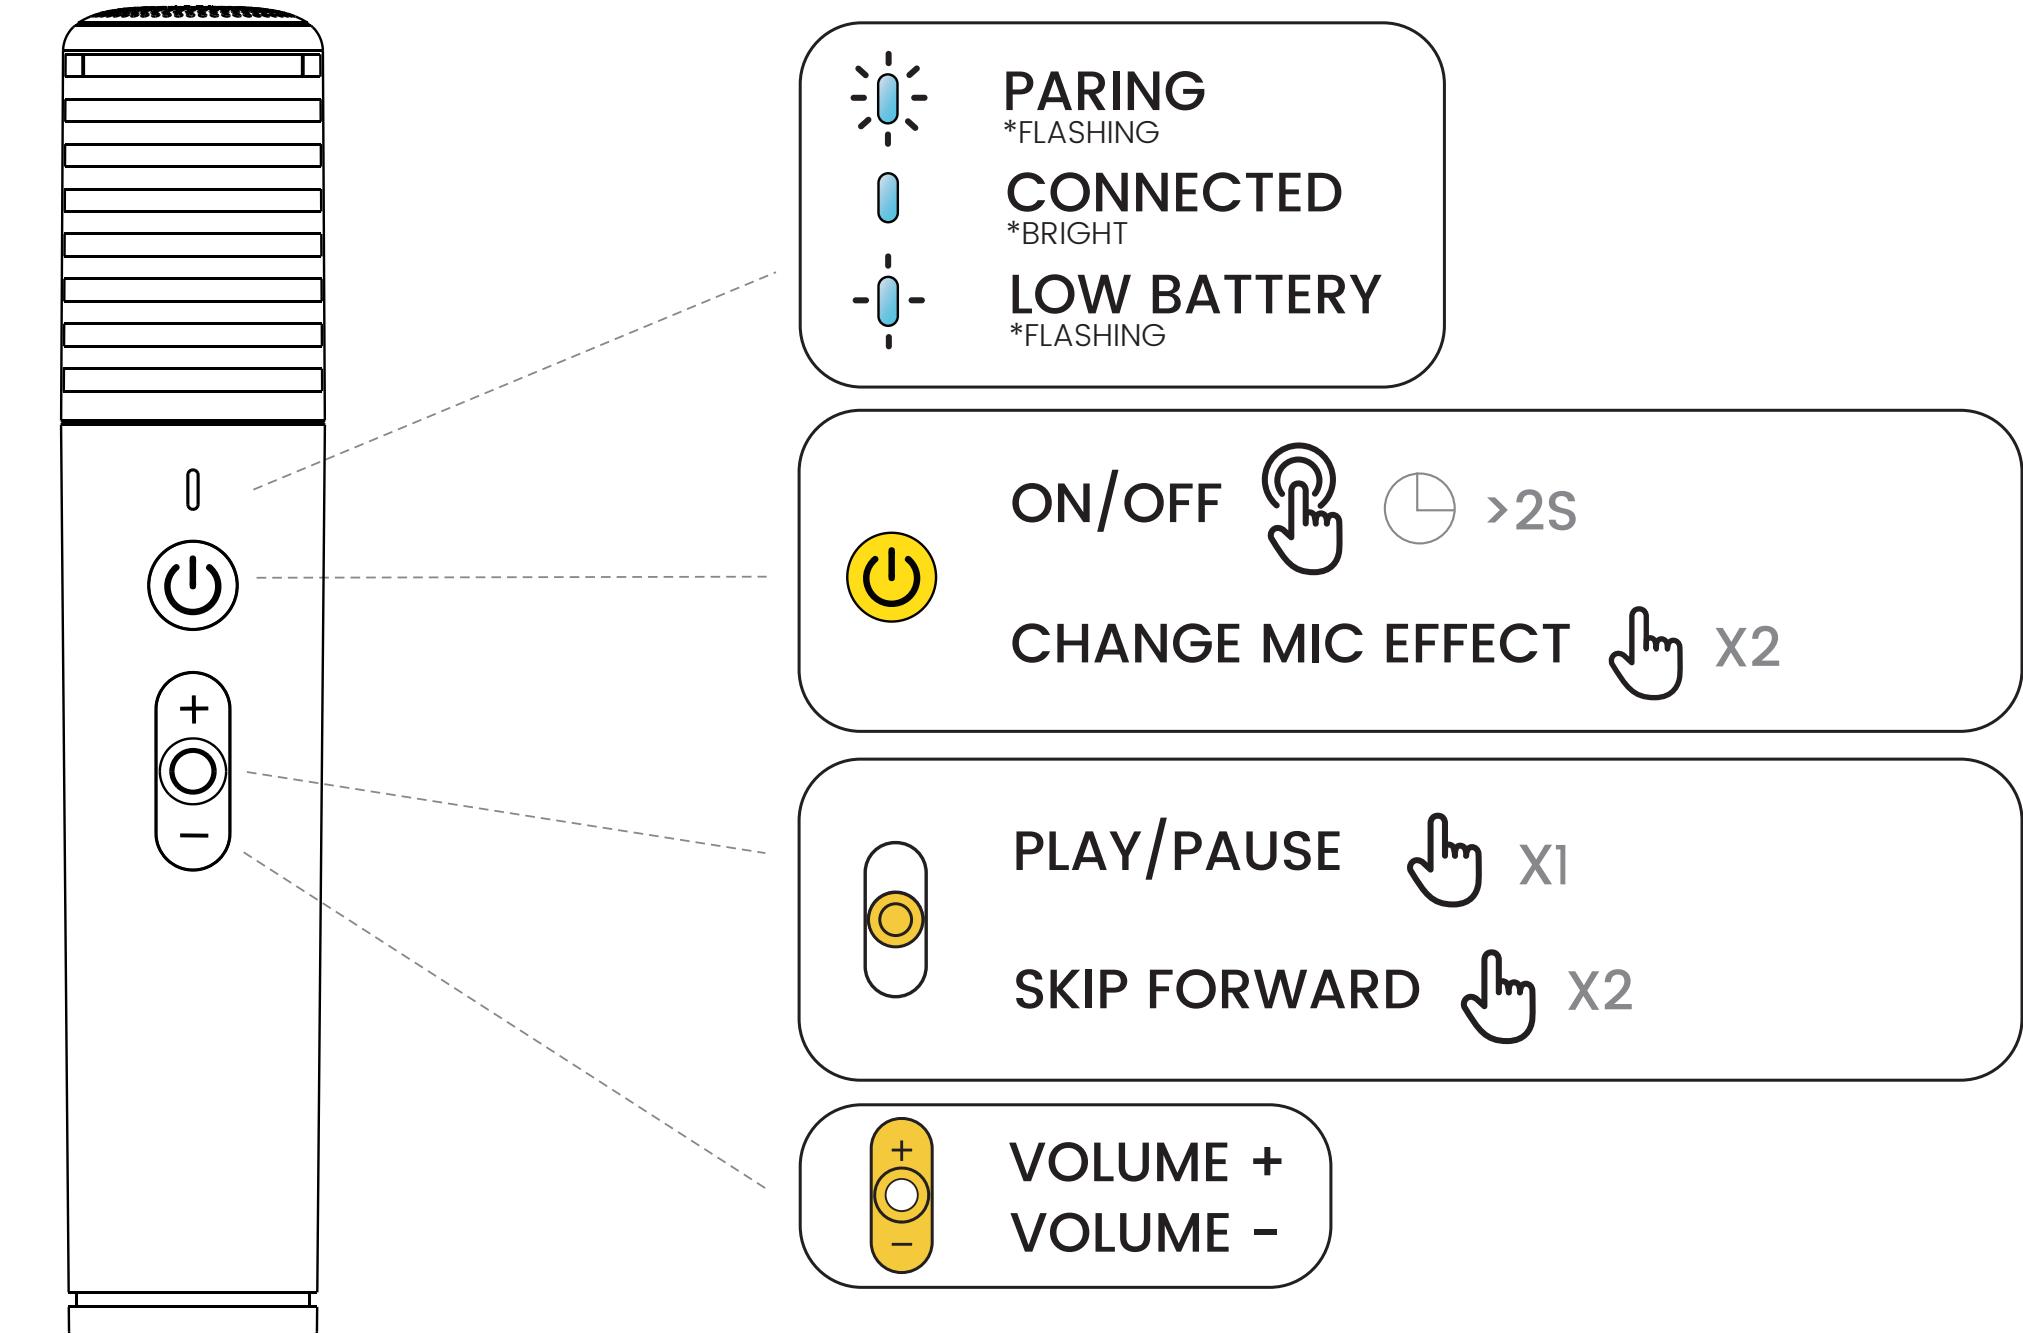

4 Switch microphone sound via speaker buttons or **Mic Effect** in the software.

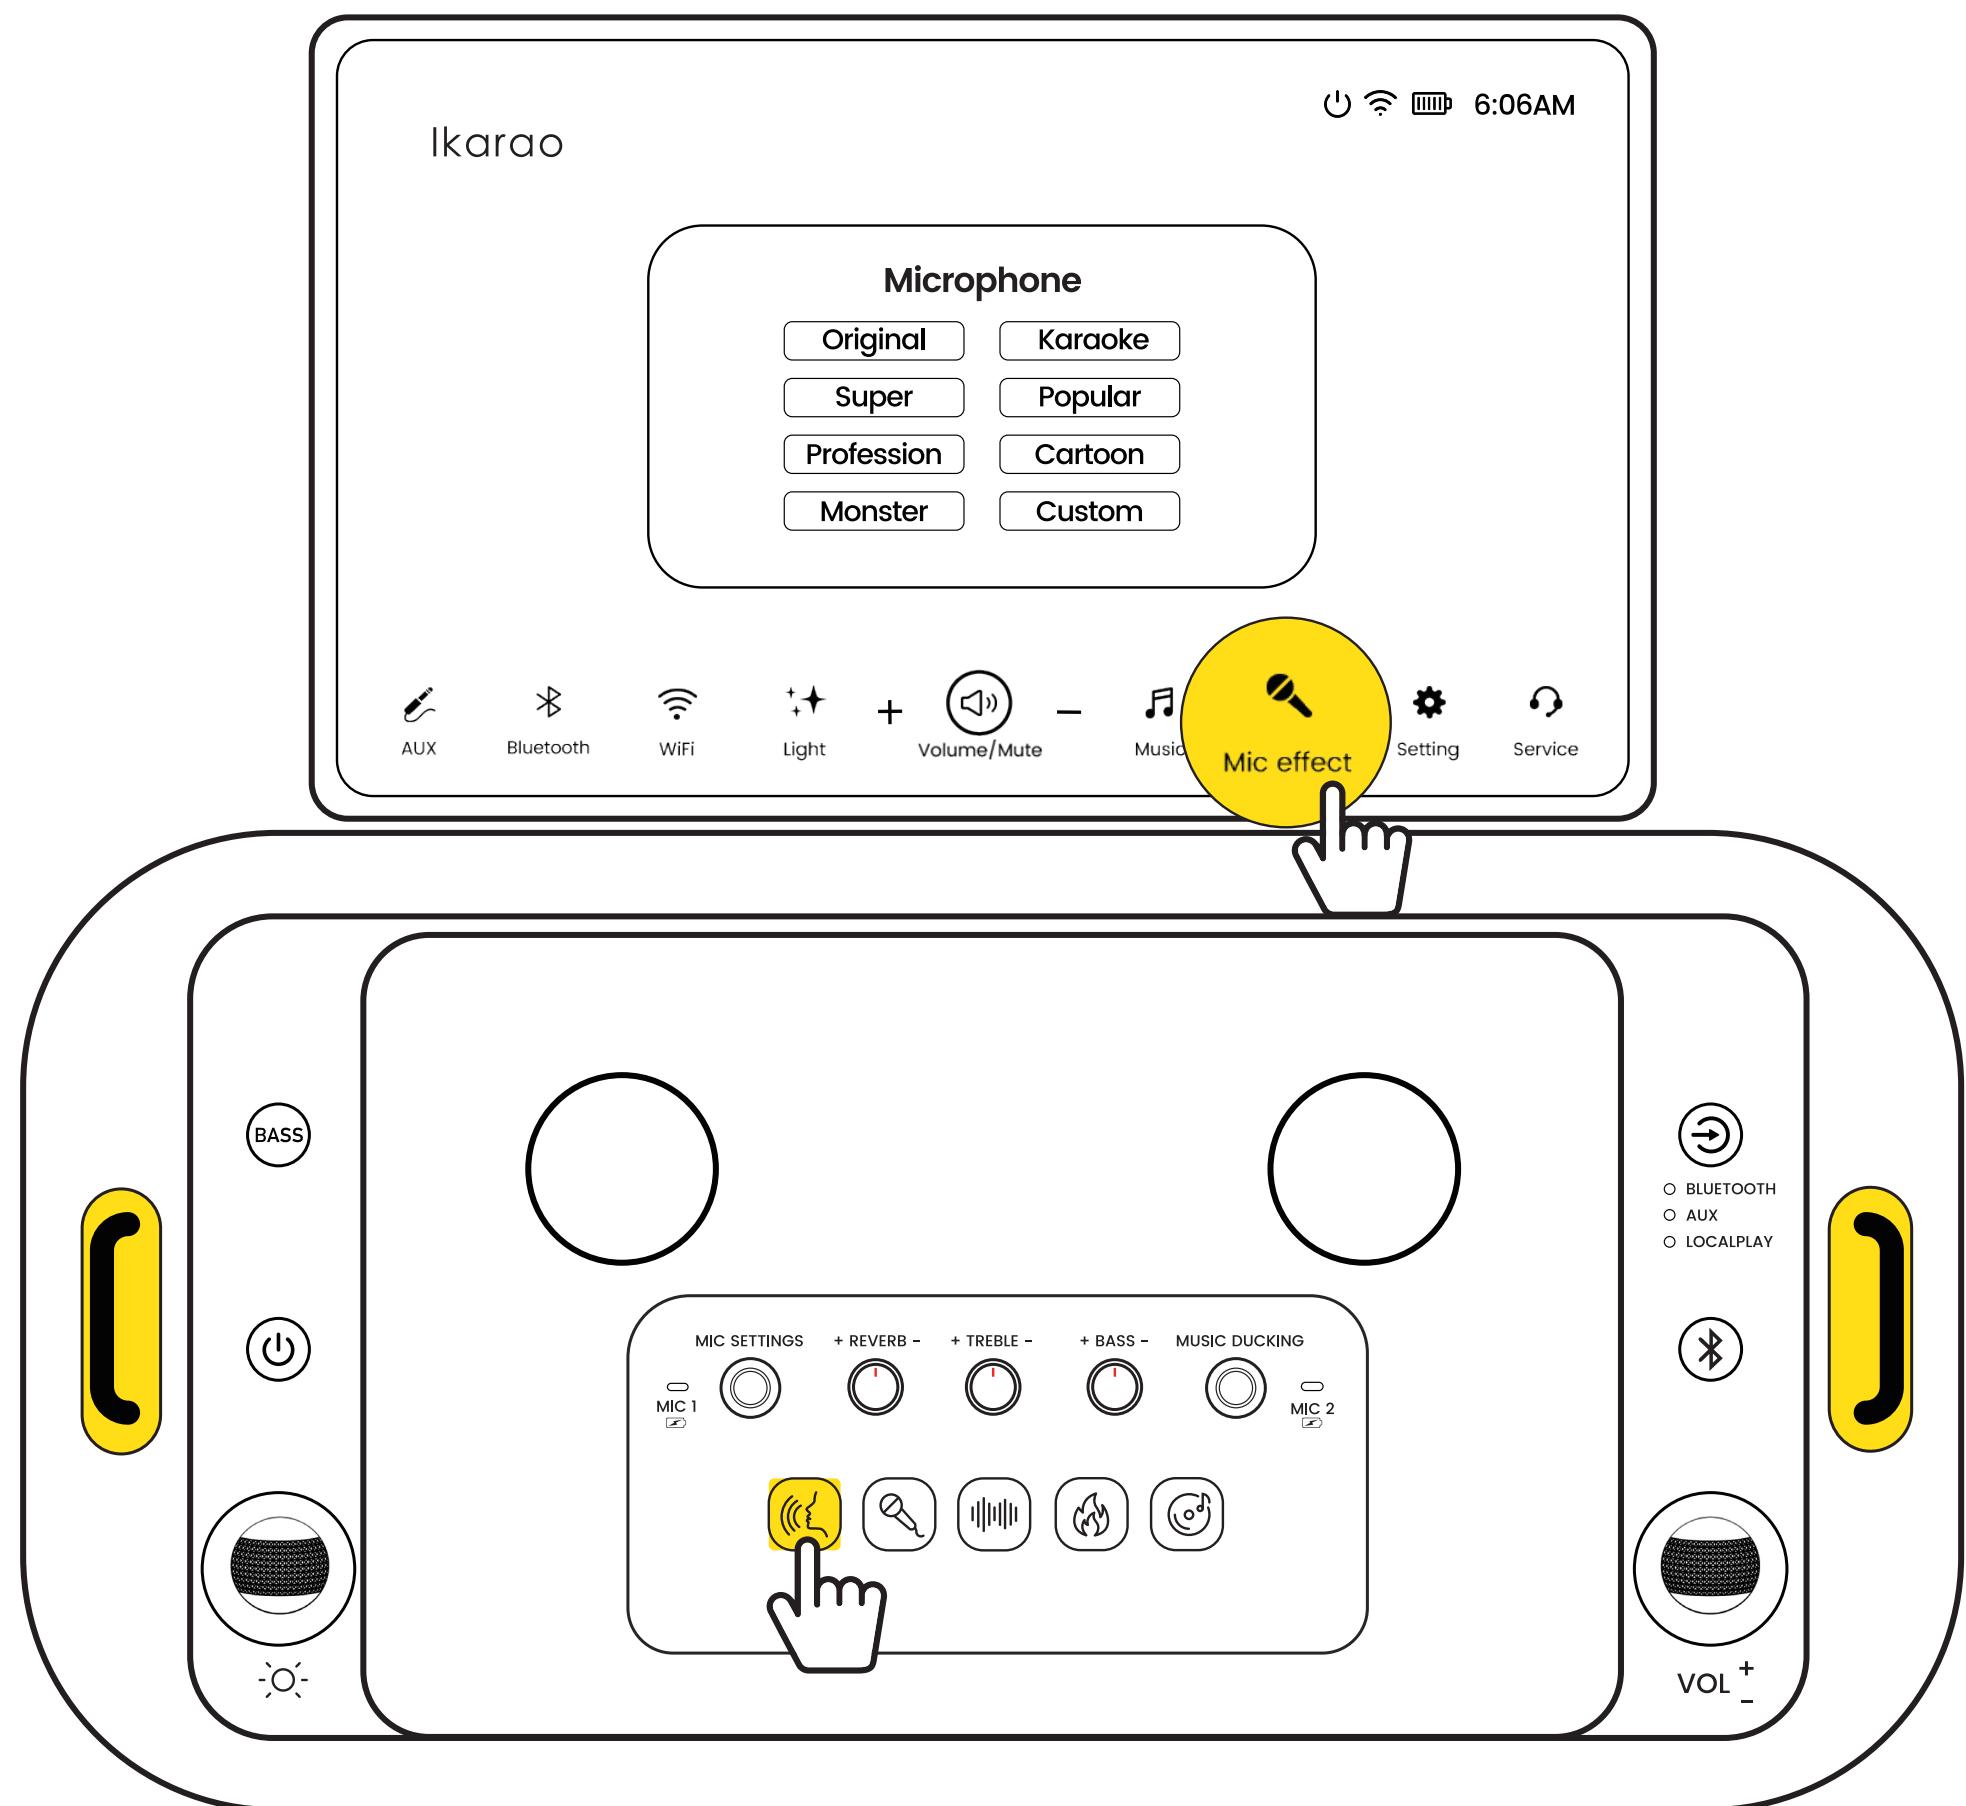


5 Click **Mic Settings** or **Custom** to enter custom sound mode and adjust Reverb, Treble, and Bass to your preference.

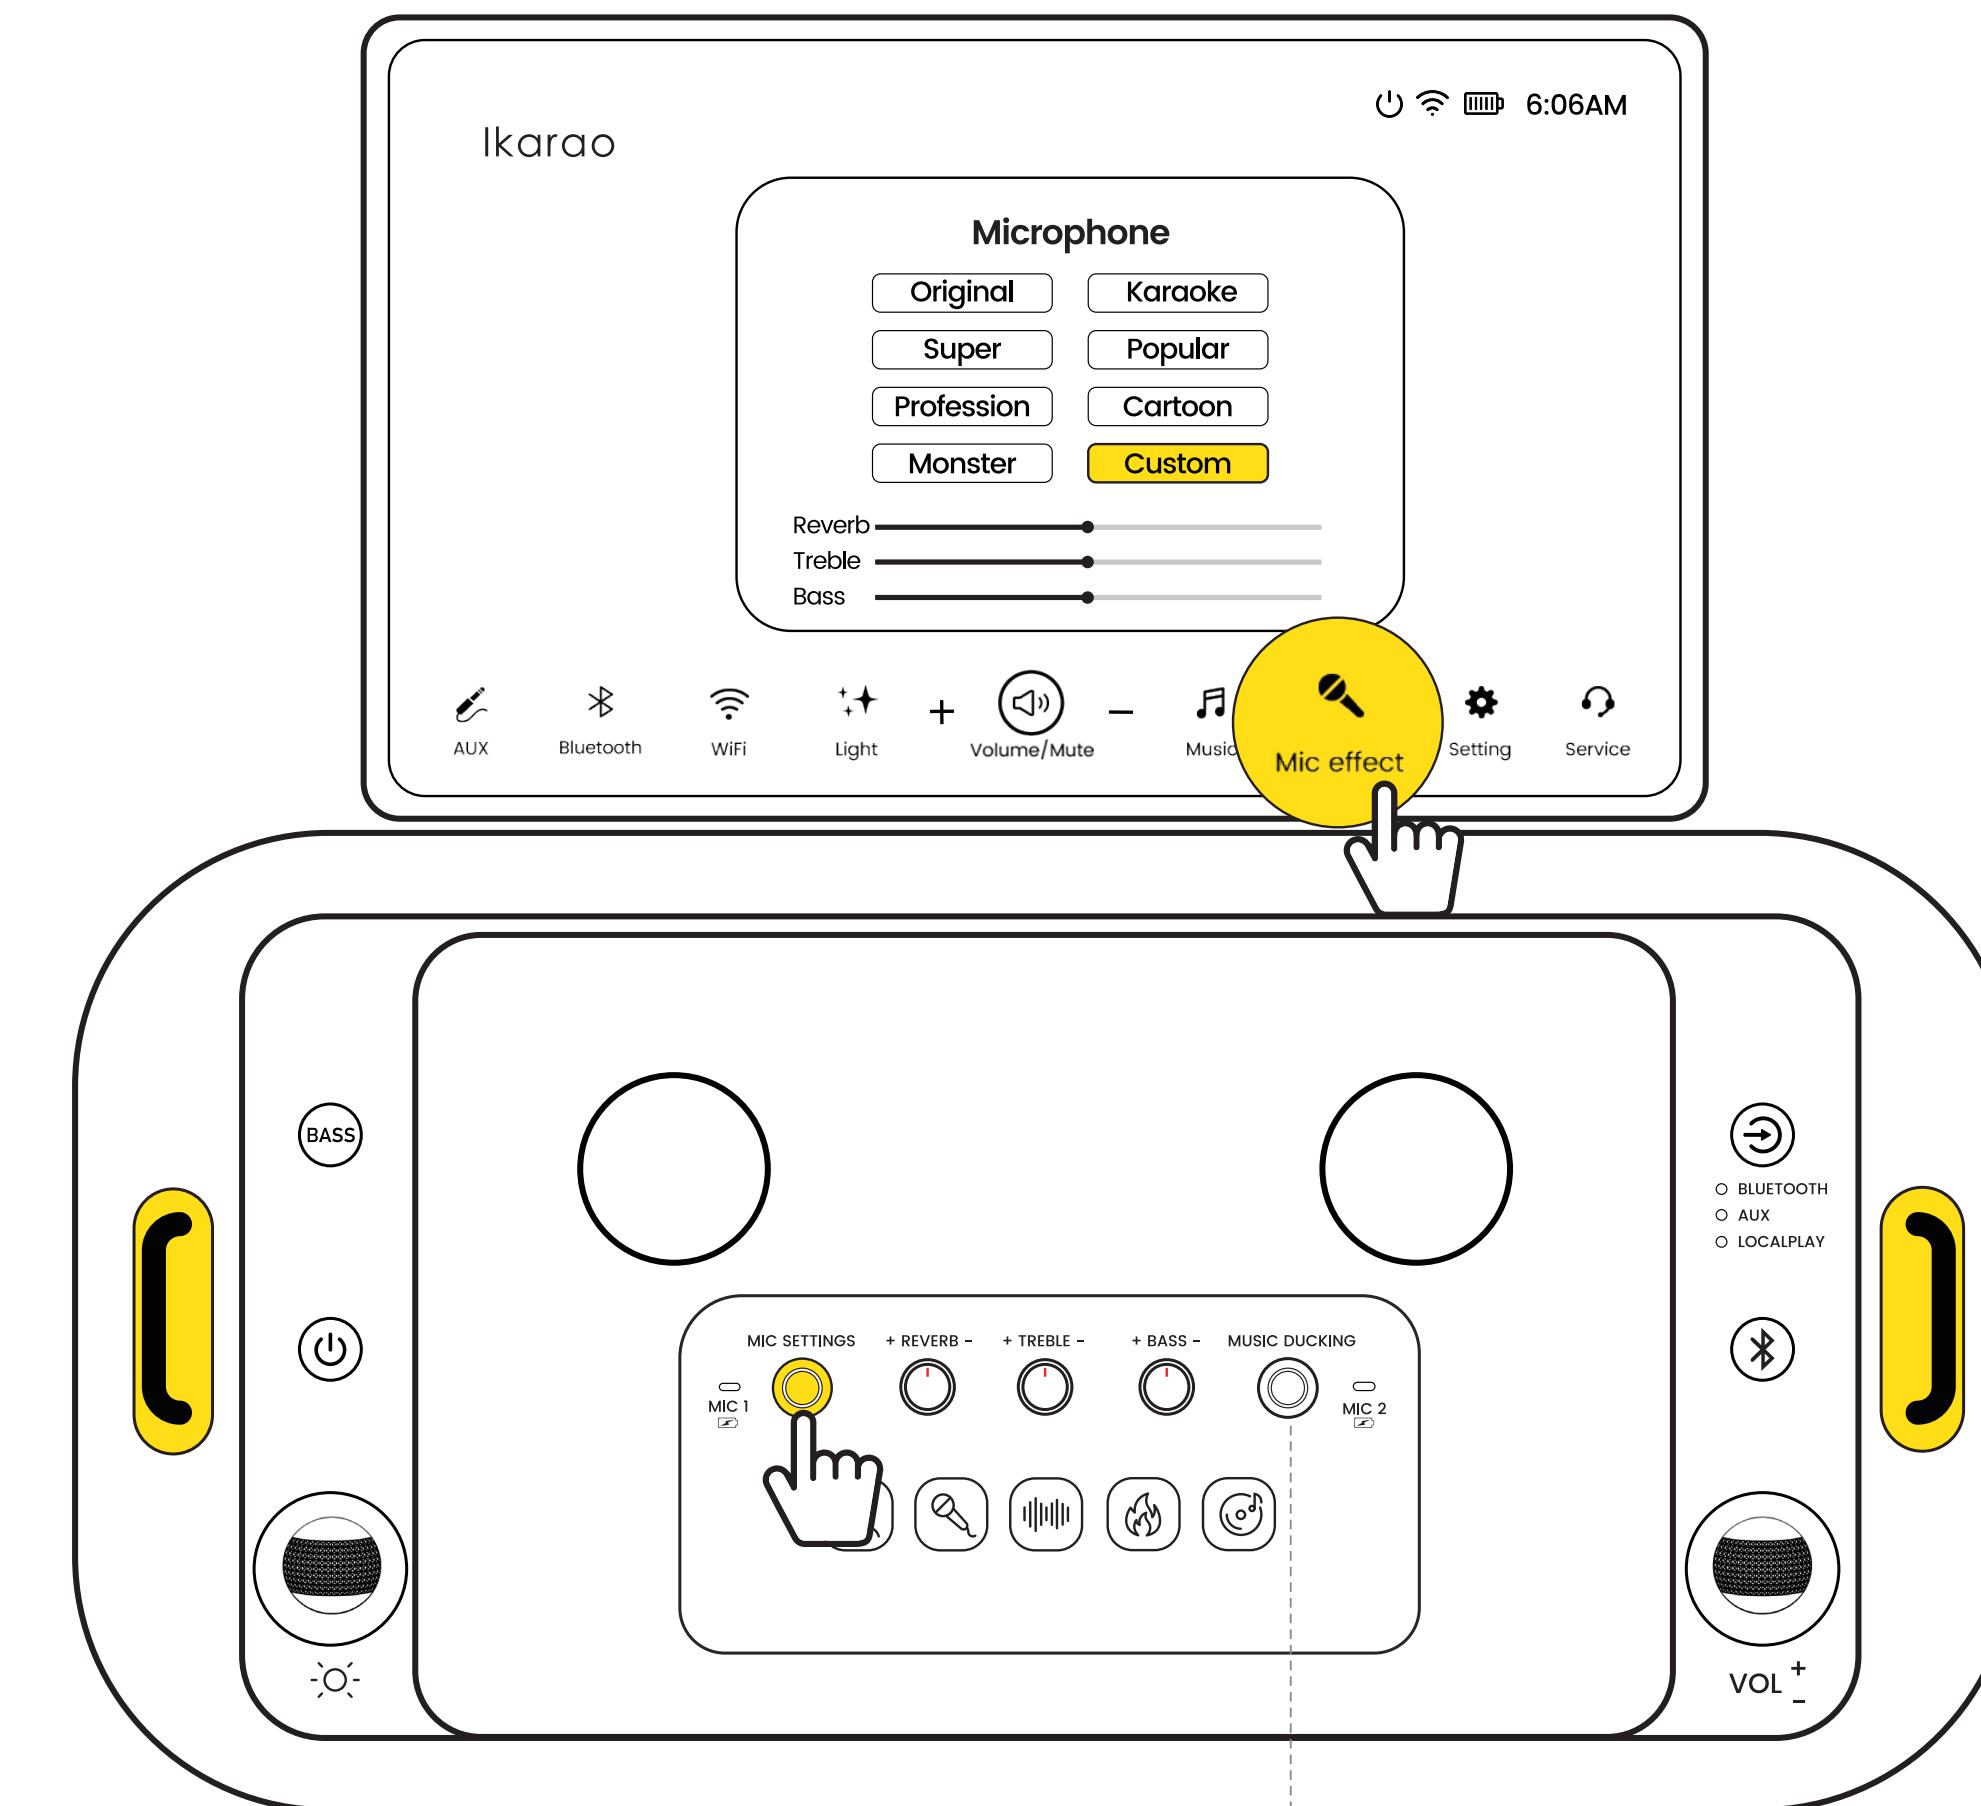


Enable vocal priority by clicking the **Music Ducking** button during speech.

SPEAKER CHARGING

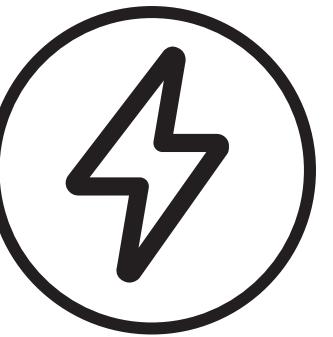


- 1 Charging with the included power cable.

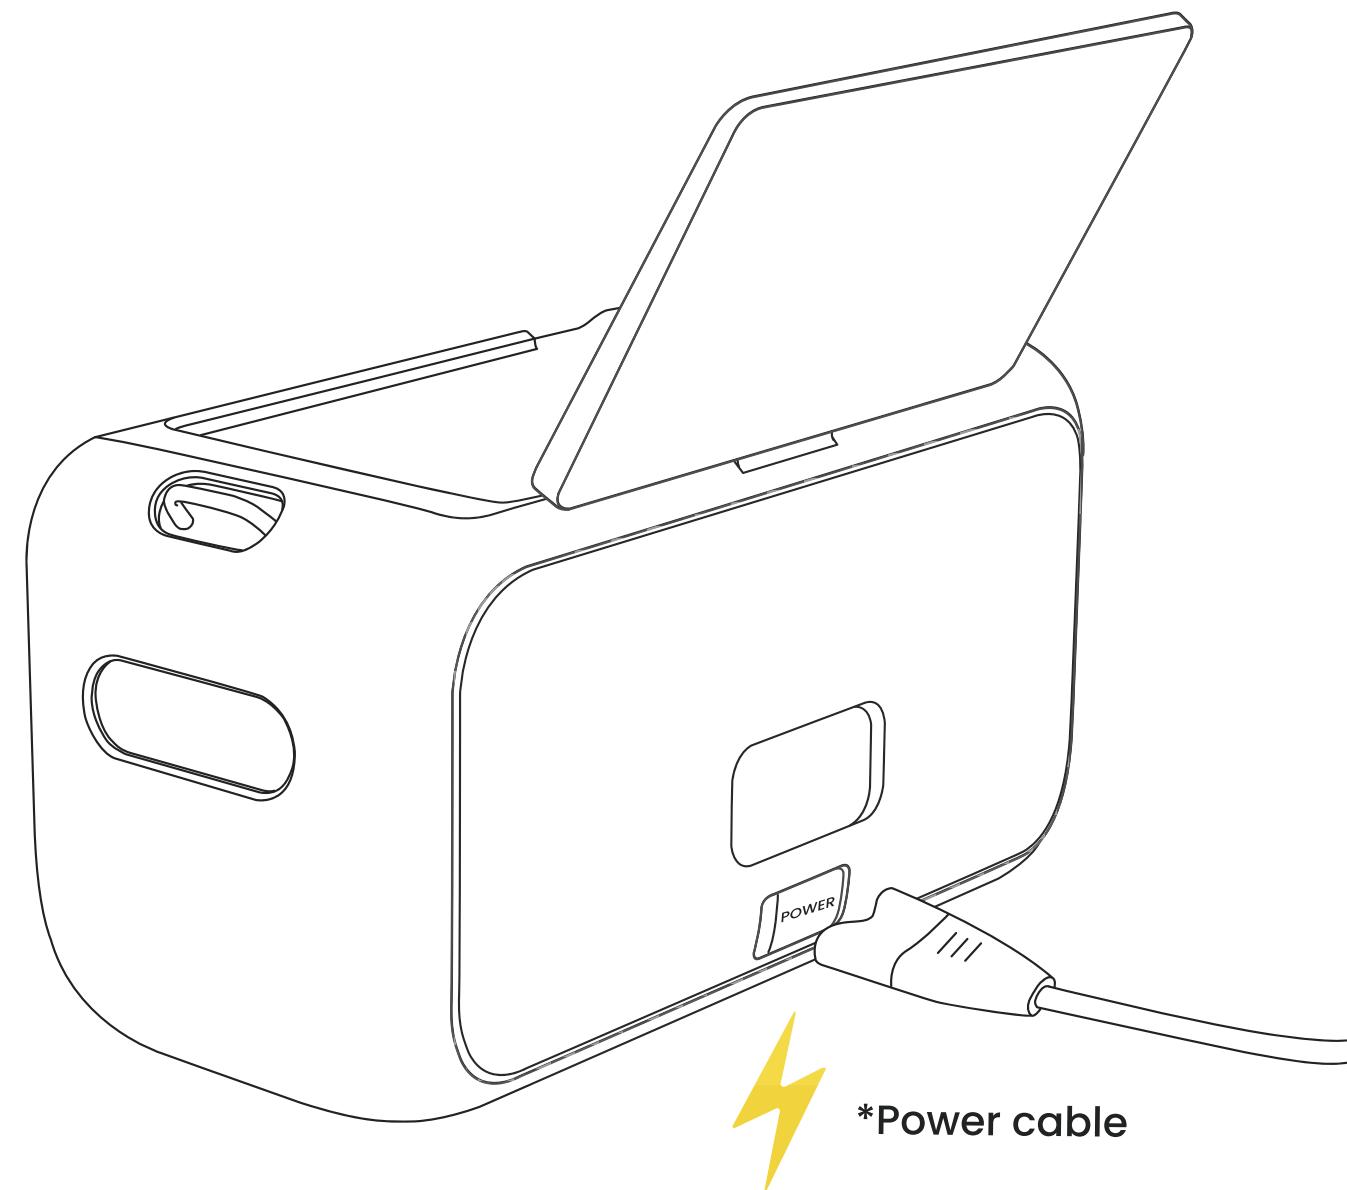



- 2

	LOW BATTERY *SLOW FLASHING
	CHARGING *BREATHING
	FULLY CHARGED *OFF

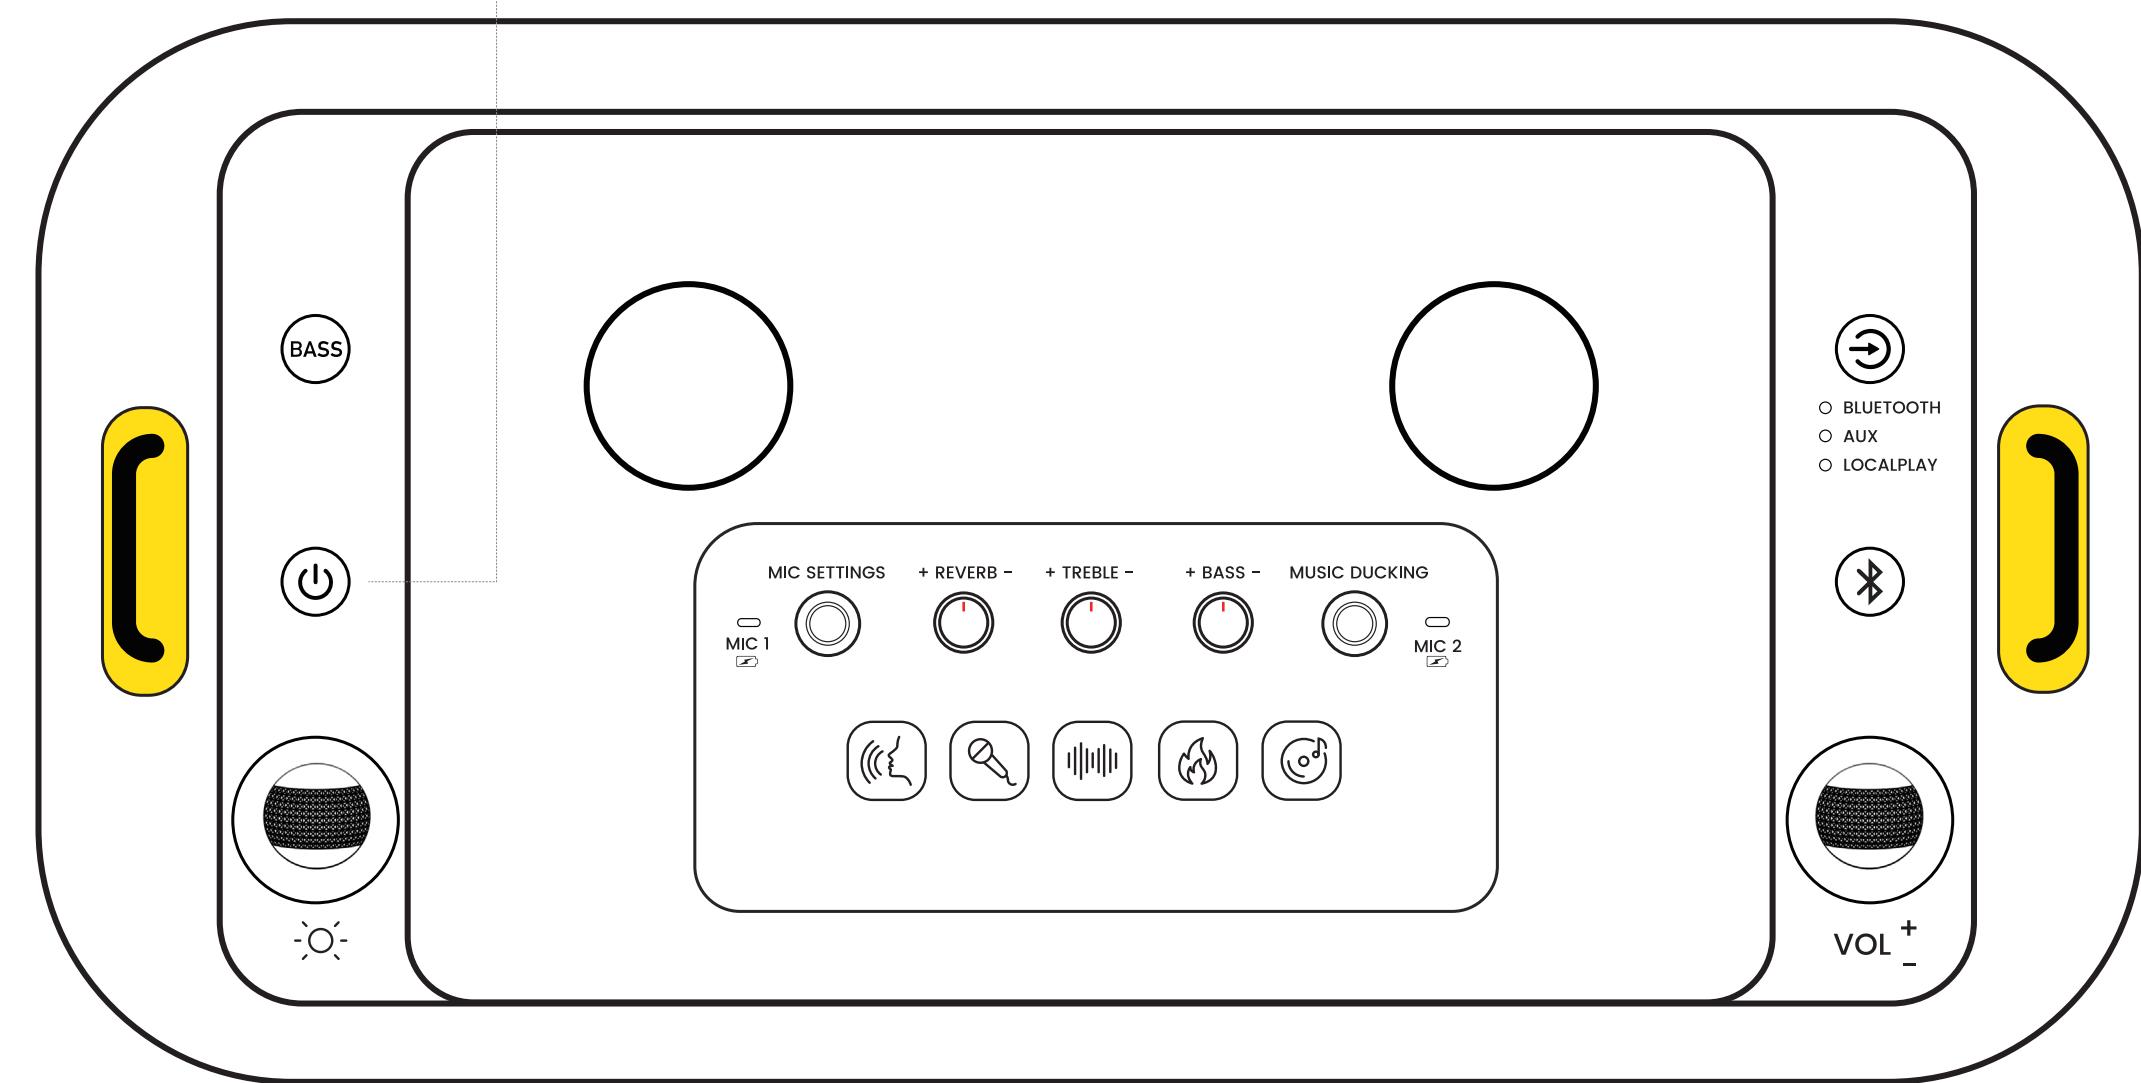


NOTE: The included power cable supports 100V-240V.

MICROPHONES CHARGING

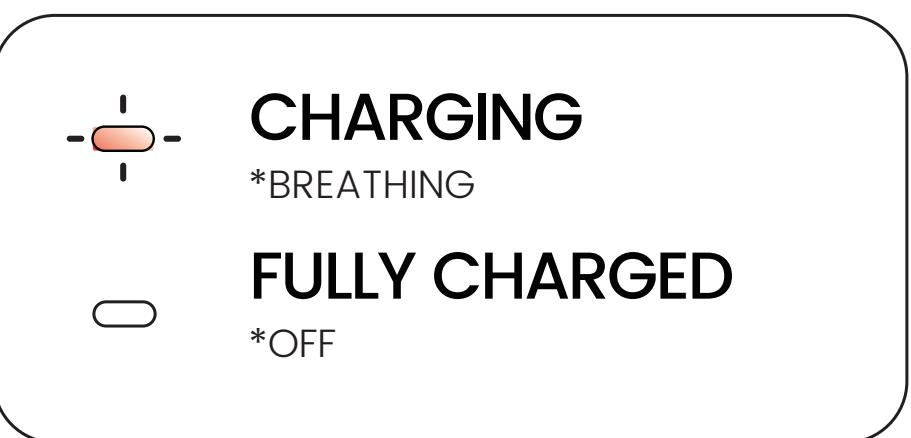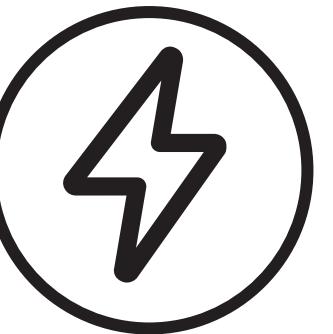


Tap the microphone into the storage to begin charging.


NOTE: Microphone has a 30-hour usage duration
with a 5-hour full charge time.

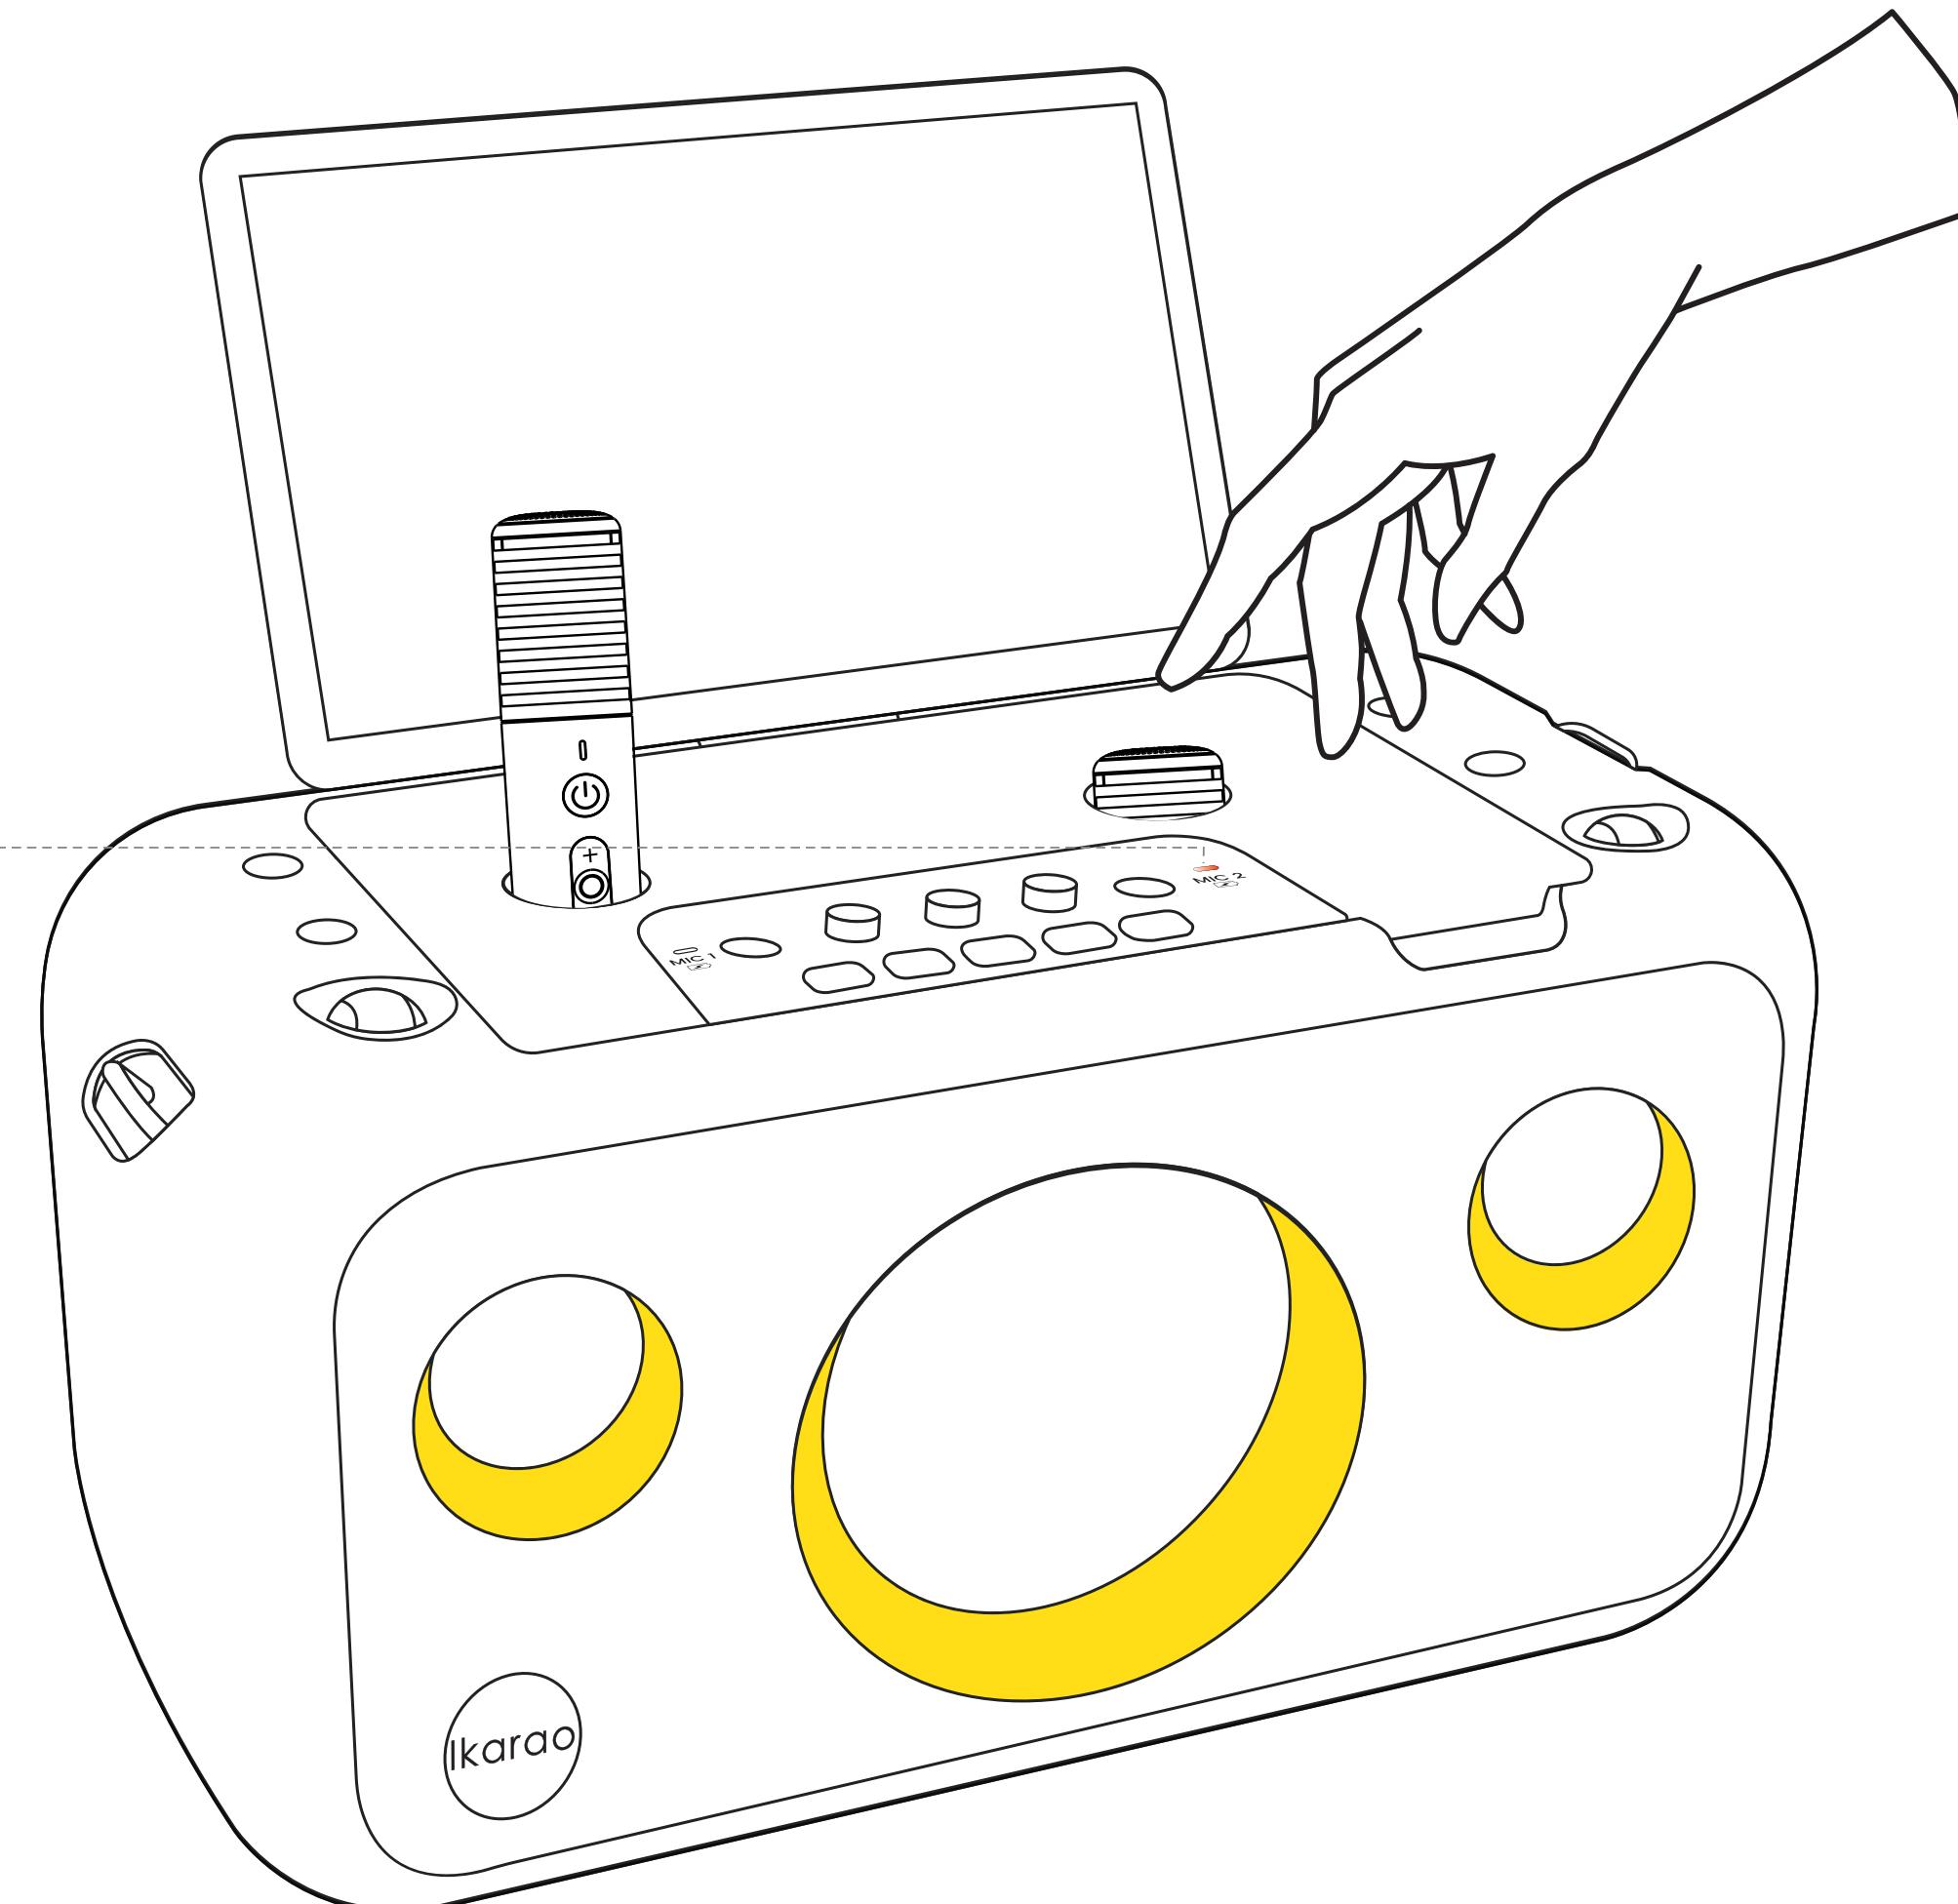


SOFTWARE UPDATE

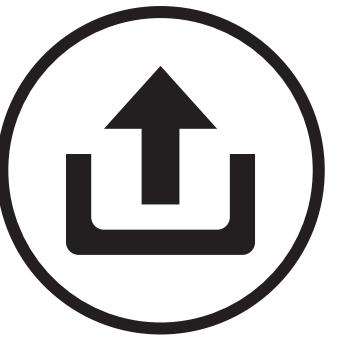

1 Click **Settings**

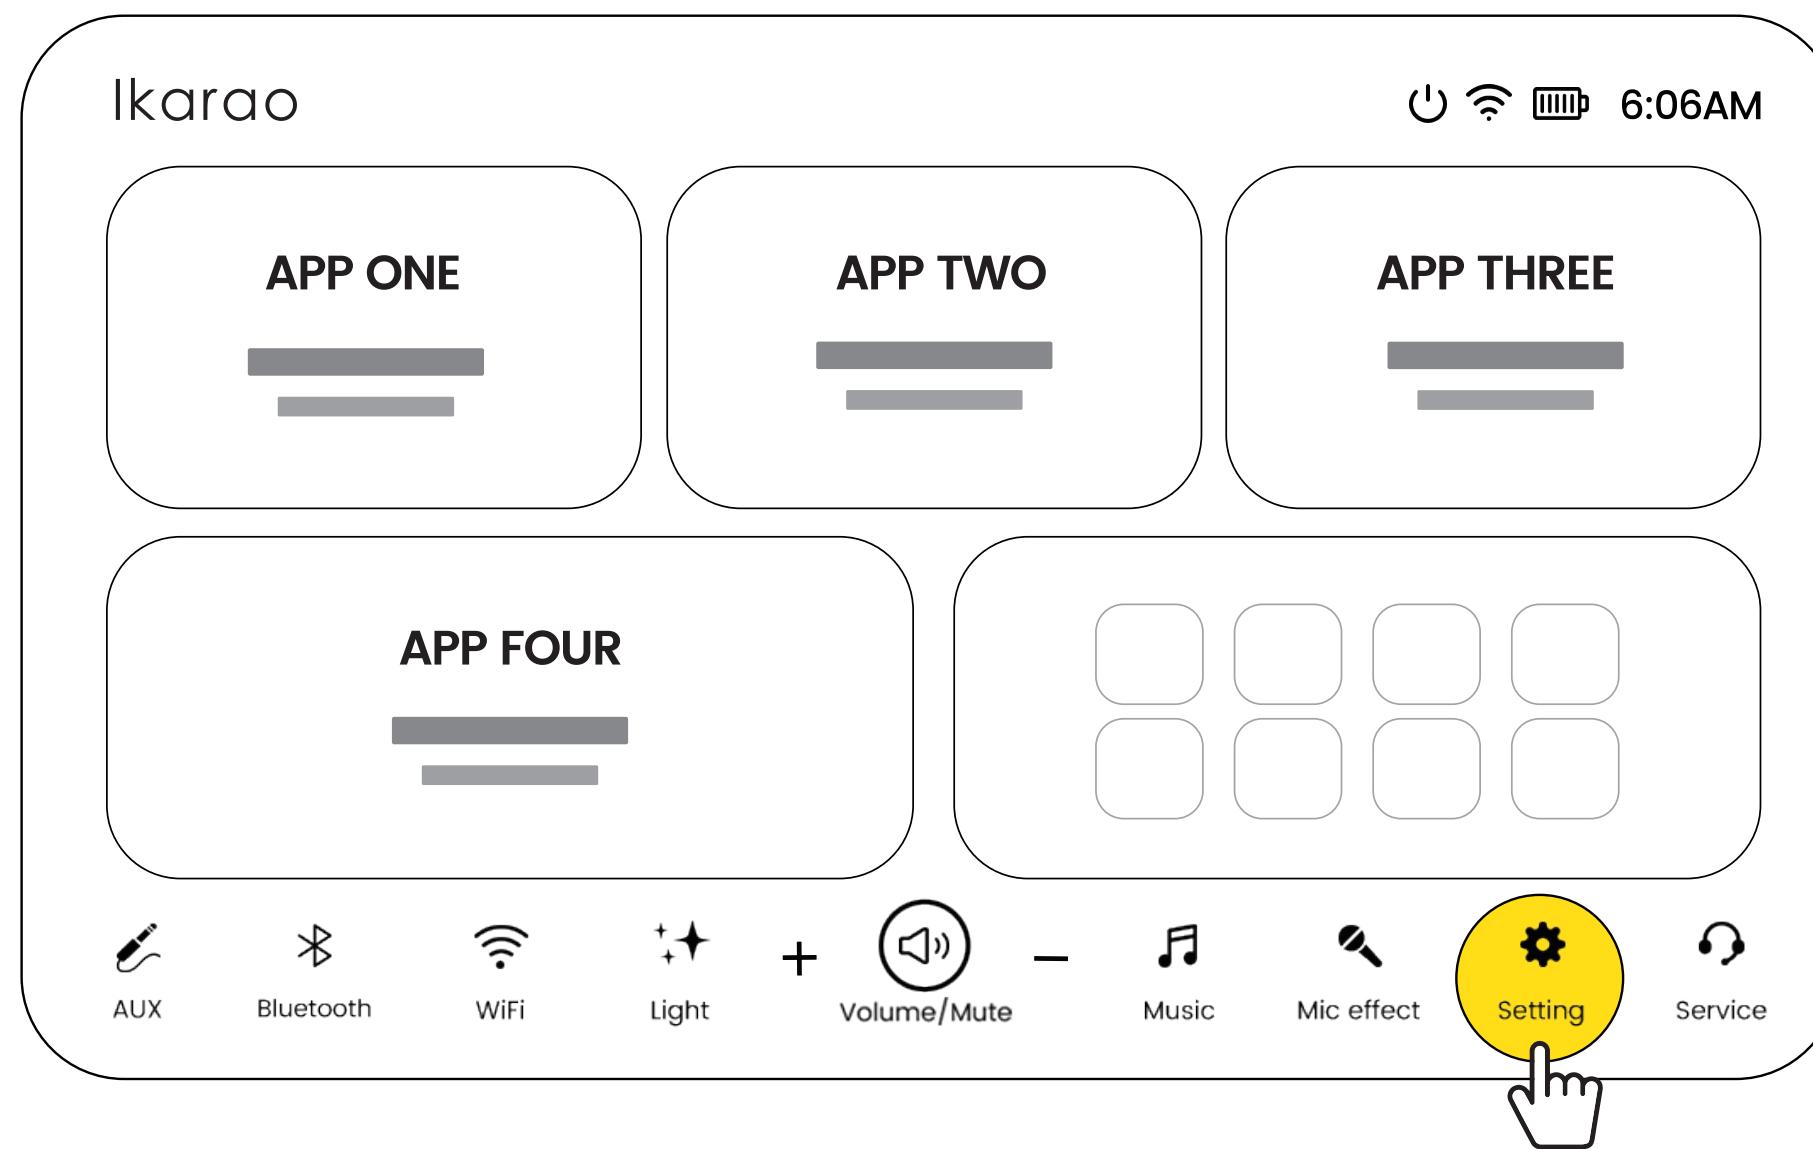

2 Click **Detect New Version** on **About**

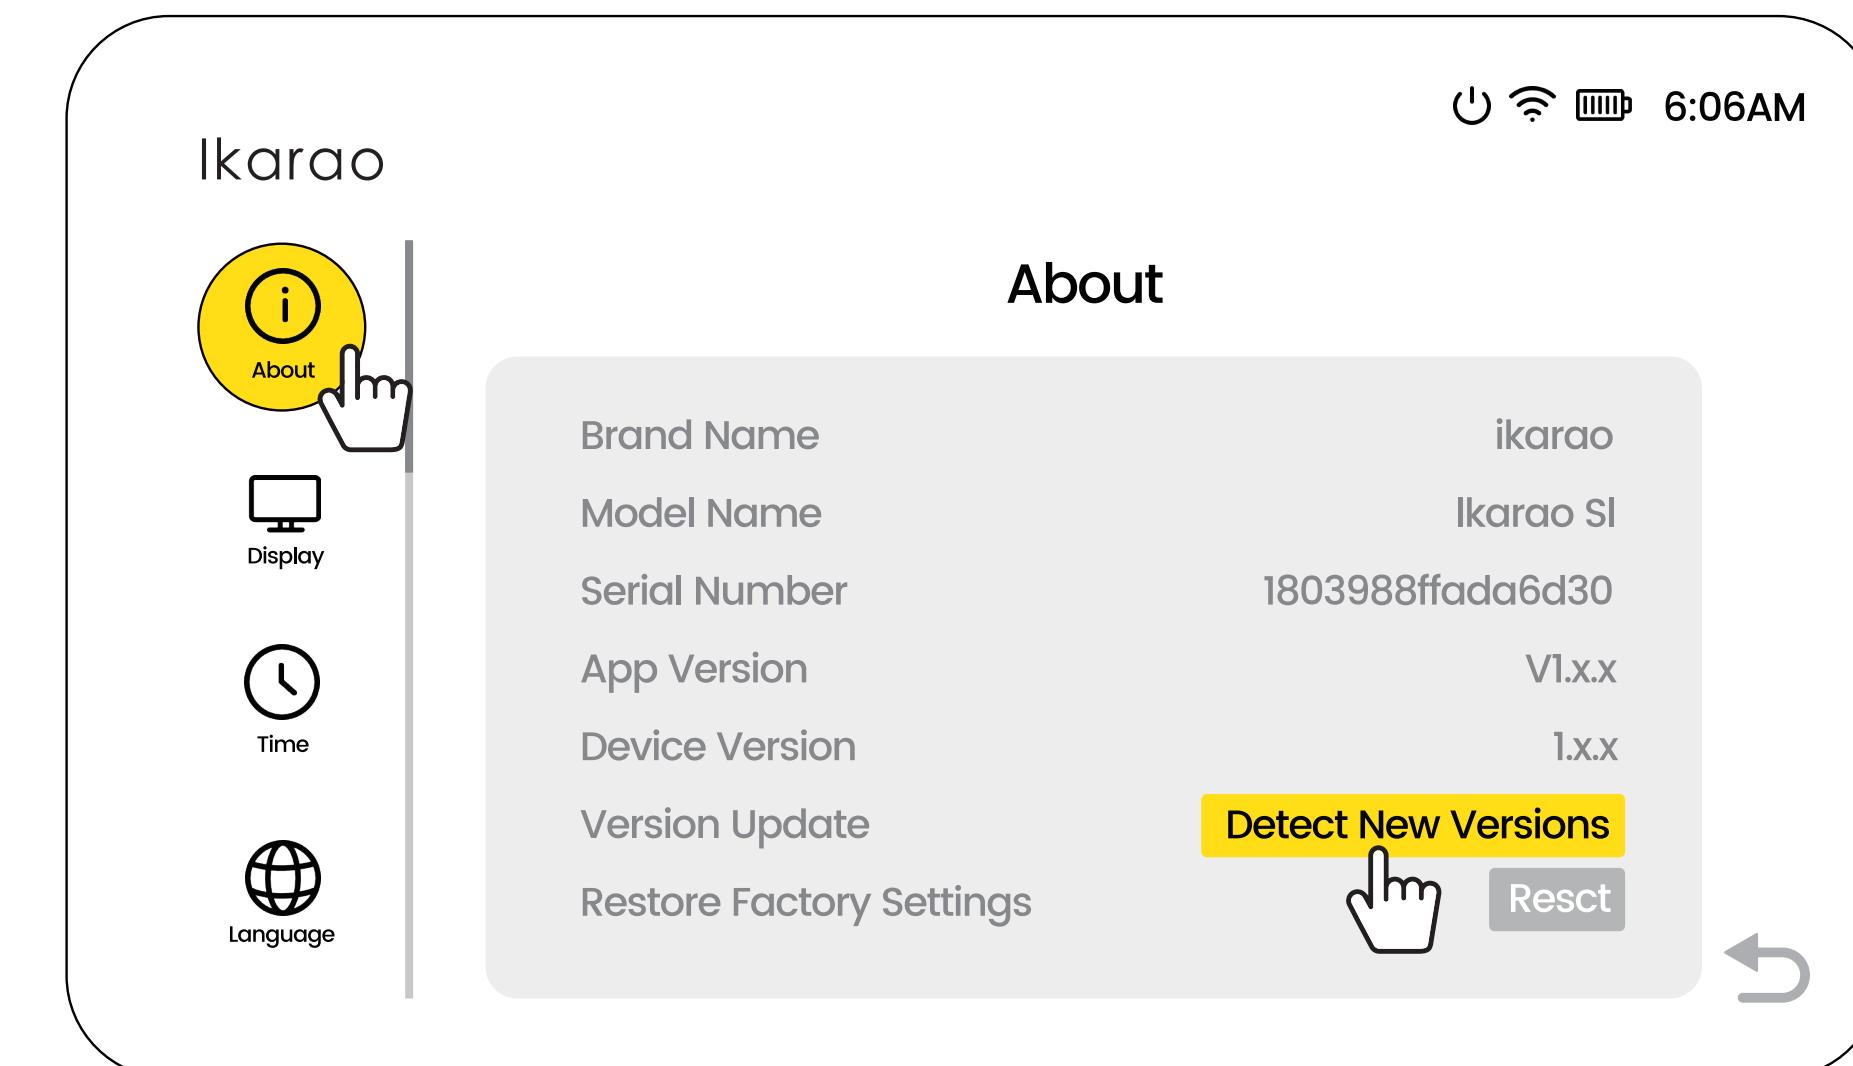


NOTE: Ensure speaker power is above 50% or plugged in.


CUSTOMER SERVICE




1 Click **Service**

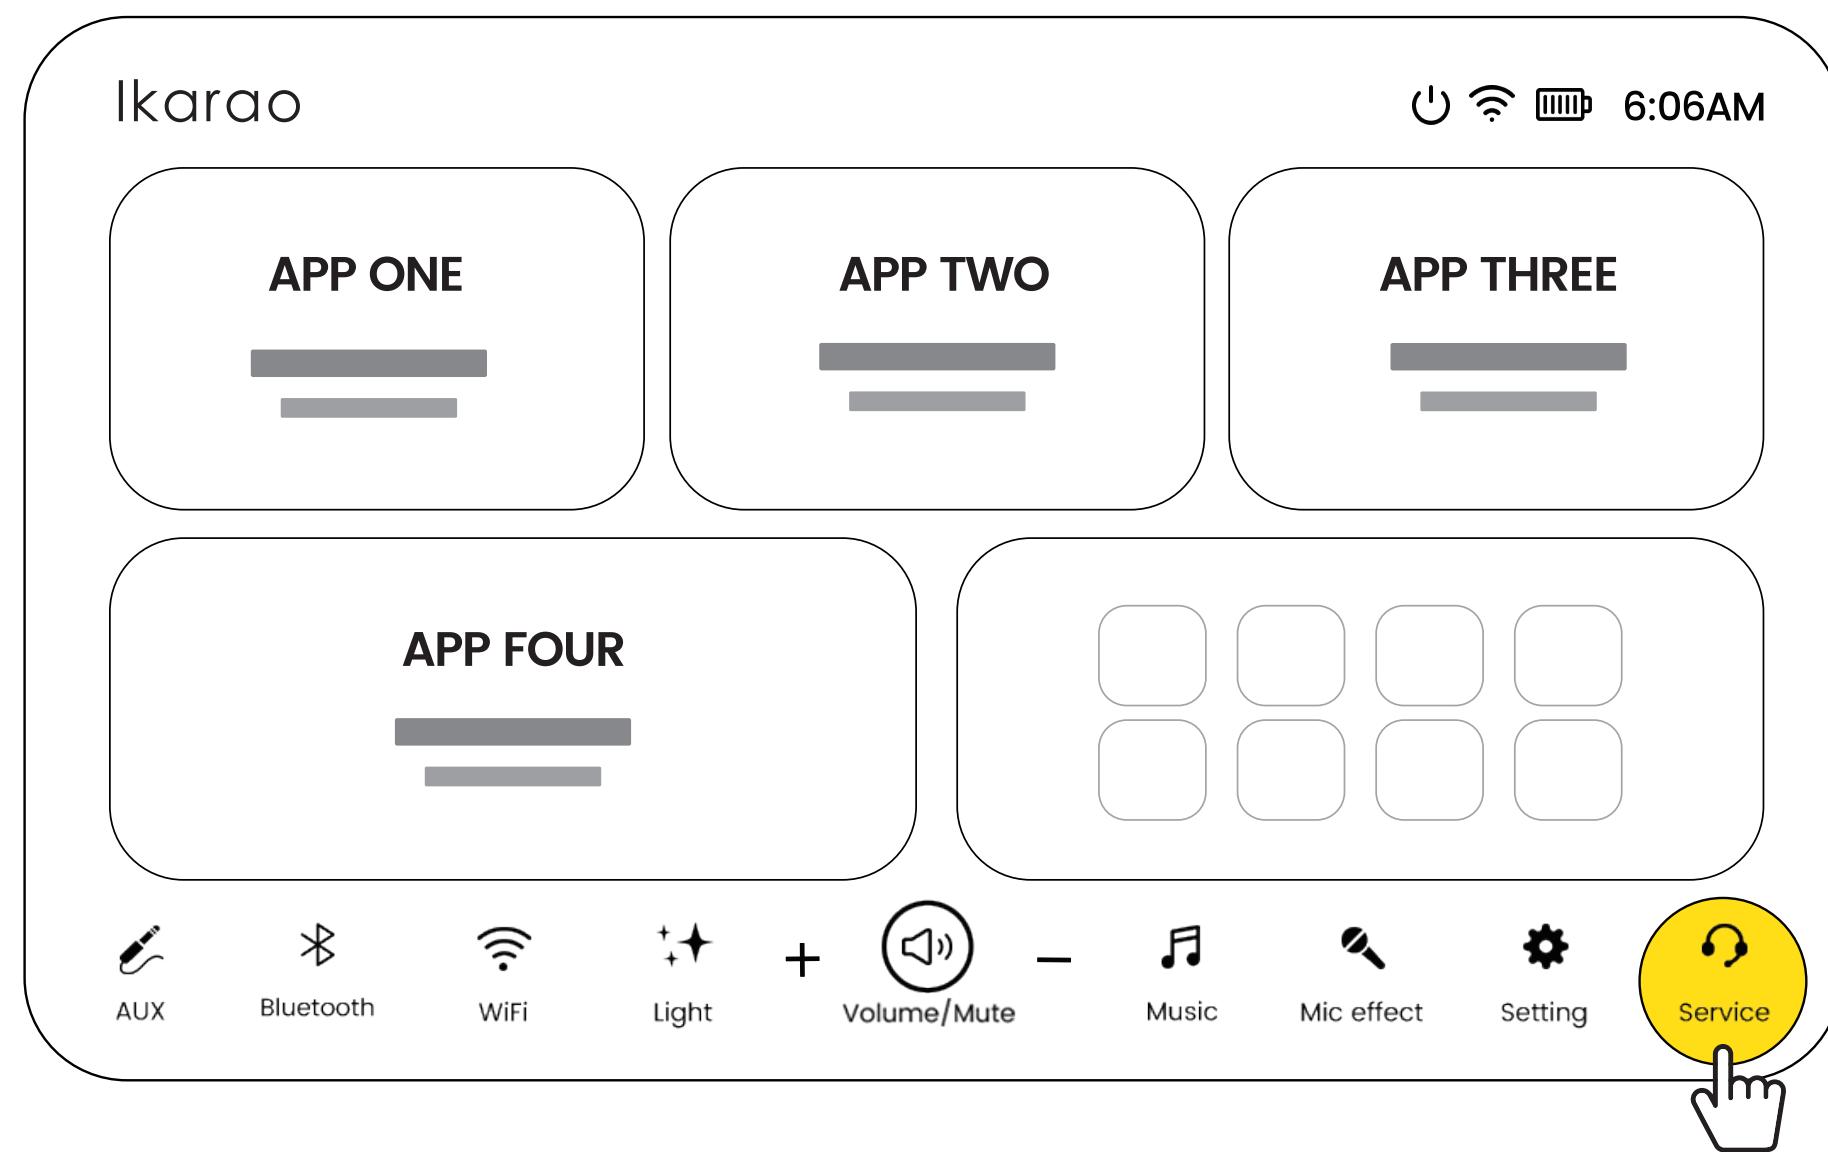


2 Fill in your information

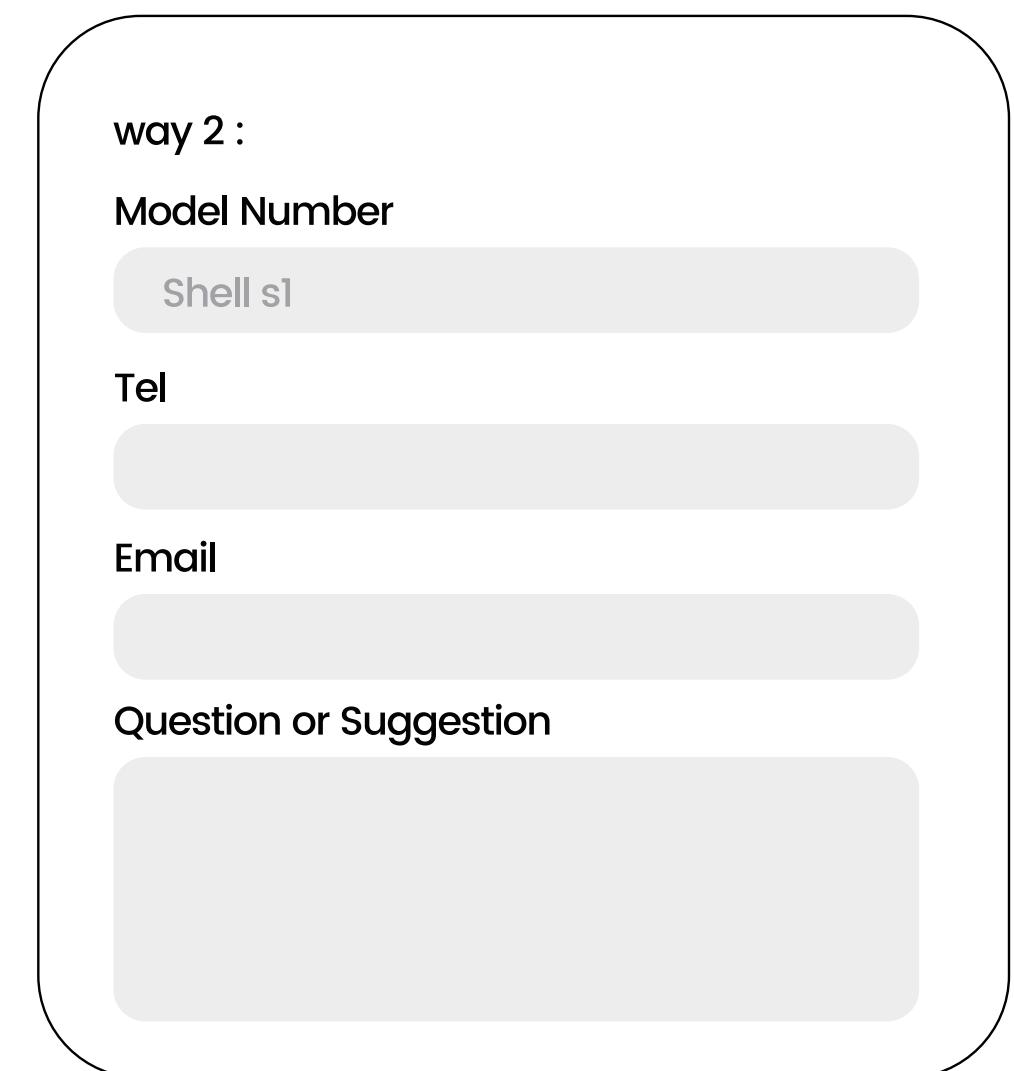

USE CARRYING STRAP




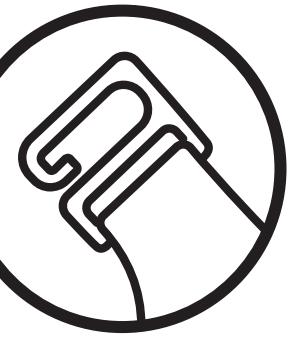


1 Take out Carrying Strap

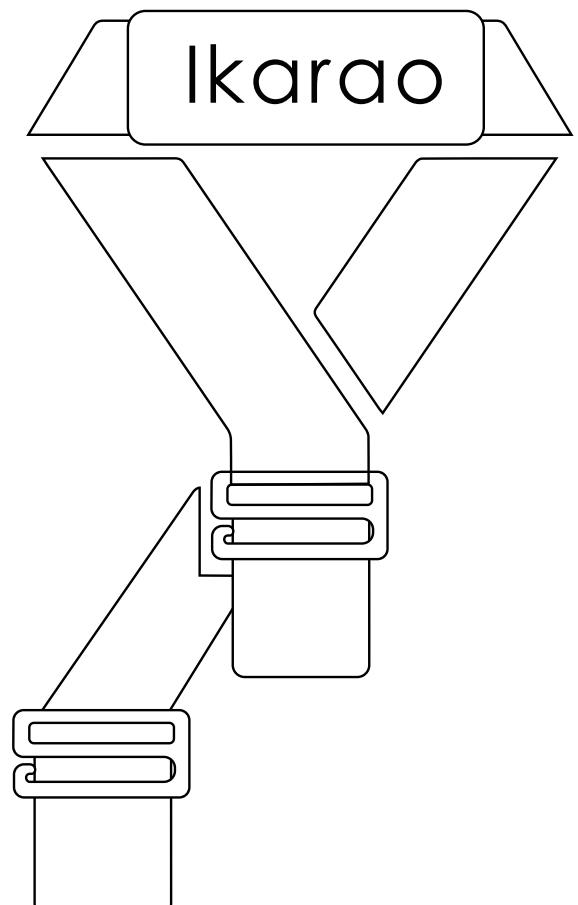


Carrying Strap

2 Buckle up Carrying Strap

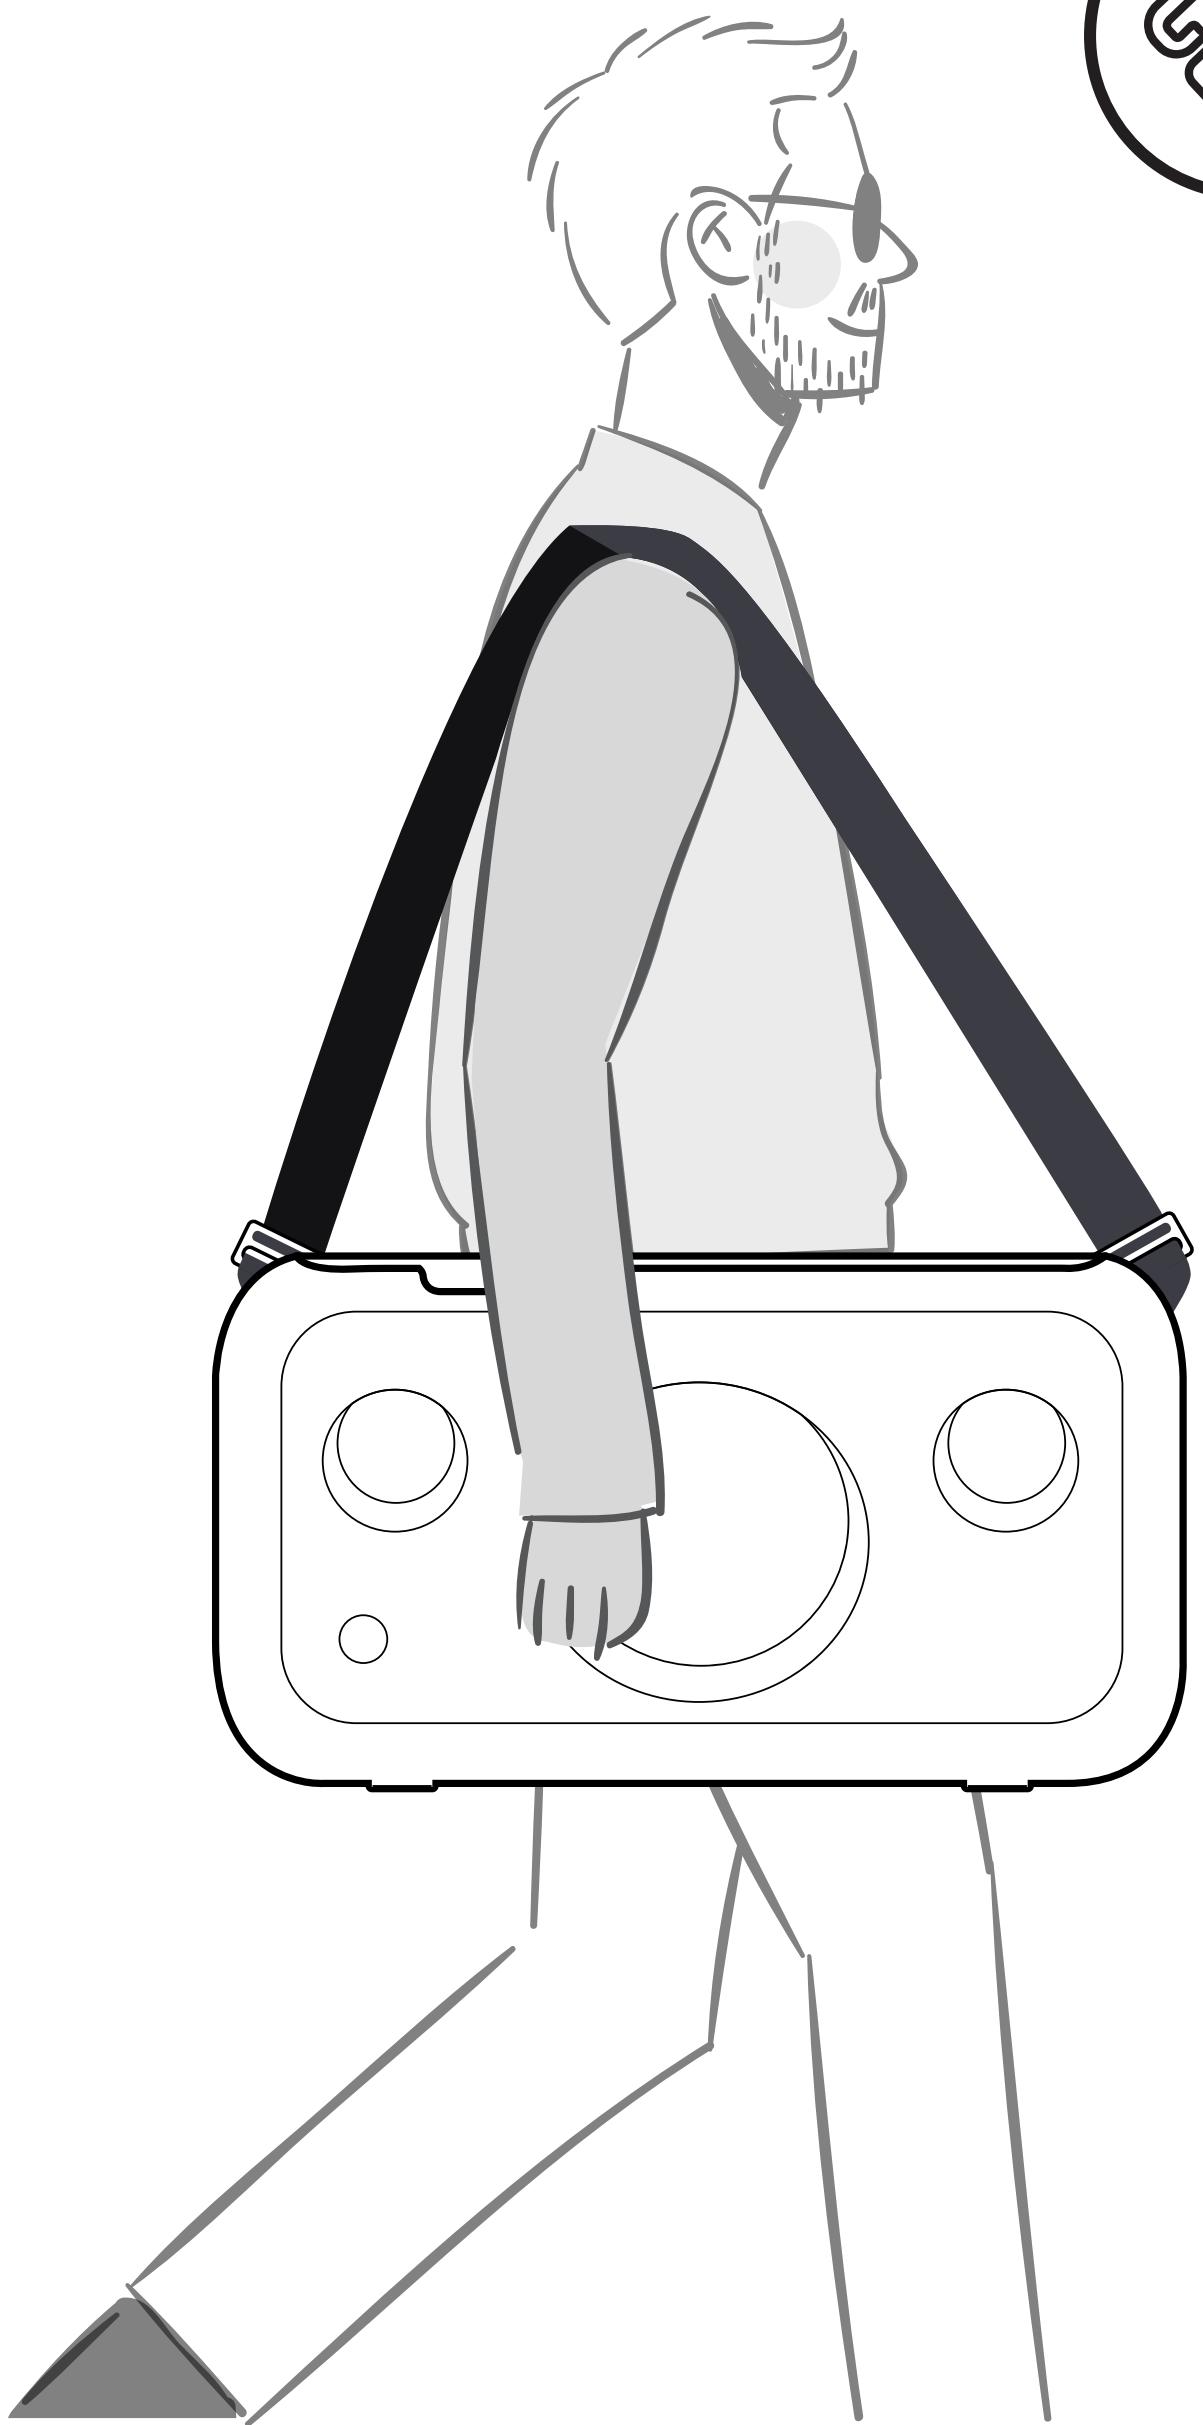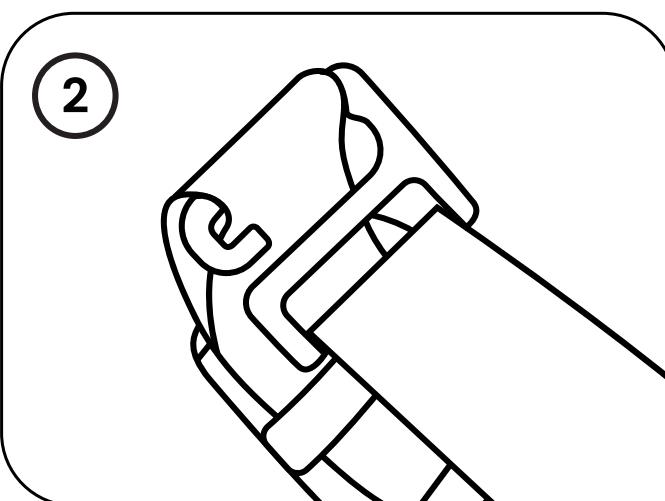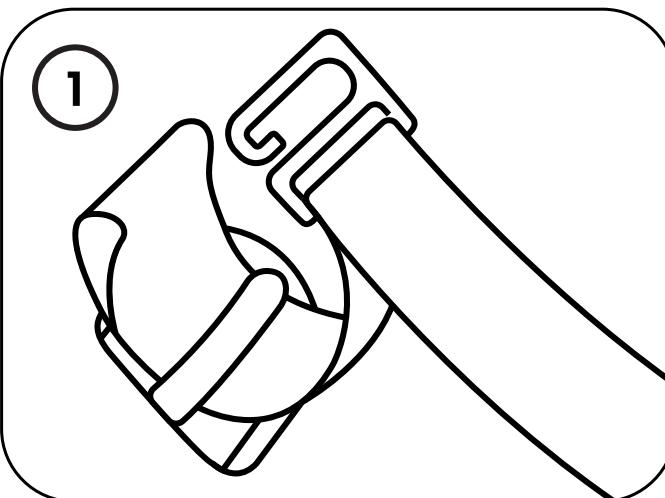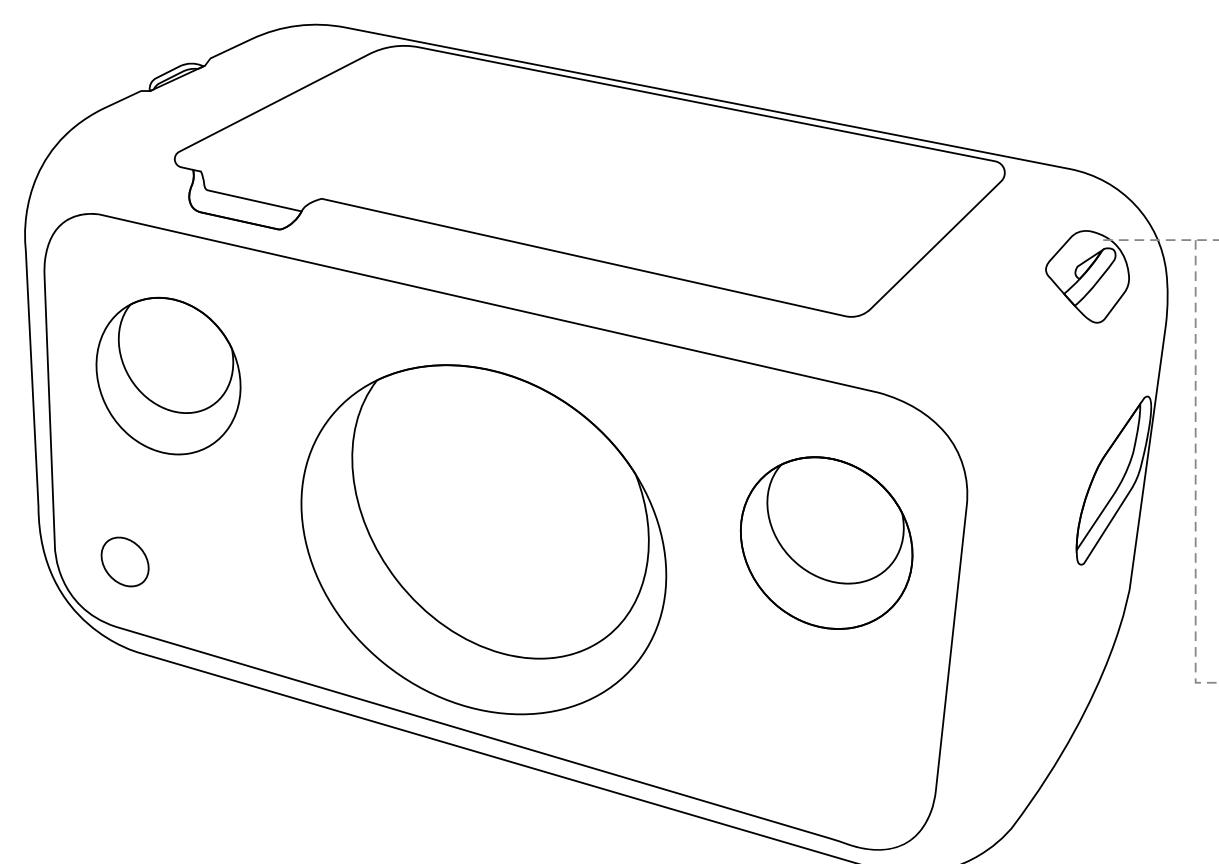


NOTE: Please fasten the strap to ensure your speaker can be carried safely.


USE SPEAKER TRIPOD STAND

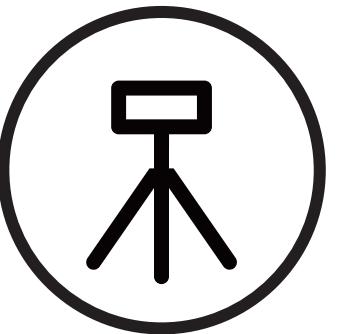

- 1 Extend the speaker stand and find the 35mm mount hole on the bottom of the Break X1

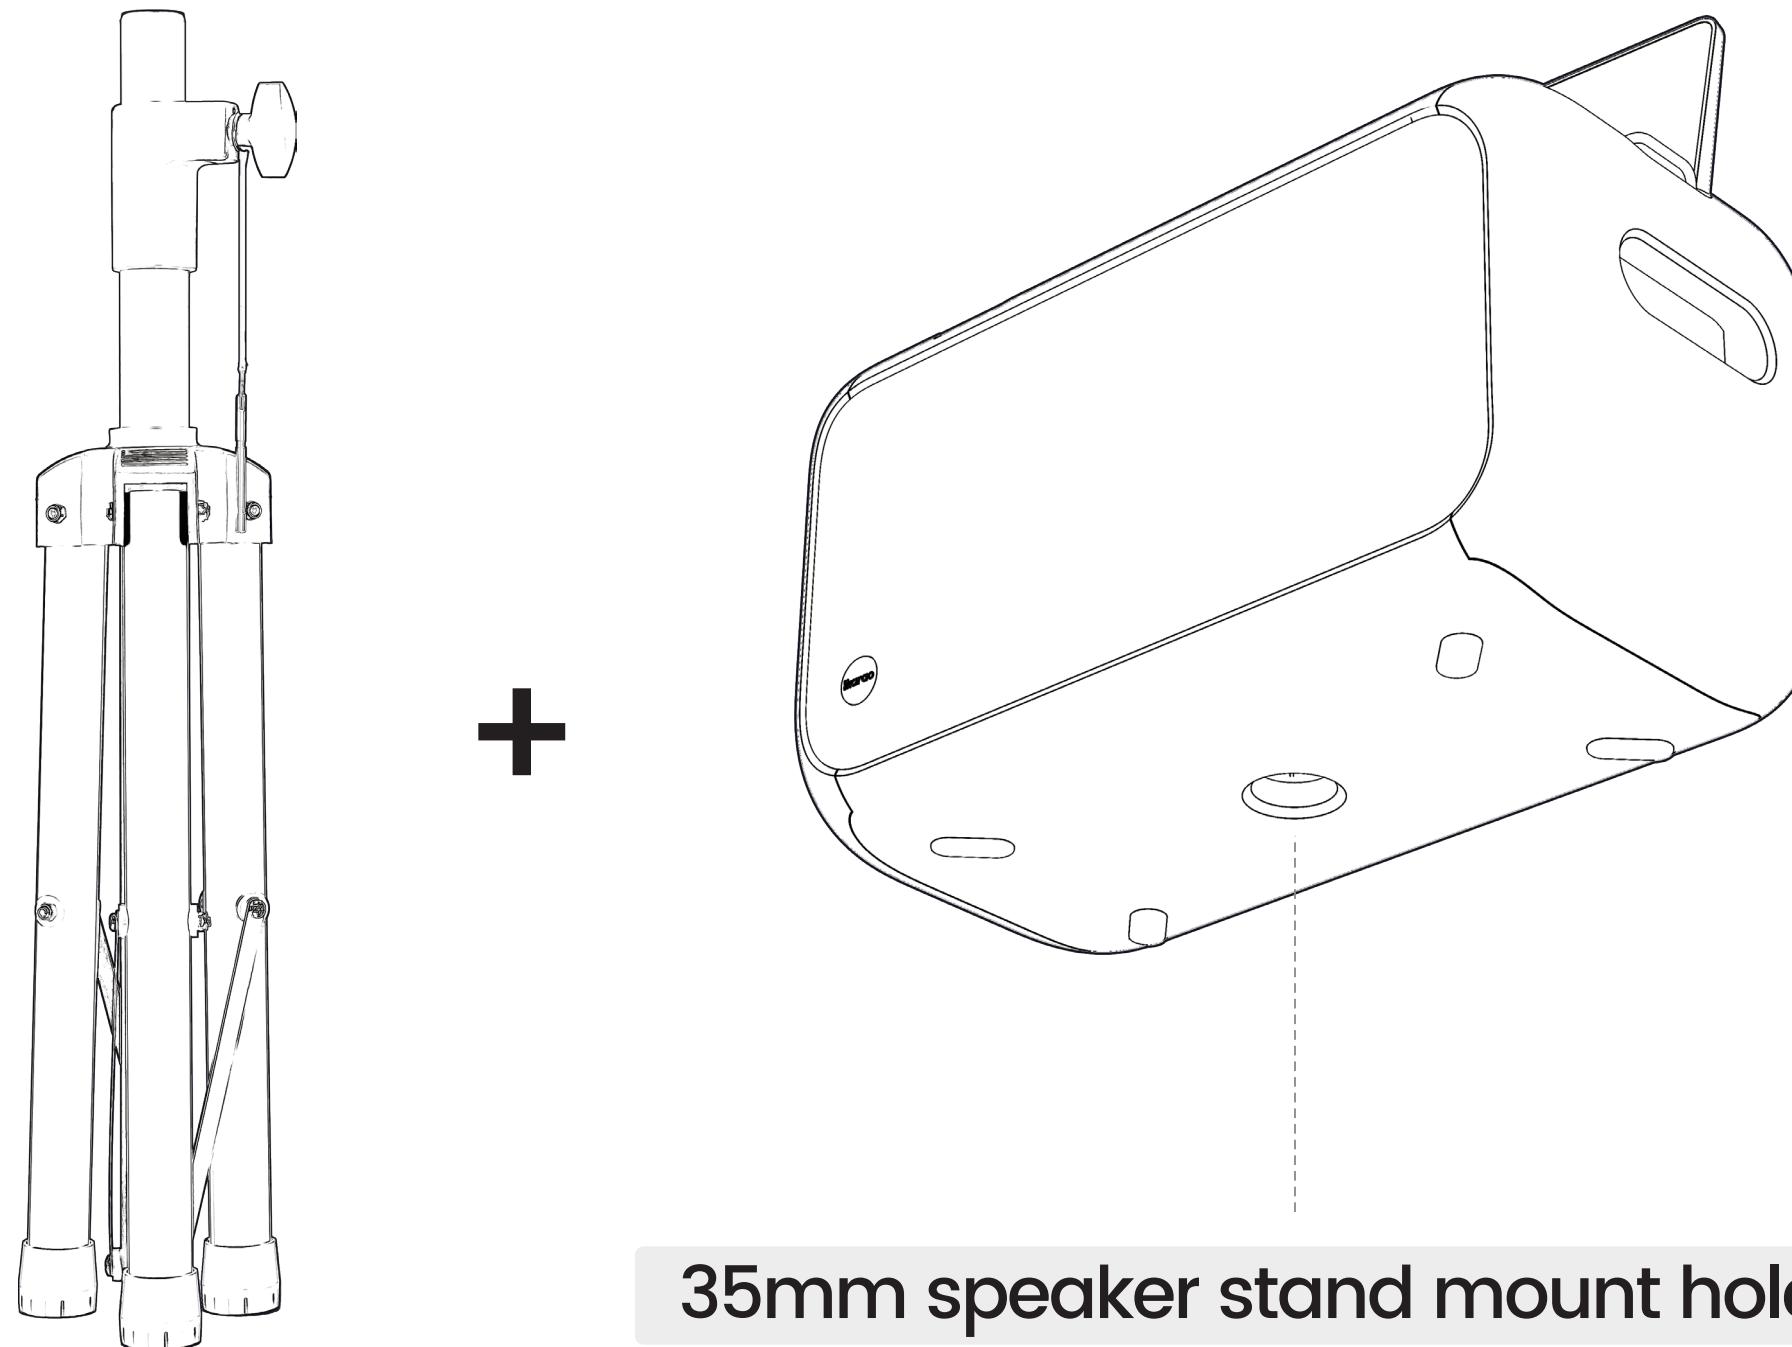

- 2 Place the speaker securely on the stand. For safety, it is recommended to have two people.

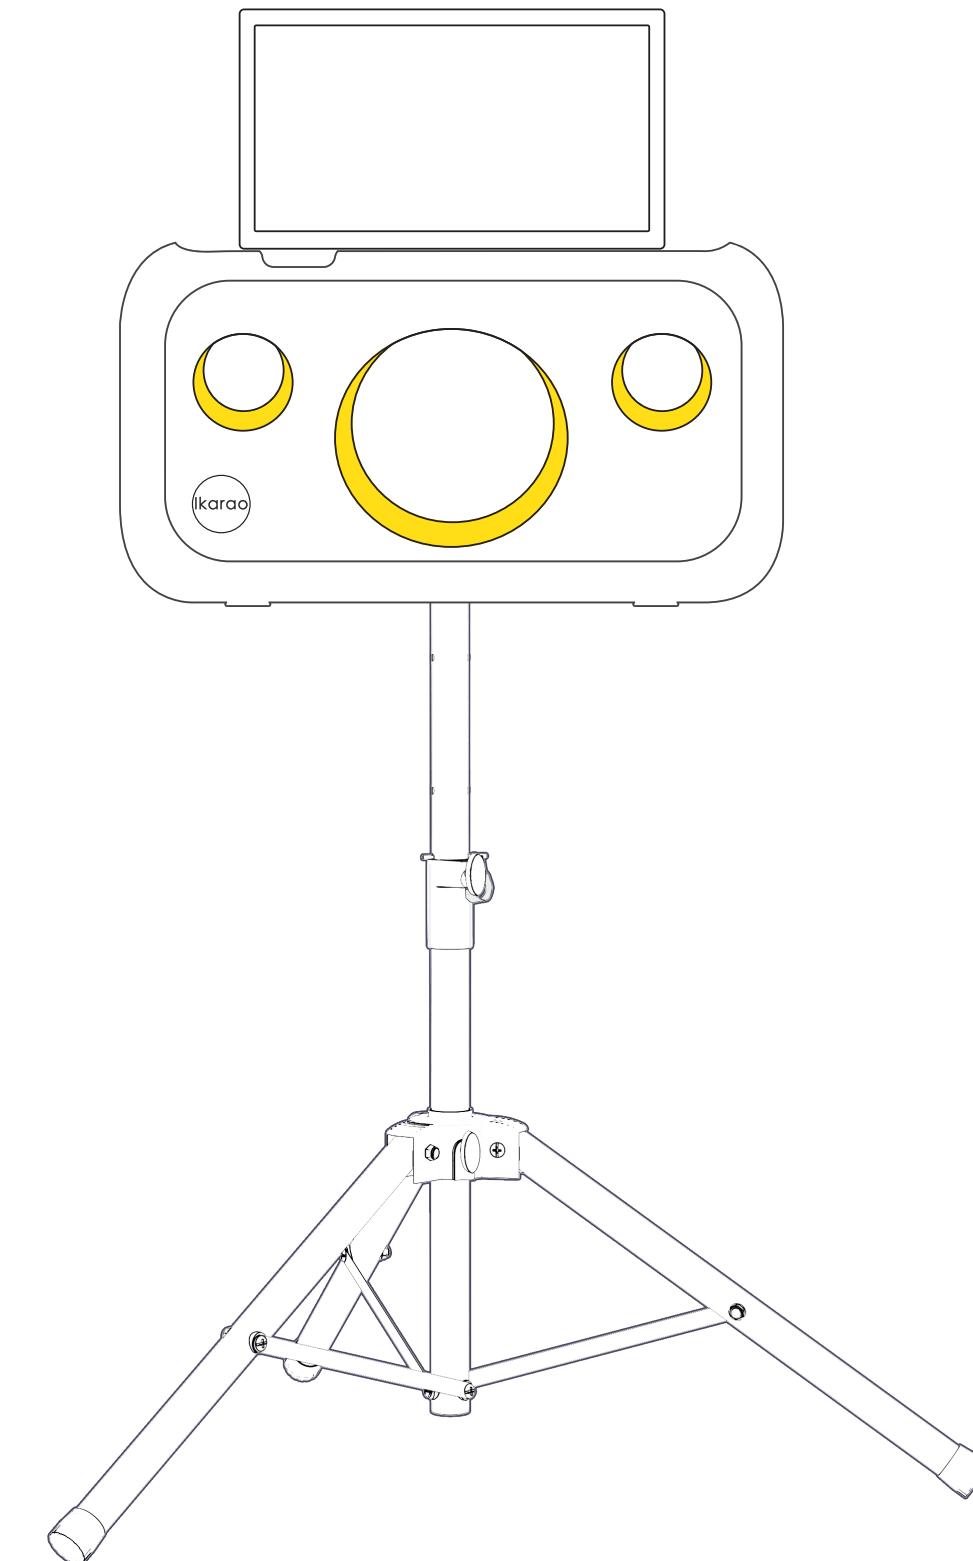

NOTE: The Speaker Tripod Stand requires a separate purchase.