


shell si

ikarao®

QUICK START GUIDE

 
WHAT'S IN THE BOX

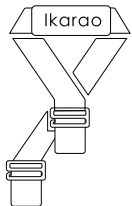

CARRYING STRAP



SHELL S1




Shell M27




TYPE-C CABLE


BUTTON

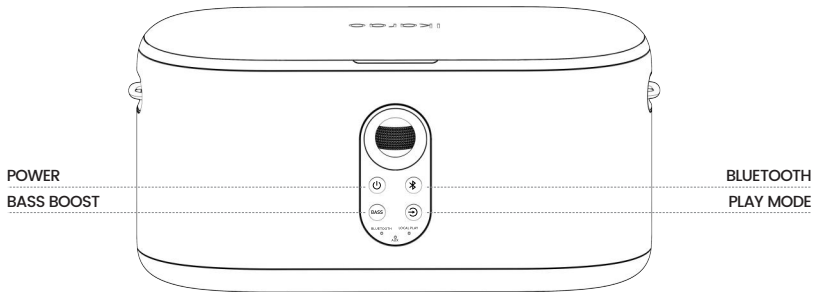

INTERFACES

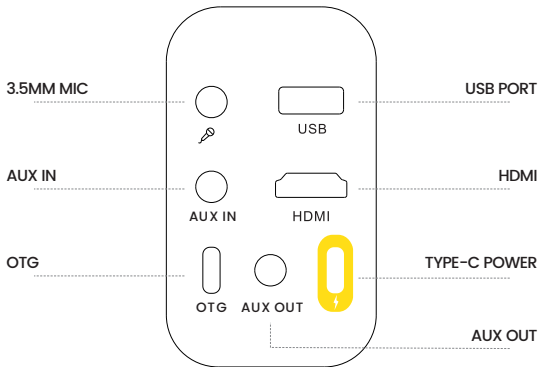

HOMEPAGE

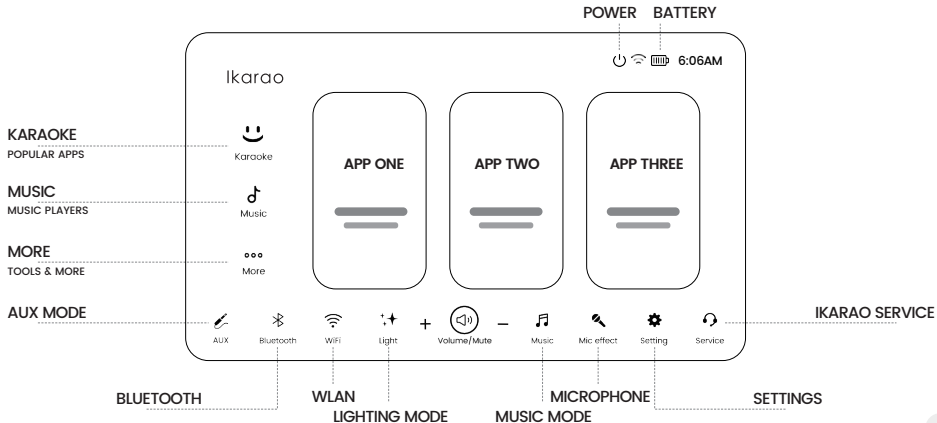

LIGHTING EFFECT



Power/Volume Indicator:



POWERING ON

*WHITE LIGHT SPINS ONCE PER SECOND.



VOLUME+/-

*VOLUME INCREASES, LIGHT INTENSIFIES

Charging Indicator:



LOW BATTERY

*SLOW FLASHING



CHARGING

*BREATHING



FULLY CHARGED

*OFF

Bluetooth/Playback Indicator:



PAIRING

*FAST FLASHING




CONNECTED

*BLUE LIGHT ON FOR 3S THEN REVERTS.




PLAYING MUSIC

*LIGHT/ROMANTIC/DYNAMIC EFFECT

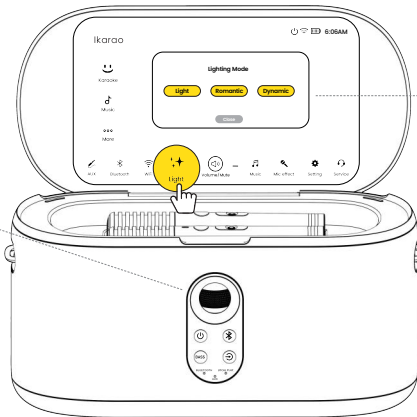

Select the preferred light


BLUETOOTH AUDIO

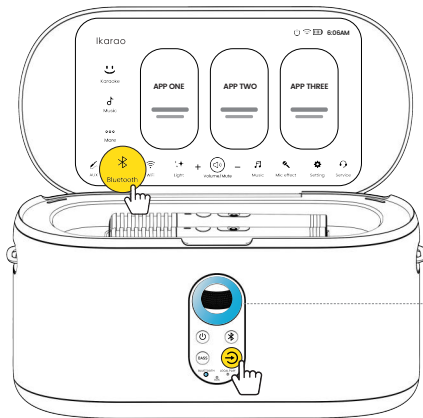


- 1 Press the **Bluetooth** button on the screen or press the playback mode button to switch into Bluetooth mode.

The lights will flash blue

- 2 Open the Bluetooth settings on your device and pair with 'IKARAO S1-XXXX'

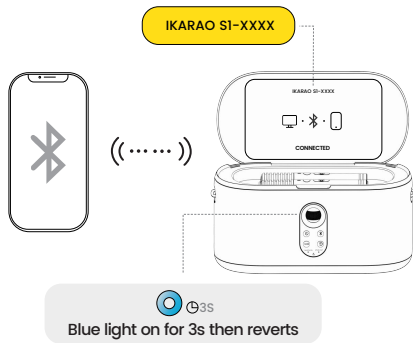


- 3 Press the Bluetooth button to disconnect

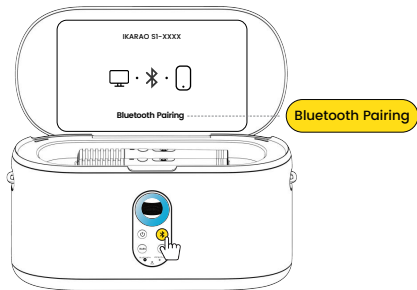


LOCAL AUDIO



- 1 Insert a USB with audio/video files

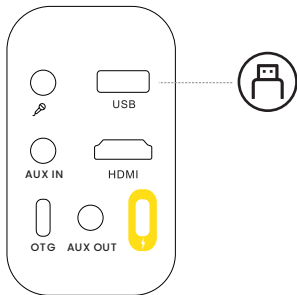


- 2 Click **Yes** on the screen prompt to enter the local media player

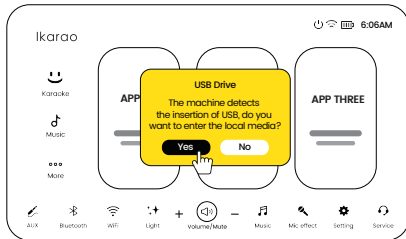

3

If you accidentally click **NO**,
re-enter the local media player by selecting
MUSIC → **LOCAL MEDIA** from the left sidebar.

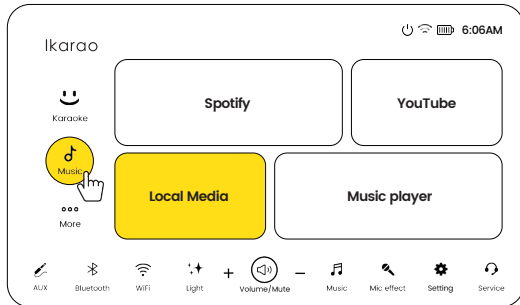


NOTE: Local Media Player auto-loads .LRC lyrics from the same directory as audio files.


HDMI



1 Connect using HDMI cable

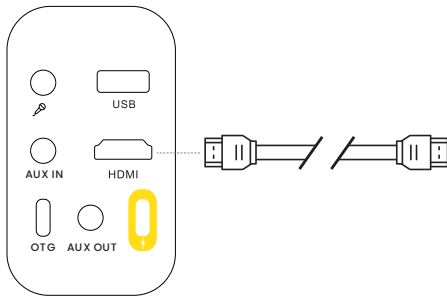

2 Select the HDMI input source to confirm connection

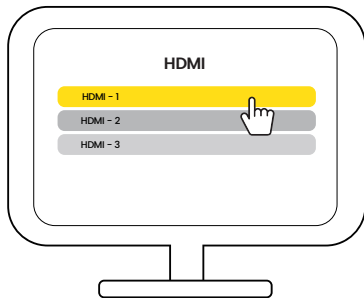

For FAQs and more information, please visit

WWW.IKARAO.COM/PAGES/SUPPORT



@ikaraoofficial



@IKARAO



@IKARAO



@IKARAO




@ikaraoofficial


WI-FI AUDIO




1 Click **Settings**

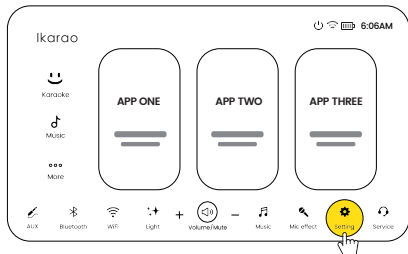

2 Connect Your Wlan

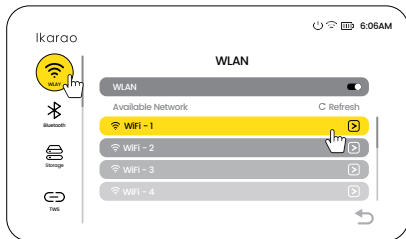


- 3 Log in to **Spotify** for music, **KaraFun** for karaoke or **YouTube** for music and video.

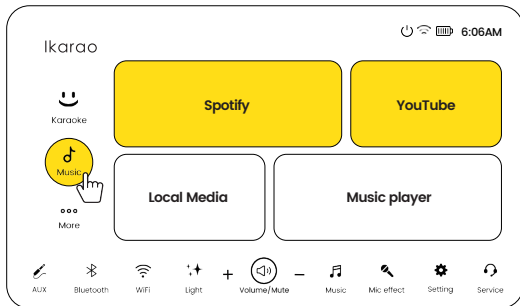

MICROPHONES




- 1 Hold the power button for 2 seconds to turn on

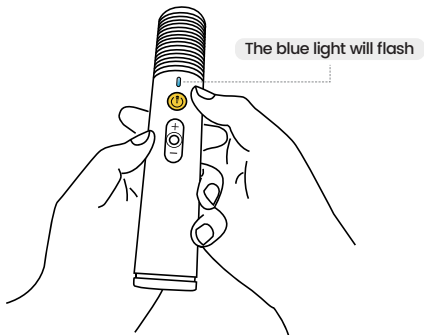

- 2 The mic auto-pairs with the speaker



- 3 Use buttons to switch effects, adjust volume, and play/pause.

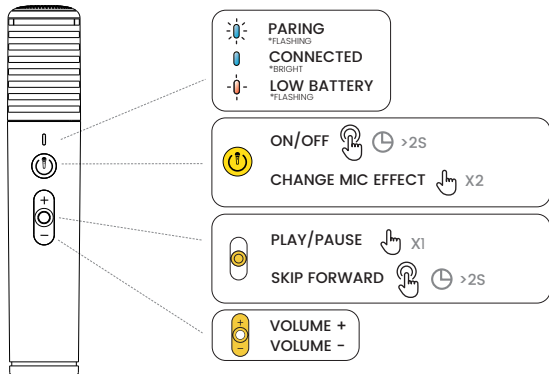

NOTE: Don't point the mic at the speaker to avoid interference.

SPEAKER CHARGING



- 1 Charge speaker with Type-C cable



Type-C

2



LOW BATTERY

*SLOW FLASHING




CHARGING

*BREATHING



FULLY CHARGED

*OFF

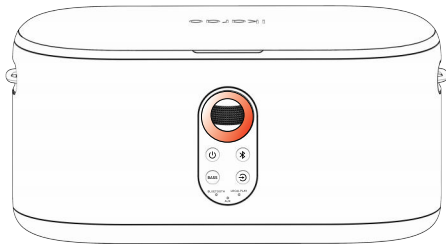

NOTE: Cable included, no adapter. Use a 22W+ adapter for fast 3-hour charging.


MICROPHONES CHARGING



Place mics in magnetic charging slot

NOTE:


1. Microphone has a 20-hour usage duration with a 5-hour full charge time.
2. The speaker stops charging the microphone in low power mode (around two battery bars).

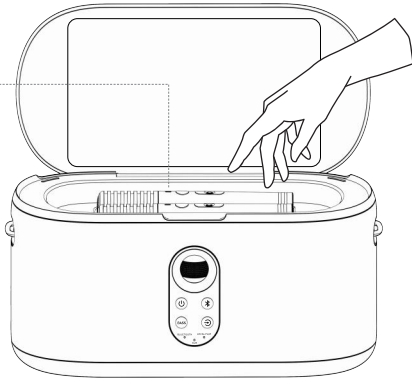


SOFTWARE UPDATE



1 Click **Settings**

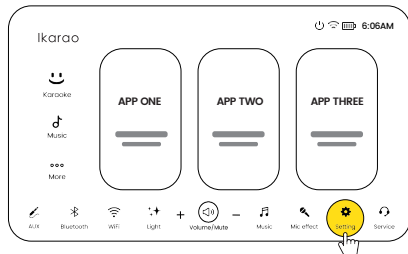


2 Click **Detect New Version** on **About**

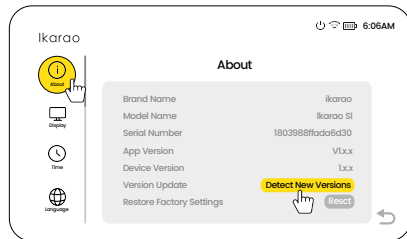

NOTE: Ensure speaker power is above 50% or plugged in.

USER MANUAL

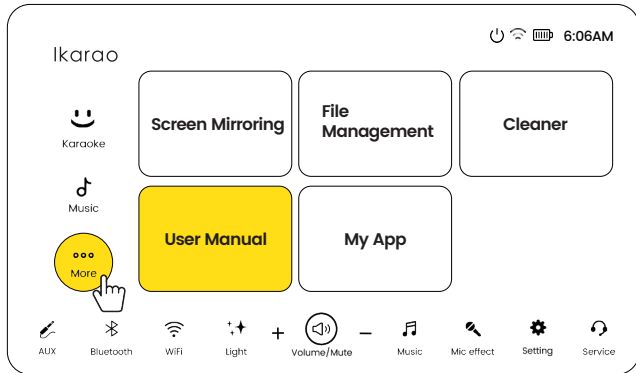


More → **User Manual**

See User Manual for details.

CUSTOMER SERVICE



1 Click **Service**

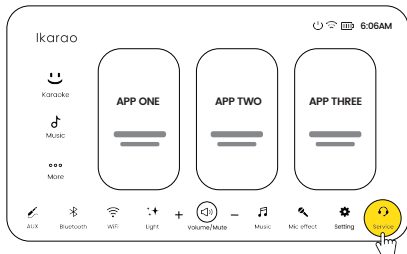

2 Fill in your information

Ikarao Service

If you have any suggestions of this product kindly leave your precious advice here, and your feedback will encourage us improve our product preferably.

way 1:



way 2:

Model Number

Tel


Email

Question or Suggestion

USE CARRYING STRAP




1 Take out Carrying Strap

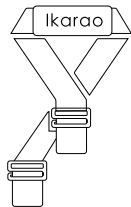

Carrying Strap

2 Buckle up Carrying Strap

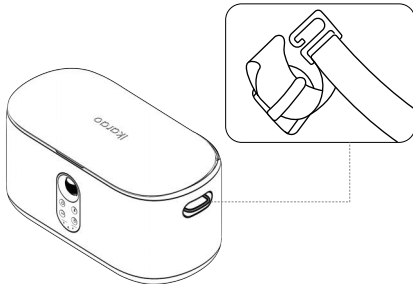

RU

- 1 Сохраните этот мануал для последующего использования.
- 2 Не блокируйте вентиляционные отверстия или любые отверстия.
- 3 Избегайте длительного близкого прослушивания на высокой громкости.
- 4 Внутренний аккумулятор не может быть заменен пользователем.
- 5 Полностью заряжайте устройство хотя бы каждые три месяца для оптимальной производительности и срока службы аккумулятора.



DE

- 1 Behalten Sie dieses Handbuch für zukünftige Referenzen.
- 2 Blockieren Sie keine Belüftungsöffnungen oder Öffnungen.
- 3 Vermeiden Sie langes, lautes und lautes Zuhören.
- 4 Der interne Akku kann vom Benutzer nicht ausgetauscht werden.
- 5 Laden Sie das Gerät mindestens alle drei Monate vollständig auf, um optimale Leistung und Akkulaufzeit zu gewährleisten.

ES

- 1 Guarde este manual para consultas futuras.
- 2 No bloquee ninguna ventilación ni abertura.
- 3 Evite escuchar de forma prolongada y a alto volumen.
- 4 La batería interna no puede ser reemplazada por el usuario.
- 5 Cargue completamente el dispositivo al menos cada tres meses para un rendimiento óptimo y una mayor vida útil de la batería.

IT

- 1 Conserva questo manuale per riferimenti futuri.
- 2 Non ostruire alcuna griglia di ventilazione o apertura.
- 3 Evita l'ascolto prolungato a volume elevato e ravvicinato.
- 4 La batteria interna non può essere sostituita dall'utente.
- 5 Ricarica completamente il dispositivo almeno ogni tre mesi per prestazioni ottimali e una maggiore durata della batteria.

AE

- احتفظ بهذا الدليل للرجوع إليه في المستقبل.
لا تسد أي فتحات أو منافذ.
تجنب الاستماع المكثف وعالي الصوت لفترات طويلة.
لا يمكن للمستخدم استبدال البطارية الداخلية.
الشحن الجيد بالكامل على الأقل كل ثلاثة أشهر للحصول على أداء مثالي وعمر بطارية أطول.

FR

- 1 Gardez ce manuel pour référence ultérieure.
- 2 Ne bloquez aucun conduit ou ouverture.
- 3 Évitez une écoute prolongée à volume élevé et à proximité.
- 4 La batterie interne ne peut pas être remplacée par l'utilisateur.
- 5 Chargez complètement l'appareil au moins tous les trois mois pour des performances optimales et une durée de vie de la batterie maximale.

NL

- 1 Bewaar deze handleiding voor toekomstige referentie.
- 2 Blokkeer geen ventilatieopeningen of openingen.
- 3 Vermijd langdurig dichtbij en luisteren op hoog volume.
- 4 De interne batterij kan niet door de gebruiker worden vervangen.
- 5 Laad het apparaat minstens elke drie maanden volledig op voor optimale prestaties en batterijduur.

ID

- 1 Simpan panduan ini untuk referensi di masa depan.
- 2 Jangan memblokir ventilasi atau lubang-lubang apa pun.
- 3 Hindari mendengarkan suara secara lama dan pada volume tinggi.
- 4 Baterai internal tidak dapat diganti oleh pengguna.
- 5 Isi daya perangkat sepenuhnya setidaknya setiap tiga bulan untuk kinerja optimal dan umur baterai yang lebih panjang.

VN

- 1 Lưu hướng dẫn này để tham khảo sau này.
- 2 Không chặn bất kỳ lỗ thông hơi hoặc mở hờ nào.
- 3 Tránh nghe lâu và ở âm lượng cao.
- 4 Pin bên trong không thể được thay thế bởi người dùng.
- 5 Sạc đầy thiết bị ít nhất mỗi ba tháng để có hiệu suất tối ưu và tuổi thọ pin.

ZH

- 1 请保存本手册以备将来参考。
- 2 请勿堵塞任何通风口或开口处。
- 3 避免长时间密闭高音量听音。
- 4 内部电池不可由用户更换。
- 5 请至少每三个月完全充电设备以获得最佳性能和电池寿命。

KR

- 1 이 설명서는 차후 참고용으로 보관하세요.
- 2 환기구나 통풍구를 막지 마십시오.
- 3 오랫동안 고음량으로 청취하지 마십시오.
- 4 내부 배터리는 사용자가 교체할 수 없습니다.
- 5 최적의 성능과 배터리 수명을 위해 세 달마다 장치를 완전히 충전하세요.

ZH-TW

- 1 請保留此手冊以供日後查閱。
- 2 請勿阻塞任何通風口或開口。
- 3 請避免長時間近距離和高音量聆聽。
- 4 內部電池不可由使用者更換。
- 5 每三個月至少充滿裝置，以獲得最佳性能和電池壽命。

JP

- 1 将来の参照のためにこのマニュアルを保管してください。
- 2 通気孔や開口部を塞がないでください。
- 3 長時間の密閉および高音量での使用は避けてください。
- 4 内部バッテリーはユーザーによって交換できません。
- 5 最適な性能とバッテリー寿命のために、最低でも3か月ごとにデバイスを完全充電してください。

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

•ISED Statement

- English: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

• - French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.