

# CB19

## Control Box For Hermit

24V DC  
For Residential User Manual



# Contents

|       |                                                |    |
|-------|------------------------------------------------|----|
| I.    | Installation                                   | 3  |
|       | 1. Control Box Installation.....               | 3  |
|       | 2. Wiring Connection .....                     | 3  |
| II.   | Motor Connection                               | 4  |
|       | a. Motor Only .....                            | 4  |
|       | b. Motor With Limit Switch + LED indicator ... | 4  |
|       | c. Motor With Hall Sensor .....                | 4  |
|       | 1. Wifi Device .....                           | 5  |
|       | 2. Back-up Batteries .....                     | 5  |
|       | 3. Accessories .....                           | 6  |
|       | a. Photocells .....                            | 6  |
| III.  | Get Started                                    | 7  |
|       | 1. Step 1: Remote Memorizing                   | 7  |
|       | a. Memorizing .....                            | 7  |
|       | b. Remote learning without Control board ...   | 8  |
|       | c. Deleting memory of single command .....     | 8  |
|       | d. Deleting all memory of all remotes .....    | 8  |
|       | 2. Step 2: System Learning                     | 9  |
| IV.   | Gate Operation Logic                           | 10 |
| V.    | Safety For Gate Operation                      | 10 |
| VI.   | LED Indication                                 | 10 |
|       | 1. LED Lighting .....                          | 10 |
|       | 2. Function of the LED display .....           | 10 |
| VII.  | Parameter Modification                         | 11 |
|       | 1. Parameter Learning .....                    | 11 |
|       | 2. Parameter .....                             | 11 |
|       | 3. Photocell Logic .....                       | 13 |
| VIII. | Trouble Shooting                               | 14 |
| IX.   | Trouble Shooting                               | 15 |
| X.    | FCC Warning                                    | 16 |

# I. Installation

## 1. Control Box Installation

1. Decide the installation position of control box first, it is suggested to be installed near the gate and should be protected from possible damage. Be aware of the motor cable length before deciding the installation position.
2. Remove the cover by unscrewing the four screws on the cover. See Figure A.
3. Use a screwdriver to puncture the holes beneath the bottom of the control box. See Figure B.
4. Secure it on the wall Figure C.

Figure A

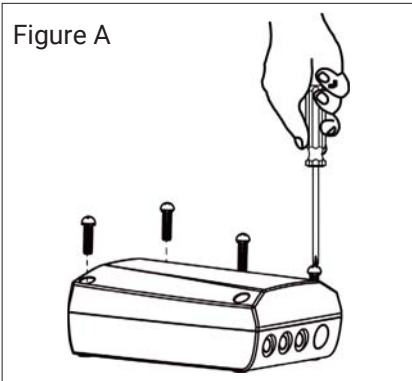


Figure B



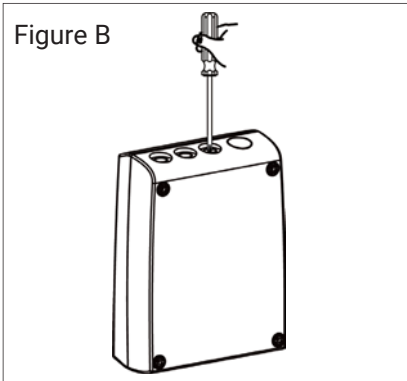


Figure C

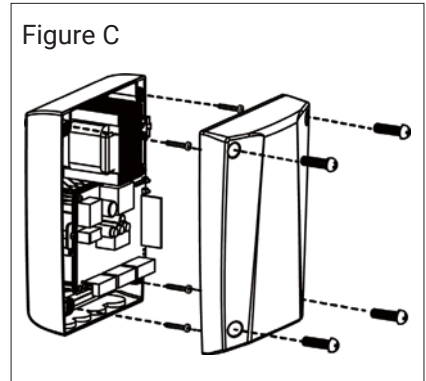

## 2. Wiring Connection

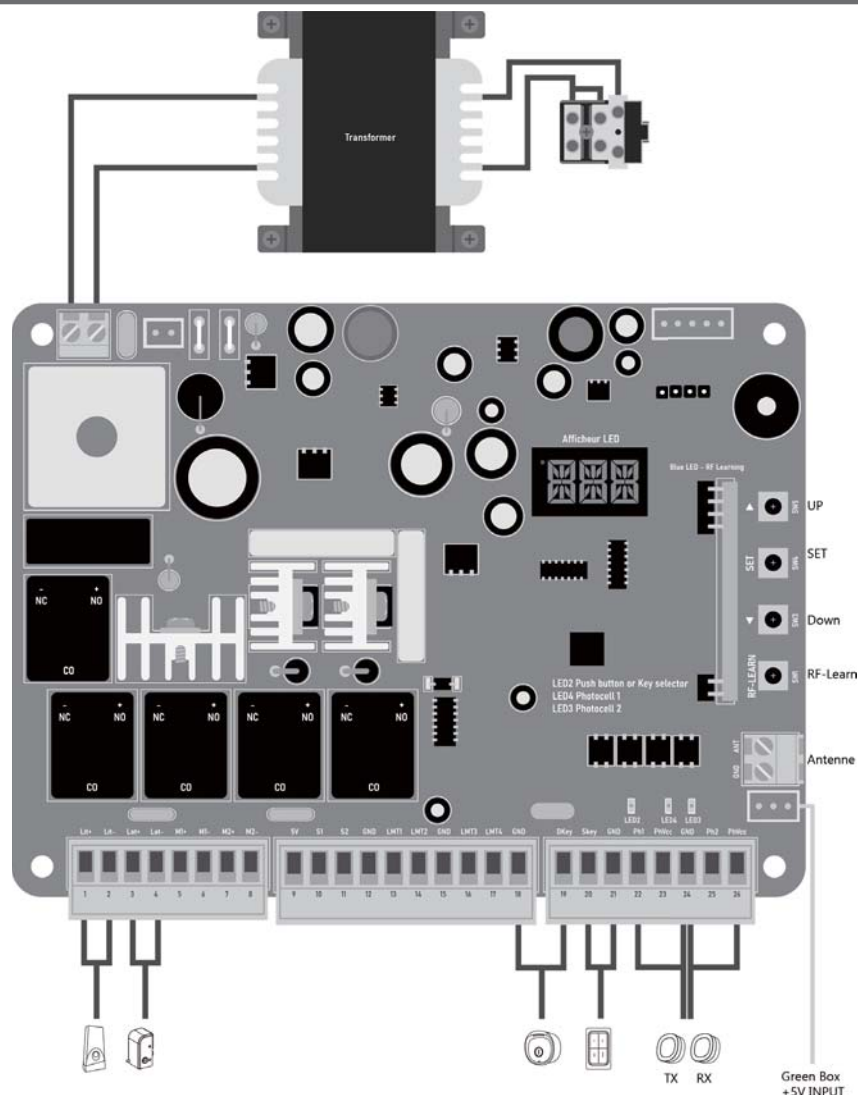

# II. Motor Connection

## a. Motor Only

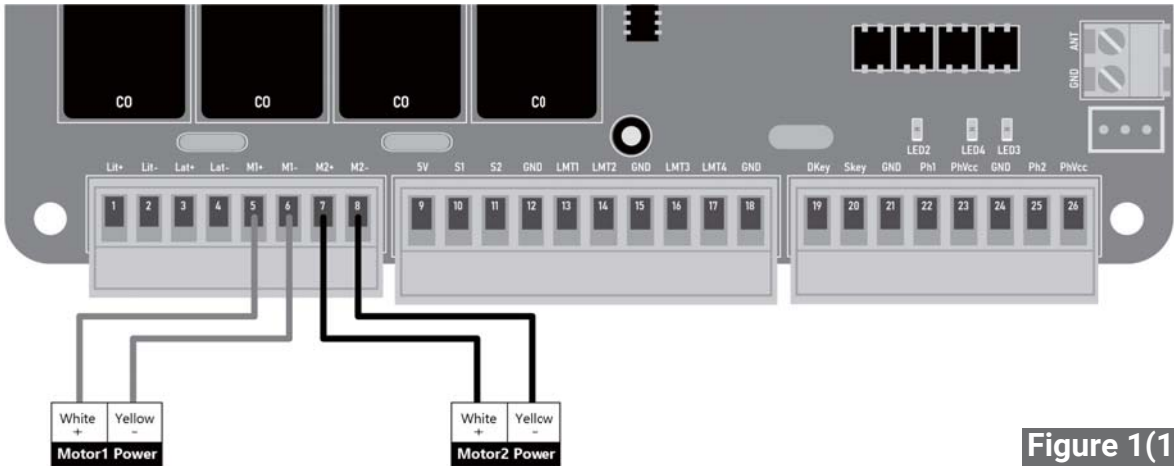


Figure 1(1)

## b. Motor With Limit Switch + LED indicator

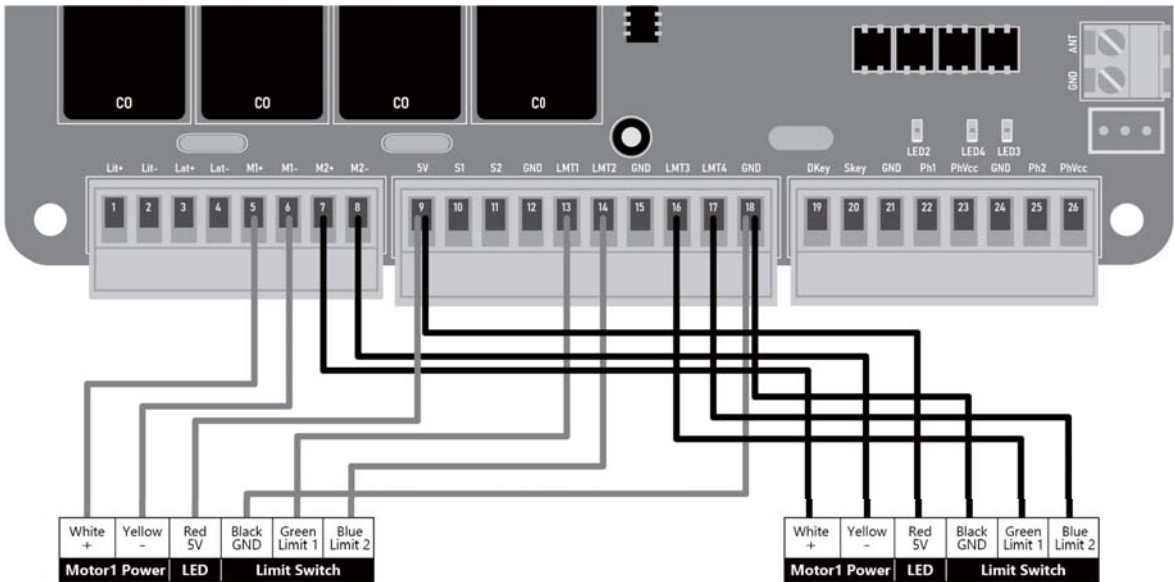


Figure 1(2)

## c. Motor With Hall Sensor


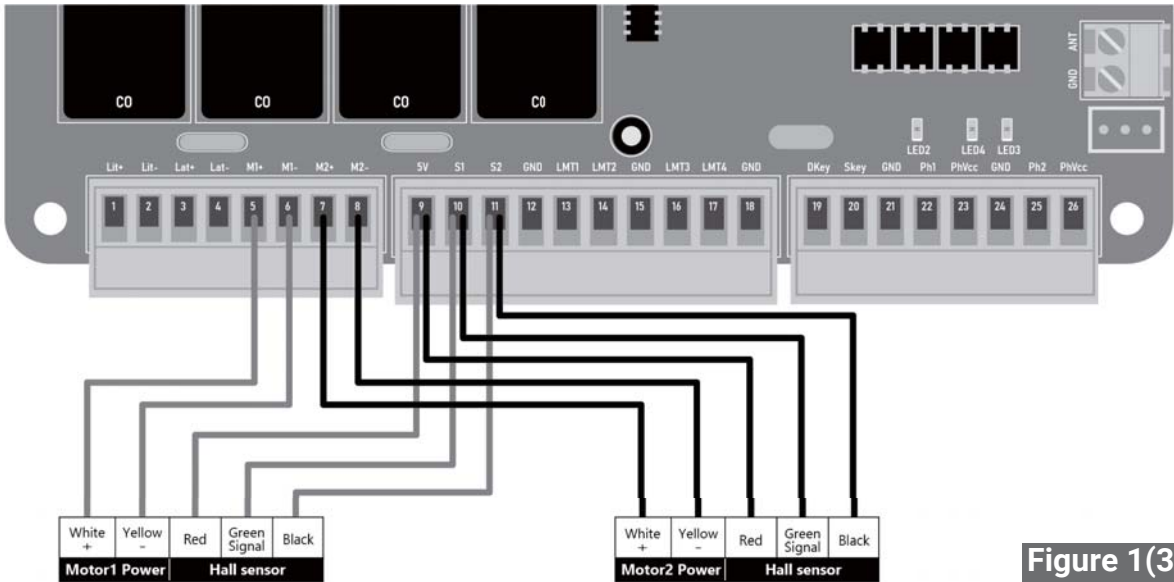


Figure 1(3)

## 1. Wifi Device

### Functions of Buttons and Terminals


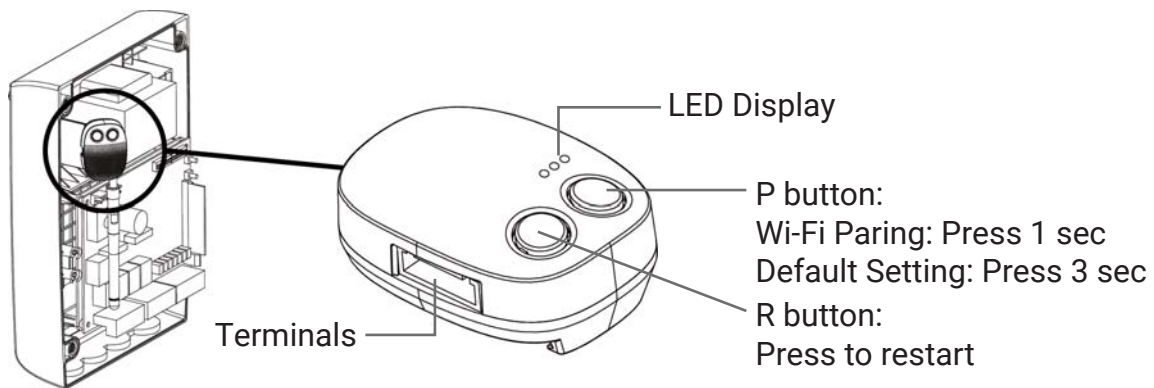


- LED description:  
Blue: LED will be flashing during WIFI pairing, and be ON when completed.  
Green: LED will be flashing if WB-001 receives signal from APP.  
If your home WIFI disconnects, the green light will continuously flash, and it will be off until WIFI is connected again.  
Red: System failure or wrong PIN.

## 2. Back-up Batteries

### Battery Power:

The battery white connector must be fitted the correct way round (positive red to +positive) or you will short circuit the control board. There are 2 x 12v batteries fitted under the control board. They are connected together in series to make 24vDC via a black cable with a yellow fuse with positive of one battery to negative of second battery. The remaining positive and negative terminals go to the control board as per the photo above.

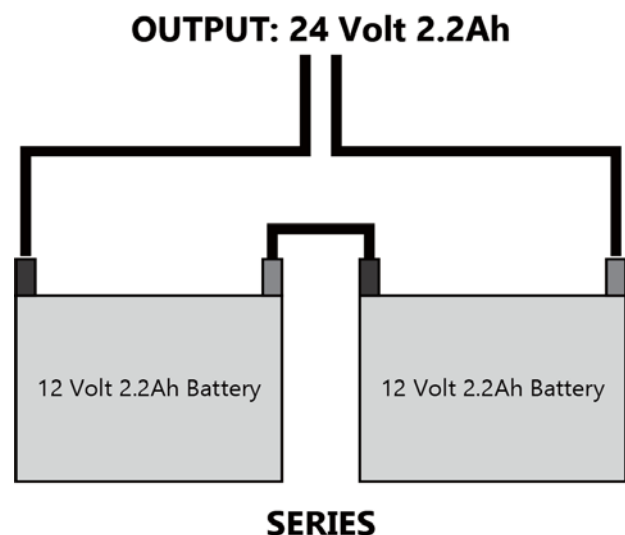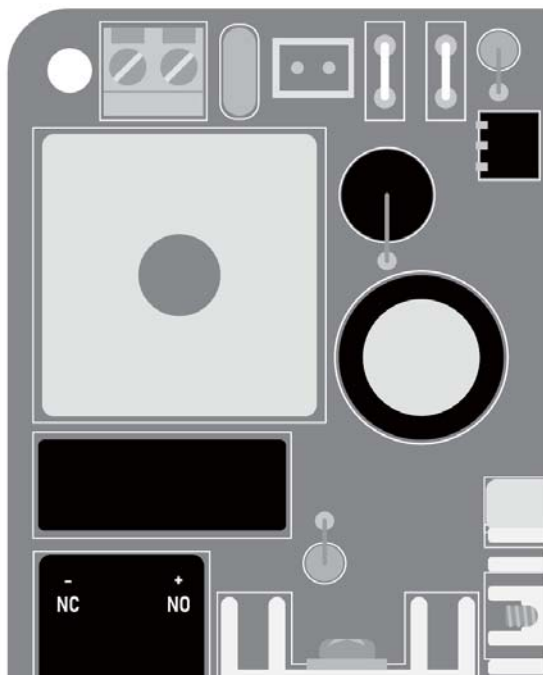



### 3. Accessories

#### a. Photocells

The safety photocells are security devices for control automatic gates. Consist of one transmitter and one receiver based in waterproof covers; it is triggered while breaking the path of the beams.


##### Specification:

|                     |                                                                     |
|---------------------|---------------------------------------------------------------------|
| Detection Method    | Through Beam                                                        |
| Sensing Range       | MAX~15m                                                             |
| Input Voltage       | AC/DC 12~24V                                                        |
| Contact Current     | TX: 30mA Max , RX: 25 mA Max                                        |
| Response Time       | <100mS                                                              |
| Emitting Element    | Infrared LED/ Wave Length: 940nm                                    |
| Operation Indicator | RX: Red LED On (beam broken) / Off (beam aligned)<br>TX: Red LED On |
| Dimensions          | 63*63*30 mm                                                         |
| Output Method       | Relay Output                                                        |
| Current Consumption | Beam aligned: RX<25ma\TX<30ma<br>Beam broken: RX <10ma\TX <30ma     |
| Connection Method   | Terminal Block                                                      |
| Housing Material    | ABS / PC                                                            |
| Water Proof         | IP44                                                                |
| Safety Standard     | CE                                                                  |

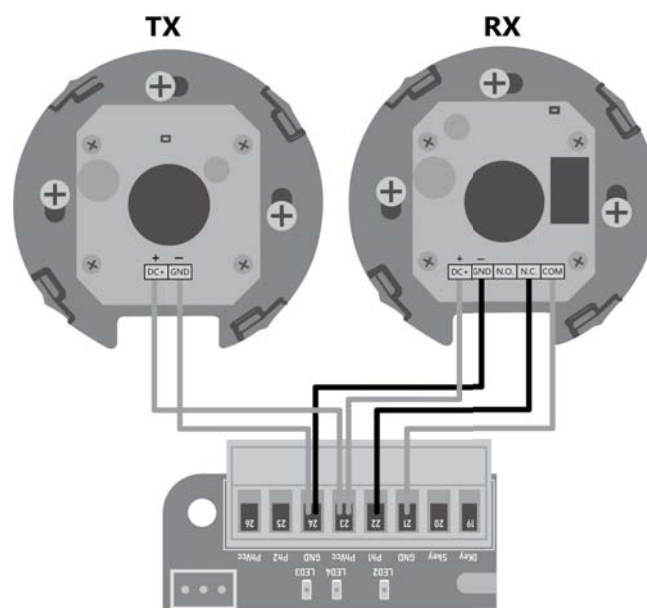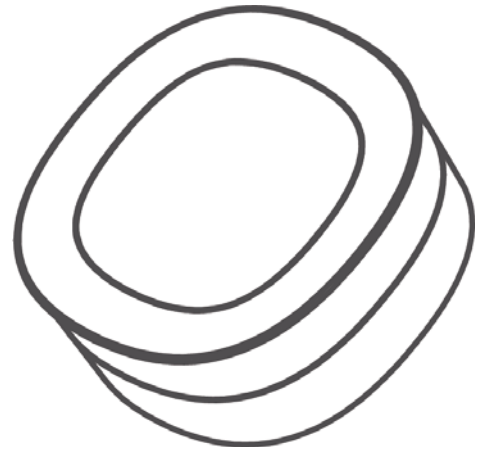

##### INSTALLATION:

1. Open the cover and connect wires.
2. Mounted the receiver and transmitter on the proper position.
3. Ensure there are no obstacles between receiver and transmitter.
4. For optimal efficiency, the receiver and transmitter should be properly aligned.
5. Power-up the photocells and make sure the LED light on receiver and transmitter are ON.

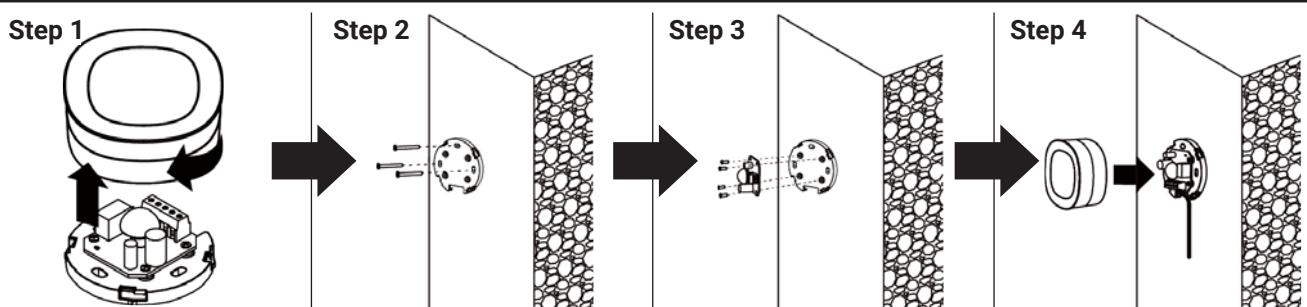

### III. Get Started

**Note:**


- A. Transmitter memorizing must be done first before system learning.
- B. CHECKING THE Gate MOVEMENTS
  - Release the gearmotor with the release key and move the gate to the middle so that it is free to move in both opening and closing directions; then lock the gearmotor.
  - Perform the gate opening and closing several times and make sure the gates touches the limit switch at least 2~3 cm before the mechanical stop.

#### 1. Step 1: Remote Memorizing


##### a. Memorizing

1. Press button RF-Learn on the control board (Figure 1) as many times as the number corresponding to the desired command, according to the following table, Within 10s, press the desired button on the remote that you want it to be memorized (Figure 1)

(Figure 1)

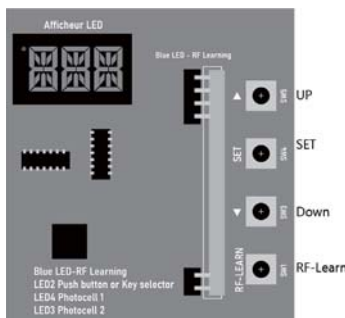


(Figure 1)

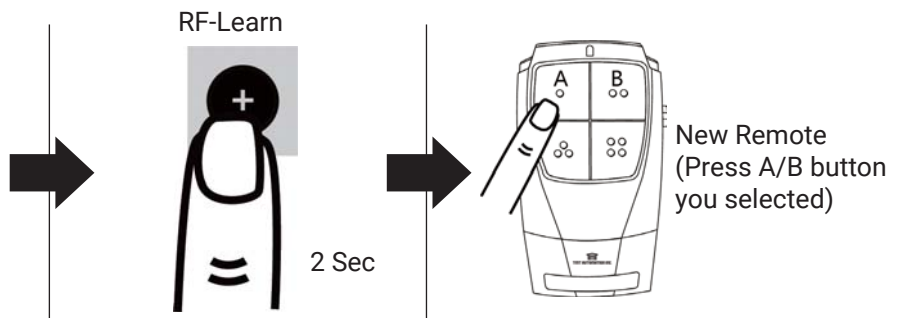

| Times for pressing RF-Learn | Command                | Message code     |
|-----------------------------|------------------------|------------------|
| 1 times                     | Open-Stop-Close circle | LEDdisplay "OSC" |
| 2 times                     | Pedestrian mode        | LEDdisplay "PED" |

2. Make sure that the LED display shows the "OSC" or "PED" three times quickly. The code is corresponding to the selected command. (Figure 2)


(Figure 2)

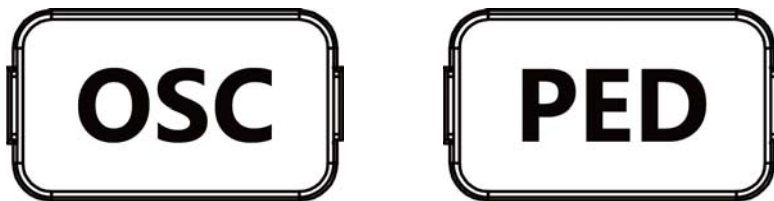

3. Repeat step 1 & 2 within 10s, if there are other remotes to be memorized for the same type of command. No action within 10s, the memorization stage will terminate automatically.

## b. Remote learning without Control board

1. Press the button on the NEW radio transmitter and hold it down for at least 5s, then release it.
2. Press the button on the OLD radio transmitter 3 times. (Tip: Don't press too fast; make sure you see the blue flash when pressing the button each time.)
3. Press the button on the NEW radio transmitter once.
4. Done, at this point the NEW radio transmitter will copy the same command of the OLD one.

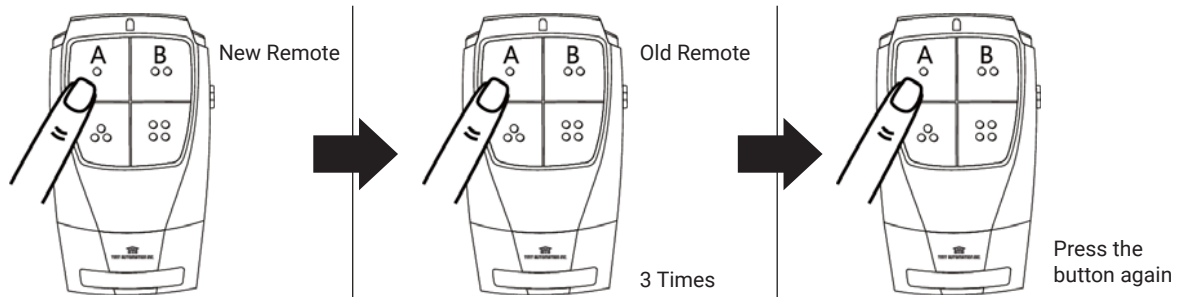

## c. Deleting memory of single command

Single deletion stage is needed for each memorized button.


1. Press and hold down RF-LEARN button (Figure 3) on the control board for 5 seconds.
2. Wait until the LED display shows "DKY", then, within three seconds:
3. Press the button of the remote to be deleted. If the remote has been deleted, the LED display will flash quickly five times.
4. Repeat above steps if more button to be deleted.



## d. Deleting all memory of all remotes

With this operation all the memorized transmitters will be deleted.

1. Press and hold down RF-LEARN button (Figure 4) on the control board for 10 seconds.
2. Wait until the LED display shows "DAL". (When you see DKY, keep pressing the RF-Learn till it shows DAL). All memory is deleted.

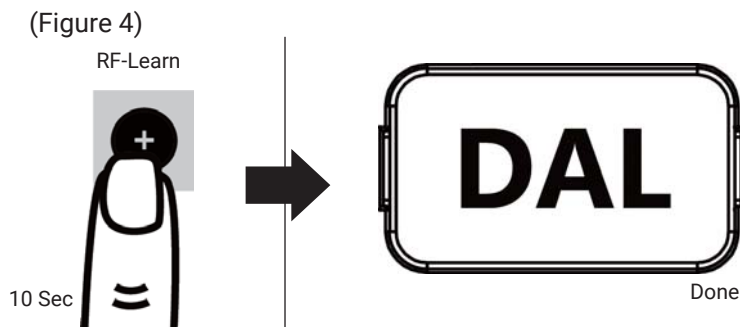

## 2. Step 2: System Learning

### Step1:

Press and Hold the Press SET button for 3s, When LED shows "LEA" then release SET, then the motor runs the system learning procedure automatically, once learning completed shows "D-G" or "S-G"

(No remote required)

Note:

Please check the parameter setting of "FI"(Dual/Single) before going into system learning.

Restore system default setting

Press and Hold the UP + SET + DOWN button for 5s and panel restores back to default setting


Note:

1. LED Shows "D-G" tells the system learning has be completed for Dual Gate installation
2. LED Shows "S-G" tells the system learning has be completed for Single Gate installation




#### A. Dual Gate:

- (1) Slave Gate Close » (2) Master Gate Close » (3) Master Gate Open  
(4) Slave Gate Open » (5) Slave Gate Close » (6) Master Gate Close

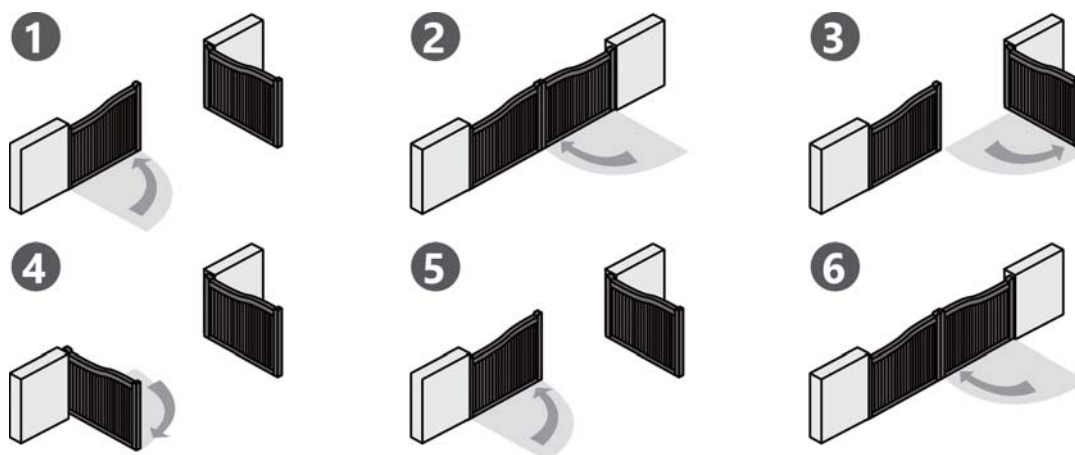

#### B. Single Mode:

- (1) Master Gate Close » (2) Master Gate Open » (3) Master Gate Close

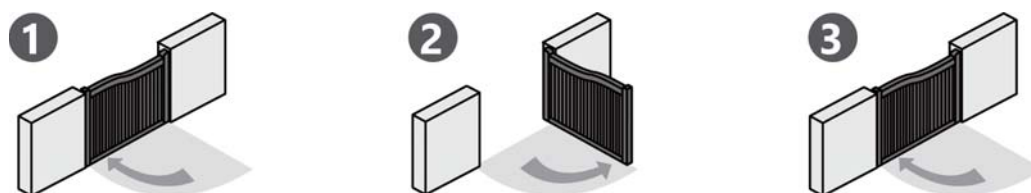

For Single Gate installation, please make sure the motor cable connect to M1+/M1-, and parameter to set function FI-0 to single gate, and also set FB-0 pedestrian mode to be function off, and once the system learning is completed, the LED will show S-G

## IV. Gate Operation Logic

- A. In gate-opening phase: The gates stop if the transmitter/push button/key selector is activated, and close when the transmitter/push button/key selector is reactivated.
- B. In gate-closing phase: The gates stop if the transmitter/push button/key selector is activated, and open when the transmitter/push button/key selector is reactivated.

## V. Safety For Gate Operation

- In gate-opening phase: For safety purpose, the gates stop if encountering obstacles.
- In gate-closing phase: For safety purpose, the gates reverse for 2 sec if encountering obstacles.

## VI. LED Indication


### 1. LED Lighting

**Blue LED System Learning:** Blue LED in receiver board blinks two times when learning is completed.

**LED2 RF:** Key selector, or the push button is activated, LED2 will be on.

**LED4 Ph1:** LED4 will be on when Ph1 are triggered.

**LED3 Ph2:** LED3 will be on when Ph2 are triggered.

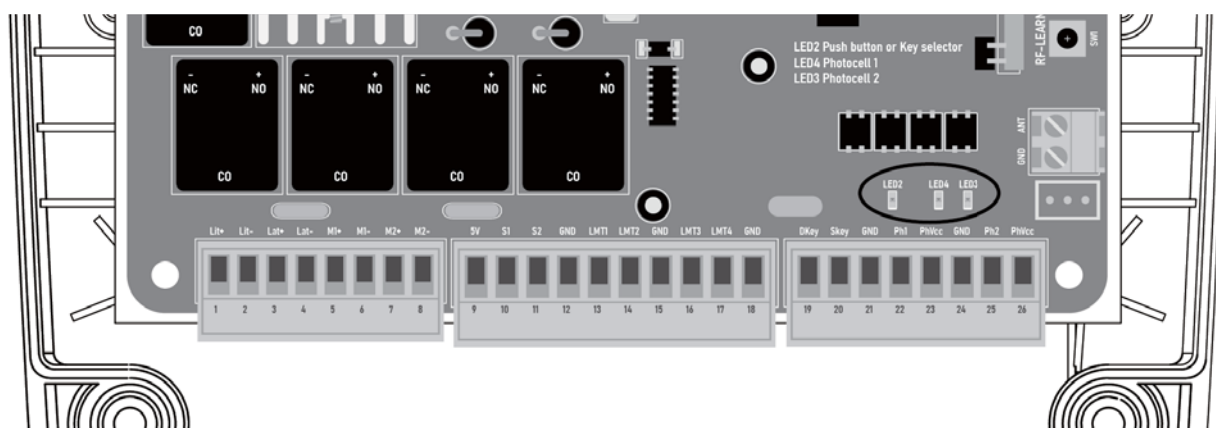


### 2. Function of the LED display


| LED Display | Programmable Functions                                                                                                                                      | LED Display | Programmable Functions                                                                                                                                                                                                                            |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|             | [LEA] means motor into the system learning mode, do not interrupt during this procedure.                                                                    |             | When the gate is stopped, the LED Display show 'STP' until next command has been made, after 10s no further movement, the LED turns to OFF                                                                                                        |
|             | [D-G] means motor completed the learning procedure for dual gate installation.                                                                              |             | When the gate is closing, the LED Display show 'CLS' for 2s and then change to Amp current indication                                                                                                                                             |
|             | [S-G] means motor completed the learning procedure for single gate installation.                                                                            |             | LED display shows "S01" means the panel did not detected the M1+/M1 and M2+/M2 both been connected before the system learning procedure, check for 2 motors' wire connection, for dual gate system                                                |
|             | [N-L] means system learning failed.                                                                                                                         |             | LED display shows "S02" means the panel did not detected the M1+/M1 but detected M2+/M2 been connected, notice the installer to check the motor wire connection, if this is single gate system, motor wire should connect to M1+/M1 not on M2+/M2 |
|             | The memory of the system is all deleted/cleaned by press and hold the UP + SET+ DOWN button together for 5s and the panel will be back to default settings. |             | LED display show "S03" means same button on the remote has been identified for more than 2 functions                                                                                                                                              |
|             | When the gate is opening, the LED Display show 'OPN' for 2s and then change to Amp current indication.                                                      |             |                                                                                                                                                                                                                                                   |

# VII. Parameter Modification


## 1. Parameter Learning

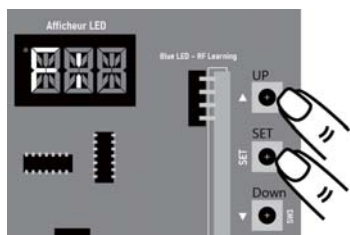


Press "UP+SET" for 3 seconds to get into the program setting display from F1.

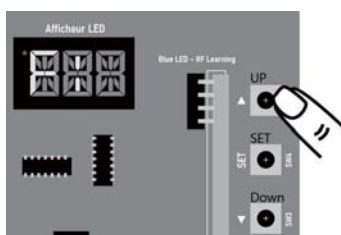


Press "UP" or "DOWN" to change setting item from F1 to FJ .

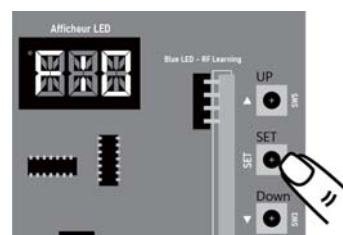

Press "SET" button again to get into the sub-settings.

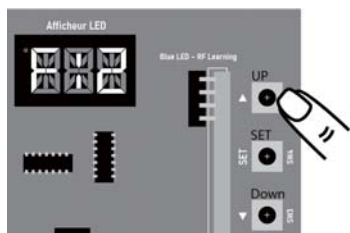

Press "UP" or "DOWN" to change Push from F1-0 to F1-2.

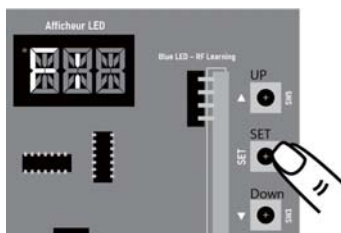

Press "SET" button again to confirm.

## 2. Parameter

| Setting   | Definition                       | Paramters                                                                    | Table                                                                                         | Description                       |
|-----------|----------------------------------|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|-----------------------------------|
| <b>F1</b> | Motor Type                       | F1-0<br>F1-1<br>F1-2                                                         | Overcurrent<br>Limit Switch<br>Hall Sensor                                                    | 1. The factory setting is "F1-0". |
| <b>F2</b> | Overcurrent for Gate Opening     | F2-0<br>F2-1<br>F2-2<br>F2-3<br>F2-4<br>F2-5<br>F2-6<br>F2-7<br>F2-8         | 2A<br>3A<br>4A<br>5A<br>6A<br>7A<br>8A<br>9A<br>10A                                           | 1. The factory setting is "F2-1". |
| <b>F3</b> | Overcurrent for Gate Closing     | F3-0<br>F3-1<br>F3-2<br>F3-3<br>F3-4<br>F3-5<br>F3-6<br>F3-7<br>F3-8         | 2A<br>3A<br>4A<br>5A<br>6A<br>7A<br>8A<br>9A<br>10A                                           | 1. The factory setting is "F3-1". |
| <b>F4</b> | Motor Speed for Opening          | F4-0<br>F4-1<br>F4-2<br>F4-3                                                 | 40%<br>50%<br>75%<br>100%                                                                     | 1. The factory setting is "F4-2". |
| <b>F5</b> | Motor Speed for Closing          | F5-0<br>F5-1<br>F5-2<br>F5-3                                                 | 40%<br>50%<br>75%<br>100%                                                                     | 1. The factory setting is "F5-2"  |
| <b>F6</b> | Deceleration Speed               | F6-0<br>F6-1<br>F6-2<br>F6-3                                                 | 40%<br>50%<br>60%<br>70%                                                                      | 1. The factory setting is "F6-1". |
| <b>F7</b> | Time Gap b/w Two Gates (Opening) | F7-0<br>F7-1<br>F7-2<br>F7-3<br>F7-4<br>F7-5<br>F7-6<br>F7-7<br>F7-8<br>F7-9 | 0 sec<br>2 sec<br>5 sec<br>10 sec<br>15 sec<br>20 sec<br>25 sec<br>35 sec<br>45 sec<br>55 sec | 1. The factory setting is "F7-1". |


| Setting   | Definition                            | Parameters                                                                   | Table                                                                                          | Description                                                                                                                                                                                                                                                                       |
|-----------|---------------------------------------|------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>F8</b> | Time Gap b/w Two Gates (Closing)      | F8-0<br>F8-1<br>F8-2<br>F8-3<br>F8-4<br>F8-5<br>F8-6<br>F8-7<br>F8-8<br>F8-9 | 0 sec<br>2 sec<br>5 sec<br>10 sec<br>15 sec<br>20 sec<br>25 sec<br>35 sec<br>45 sec<br>55 sec  | 1. The factory setting is "F8-1".                                                                                                                                                                                                                                                 |
| <b>F9</b> | Auto-closing                          | F9-0<br>F9-1<br>F9-2<br>F9-3<br>F9-4<br>F9-5<br>F9-6<br>F9-7<br>F9-8         | Function OFF<br>3 sec<br>10 sec<br>20 sec<br>40 sec<br>60 sec<br>120 sec<br>180 sec<br>300 sec | 1. Auto-close mode activates when the gates move to the end position or stopped manually. If the transmitter, push button, or the key selector is activated before the auto-close counting, the gate will close immediately.<br>2. The factory setting is "F9-0".                 |
| <b>FA</b> | Safety Device Function Mode           | FA-0<br>FA-1<br>FA-2<br>FA-3                                                 | Mode 1<br>Mode 2<br>Mode 3<br>Mode 4                                                           | 1. Please see 7.3 photocell adjustment for photocell logic<br>2. The factory setting is "FA-0".                                                                                                                                                                                   |
| <b>FB</b> | Pedestrian Mode                       | FB-0<br>FB-1                                                                 | Function OFF<br>Function ON                                                                    | 1. The factory setting is "FB-1".                                                                                                                                                                                                                                                 |
| <b>FC</b> | Flashing Light                        | FC-0<br>FC-1                                                                 | Function OFF<br>Function ON                                                                    | 1. When function FC-1, the light will flash for 3 seconds before the gate operates. If set OFF, the flash light will operate with motor at the same time.<br>2. The factory setting is "FC-0".                                                                                    |
| <b>FD</b> | Photocell Activation                  | FD-0<br>FD-1                                                                 | Function OFF<br>Function ON                                                                    | 1. The factory setting is "FD-0".                                                                                                                                                                                                                                                 |
| <b>FE</b> | Photocell 2 Activation                | FE-0<br>FE-1                                                                 | Function OFF<br>Function ON                                                                    | 1. The factory setting is "FE-0".                                                                                                                                                                                                                                                 |
| <b>FF</b> | Alarm Buzzer                          | FF-0<br>FF-1                                                                 | Function OFF<br>Function ON                                                                    | 1. The factory setting is "FF-0".                                                                                                                                                                                                                                                 |
| <b>FG</b> | Electric Latch Mode                   | FG-0<br>FG-1                                                                 | Standard Gate Opening<br>Release Gate Tension before Opening (Gate Reversing for 0.25s)        | 1. If the function is FG-1, the motor will be reversed for 0.25 sec. to release the tension.<br>2. The factory setting is "FG-1".                                                                                                                                                 |
| <b>FH</b> | LED Direction                         | FH-0<br>FH-1                                                                 | When Terminal Block is at Top<br>When Terminal Block is at Bottom                              | 1. The factory setting is "FH-1".<br>The UP(▲) and Down(▼) buttons will switch according to the parameter setting.<br>When FH-0, button SW3 stands for ▲ (UP), and button SW5 stands for ▼ (DOWN).<br>When FH-1, button SW5 stands for ▲ (UP), and button SW3 stands for ▼ (DOWN) |
| <b>FI</b> | Dual / Single Gate                    | FI-0<br>FI-1                                                                 | Single Gate<br>Dual Gate                                                                       | 1. The factory setting is "FI-1".                                                                                                                                                                                                                                                 |
| <b>FJ</b> | Over Current Reverses Time when Close | FJ-0<br>FJ-1<br>FJ-2<br>FJ-3<br>FJ-4<br>FJ-5<br>FJ-6                         | Function OFF<br>0.1 sec<br>0.2 sec<br>0.3 sec<br>0.4 sec<br>0.5 sec<br>0.6 sec                 | 1. The factory setting is "FJ-0"                                                                                                                                                                                                                                                  |

**Note(F1-2 over-current setting in Hall sensor mode):**

Only in "F1-2" Hall sensor mode, the PCB will record all the current value in learning mode. Please adjust over current value by setting F3 function after learning mode.

The recorded current values will increase according to the value shown on LED display as over current value.

The value can be adjusted by pressing button UP and DOWN. The maximum value is 50(5.0A) and the minimum value is 05(0.5A). LED display example:

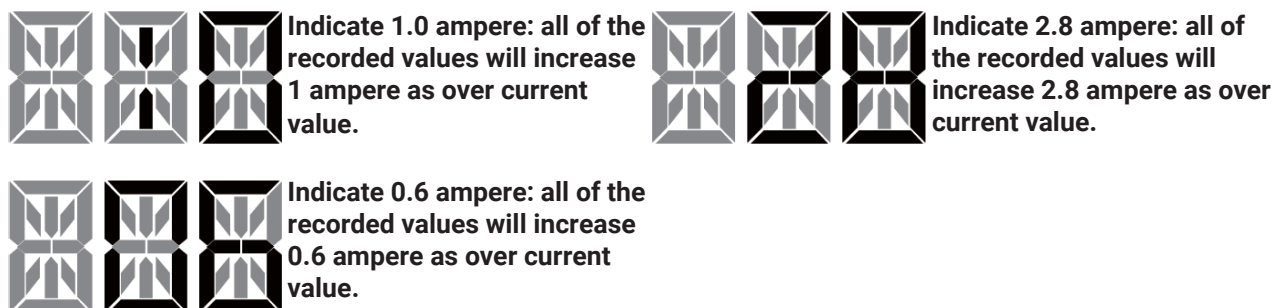

### 3. Photocell Logic

#### FA-0 Photocell OPEN/CLOSE (Standard set up)

| Position of Gate      | When safety devices are activated |                       |
|-----------------------|-----------------------------------|-----------------------|
| Type of Safety Device | PH1<br>Photocell-CLOSE            | PH2<br>Photocell-OPEN |
| Fully Closed          | No effect                         | Open not allowed      |
| Fully Opened          | Reload automatic closing time     | No effect             |
| Stop During Moving    | Reload automatic closing time     | Open not allowed      |
| Closing               | Open                              | No effect             |
| Opening               | No effect                         | Close                 |

#### FA-1 Safety Edge

| Position of Gate      | When safety devices are activated |                                |
|-----------------------|-----------------------------------|--------------------------------|
| Type of Safety Device | PH1<br>Photocell-CLOSE            | PH2<br>Safety Edge             |
| Fully Closed          | No effect                         | Open not allowed               |
| Fully Opened          | Reload automatic closing time     |                                |
| Stop During Moving    | Reload automatic closing time     | Open/Close not allowed         |
| Closing               | Open                              | Reverse to open for 2 seconds  |
| Opening               | No effect                         | Reverse to close for 2 seconds |

#### FA-2 Open Only Device (Vehicle detector)

| Position of Gate      | When safety devices are activated |                        |
|-----------------------|-----------------------------------|------------------------|
| Type of Safety Device | PH1<br>Photocell-CLOSE            | PH2<br>Photocell-CLOSE |
| Fully Closed          | No effect                         | Open                   |
| Fully Opened          | Reload automatic closing time     |                        |
| Stop During Moving    | Reload automatic closing time     | Open                   |
| Closing               | Open                              | Open                   |
| Opening               | No effect                         | No effect              |

#### FA-3 Double photocell set up

| Position of Gate      | When safety devices are activated           |                             |
|-----------------------|---------------------------------------------|-----------------------------|
| Type of Safety Device | PH1<br>Photocell-CLOSE                      | PH2<br>Photocell-OPEN/CLOSE |
| Fully Closed          | No effect                                   | Open not allowed            |
| Fully Opened          | Open for 2 seconds, when auto closing is ON | No effect                   |
| Stop During Moving    | Close not allowed                           | Open not allowed            |
| Closing               | Open                                        | No effect                   |
| Opening               | No effect                                   | Stop                        |

## VIII. Trouble Shooting

| Issue:                                                                                    | Solution:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Parts to look at:                                                                                                                                                                                                                          |
|-------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>No power on the board.</b>                                                             | <ul style="list-style-type: none"> <li>Power to the transformer is on and the connector block from the AC power lead to the transformer and to the control board is wired correctly.</li> <li>At the control board check the transformer white connector blocks are correctly plugged into board and the battery connector if equipped.</li> <li>Check fuses are both working. * 15amp for stand-alone transformer.</li> <li>Check there is 24vac into and out of the Control box fuse.</li> <li>The batteries are connected to the control board and read higher than 24vdc if equipped.</li> <li>Try removing optional extras such as beams and probes to see if they are draining the power. And reset the control panel to default and testing the motor operation.</li> </ul>                                                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>Fuse</li> <li>Transformer power</li> <li>Loose wires</li> <li>Incorrect wire contact at connector blocks</li> <li>Short circuit in wiring between transformer and board</li> <li>Battery</li> </ul> |
| <b>A single arm activation isn't working.</b>                                             | <ul style="list-style-type: none"> <li>Check function setting is set correctly for single arm. FI-1 single gate mode. FB-1 Pedestrian mode to be ON. Using button B on the remote to operate the single gate.</li> <li>Make sure the arm is connected to motor 1 and not motor 2.</li> <li>Your remote is programmed in.</li> <li>You have done a systems learn.</li> <li>There is adequate power going to the board.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>Motor connection</li> <li>Function setting for single mode</li> </ul>                                                                                                                               |
| <b>Remotes or wireless keypad not working.</b>                                            | <p>Re-program remotes by pressing the RF-Learn button on the control board.</p> <ul style="list-style-type: none"> <li>You can program in several remotes or devices at a time however all signals need to be sent before the blue light goes off again.</li> <li>Push the button fairly solid and hold it in for a whole second. The blue light should flicker.</li> <li>If the blue light is on continuously without pressing the RF learn button it means the receiver is faulty and needs to be replaced.</li> <li>The blue light will still flash when a remote that has not been programmed in is used. It will however not activate.</li> <li>Reset the keypad. Do this by flicking off the front cover with a small screw driver. Undo the 2 nuts, turn over and repeat until left with the control board on the casing. Undo the 3 screws in the corner. Turn over the circuit board and there is a button there. Hold it until you hear a beep. Try keypad again and reassemble.</li> </ul> | <ul style="list-style-type: none"> <li>RF Learn button on control board</li> </ul>                                                                                                                                                         |
| <b>Lights on the board but arm(s) not moving.</b>                                         | <ul style="list-style-type: none"> <li>Check the LED3 and LED4 on the board are off, which is located on the button right of the board if it is on check the photocell connection and function.</li> <li>Check that the battery is 24V+.</li> <li>Make sure your connections aren't loose.</li> <li>The power input is feeding in 24V+.</li> <li>The gate is free from any obstructions.</li> <li>The arm is locked into place (A good way to test this is if you can move the gate freely, then it won't work via the motors).</li> <li>Try depowering and repowering the board.</li> <li>If it still keeps glowing please call or email us. Receiver may need replacement.</li> </ul>                                                                                                                                                                                                                                                                                                               | <ul style="list-style-type: none"> <li>The gate</li> <li>Power sources</li> <li>Arm wires</li> </ul>                                                                                                                                       |
| <b>Gates remain open after systems learn/one arm stays open and the other one closed.</b> | <ul style="list-style-type: none"> <li>Ensure you have matched the + and - of each ram to the equivalent + and - motor symbols on the board.</li> <li>Change the polarity connection of the positive(+) with the negative(-) of the motor if the gate both stay open instead of close after the system learning.</li> <li>Clear any obstructions to the gates.</li> <li>Make sure that the arms are going no further than 100 degrees.</li> <li>The function setting should be set for a double swing and not a single.</li> <li>Check the LED display during the system learning showing the motor current, once the reading is too high check the installation or the gate condition.</li> <li>Ensure the motors are locked in.</li> <li>Increase the power amp settings by function setting F2 for open and F3 for close direction (mentioned above).</li> </ul>                                                                                                                                   |                                                                                                                                                                                                                                            |

|                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                   |  |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <b>Gates not fully opening or closing</b>        | <ul style="list-style-type: none"> <li>• Ensure there is nothing obstructing the gate or the arms.</li> <li>• If the gate is a bigger or heavier gate change the power settings using the F2 for open and F3 for close direction. You should not have to use the maximum power setting. This is intended for a 500kg double swing gate (or 250kg single).</li> <li>• Re-do the systems learn.</li> </ul>                          |  |
| <b>One gate opens part of the way/not at all</b> | <ul style="list-style-type: none"> <li>• Make sure you are pressing the top left hand button. The other buttons do have their individual functions.</li> <li>• Check the FB function for pedestrian mode, set to FB-0 if you require the single gate to be fully open instead of partial open.</li> <li>• Both arms are wired onto the control board correctly. They should be identical. I.E. black, red. Black, red.</li> </ul> |  |
| <b>Remote/ keypad range is less than 20M</b>     | <ul style="list-style-type: none"> <li>• Make sure the antenna is attached and screwed in on the control board.</li> <li>• Make sure there is nothing obstructing the antenna such as the power cable or motor cables.</li> </ul>                                                                                                                                                                                                 |  |

## IX. Technical Specification

|                              |                                                      |
|------------------------------|------------------------------------------------------|
| <b>Main power supply</b>     | 230Vac/110Vac, 50Hz/60Hz                             |
| <b>Back-up battery</b>       | 2pcs of batteries for emergency operation, 2.2A each |
| <b>Receiver board</b>        | 433.92MHz; 200 transmitters memory                   |
| <b>Installation</b>          | Wall mounted vertically                              |
| <b>Operating Temperature</b> | -20°C~+50°C                                          |
| <b>Dimension</b>             | 275mm * 195mm * 102mm                                |

## X. FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:**

The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.


The device has been evaluated to meet general RF exposure requirement.



**TMT**  
**AUTOMATION INC.**





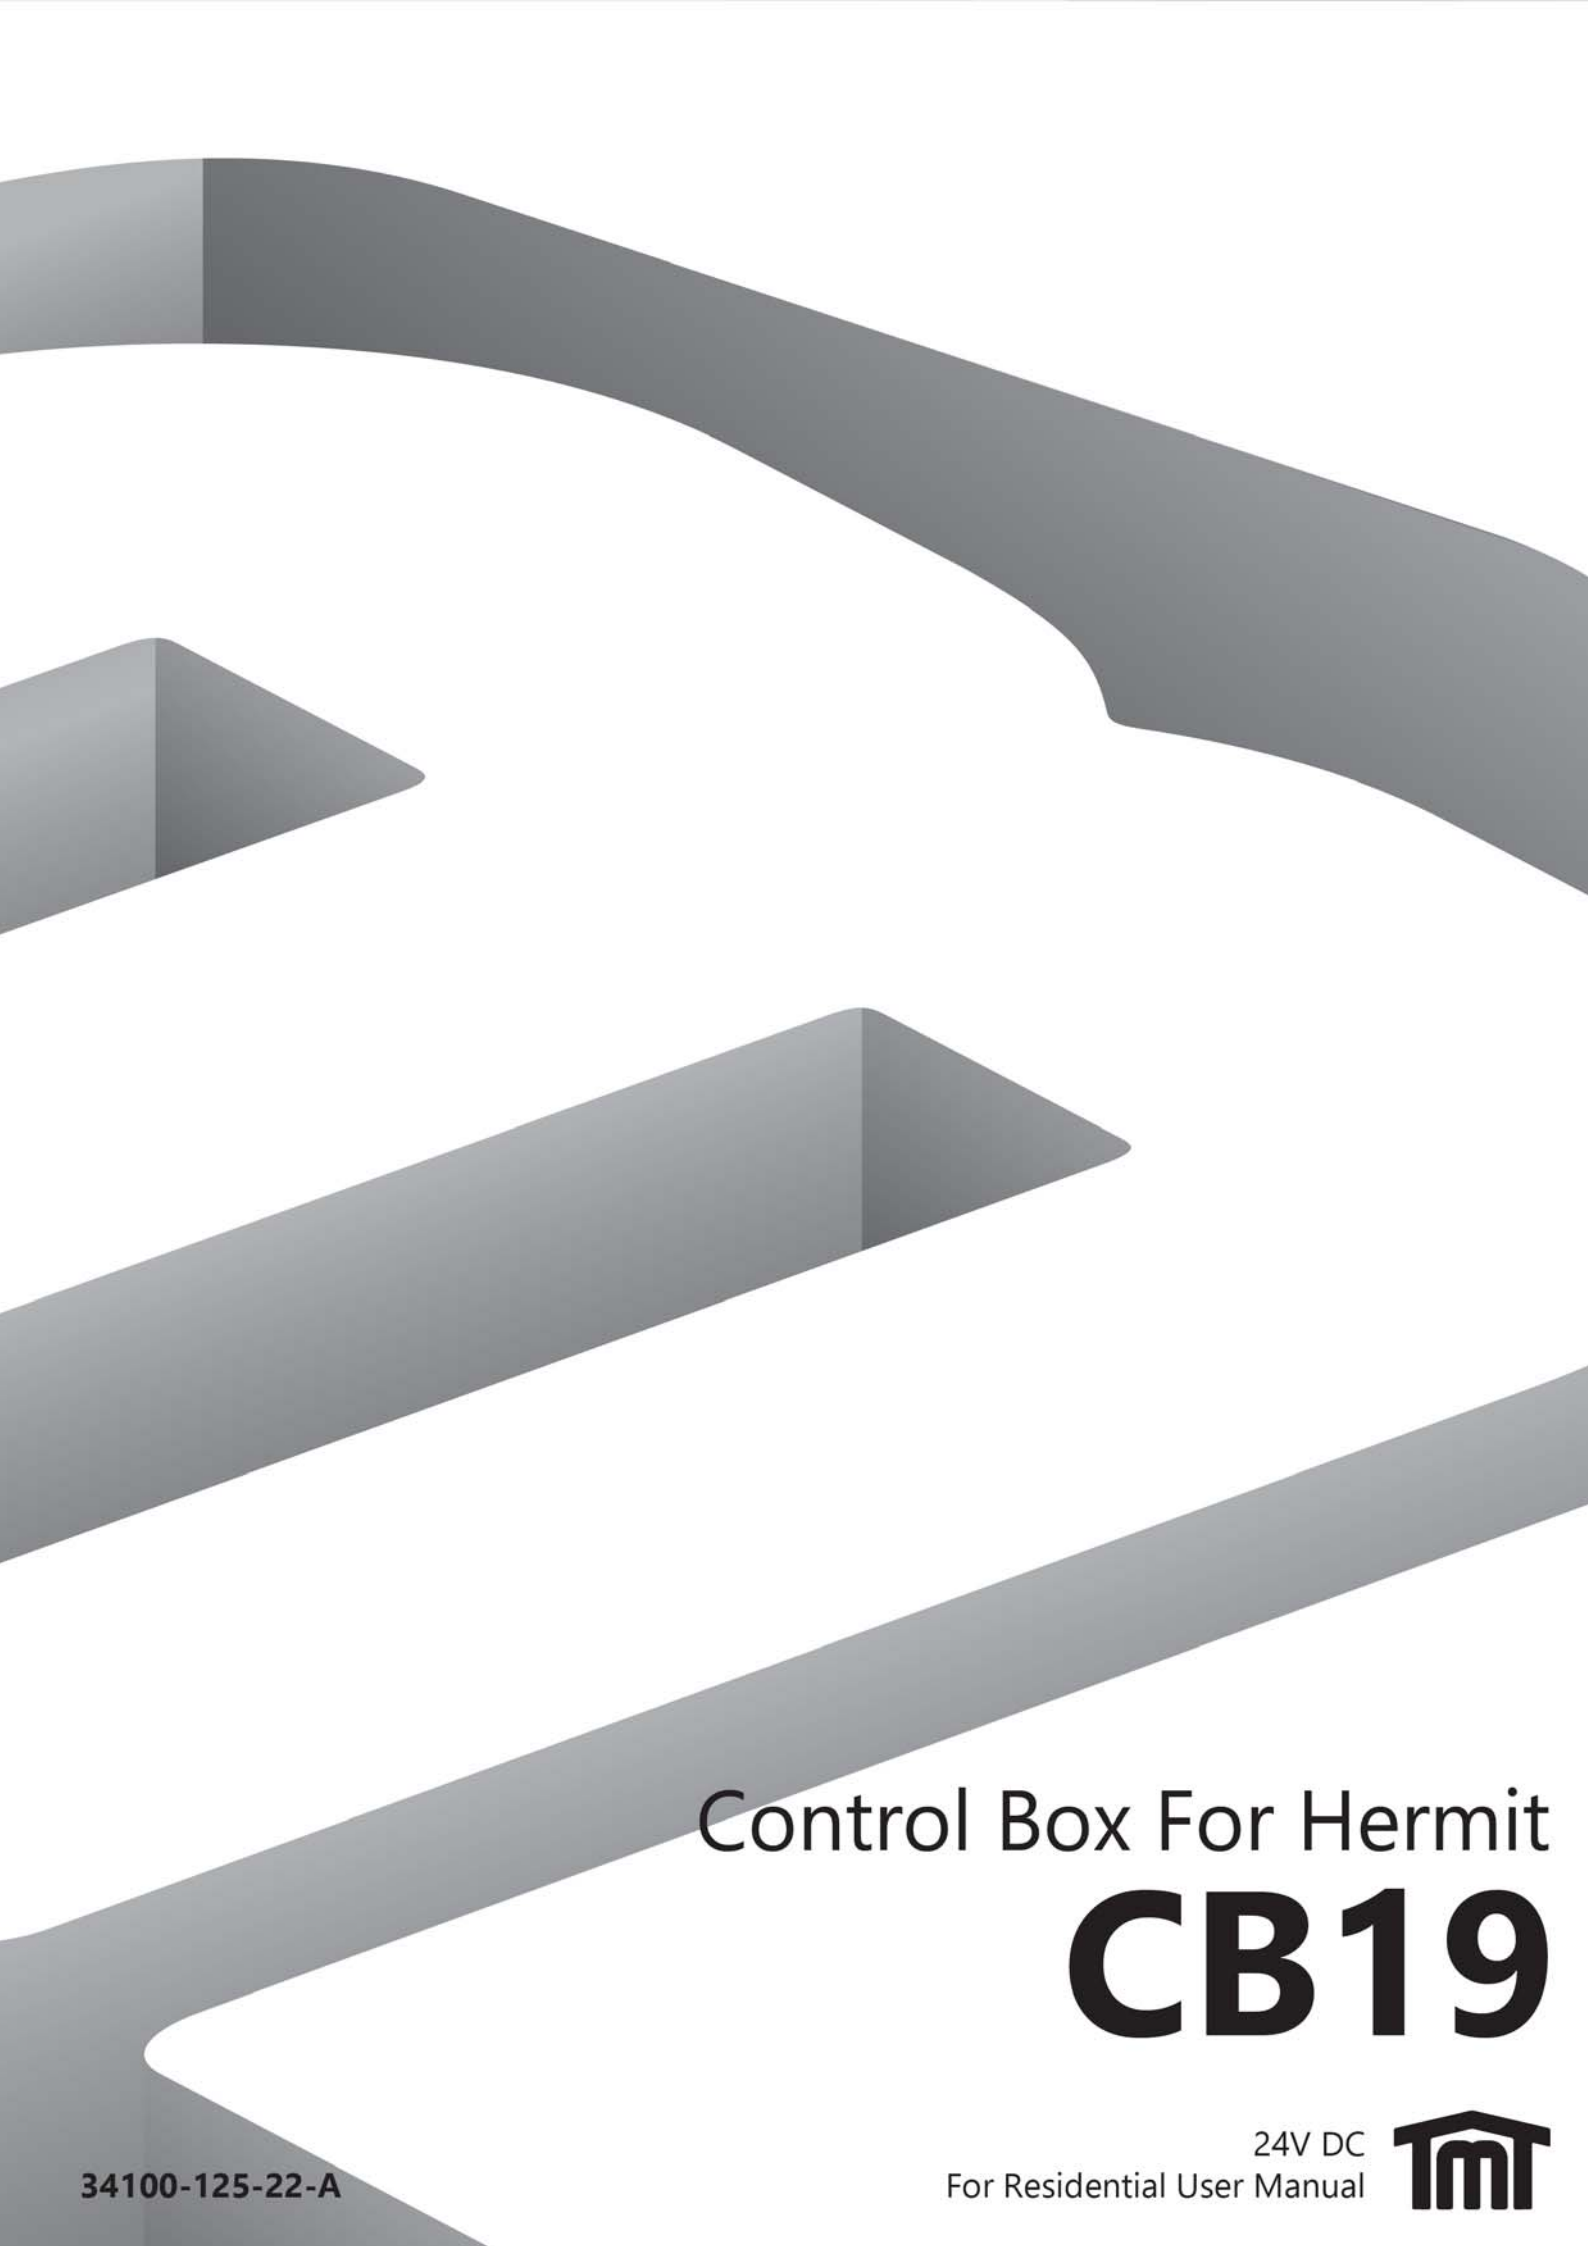

# Control Box For Hermit **CB19**

34100-125-22-A

24V DC  
For Residential User Manual

