

PRIME RS01 Quick Manual

Android™ 13



Google, Android, Google Play and other marks are trademarks of Google LLC.

FCC Part 15 Information and Notices

This device complies with part 15 of the FCC Rules.

Operation is subject to conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

GEN2WAVE

#7 floor, Point town B/D, 187-4, Gumi-dong, Bundang-gu,
Seongnam-si, Gyeonggi-do, 463-870, Rep. of Korea


Tel. +82-31-607-7537 Fax. +82-31-608-7537

Homepage : www.gen2wave.com Email : tcs@gen2wave.com


Specification

Part	Item	Details	Part	Item	Details
Physical Characteristics	Dimensions	6.61(L) x 3.03(W) x 0.69(H) in. 168(L) x 77(W) x 17.4(H) mm	User Environment	Thermal Shock	MIL STD 810H (-40°F to 158°F/-40°C to 70°C rapid transition)
	Weight	10.57oz / 300g		Electrostatic Discharge (ESD)	+/- 15kv air discharge, +/- 8kv direct discharge, +/- 8kv indirect discharge
	Display	5.5in. FHD+, 1080x2160, 650nits		IST	Sensor
	Touch Panel	Dual mode capacitive touch with stylus Corning Gorilla Glass 5		Data Capture	Barcode Scanning
	Battery	All in one type battery, 4,900mAh Li-polymer		Camera	Front Camera : 8MP Rear Camera : 50MP Auto Focus with LED Flash
	Expansion Slot	MicroSD up to 512GB SDXC		NFC	ISO 14443 Type A/B, FeliCa and ISO 15693 P2P mode and Card Emulation via Host.
	Notification	Full color LED, Vibrate and audible tone		Wireless WAN	Radio Frequency Bands
	SIM Slot	2ea of Nano sim slots			US : 5G-NR: N2 / N5 / N12 / N25 / N30 / N38 / N41 / N48 / N66 / N71 / N77 / N78 LTE-FDD: B2 / B4 / B5 / B7 / B12 / B13 / B14 / B17 / B25 / B29 / B30 / B46 / B66 / B71 LTE-TDD: B38 / B41 / B42 / B43 / B48 WCDMA: B2 / B4 / B5 GSM: B2 / B3 / B5 / B8
	Voice and Audio	Dual speakers for loud and clear sound USB-C audio headset support 3.5 mm audio jack, 3 MIC			GPS
	Buttons	Left : Volume up, Volume down, PTT Right : Power, F1, F2 / TOP : SOS			GPS, GLONASS, Galileo, Beidou, QZSS Dual-Band
Performance Characteristics	Interface Ports	USB 3.0 (Bottom Type C) : Host and Client Pogo 2pins for charging Pogo 2pins for Trigger Handle	Wireless LAN	Radio	WIFI 6E, 802.11 a/b/g/n/ac/ax
	CPU	Qualcomm® QCM6490 Octa-Core 2.7GHz		Operating Channels	Channel 1-13 (2401-2483 MHz): 1,2,3,4,5,6,7,8,9,10,11,12,13; Channel 36-165 (5150-5850 MHz): 36,40, 44,48,52,56,60,64,100,104,108,112,116,120,124, 128, 132,136,140,144,149,153,157,161,165; Channel 1-233 (5925-7125 MHz); Channel Bandwidth: 20/40/80/160 MHz
	Memory	8GB RAM / 128GB UFS Flash		Security and Encryption	WEP (40 or 104 bit); WPA/WPA2 Personal (TKIP, and AES); WPA3 Personal (SAE); WPA/WPA2 Enterprise (TKIP and AES); WPA3 Enterprise (AES) — EAP-TTLS (PAP, MSCHAP, MSCHAPv2); EAP-TLS, PEAPv0-MSCHAPv2, PEAPv1-EAP-GTC, LEAP, EAP-PWD)
User Environment	Operating System	Android 13 with GMS Certified	Wireless PAN	Bluetooth	5.2
	Operating Temperature	-4°F to 122°F/-20°C to 50°C			
	Storage Temperature	-40°F to 158°F/-40°C to 70°C			
	Humidity	5 to 95% non-condensing			
	Drop	MIL STD 810H (Multiple 5ft, 1.5m drops)			
	Tumble	500 1.6ft, 0.5m tumbles			
	Sealing	IP68			
	Vibration	MIL STD 810H (Vibration)			

Package

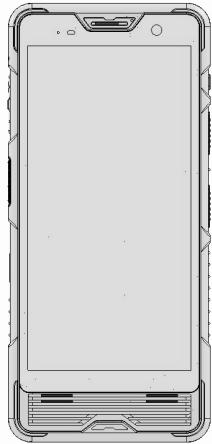


PRIME RS01

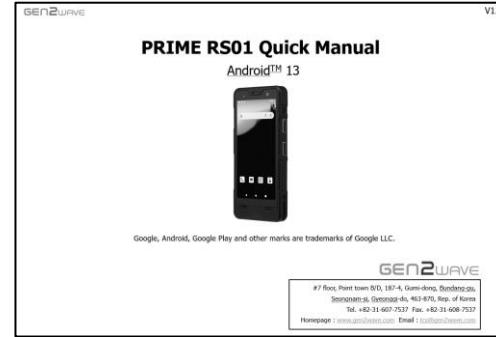

Quick Manual


NOTE. Items in the box may be changed according to the purchase order.

Device Features

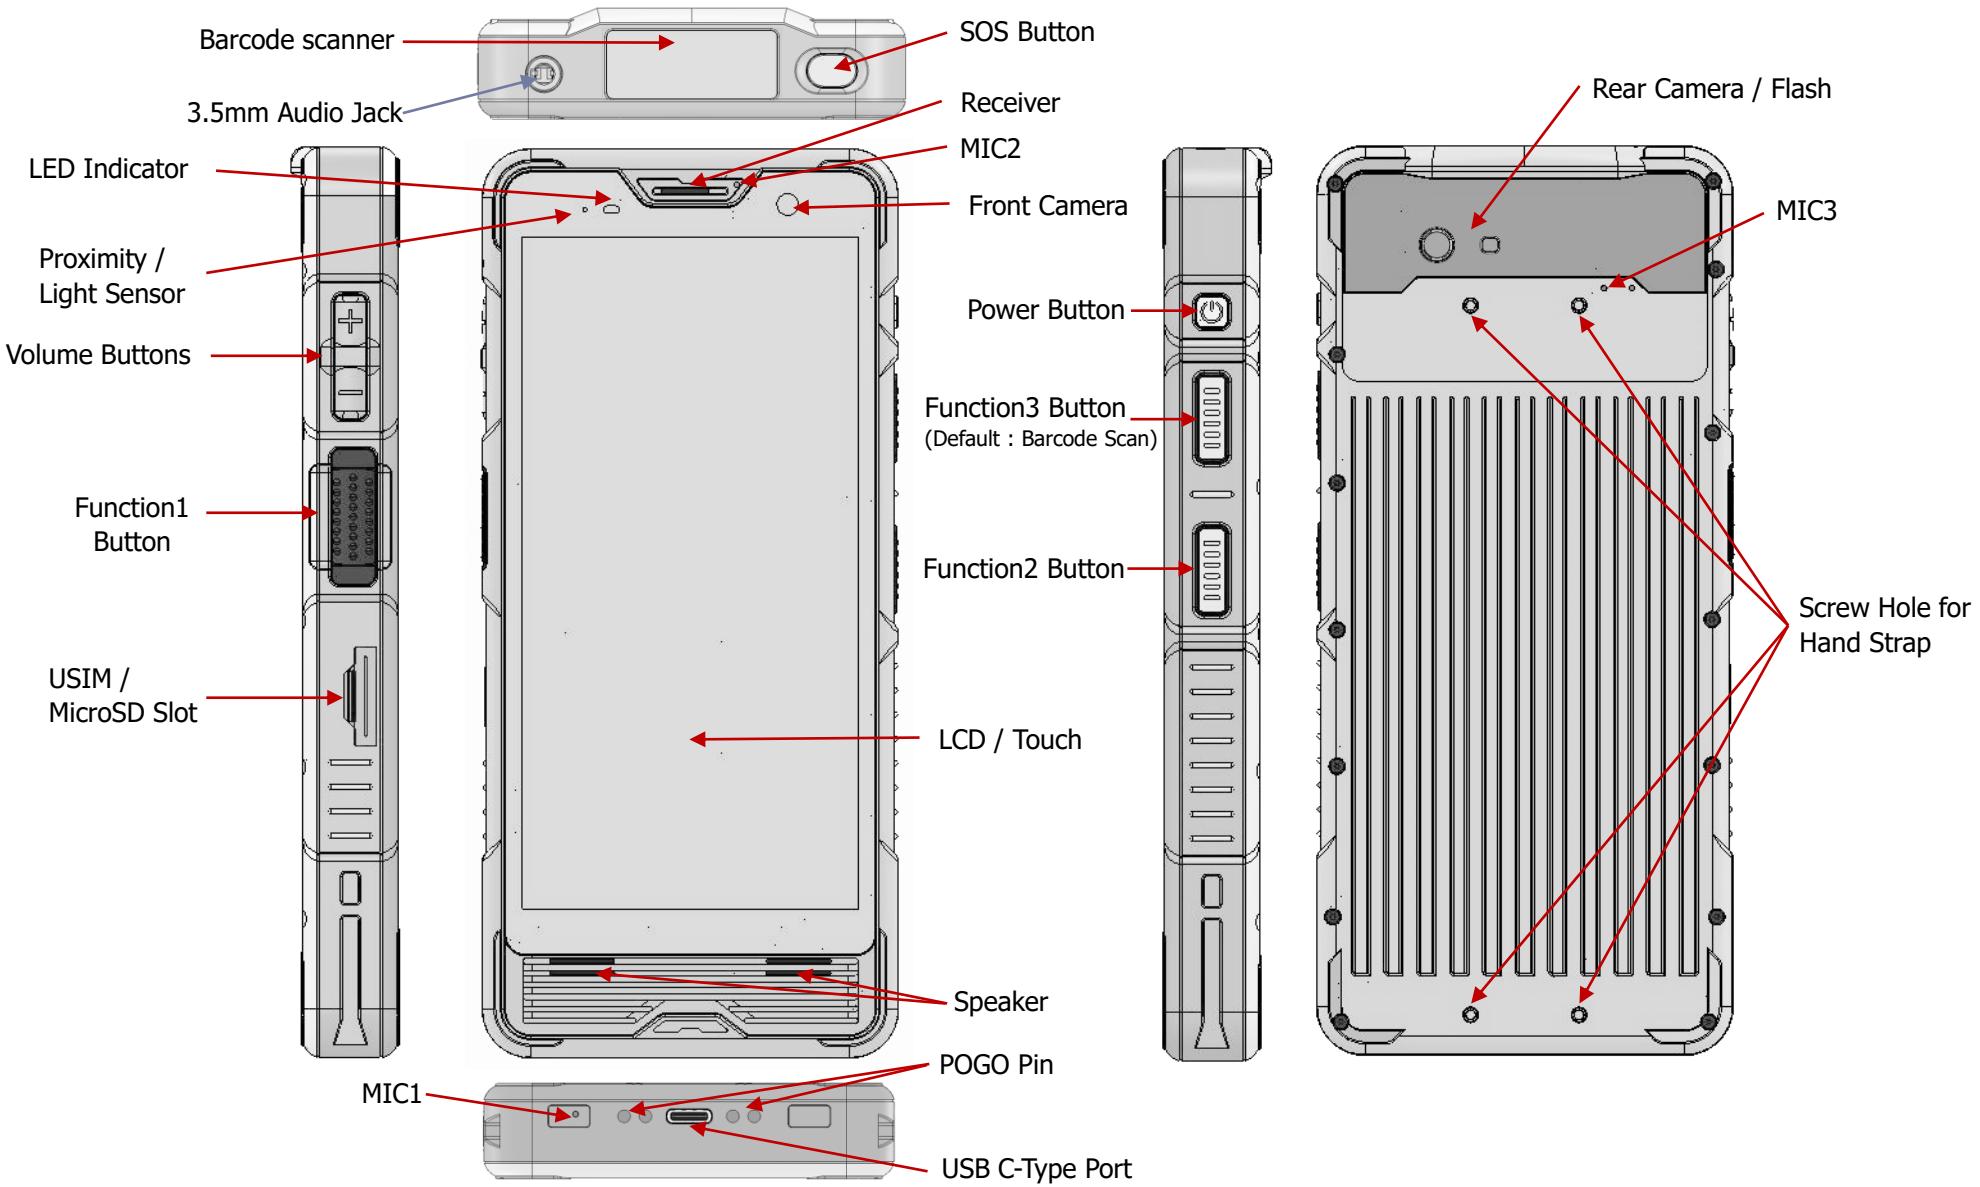

Card Installation

- ▶ How to Insert SIM cards and a MicroSD card
 - ① Pull out the cover of the USIM(nano) and MicroSD slots.
 - ② Insert USIM card and Micro SD card into the slot.
 - ③ Slide the slot into the device.
- ▶ USIM and MicroSD card can be removed in the reverse order.


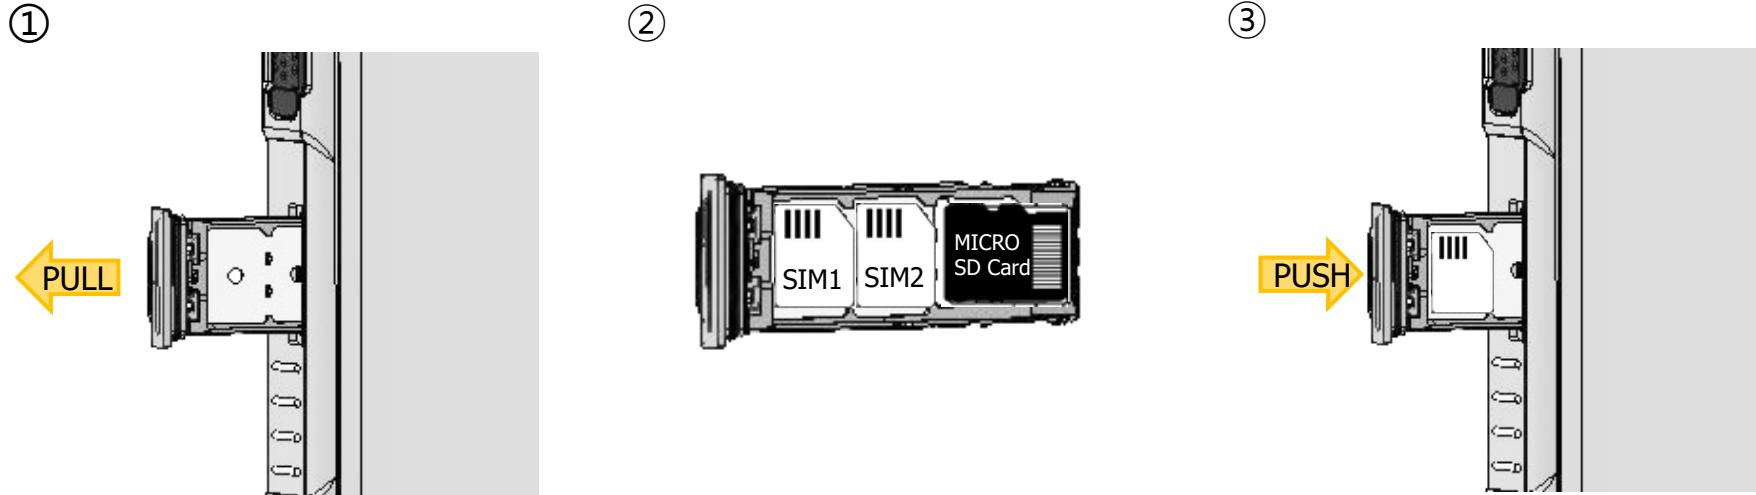


Caution. If the device is powered on and the SIM card is inserted, the device must be rebooted.

Charging the Device

▶ Charging

- ① The device battery can be charged by plugging in power cable to USB-C port.
- ② When charging, the charging status LED of the device lights up, red when charging, and green when charging is complete.
- ③ Battery LED indicates as follows :
 - ▶ OFF : Not Charging Red LED : Charging Green LED : Fully Charged

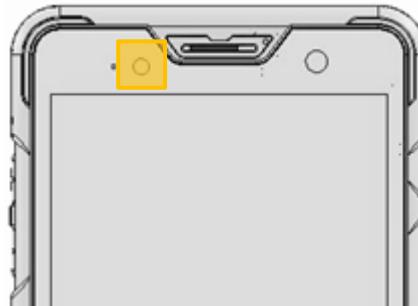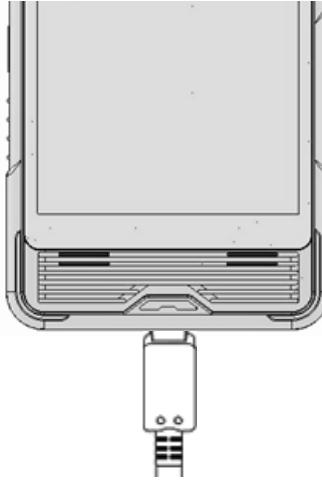**Note.**

Devices supports high-speed charging.
Adapter voltage must be 5~9V and current is 2A or higher recommended.

Caution.

Charging speed is slow when using a PC's USB port or adapter with less than 2A current.

How to use functions

Barcode Scanner


 
The laser aimer should be on the center of the barcode to get a successful read.



Success




Fail

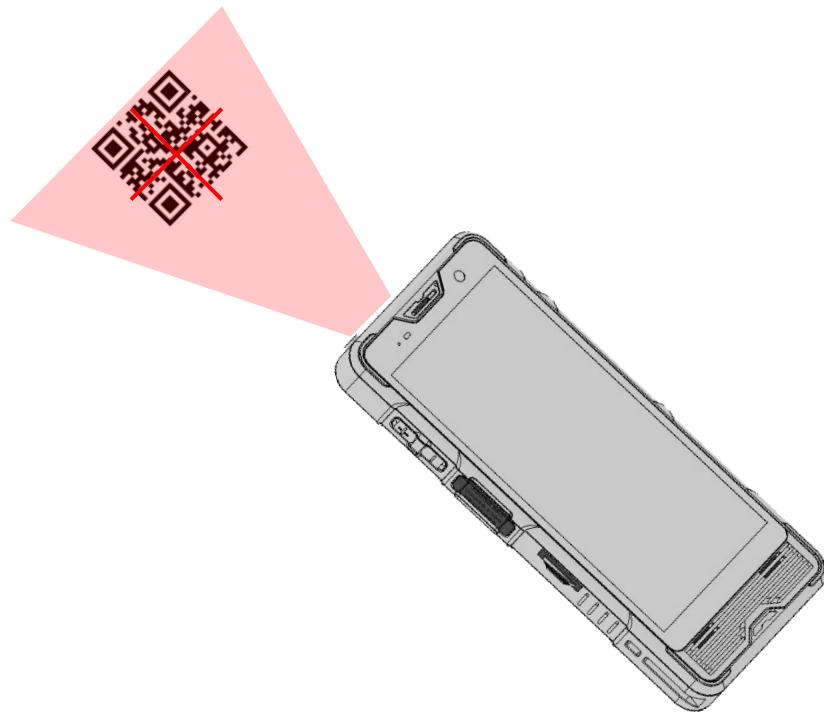

NFC Reader

Since NFC antenna is integrated in the rear side of the device, read the contactless card as shown.

NFC reading distance depends on the NFC card type.

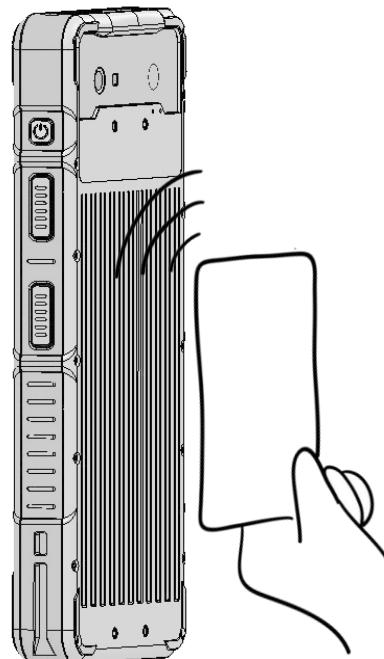

How to use power

▶ Power On

- Press the power button for 1 second to turn on the device.
- The power LED briefly turns green on the screen, then turns off, and the GEN2WAVE logo appears.

▶ Power Off

- Press the power button until the system menu appears and touch Power off icon.

▶ Soft Reset

- Press the power button until the system menu appears and touch Restart icon.

▶ Hard Reset

- Press and hold the power button for approximately 10 seconds to reboot the device..

▶ Factory Reset

- Follow the below steps to Factory Reset.
- Path : Settings → System → Reset options → Erase all data (factory reset) → Erase all data

Caution. Factory Reset : Erase all data and restore default settings.

SAR. This device has been tested and meets the FCC RF exposure limit. FCC SAR has been tested with 0mm distance for head SAR, 15mm for Body SAR, 10mm for Hotspot SAR and 0mm for Extremity SAR.