

FRONT

FOLD IN ZIG-ZAG

POWER BUTTON CONTROLS

● Single Tap	Play/Pause music Answer/End a call
●● Double Tap	Enter pairing mode Pair a second device
⌚ Tap and Hold (for 3 seconds)	Turn device on Turn device off
⌚ Tap and Hold (for 8 seconds)	Restart device

LED LIGHT GUIDE

	Power On - Blue LED flashes twice
	TX Pairing Mode - Blue and red LED flashes alternately
	Standby Mode (not paired) - White LED flashes twice every 5 seconds
	Standby Mode (paired) - Solid white LED
	Low Battery - Red LED flashes 3 times
	Charging - Red LED on while charging (turns off when fully charged)

AUX-IN MODE

- Toggle Mymanu Link to Receive Mode (RX)
- Turn on Bluetooth on your phone
- Select Mymanu Link from the 'Other Devices' section
- Plug Mymanu Link into the audio jack of your desired source

BACK

FOLD IN ZIG-ZAG

MYMANU LINK

- Power button
- LED Light
- Reset Button
- RX - TX Switch
- 3.5mm audio jack

HOW TO PAIR

- Hold the POWER BUTTON for 10 seconds until Mymanu Link flashes blue and red
- Enter earbuds/headphones into Bluetooth pairing mode

- Place Mymanu Link near earbuds/headphones. Mymanu Link will flash white once paired successfully
- Plug Mymanu Link into audio jack of preferred entertainment system
- To pair a second device, tap the POWER BUTTON twice, and repeat steps 2-4

For more information visit www.mymanu.com/support

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates noise and can radiate radio frequency energy which may interfere with other equipment. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

www.mymanu.com

©2017 Mymanu Ltd. Mymanu, Mymanu Link are trademarks of Mymanu Ltd. Other companies or product names mentioned herein are the property of their respective owners and may be trademarks or registered trademarks.

FCC ID: 28CYN-CR0487