 


1080P
SMART PROJECTOR
User Manual

Projection Mode

 
Select and enter "Projection Mode", there are four options: "Rotate Front", "Rotate Ceiling", "Rotate Rear" and "Rotate Rear Ceiling".

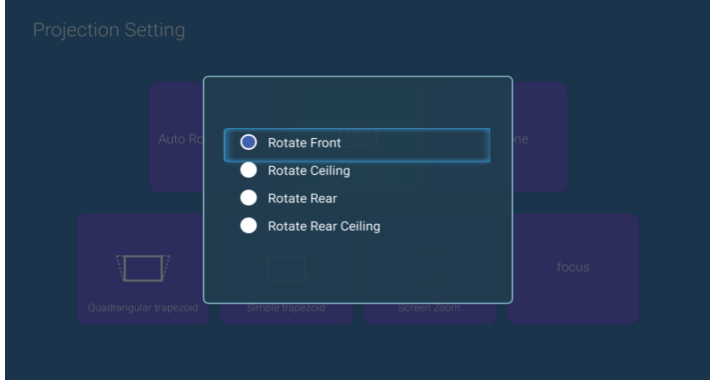

-10-

Screen Zoom

Select and enter the "Screen Zoom" option, and use the "left and right" keys of the remote control to adjust the display zoom, use the "back" key to return to the "Settings" interface to save the adjustment effect.

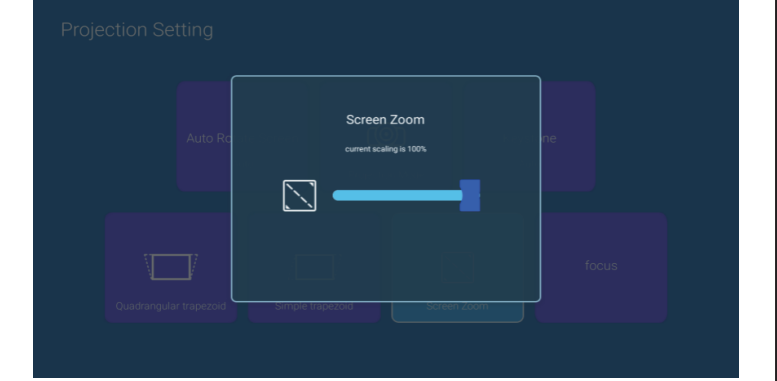

-11-

Safety Instructions

Do not switch on or operate the unit before you have read the instruction manual.

Do not look into the lens directly——this can cause eye damage.

Do not let children get close to the projector as they may look into the lens directly.

Do not turn on the projector before connecting with other components.

Do not attempt to disassemble the machine, if the disassembly of the safety risks, will not be responsible.

Do not cover the surroundings of the projector with soft materials such as blankets, and it is recommended to place the device on a table for use.

Do not use the projector in a wet environment, do not place liquids on or close to the projector. Please pull out the power plug from the wall plug if the projector overheats and smoke appears.

Do not block the air inlet and ensure the projector is placed in a well-ventilated location.

-12-

Projector Overview



-13-

Interface Description

- AV: Connect the 3.5mm AV in.
- AUX: Connect the 3.5mm audio device for Audio output.
- HDMI IN: Display the picture of laptop and TVBOX through HDMI-IN.
- USB: Open and access files from the connected USB Device in the file manager and media center.
- RJ45:100M Ethernet.


Android Desk

Select the different menus icon to enter the application interface from the User interface.



-14-

Remote control




Select the different models of products, the configuration of remote control will be different, depending on the actual product. Enter menus icon to enter the application interface from the User interface.

-15-

Installation and commissioning

Image focal length adjustment

 
According to the fuzziness of the projection picture, press the focus button on the remote control until the picture is in perfect sharpness—Distorted picture diagram.

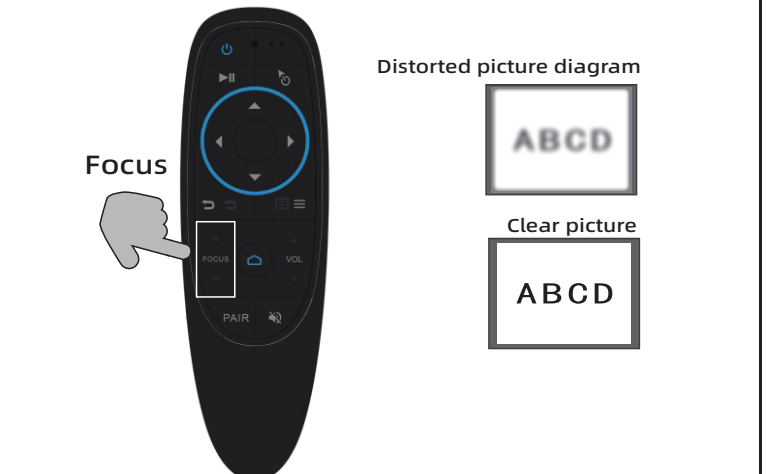

-16-


File Manager

 You can view external storage devices such as USB drives in the file manager.

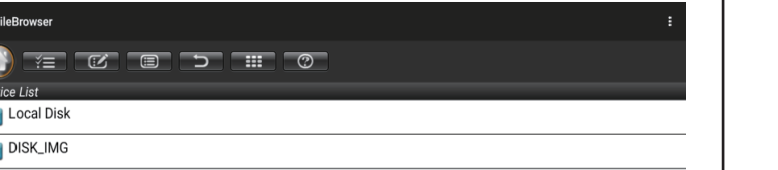

OS Update

Enter APP Center > Update. You can view firmware version information, and system updates will be pushed when connected to the internet. Follow the system prompts to perform the update.

 


-17-

Projection Keystone Correction

There are two ways of automatic keystone correction and manual keystone correction in this system.


Select in the "Settings" and go to "Keystone Correction". After entering, turn off the "Auto" option, and you can make a manual keystone correction adjustment, turn on the "Auto" option and the system will enter the automatic keystone correction mode.

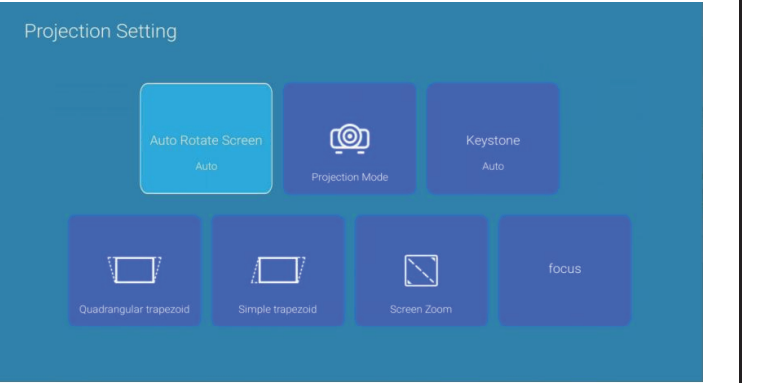

-18-

Manual keystone correction

 
Select and enter Quadrangular trapezoid. Use the "OK" key of the remote control to switch the points to be adjusted, and then use the "direction key" to adjust different points. The "menu" key can reset the display effect, and the "return" key can return to the upper screen and save the adjustment effect.

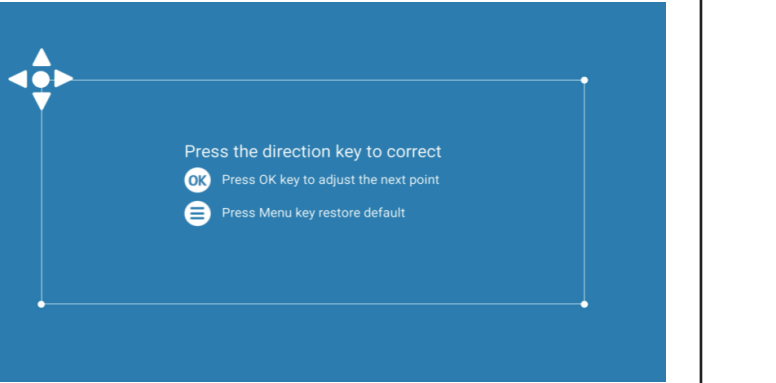

-19-

Projection Mode

 
Select and enter "Projection Mode", there are four options: "Rotate Front", "Rotate Ceiling", "Rotate Rear" and "Rotate Rear Ceiling".

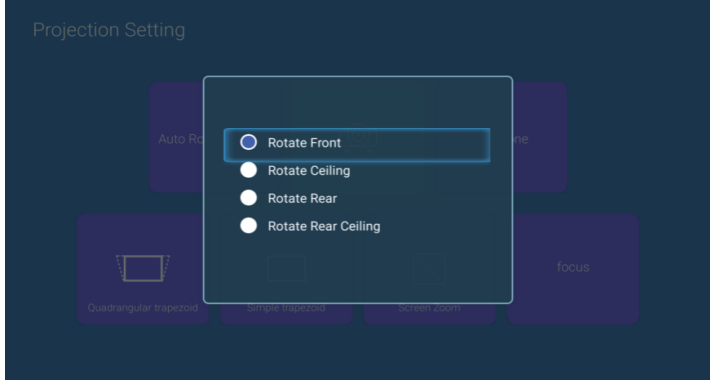

-10-

Screen Zoom

 Select and enter the "Screen Zoom" option, and use the "left and right" keys of the remote control to adjust the display zoom, use the "back" key to return to the "Settings" interface to save the adjustment effect.

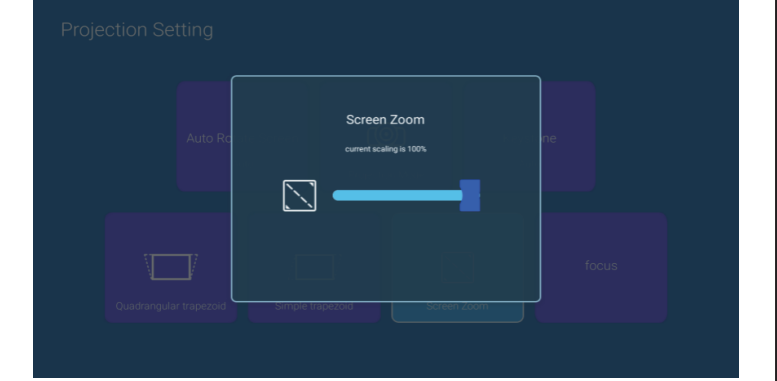


-11-

Settings Network Connect

Enter **Settings > Networking setting**, in the Wi-Fi settings interface, connect to a network using one of the following methods:

 
- Select the target Wi-Fi network from the available network list. If the network is encrypted, you'll need to enter the password.
- Pull down the page, select **"Add new network,"** and follow the on-screen prompts to enter the network name and access password to complete the Wi-Fi connection.



-12-

App Uninstall


- Open the Uninstall app. This will display all installed applications.
- Select the application you want to uninstall.
- On the app details page, select **"Uninstall"** and follow the on-screen prompts to complete the uninstallation process.

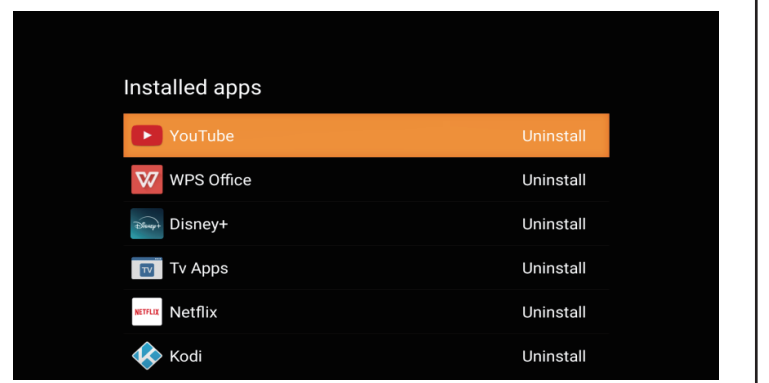

-13-

Reset

 - Enter **Settings > Other Setting > Factory Reset Setting** > Select **"OK"** and follow the on-screen prompts to complete the system reset.

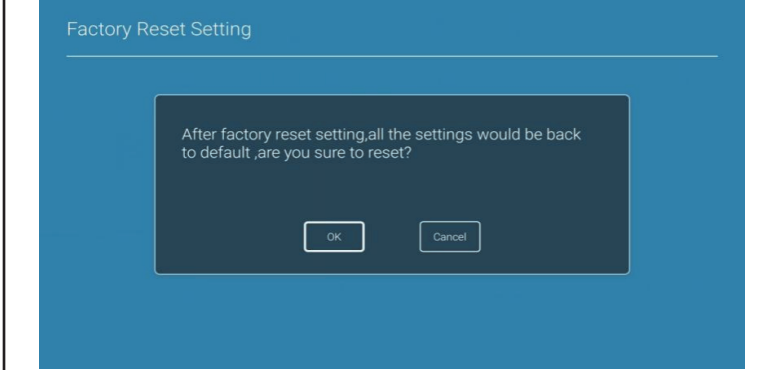


-14-

Miracast & Cast

Please have Projector connected to the same Wi-Fi hotspot as your mobile phone, tablet or laptop.

Miracast

 
- Android
 - Android devices and projector need to be connected to the same network.
 - Enter the APP "miracast" on the projector.
 - Enter "Wireless projection" interface on Android devices, and then search the device name of projector for matching.

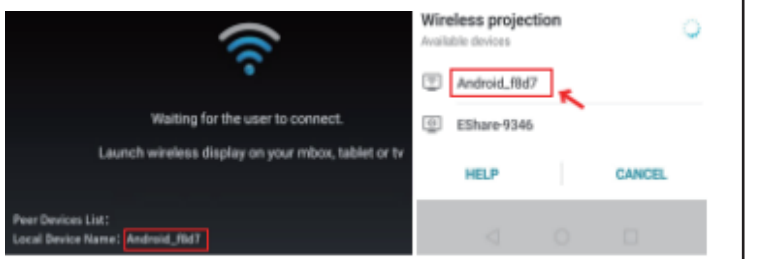

-15-


CAST

 - Screen Mirroring (For IOS)
 - Enter the APP "cast" on the projector, screen mirroring, select and enter start projecting screen.
 - Connect phone and device under the same network.
 - Open video APP click the TV button on player.
 - Slide down to open control center click screen mirroring button.
 - Select device name, start screen mirror.

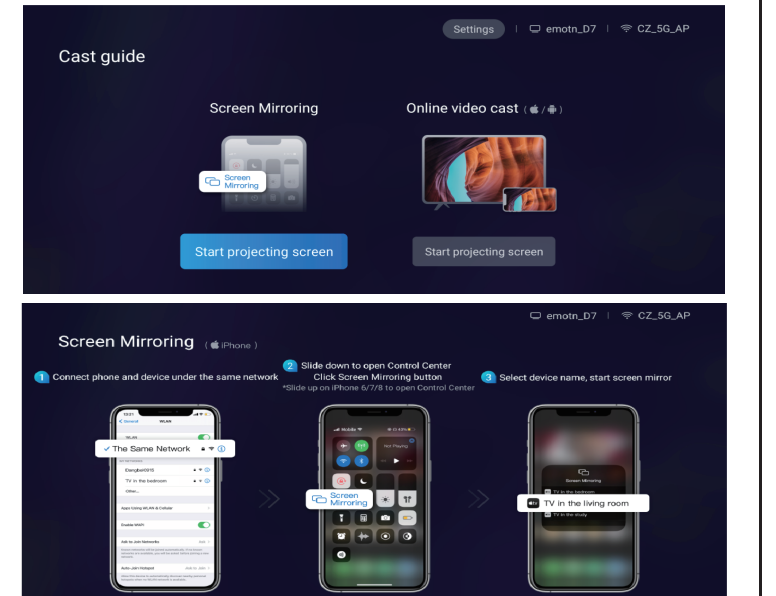

-16-

 - Online video cast (for android / IOS)
 - Enter the APP "cast" on the projector, online video cast, select and enter start projecting screen.
 - Connect phone and device under the same network.
 - Open video APP click the TV button on player.
 - Select device name, start video casting.

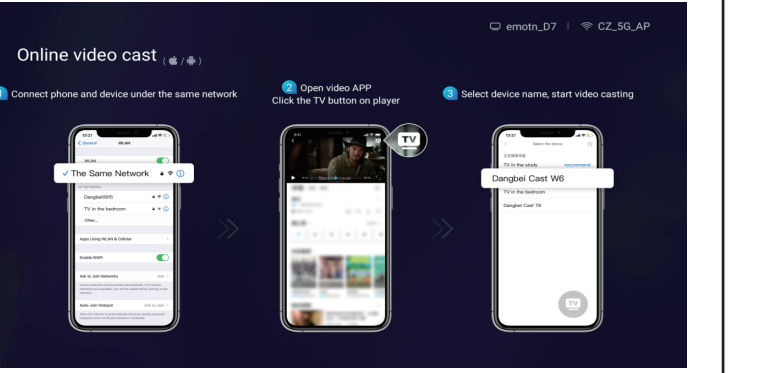

-17-

Common Troubleshooting Methods

- If the product fails to connect to the internet, check the network connection and ensure the wireless network settings are correct.
- If you encounter audio output issues or anomalies, check the audio connection and adjust the volume settings.
- If there is no display or display abnormalities, ensure the HDMI connection is secure and try replacing the HDMI cable.
- If the product fails to power on, check the power connection and ensure the power outlet is functioning properly.
- For other issues, please refer to the user manual or contact the relevant personnel for assistance.

Disclaimers

Our company reserves the right to make changes about the contents of this instruction manual without any advance notice. Please kindly understand.

Contact us

Hello, if you encounter any problems in use, or have any suggestions and function requests for this product, please contact us, we will help you solve it in time. Thank you for your company!

 
Contact information

E-mail address: ws@canzone-tech.com

-18-

Manual keystone correction

Select and enter Quadrangular trapezoid. Use the "OK" key of the remote control to switch the points to be adjusted, and then use the "direction key" to adjust different points. The "menu" key can reset the display effect, and the "return" key can return to the upper screen and save the adjustment effect.

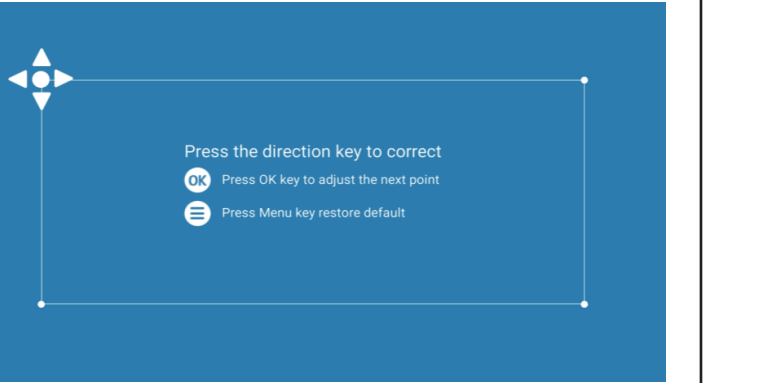

-19-

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.